

ARMOIRE

PANEL TAG: X

Panel material: INOX
Panel size: 600X1800X370 + 600X1800X600
Panel brand: IRINOX
Junction boxes material: INOX

EQUIPMENTS USED

Buttons brand: SCHNEIDER
Button language: PORTUGAIS
Security components: SICK or Phoenix Contact
Panel components: Schneider / Phoenix Contact / Omron / Siemens
Terminals (power and command): Phoenix Contact

WIRING

Icc breaking capacity: 10kA
Shielded cables on Inverters
Wire colors: +24Vdc = Purple
0Vdc = White
External command: Orange

110Vac = Brown
>110Vac = Black
Neutral = Blue
Ground = Yellow/Green

Estimated electrical characteristics

(machine)

Total nominal power (kW): 9
Total nominal current (Amps): 22

Main circuit breaker advisable

(customer)

Breaker grade (Amps): 32
Breaker curve (type): C OR D

Minimum section power supply cable requirement

(customer) :

Wire section (mm²): 6mm²
Cable type (wires number): 5G6² H07 RNF / U1000 R2V

Main breaker and power supply cable can be different
depending of the electrical installation
(cable material, lenght, installation method, ...)

CE DOCUMENT EST LA PROPRIETE DE ECAT-ID. IL EST REMIS A TITRE CONFIDENTIEL.
IL NE DOIT PAS ETRE REPRODUIT OU COMMUNIQUE A DES TIERS SANS NOTRE AUTORISATION ECRITE.
THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL.
IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING FORM.

V16	MAJ - Rétrofit goulottes + ajout capteurs IFM	19/11/2025	MB		
V15	AJOUT EV30 ET EV31 + BORNIER X170	04/10/2024	JT	JT	JT
V14	MODIFICATION SYNOPTIQUE RESEAU	23/09/2024	DB	JT	JT
V13	MODIFICATION RESEAU ETHERCAT	18/09/2024	JT	JT	JT
V12	AJOUT VOYANT SOUFFLETTE +NVR	22/08/2024	JT	JT	JT
V11	AJOUT ALIM B10 & BORNIER X15-X25	11/07/2024	DB	JT	JT
V10	MAJ ATELIER	12/06/2024	AV	JT	JT
V9	AJOUT SEC02/KA100/DTS5/DTS6+MODIFICATION BORNIER	29/04/2024	JT	JT	JT
V8	CHANGEMENT ALIMENTATION U10 x10 x100 INTERROLL	22/04/2024	JT	JT	JT
V7	MAJ BORNIER X20 + CABLES CODEUR	09/04/2024	JT	JT	JT
V6	AJOUT CAPTEUR D'ENTREE ET CAPTEUR I/O LINK	03/04/2024	DB	JT	JT
INDEX	MODIFICATION	DATE	DESIGNED	VERIFIED	APPROVED

GENDER SORTING

DESIGNED BY : DB

VERIFIED : JT

DATE OF CREATION : 26/04/2024

CUSTOMER : COOP LAR

CONTRACT : C01422

PROCESS : PMXA-C014221

ECAT-ID

ZI de KERIEL
29800 PLOUEDERN
- FRANCE -

FOLIO :001/163

Tel : (33).2.98.85.31.36
Fax : (33).2.98.85.31.38
E-mail : ecaticid.service@ceva.com

ENVIRONNEMENT IGE-XA01-10
ECAT-ID_V4R3 240410 on 4.49.F - 23/09/2020



Ecat-iD Campus

COUNTRY :

BRESIL

DRAWING NUM:

SMXA-C014221

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

FOLIO	DESIGNATION	DATE DERNIERE MODIFICATION
001	GENDER SORTING	19/11/2025
002	LISTING	19/11/2025
003	LISTING	19/11/2025
004	LISTING	19/11/2025
005	LISTING	19/11/2025
006	SCHEMA PUISSANCE	11/07/2024
007	SCHEMA PUISSANCE	31/07/2024
008	SCHEMA PUISSANCE	31/07/2024
009	SCHEMA PUISSANCE	31/07/2024
010	SCHEMA PUISSANCE	31/07/2024
011	SCHEMA PUISSANCE UAC	31/07/2024
012	SCHEMA PUISSANCE UAC	31/07/2024
013	SCHEMA PUISSANCE UAC	31/07/2024
014	SCHEMA PUISSANCE UAC	11/07/2024
015	SCHEMA COMMANDE	19/11/2025
016	SCHEMA COMMANDE	19/11/2025
017	SCHEMA COMMANDE	18/11/2025
018	SCHEMA COMMANDE	18/11/2025
019	SCHEMA COMMANDE	19/11/2025
020	SCHEMA COMMANDE	11/07/2024
021	SCHEMA COMMANDE	11/07/2024
022	SCHEMA COMMANDE	11/07/2024
023	SCHEMA COMMANDE	11/07/2024
024	SCHEMA COMMANDE	11/07/2024
025	SCHEMA COMMANDE	11/07/2024
026	SCHEMA COMMANDE	11/07/2024
027	SCHEMA COMMANDE UAC	11/07/2024
028	SCHEMA COMMANDE UAC	11/07/2024
029	IMPLANTATION UAC100	31/07/2024
030	IMPLANTATION CAMERA VOIE 1 & 2	11/07/2024
031	IMPLANTATION ECLAIRAGE VOIE 1	11/07/2024
032	IMPLANTATION ECLAIRAGE VOIE 2	11/07/2024
033	IMPLANTATION UAC200	31/07/2024
034	IMPLANTATION CAMERA VOIE 3 & 4	11/07/2024
035	IMPLANTATION ECLAIRAGE VOIE 3	11/07/2024

FOLIO	DESIGNATION	DATE DERNIERE MODIFICATION
036	IMPLANTATION ECLAIRAGE VOIE 4	11/07/2024
037	IMPLANTATION UAC300	31/07/2024
038	IMPLANTATION CAMERA VOIE 5 & 6	11/07/2024
039	IMPLANTATION ECLAIRAGE VOIE 5	11/07/2024
040	IMPLANTATION ECLAIRAGE VOIE 6	11/07/2024
041	SCHEMA COMMANDE UAC	31/07/2024
042	SCHEMA COMMANDE UAC	31/07/2024
043	SORTIES MOD2	11/07/2024
044	SORTIES MOD2	11/07/2024
045	SORTIES MOD3	11/07/2024
046	SORTIES MOD3	11/07/2024
047	SORTIES MOD102	11/07/2024
048	SORTIES MOD103	11/07/2024
049	SORTIES MOD104	11/07/2024
050	SORTIES MOD105	11/07/2024
051	SORTIES MOD105	11/07/2024
052	SORTIES MOD106	19/11/2025
053	SORTIES MOD106	19/11/2025
054	IMPLANTATION AUTOMATE	11/07/2024
055	IMPLANTATION AUTOMATE	11/07/2024
056	IMPLANTATION WAGO B10	31/07/2024
057	IMPLANTATION IHM	11/07/2024
058	IMPLANTATION RESEAU	11/07/2024
059	IMPLANTATION RESEAU B10	11/07/2024
060	ENTREES MOD4	11/07/2024
061	ENTREES MOD4	11/07/2024
062	ENTREES MOD5	11/07/2024
063	ENTREES MOD5	11/07/2024
064	ENTREES MOD6	19/11/2025
065	ENTREES MOD6	19/11/2025
066	ENTREES MOD7	11/07/2024
067	ENTREES MOD7	11/07/2024
068	I/O LINK MOD8	11/07/2024
069	I/O LINK MOD8	11/07/2024
070	I/O LINK MOD9	11/07/2024

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 12/06/2024		LISTING			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INDEX : V16												
			E-mail : ecatic.service@ceva.com		ENVIRONNEMENT : Version 4.49.F - 23/09/2020		ARTICLE : SMXA-C014221		FOLIO : 002/163										

FOLIO	DESIGNATION	DATE DERNIERE MODIFICATION
071	I/O LINK MOD9	11/07/2024
072	I/O LINK MOD10	11/07/2024
073	I/O LINK MOD10	11/07/2024
074	ENTREES MOD107	11/07/2024
075	ENTREES MOD107	31/07/2024
076	ENTREES MOD108	31/07/2024
077	ENTREES MOD108	31/07/2024
078	Bornier : XP0	11/07/2024
079	Bornier : XP1	11/07/2024
080	Bornier : X2	19/11/2025
081	Bornier : X3	11/07/2024
082	Bornier : X4	31/07/2024
083	Bornier : X4	31/07/2024
084	Bornier : X10	31/07/2024
085	Bornier : X15	31/07/2024
086	Bornier : X20	31/07/2024
087	Bornier : X25	31/07/2024
088	Bornier : XT10	31/07/2024
089	Bornier : XP100	31/07/2024
090	Bornier : XP101	11/07/2024
091	Bornier : X100	31/07/2024
092	Bornier : X103	31/07/2024
093	Bornier : X104	11/07/2024
094	Bornier : X105	31/07/2024
095	Bornier : X105	31/07/2024
096	Bornier : X105	31/07/2024
097	Bornier : X105	31/07/2024
098	Bornier : X106	31/07/2024
099	Bornier : X110	23/09/2024
100	Bornier : X120	23/09/2024
101	Bornier : X130	23/09/2024
102	Bornier : X140	23/09/2024
103	Bornier : X150	23/09/2024
104	Bornier : X160	23/09/2024
105	Bornier : X170	11/07/2024

FOLIO	DESIGNATION	DATE DERNIERE MODIFICATION
106	Bornier : X200	31/07/2024
107	Bornier : XT100	31/07/2024
108	Connecteur: PRF-M01 & PRM-M01	11/07/2024
109	Connecteur: PRF-M08 & PRM-M08	31/07/2024
110	Connecteur: PRF-M09 & PRM-M09	31/07/2024
111	Connecteur: PRF-X200 & PRM-X200	11/07/2024
112	IMPLANTATION FACADE ARMOIRE	11/07/2024
113	IMPLANTATION ARRIERE ARMOIRE	11/07/2024
114	IMPLANTATION ARMOIRE	11/07/2024
115	IMPLANTATION COTE BOITIER B10	11/07/2024
116	IMPLANTATION FACADE BOITIER B10	11/07/2024
117	IMPLANTATION ARRIERE BOITIER B10	11/07/2024
118	IMPLANTATION INTERNE BOITIER B10	11/07/2024
119	PLAN DE PERCAGE BOITIER T10	11/07/2024
120	PLAN DE PERCAGE BOITIER T10	11/07/2024
121	IMPLANTATION BOITIER T10	11/07/2024
122	IMPLANTATION BOITIER T20	11/07/2024
123	IMPLANTATION BOITIER T30	11/07/2024
124	PARAMETRE VARIATEUR V1	11/07/2024
125	PARAMETRE VARIATEUR V2	11/07/2024
126	PARAMETRE VARIATEUR V3	11/07/2024
127	PARAMETRE VARIATEUR V4	11/07/2024
128	PARAMETRE VARIATEUR V5	11/07/2024
129	PARAMETRE VARIATEUR V6	11/07/2024
130	PARAMETRE VARIATEUR V7	11/07/2024
131	PARAMETRE VARIATEUR V8	11/07/2024
132	Nomenclature Armoire	31/07/2024
133	Nomenclature Armoire	31/07/2024
134	Nomenclature Armoire	31/07/2024
135	Nomenclature Armoire	31/07/2024
136	Nomenclature Armoire	31/07/2024
137	Components List	31/07/2024
138	Components List	31/07/2024
139	Components List	31/07/2024
140	Components List	31/07/2024

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 12/06/2024		LISTING				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB				ARTICLE : SMXA-C014221						INDEX : V16					
			E-mail : ecatic.service@ceva.com		ENVIRONNEMENT: Version 4.49.F - 23/09/2020				FOLIO : 003/163											

[illegible][illegible]

1

1

1

1

1

1

I

1

1

1

1


ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –	Tél : (33).2.98.85.31.36	Date of creation : 12/06/2024	LISTING	 Ecat-iD Campus	CONTRACT : C01422	CUSTOMER : COOP LAR	COUNTRY : BRESIL
	Fax : (33).2.98.85.31.38	Designed by : DB			ARTICLE : SMXA-C014221	INDEX : V16	
	E-mail : ecatic.service@ceva.com	ENVIRONNEMENT:Version 4.49.F - 23/09/2020			SMXA-C014221		FOLIO : 004/163

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

																				A
																				B
																				C
																				D
																				E
																				F
																				G
																				H
																				I
																				J
																				K
																				L
																				M

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 02/04/2024		LISTING				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		LISTING								ARTICLE : SMXA-C014221				INDEX : V16	
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020								005/163					


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

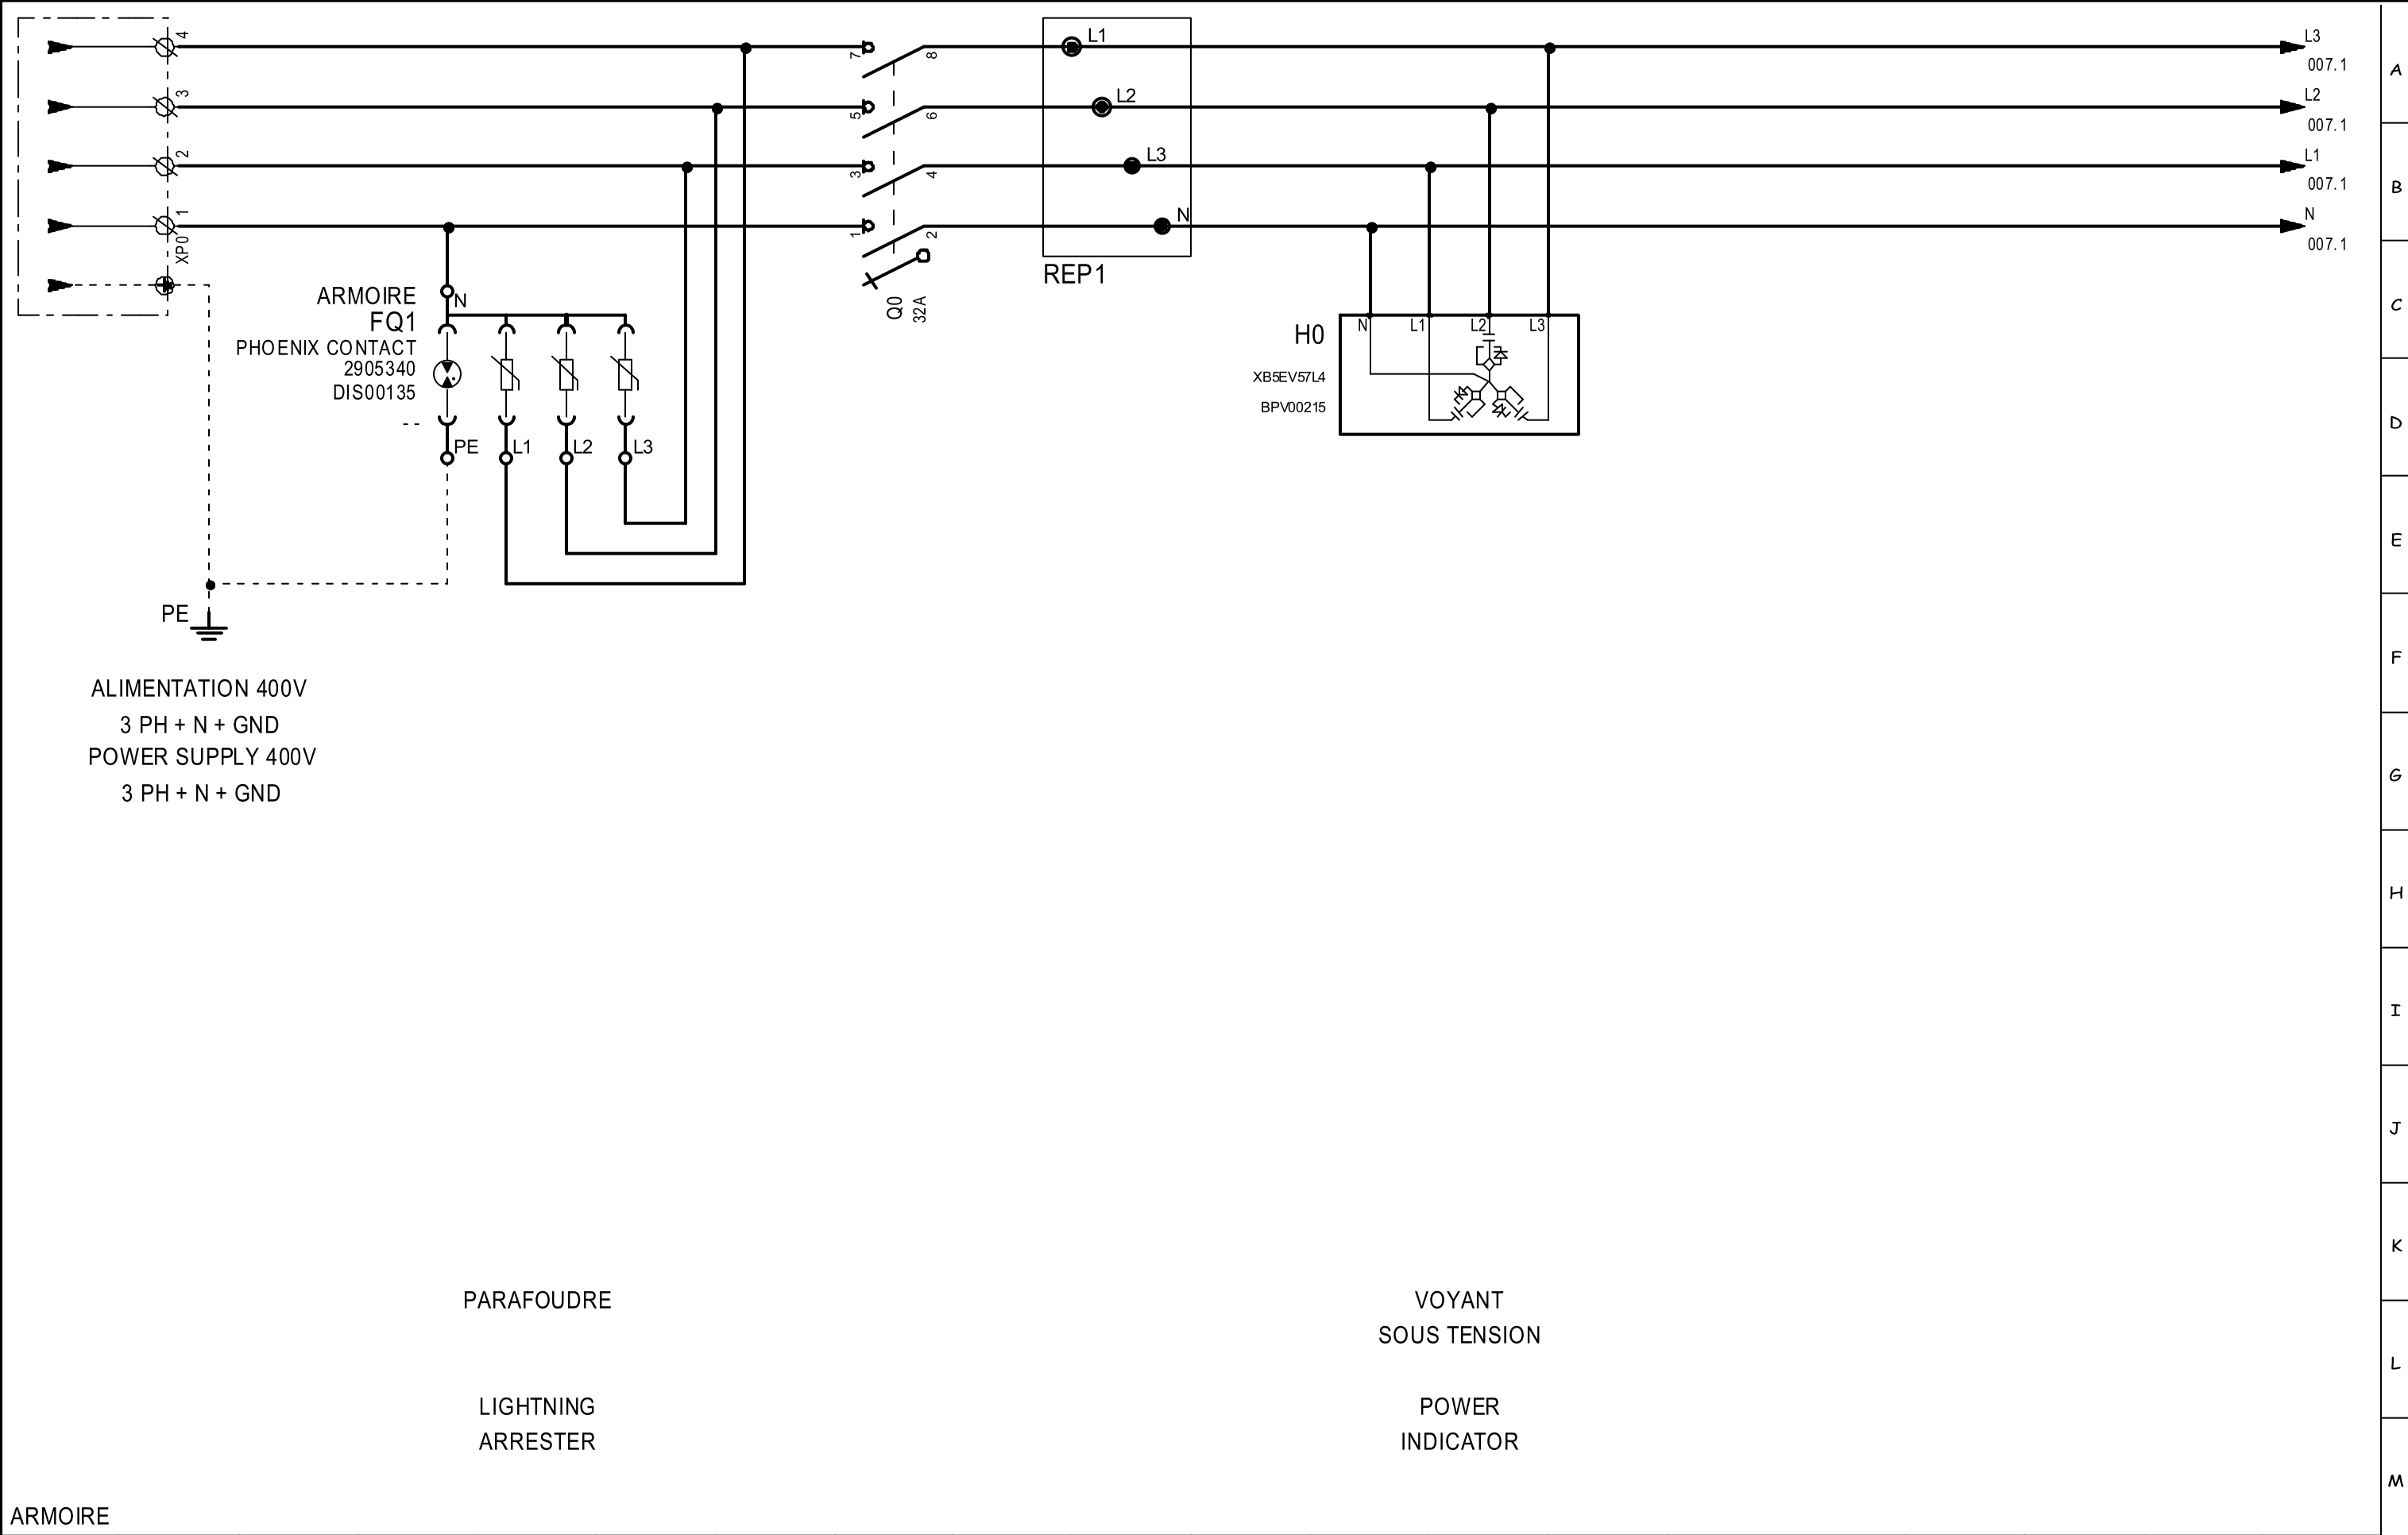

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA PUISSANCE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		POWER PLAN								ARTICLE :		SMXA-C014221		INDEX : V11	
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020												FOLIO : 006/163	


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

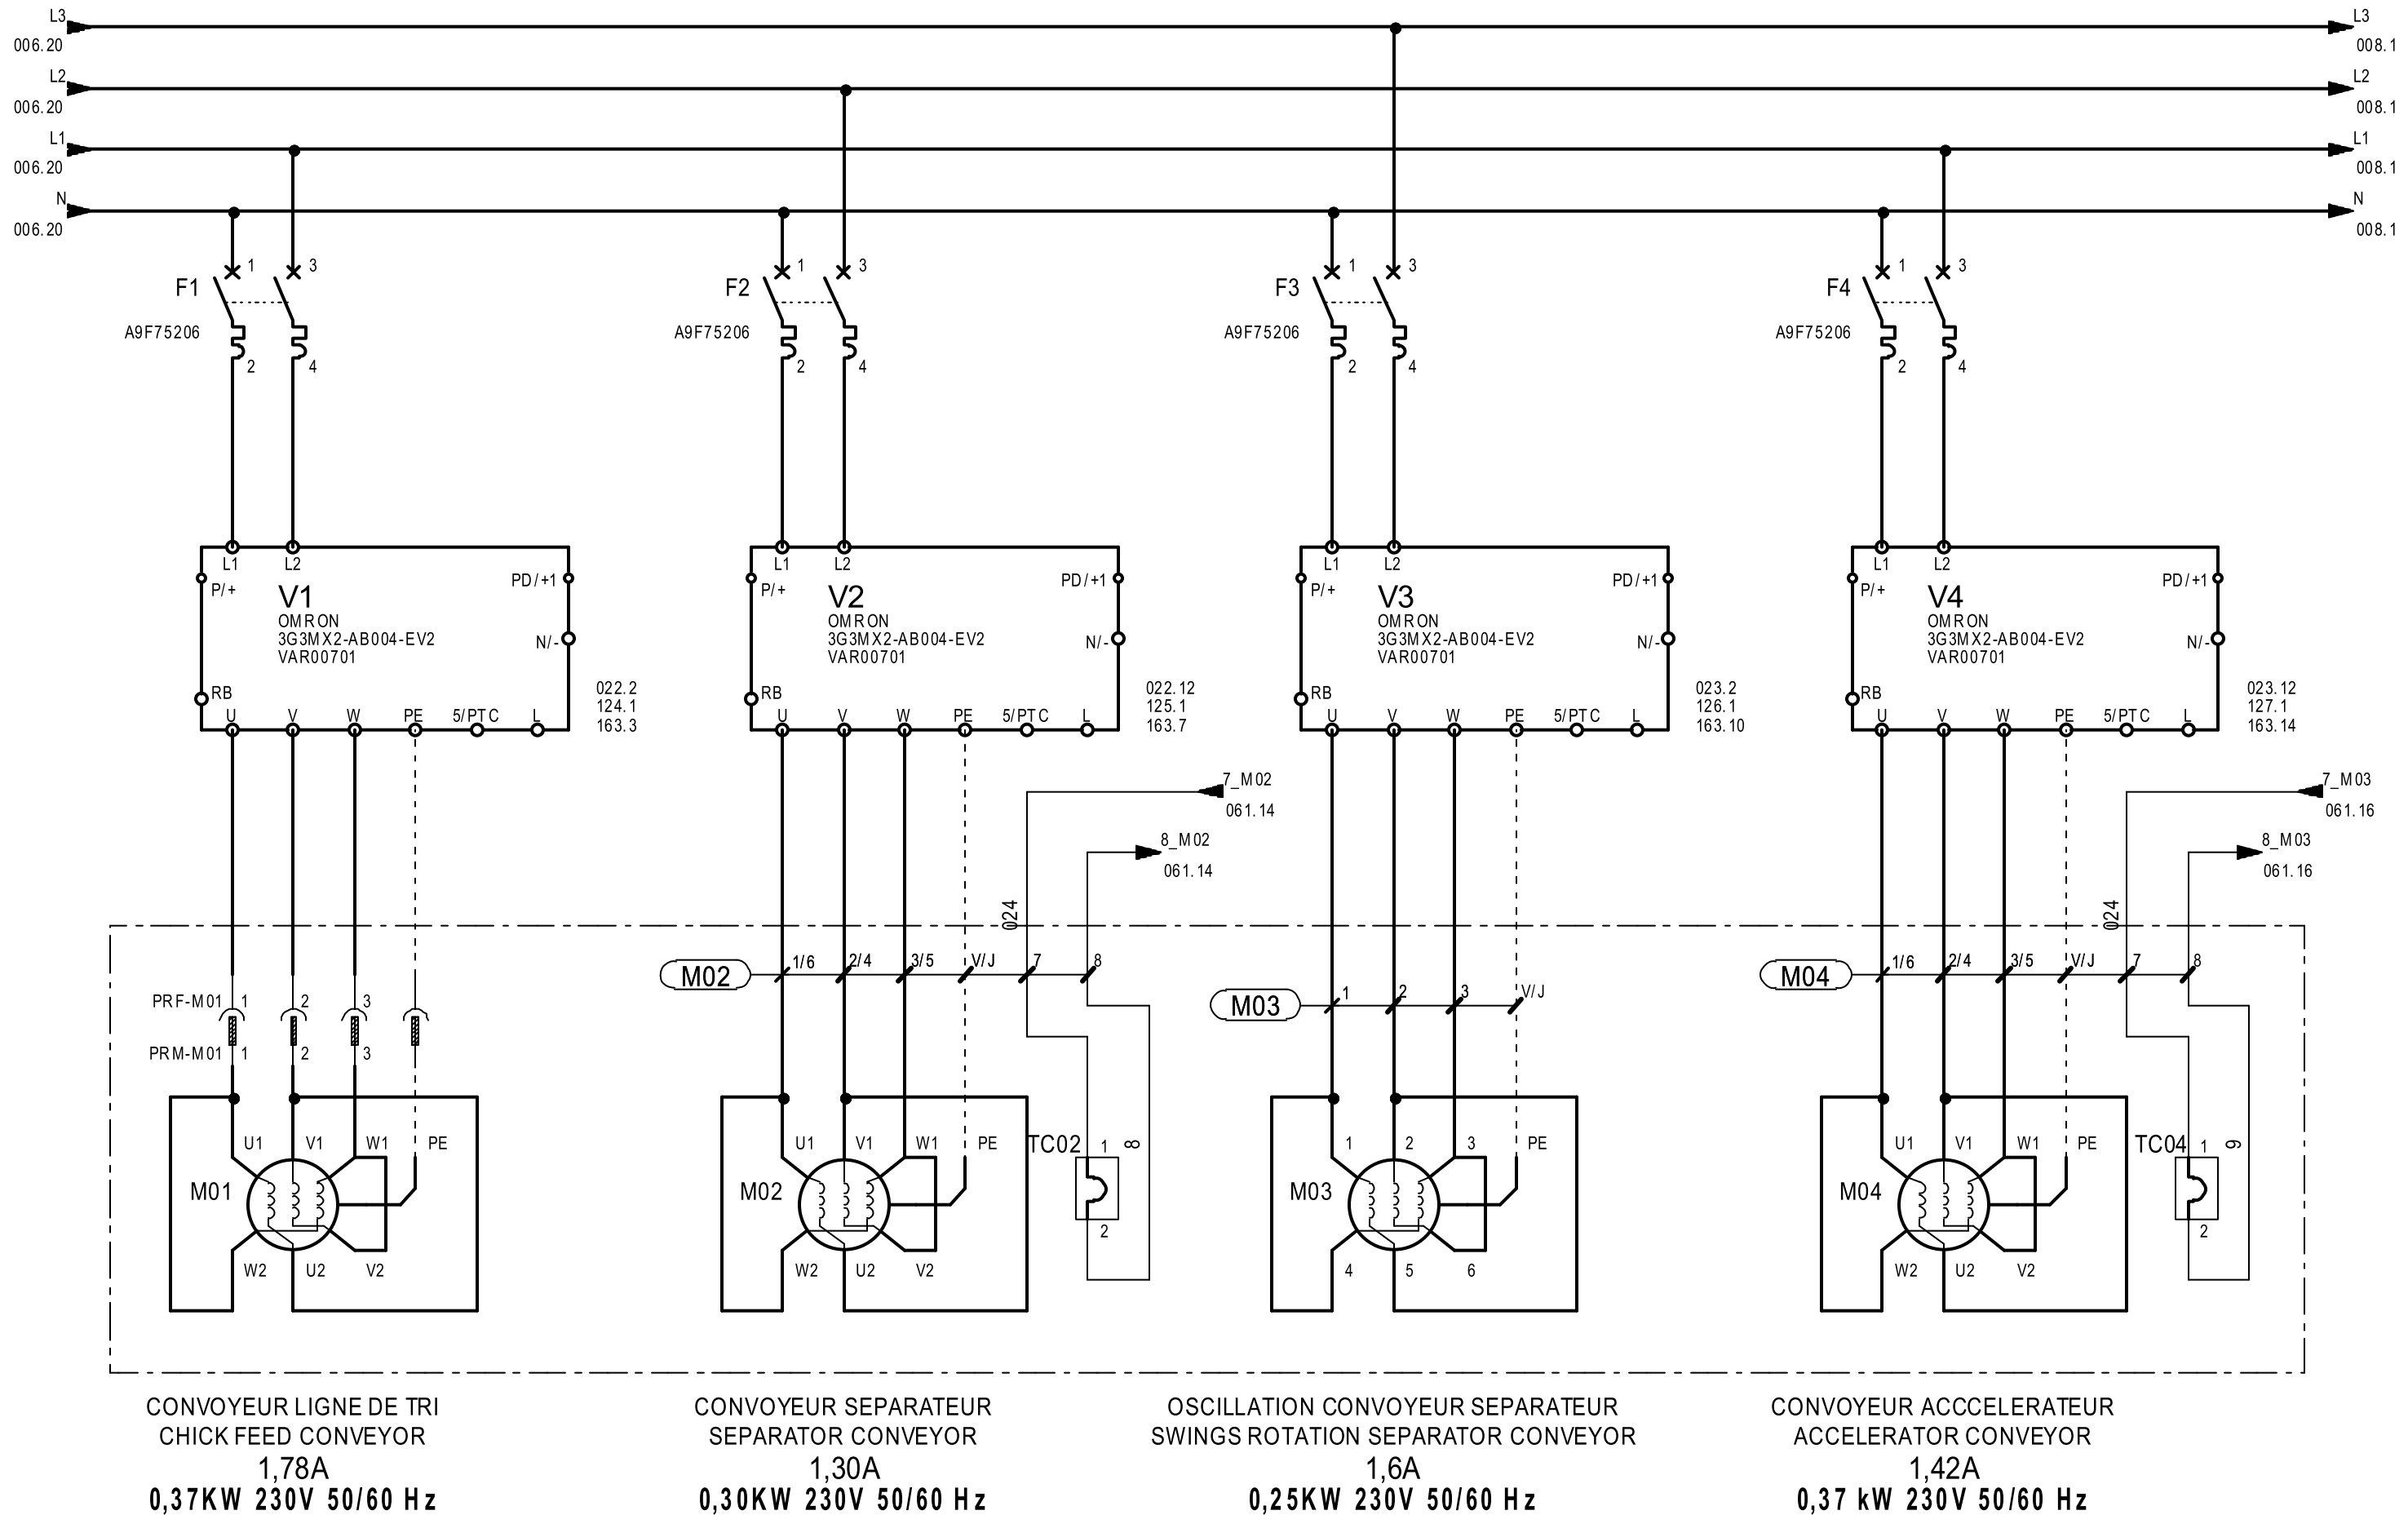

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA PUISSANCE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		POWER PLAN								ARTICLE : SMXA-C014221		INDEX : V12			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020										FOLIO : 007/163			


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

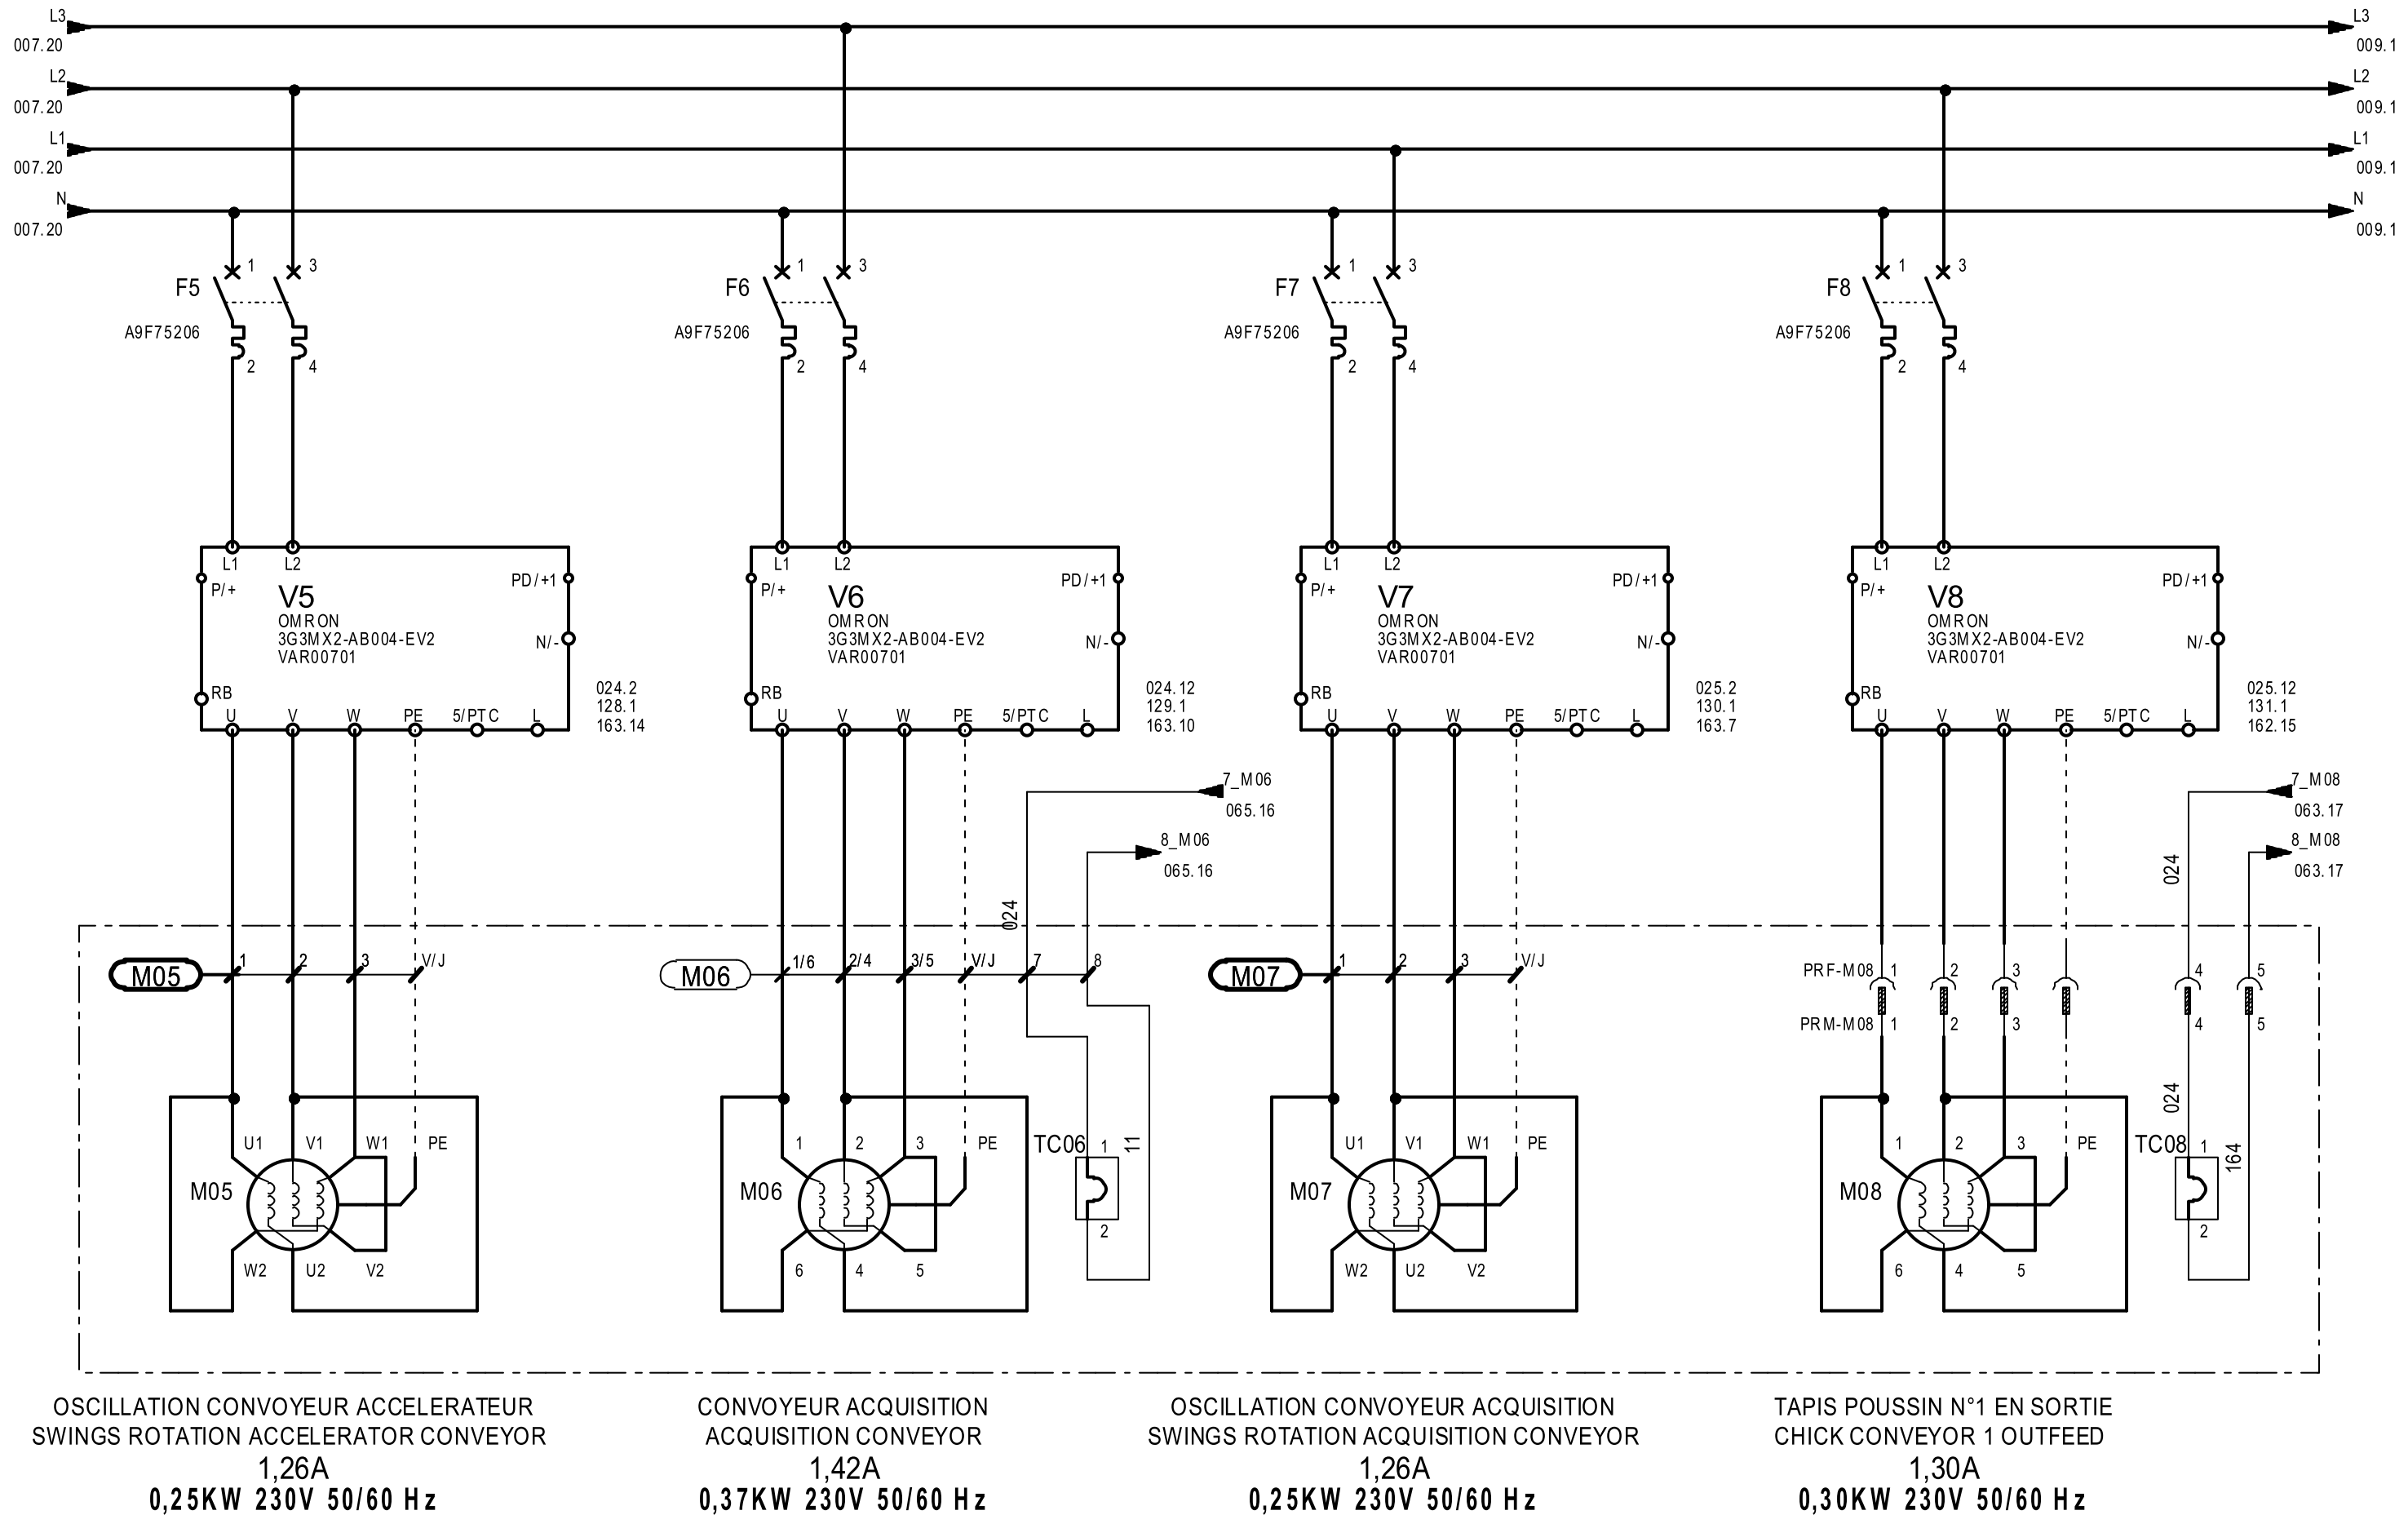

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA PUISSANCE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		POWER PLAN								ARTICLE : SMXA-C014221		INDEX : V12			
			E-mail : ecaticid.service@ceva.com		ENVIRONNEMENT:Version 4.49.F - 23/09/2020				008/163											


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

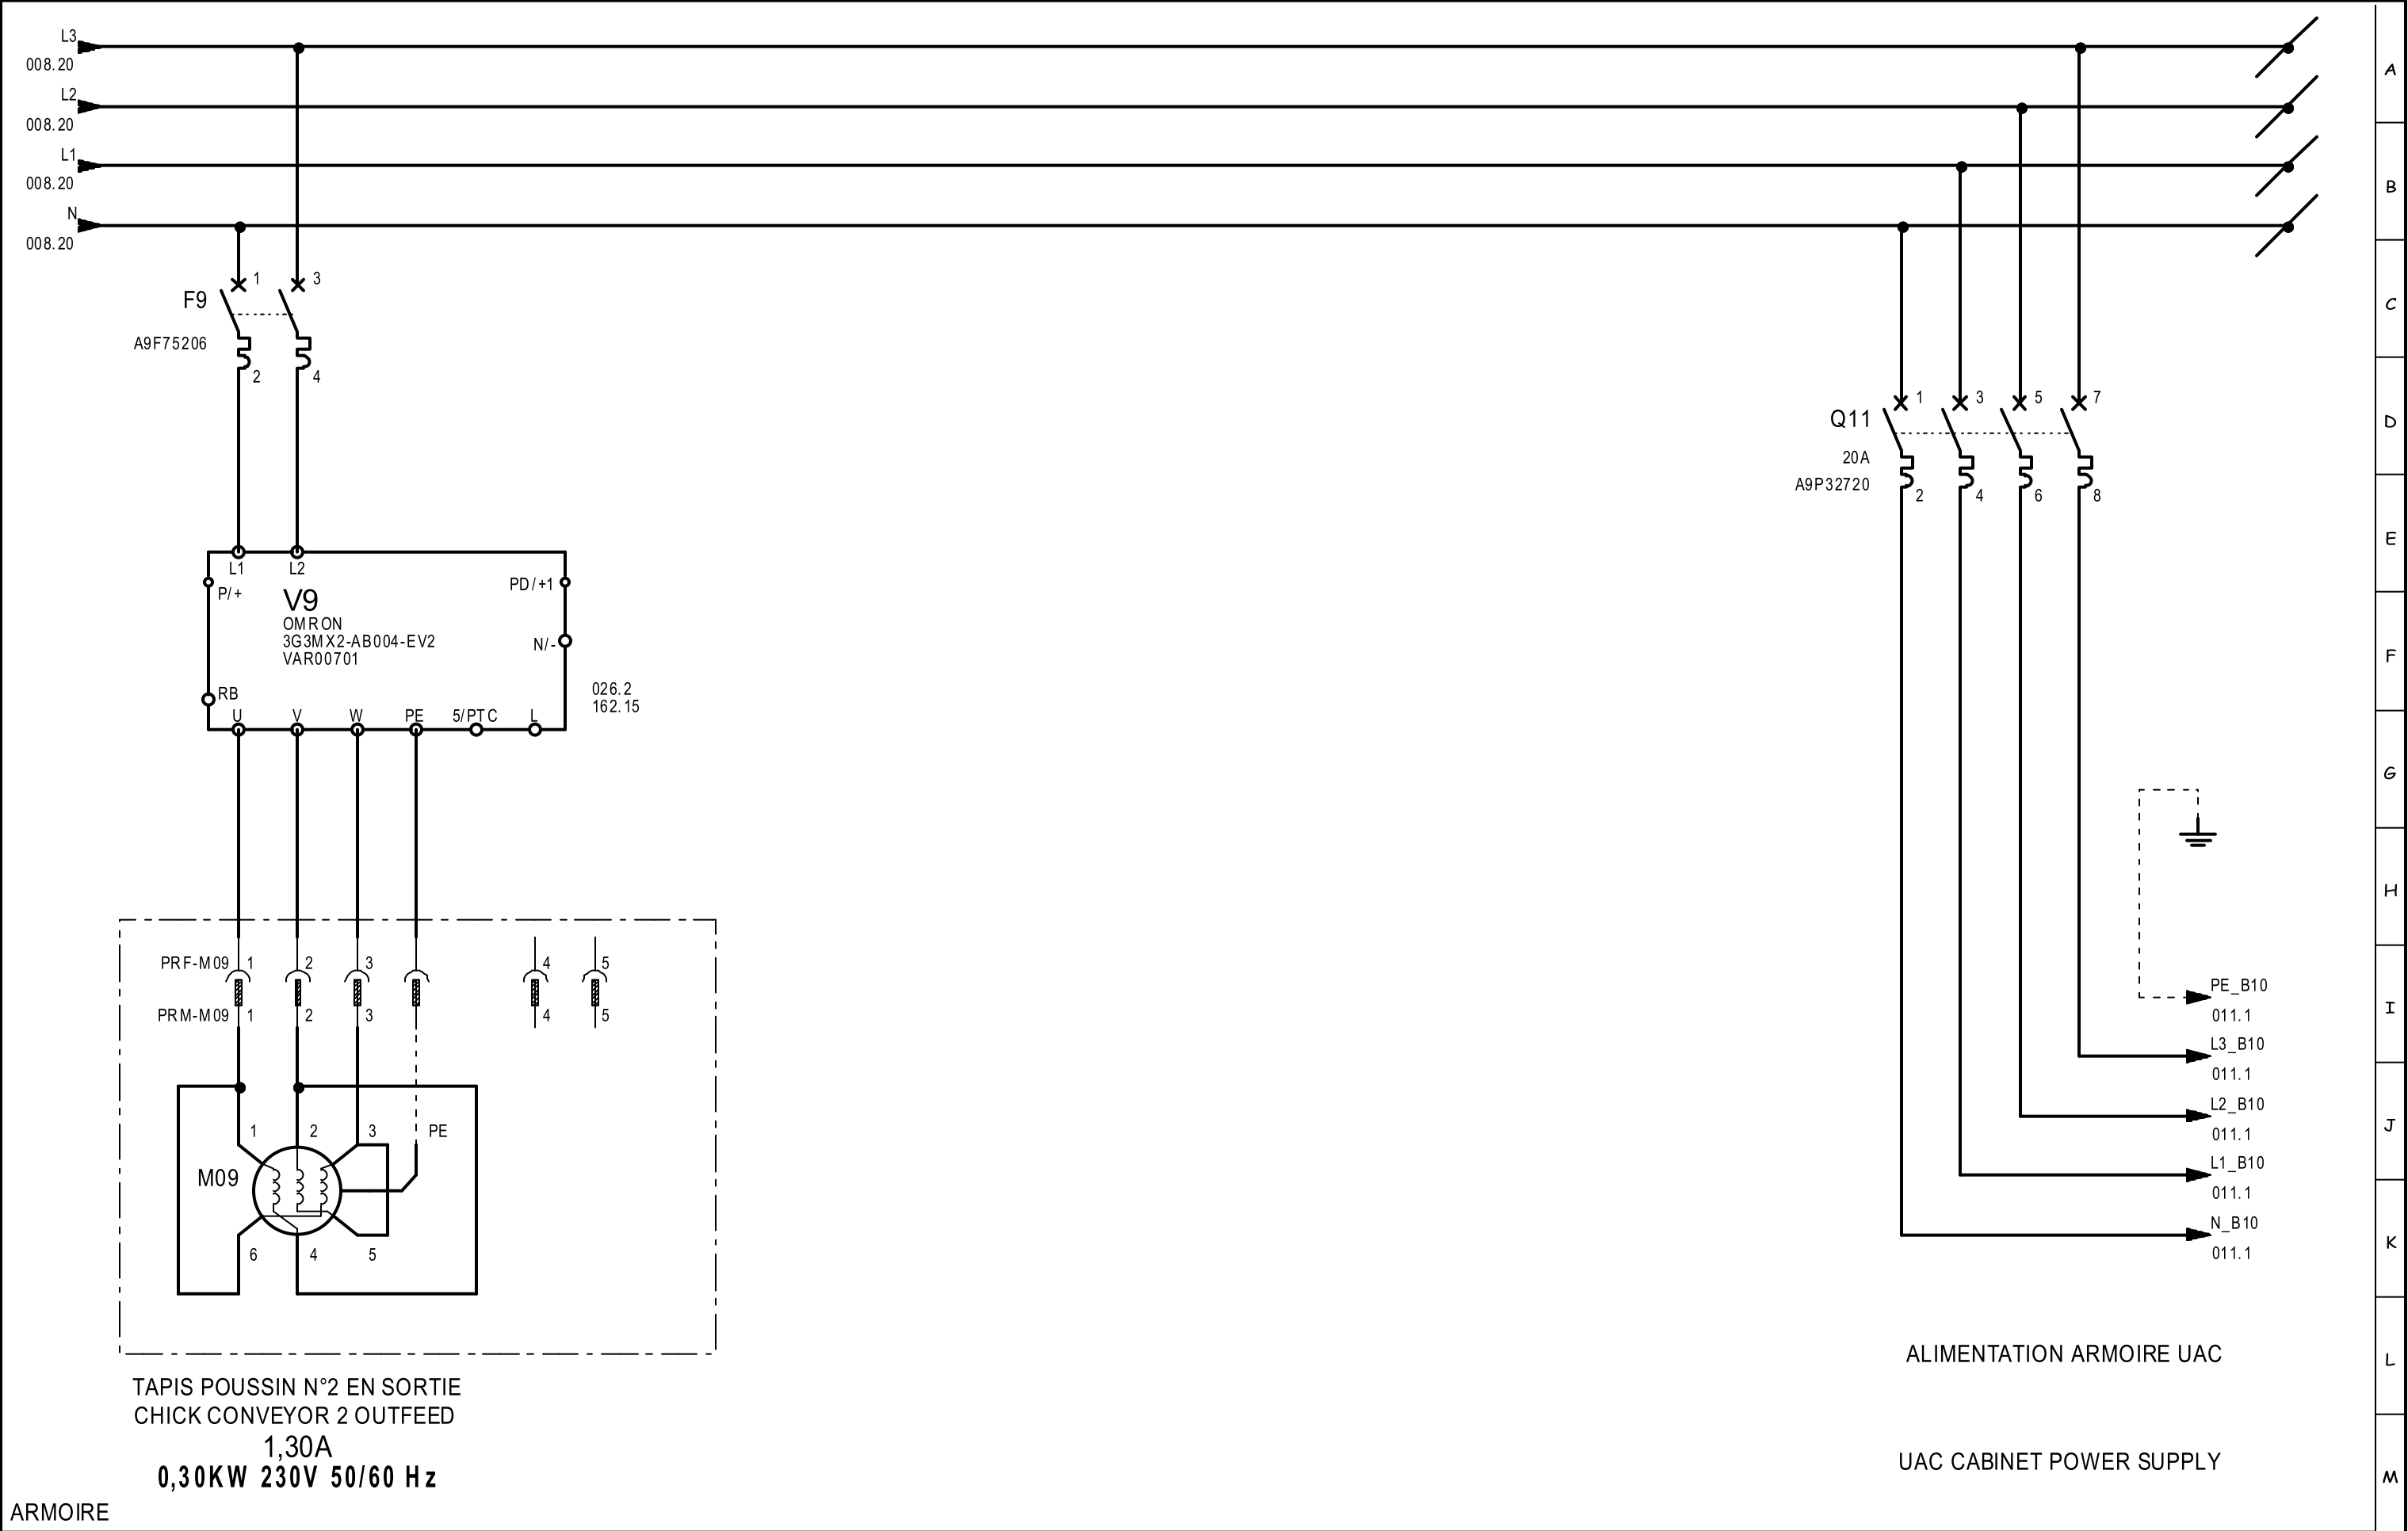

ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA PUISSANCE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		POWER PLAN								ARTICLE : SMXA-C014221		INDEX : V12			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020										FOLIO : 009/163			

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

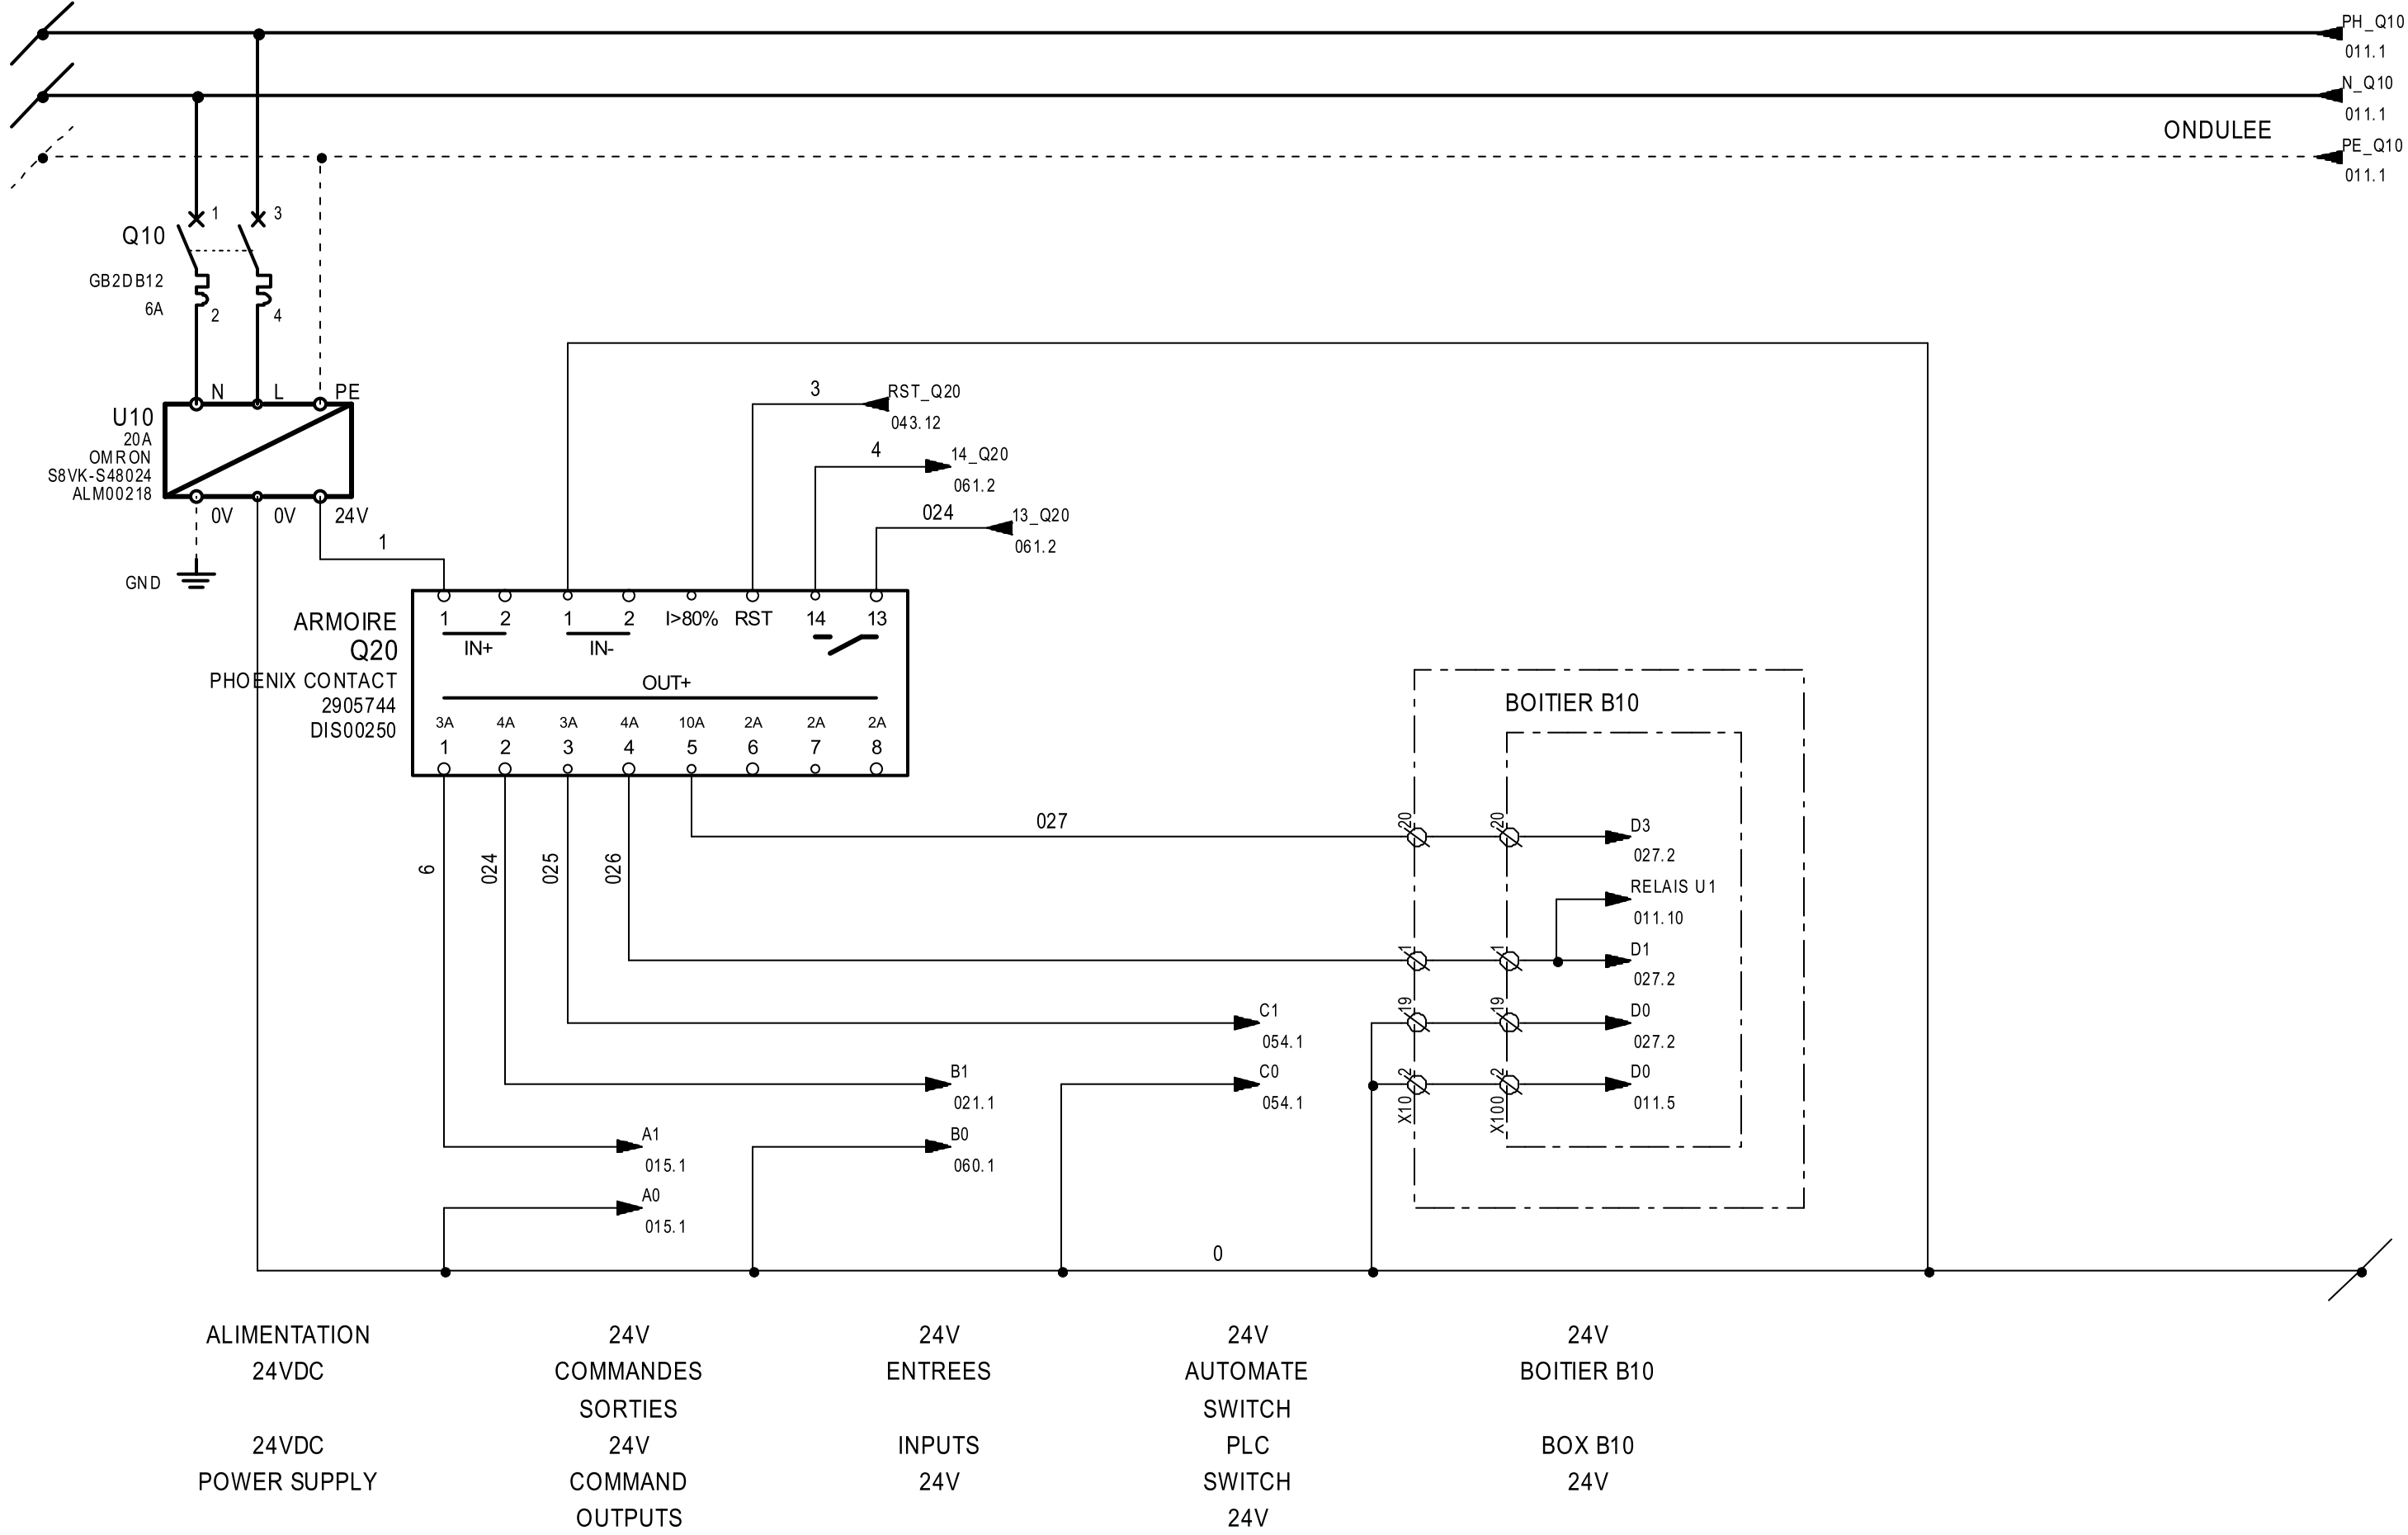


ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA PUISSANCE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		POWER PLAN								ARTICLE :		INDEX : V12			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 010/163			

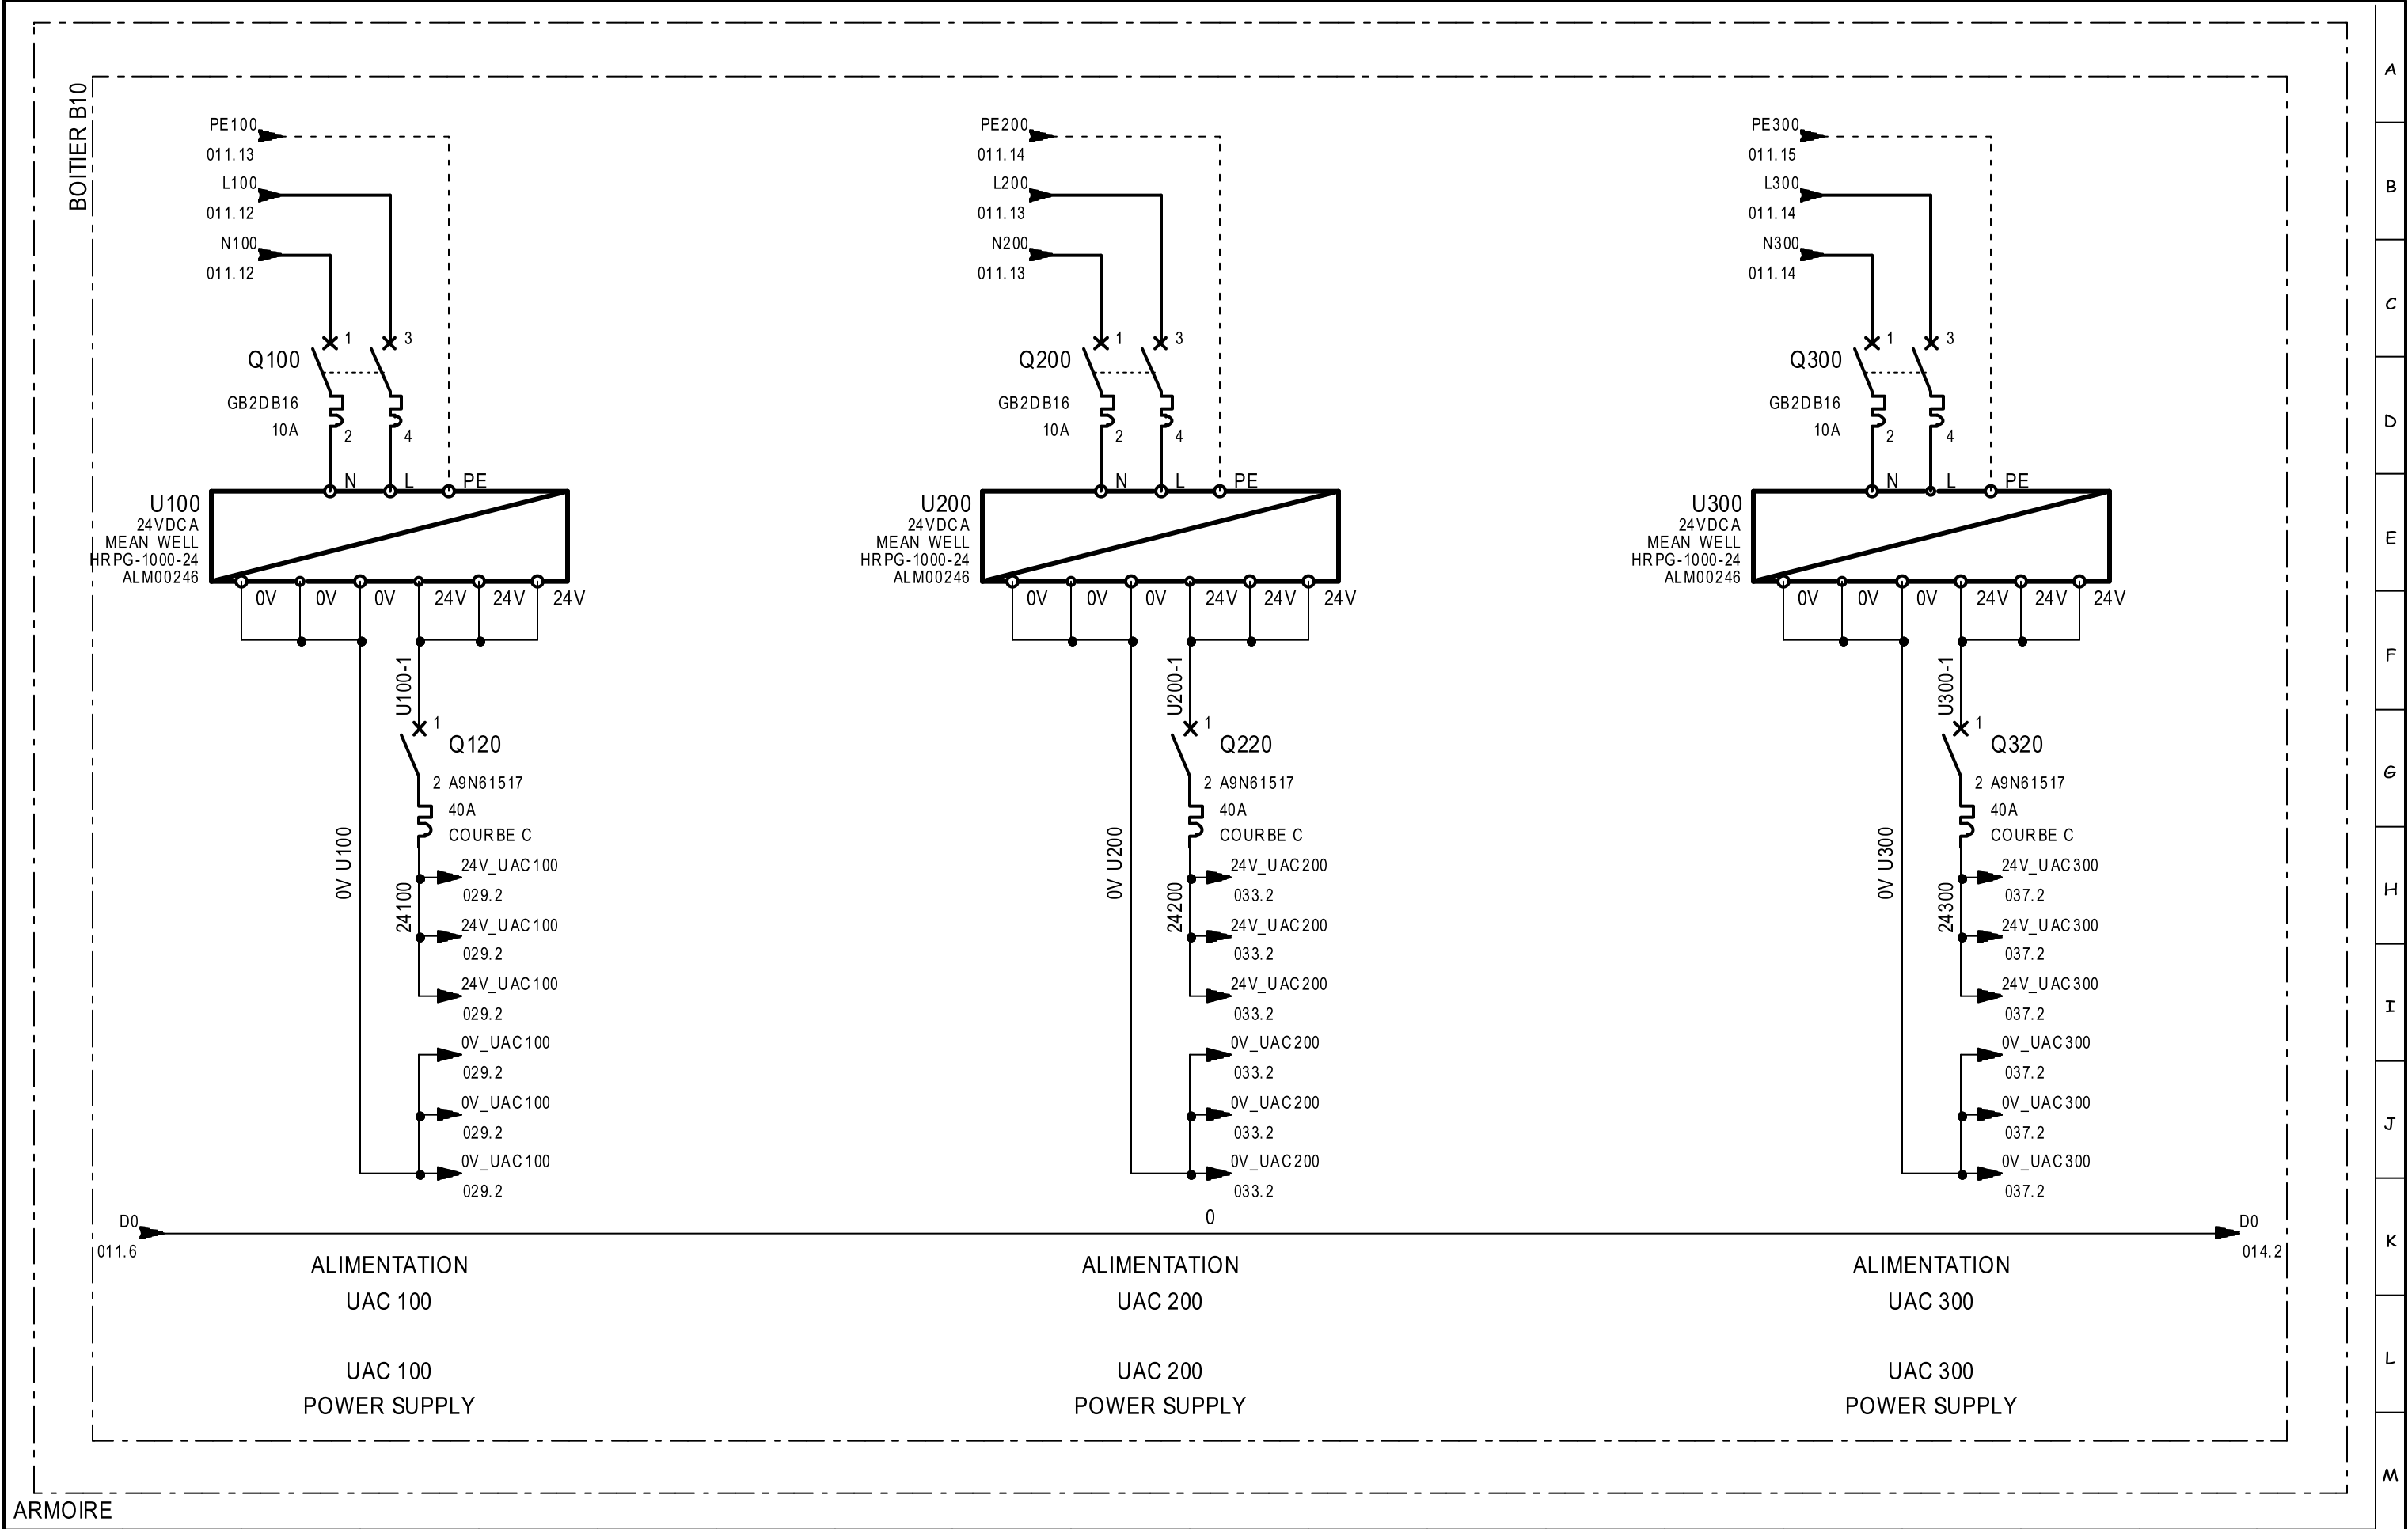

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

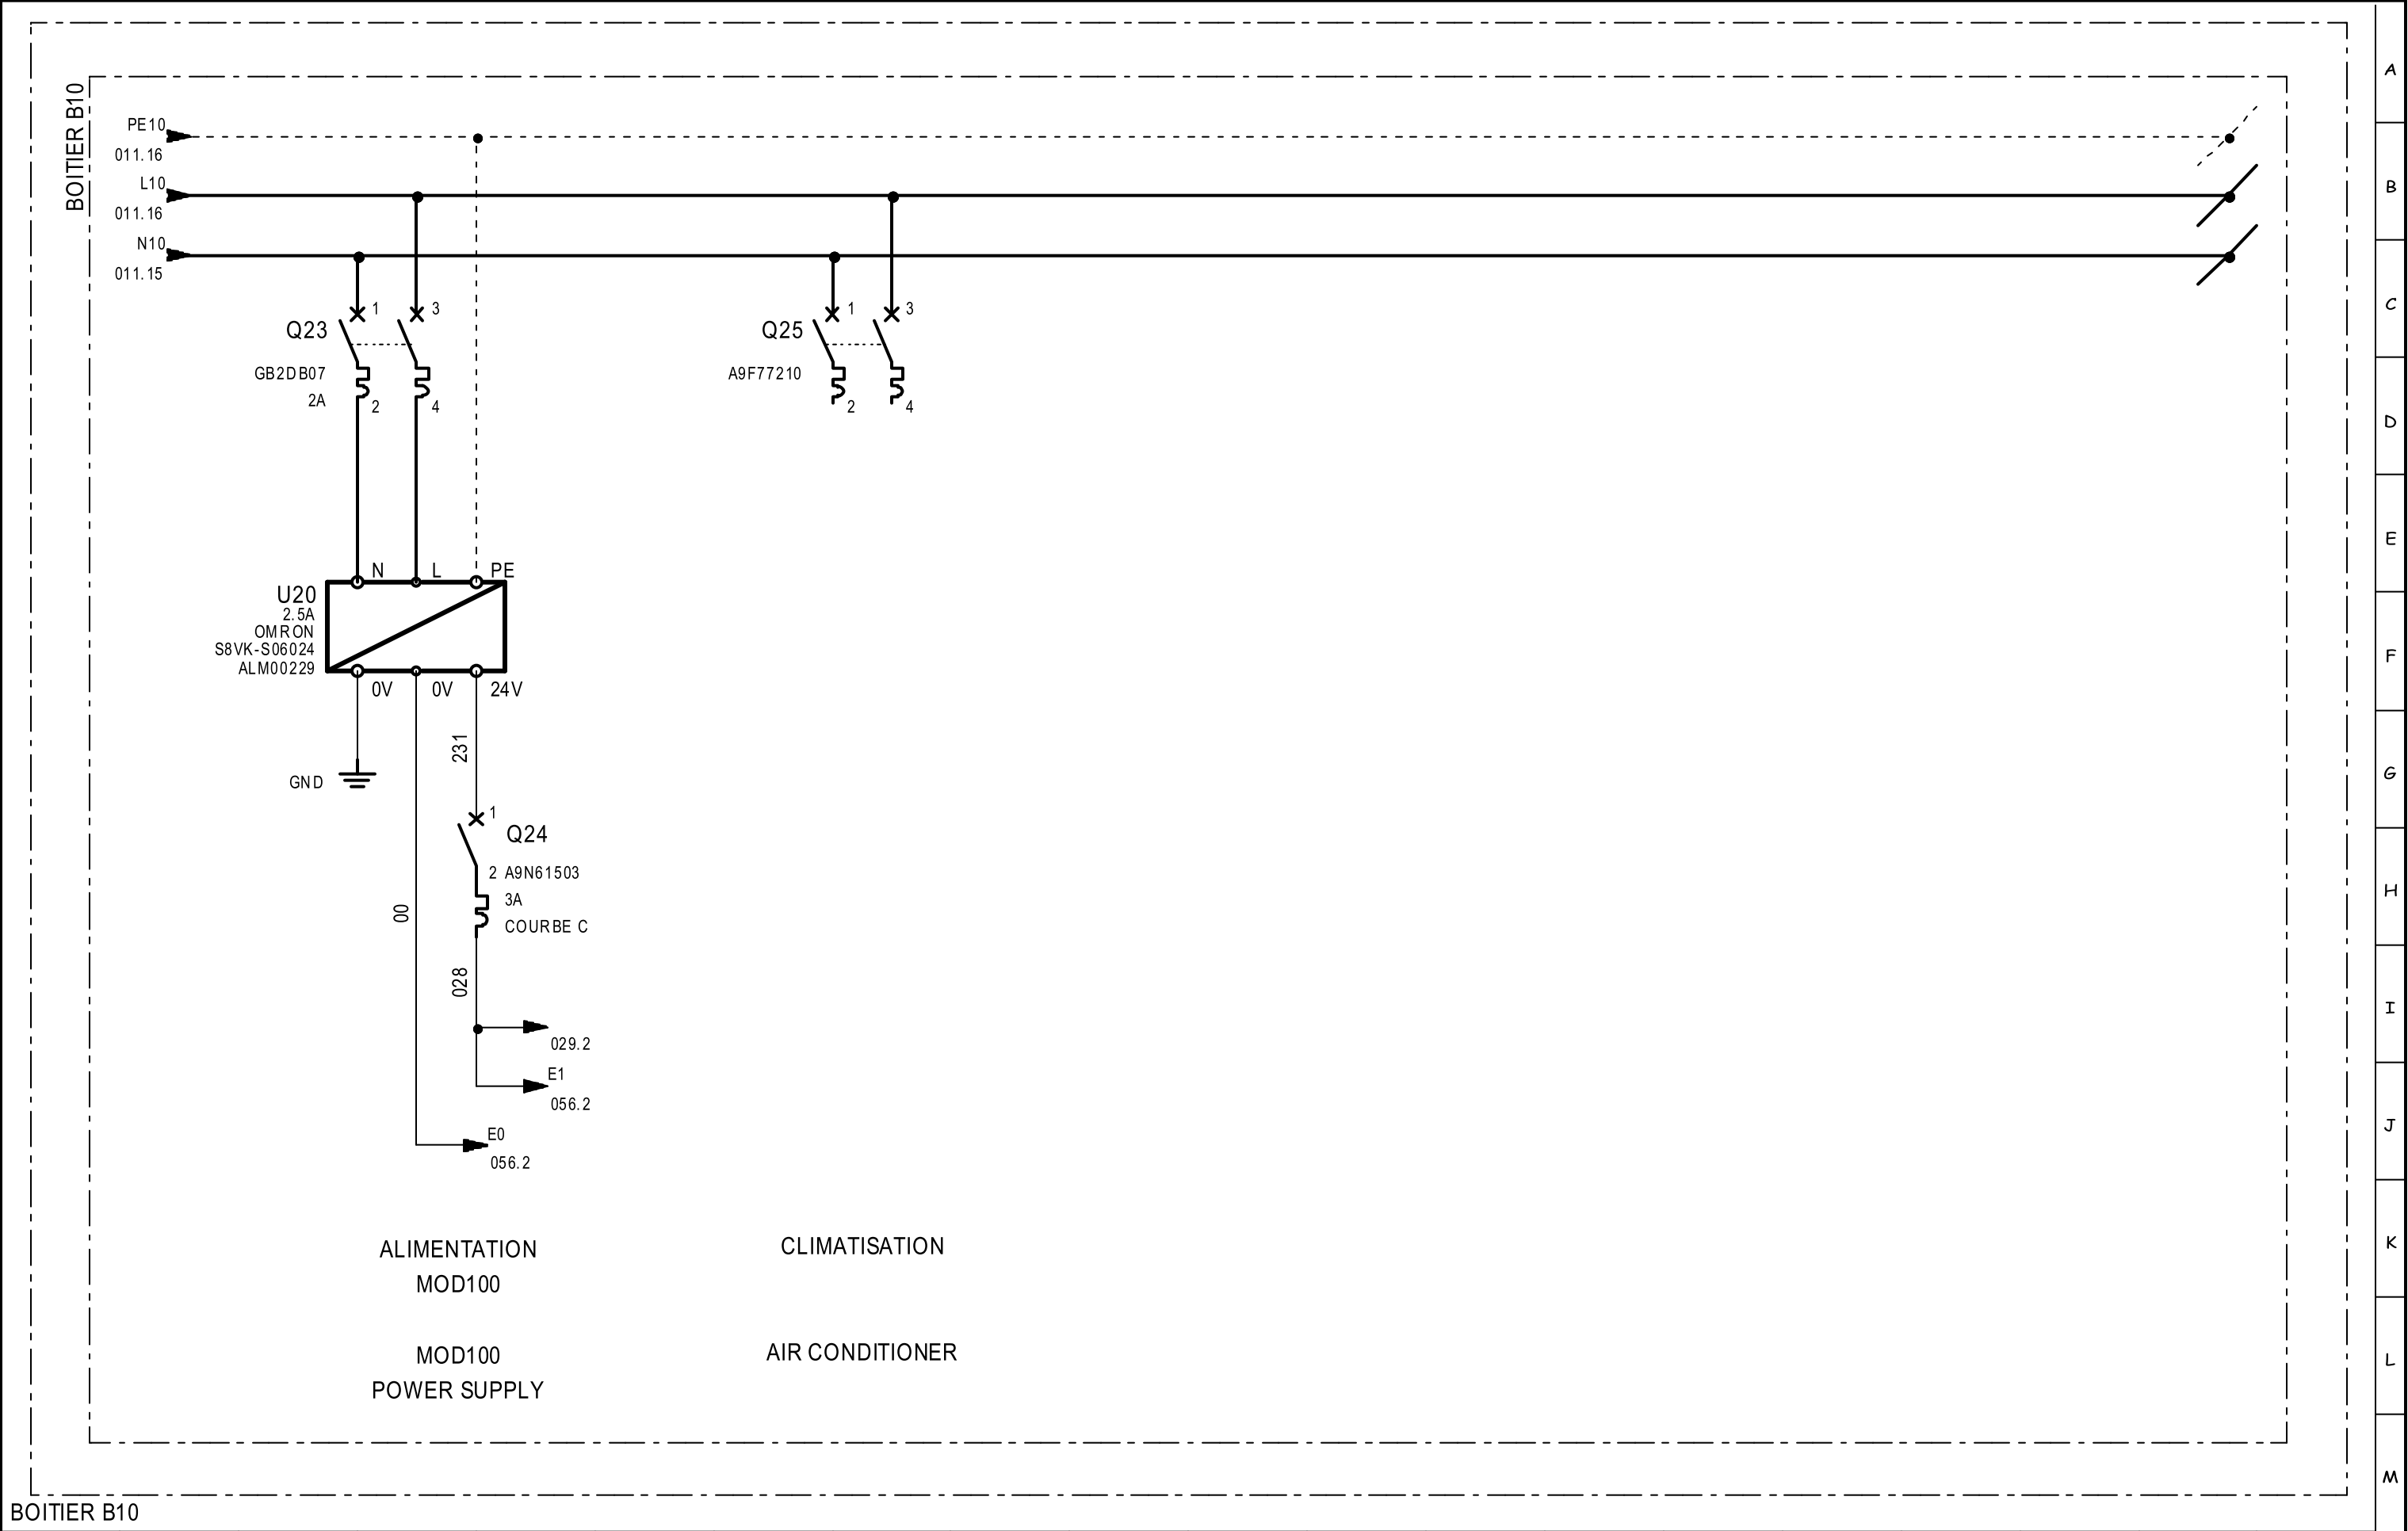


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		SCHEMA PUISSANCE UAC				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR			COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		UAC POWER PLAN								ARTICLE : SMXA-C014221					INDEX : V12	
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								FOLIO : 013/163						

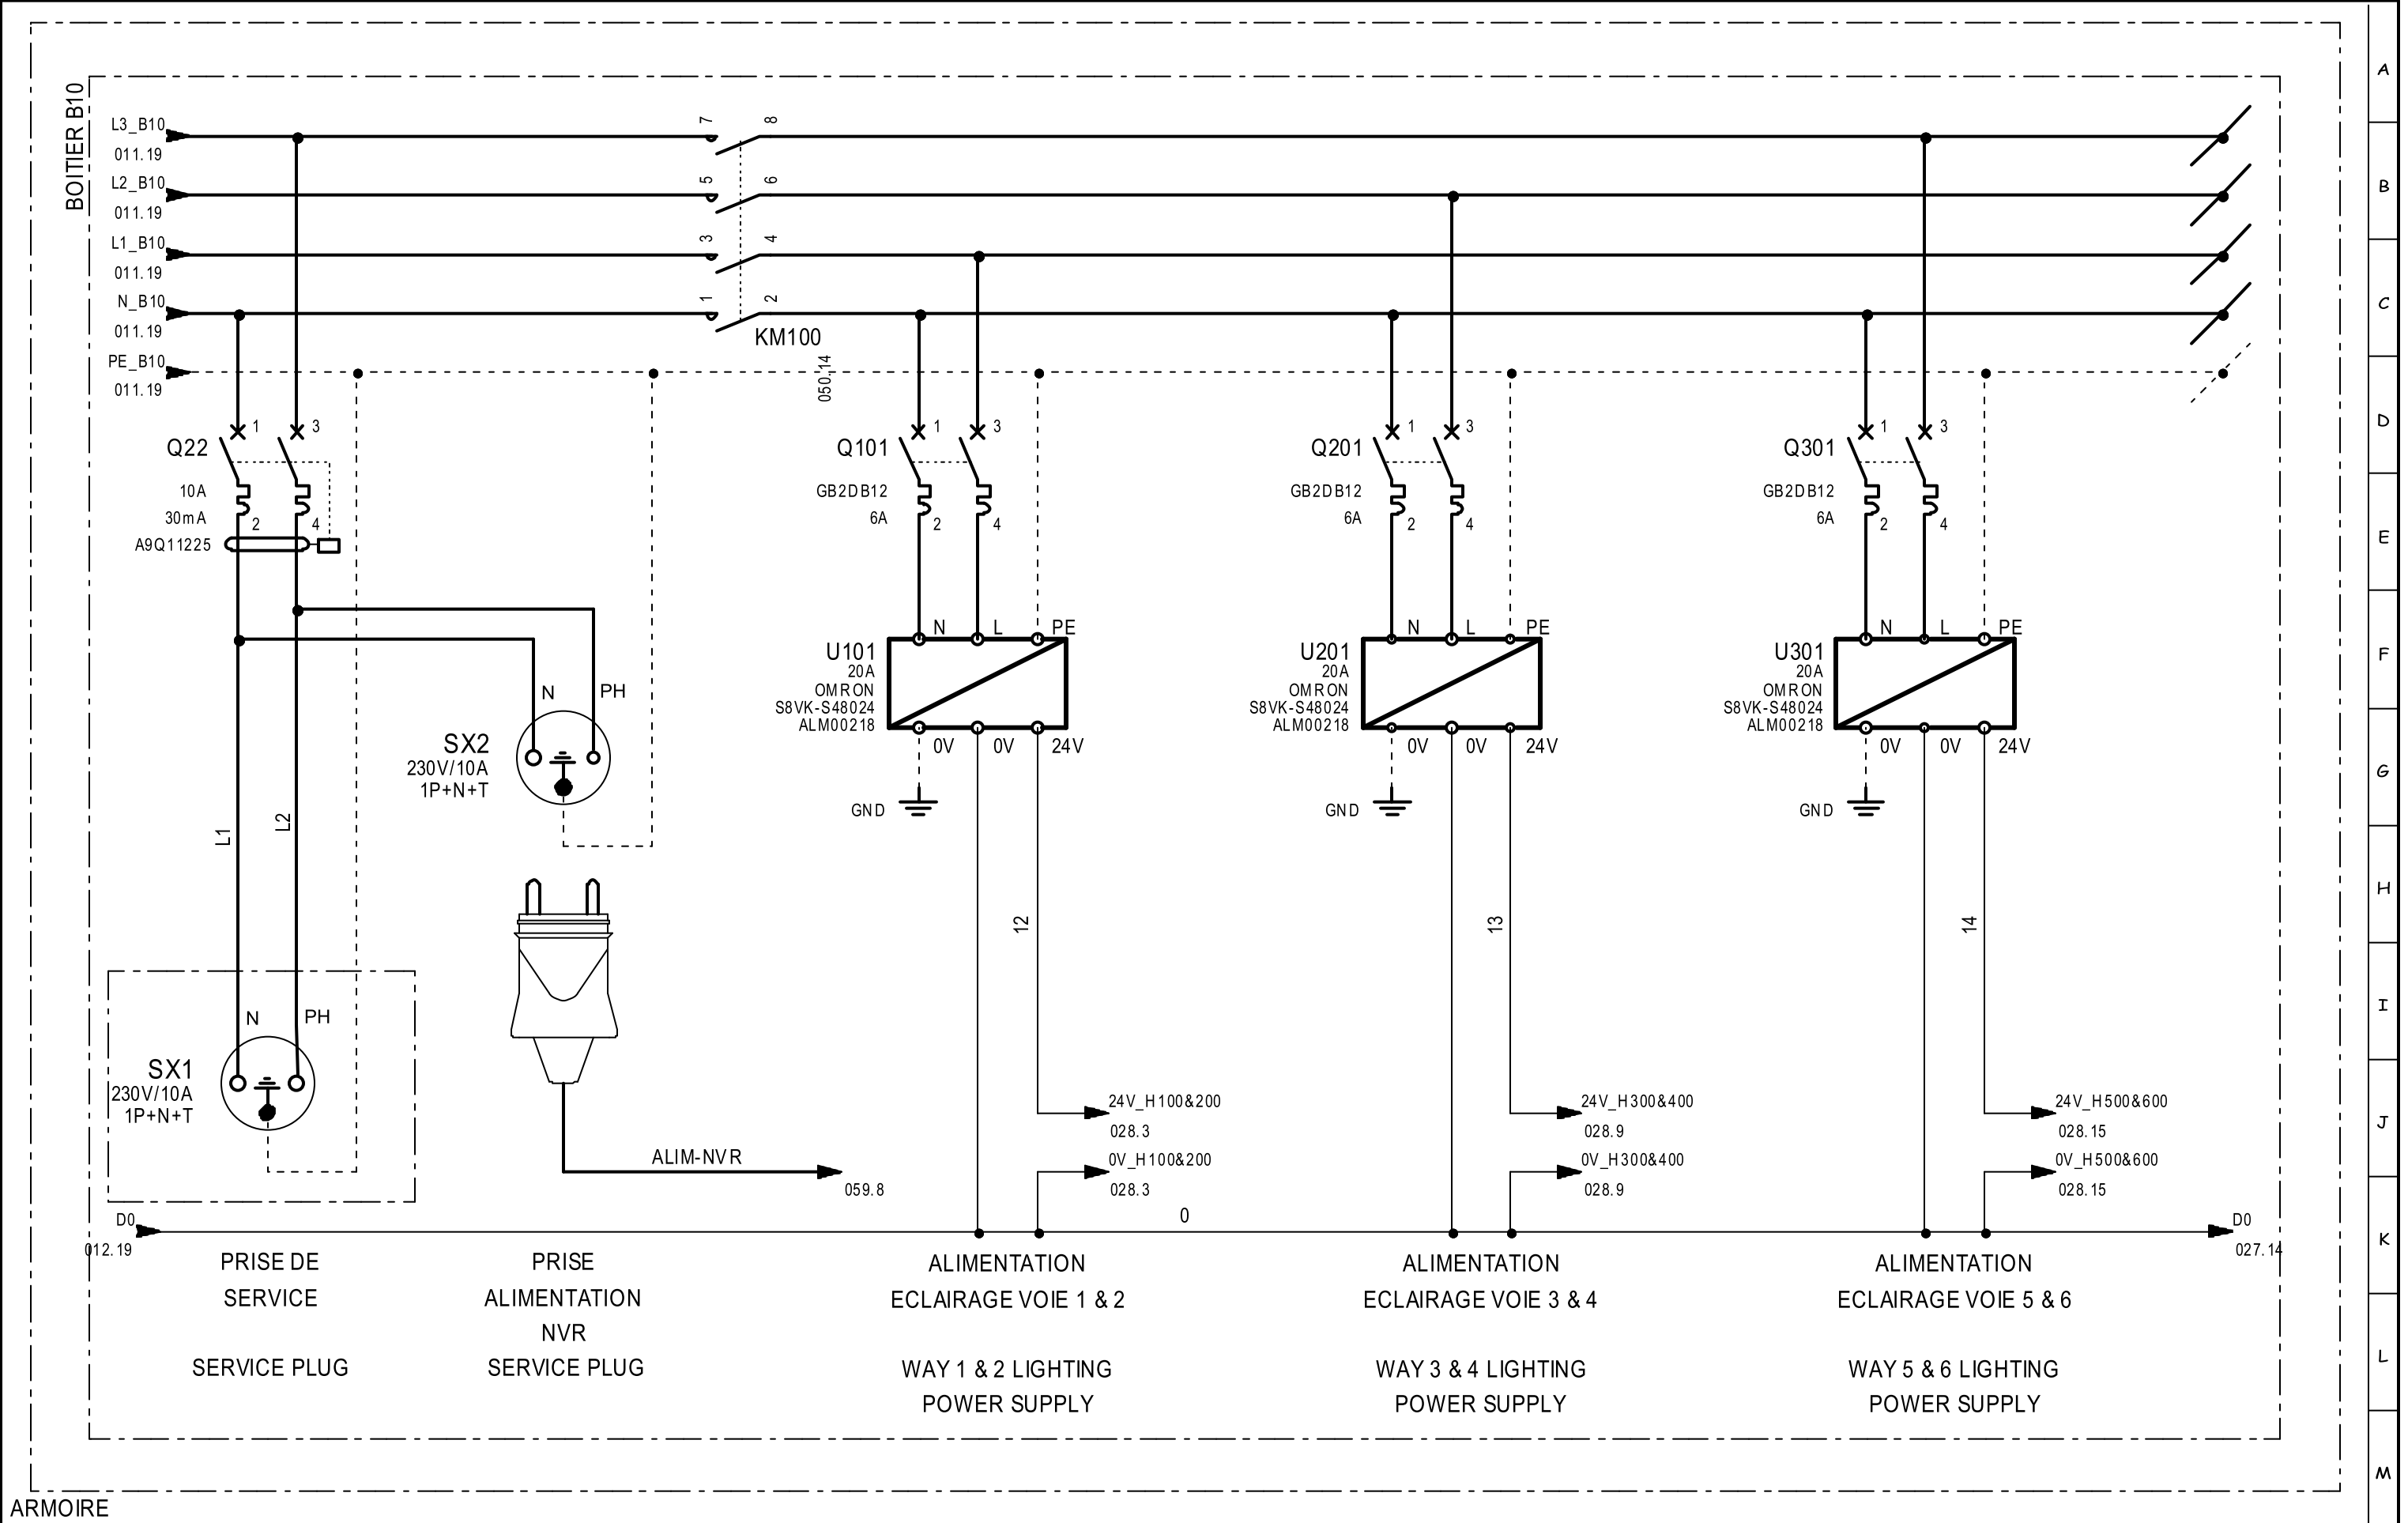

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA PUISSANCE UAC				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		UAC POWER PLAN								ARTICLE :		INDEX : V11			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT: Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 014/163			


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

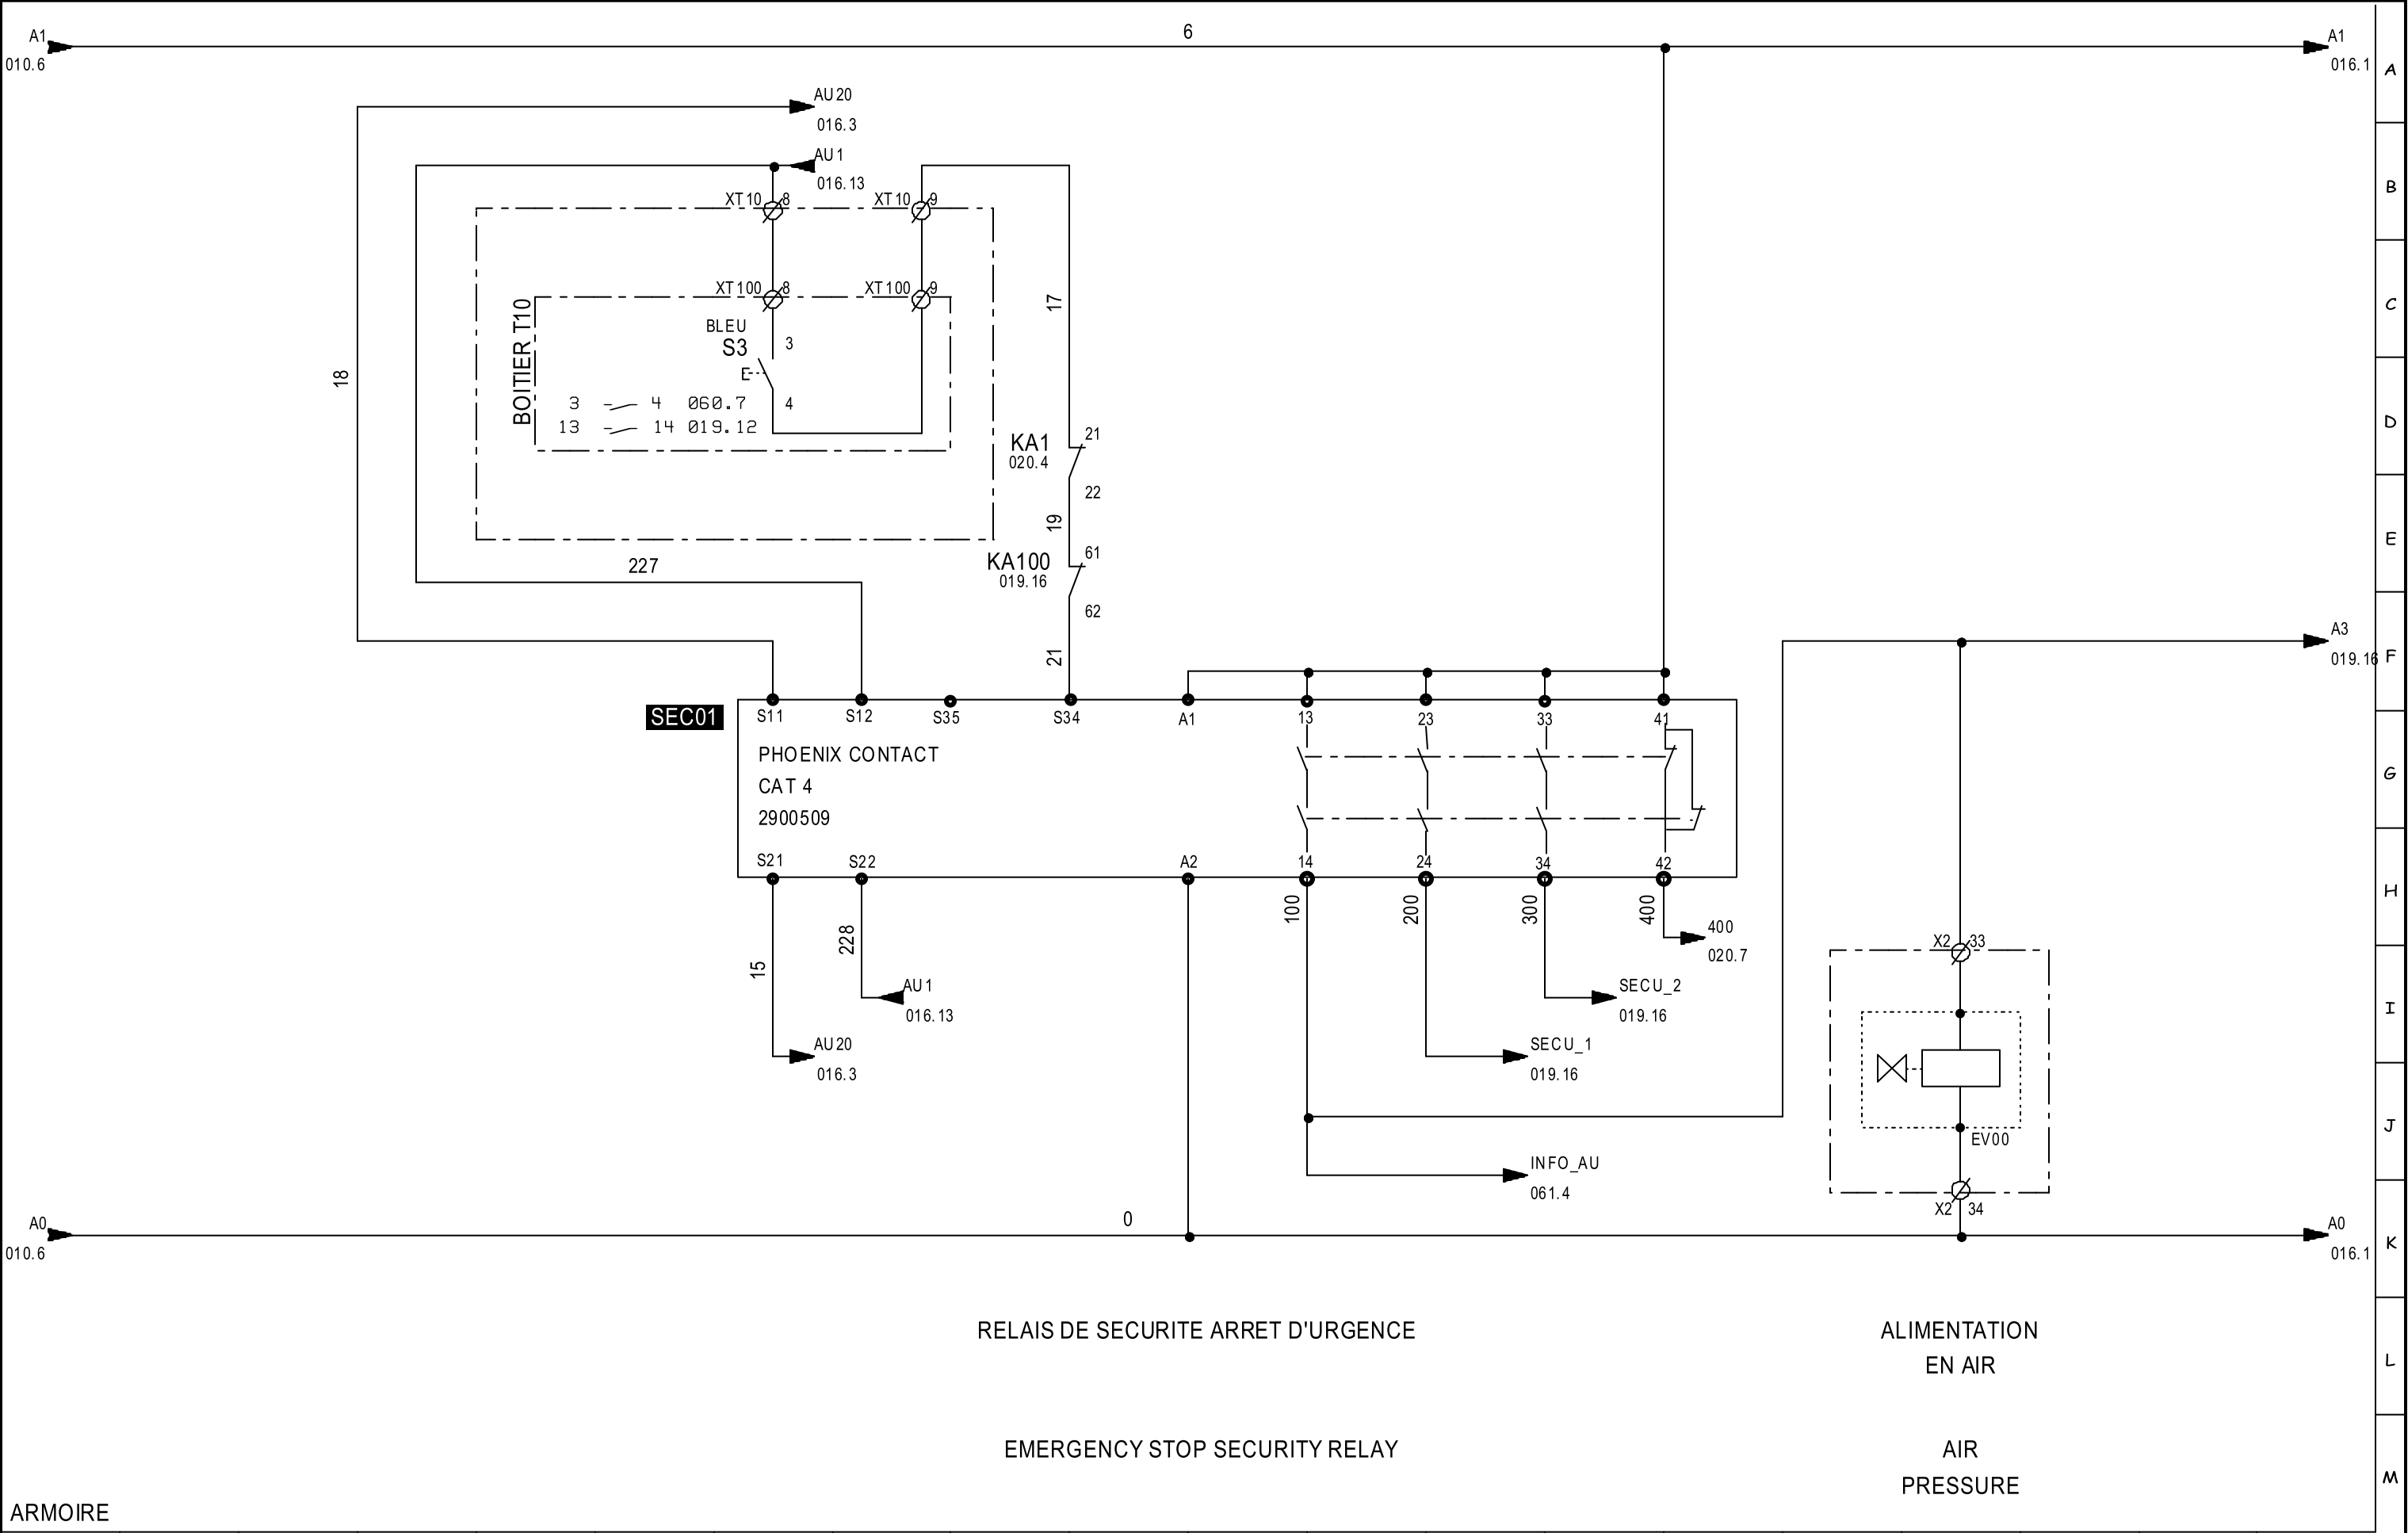

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecatid.service@ceva.com		Date of creation :		SCHEMA COMMANDE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
					Designed by : DB		CONTROL PLAN								ARTICLE : SMXA-C014221				INDEX : V16	
							ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 015/163					


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

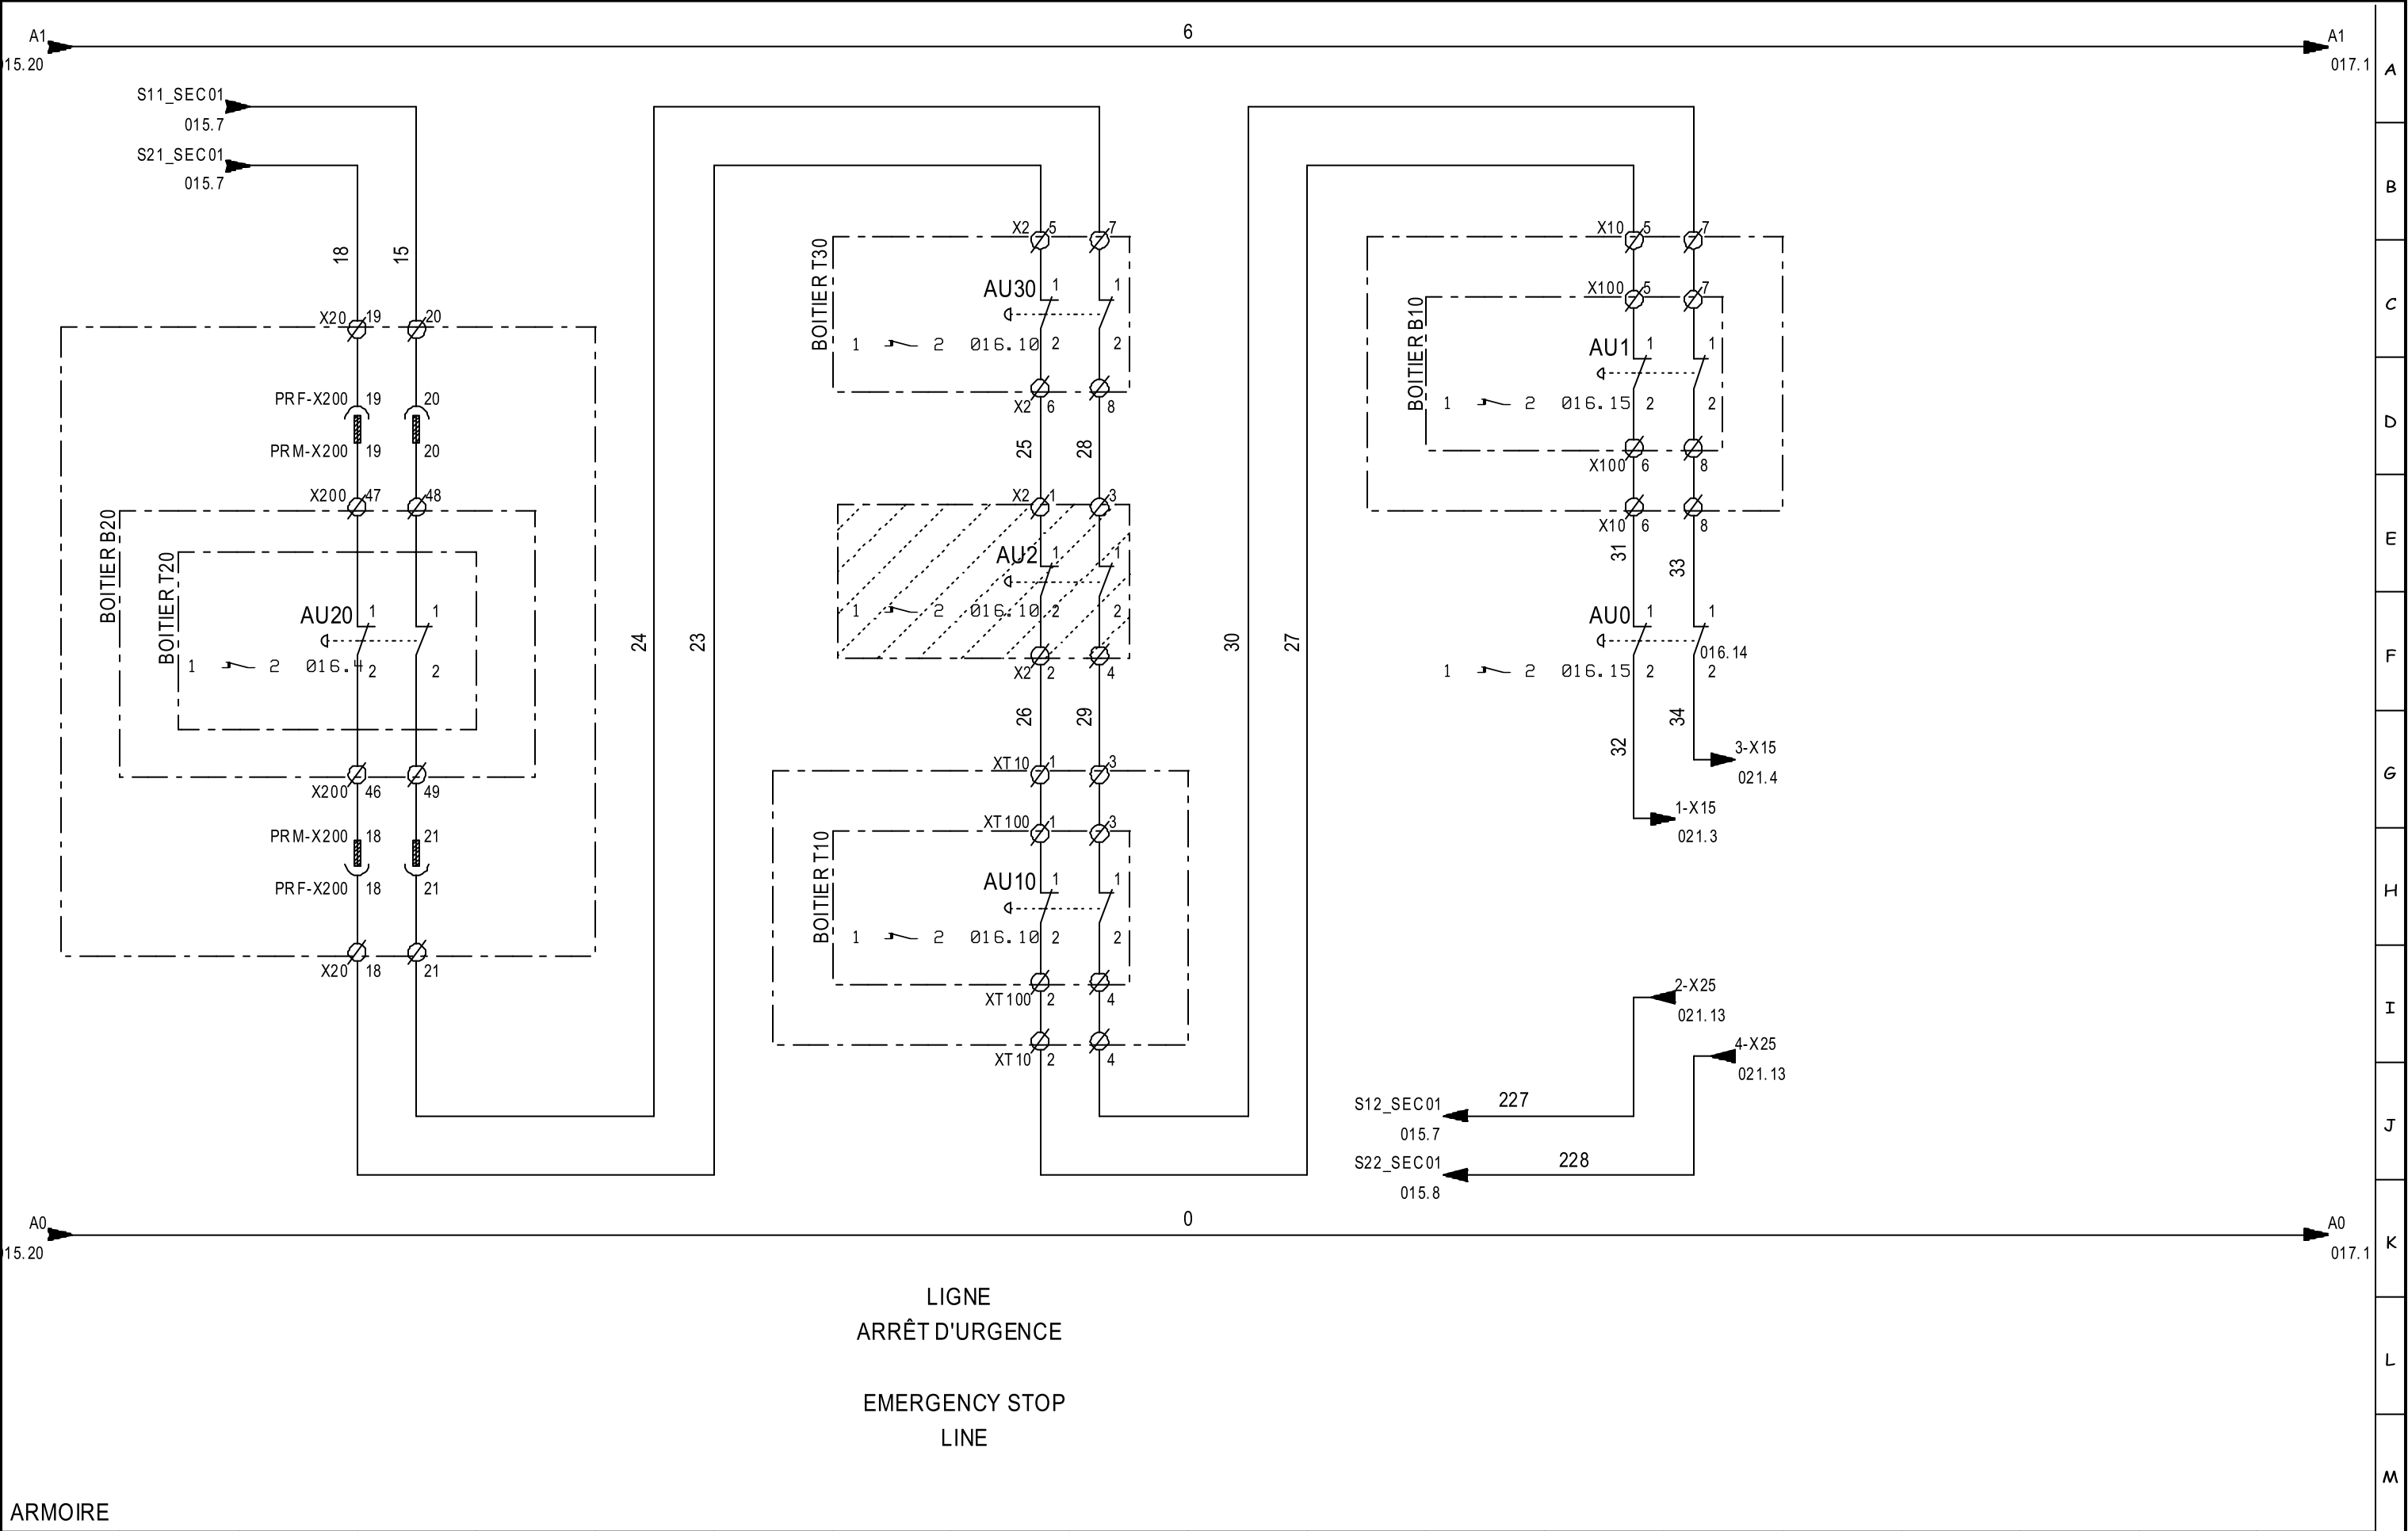

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA COMMANDE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		CONTROL PLAN								ARTICLE :		INDEX : V16			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 016/163			

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

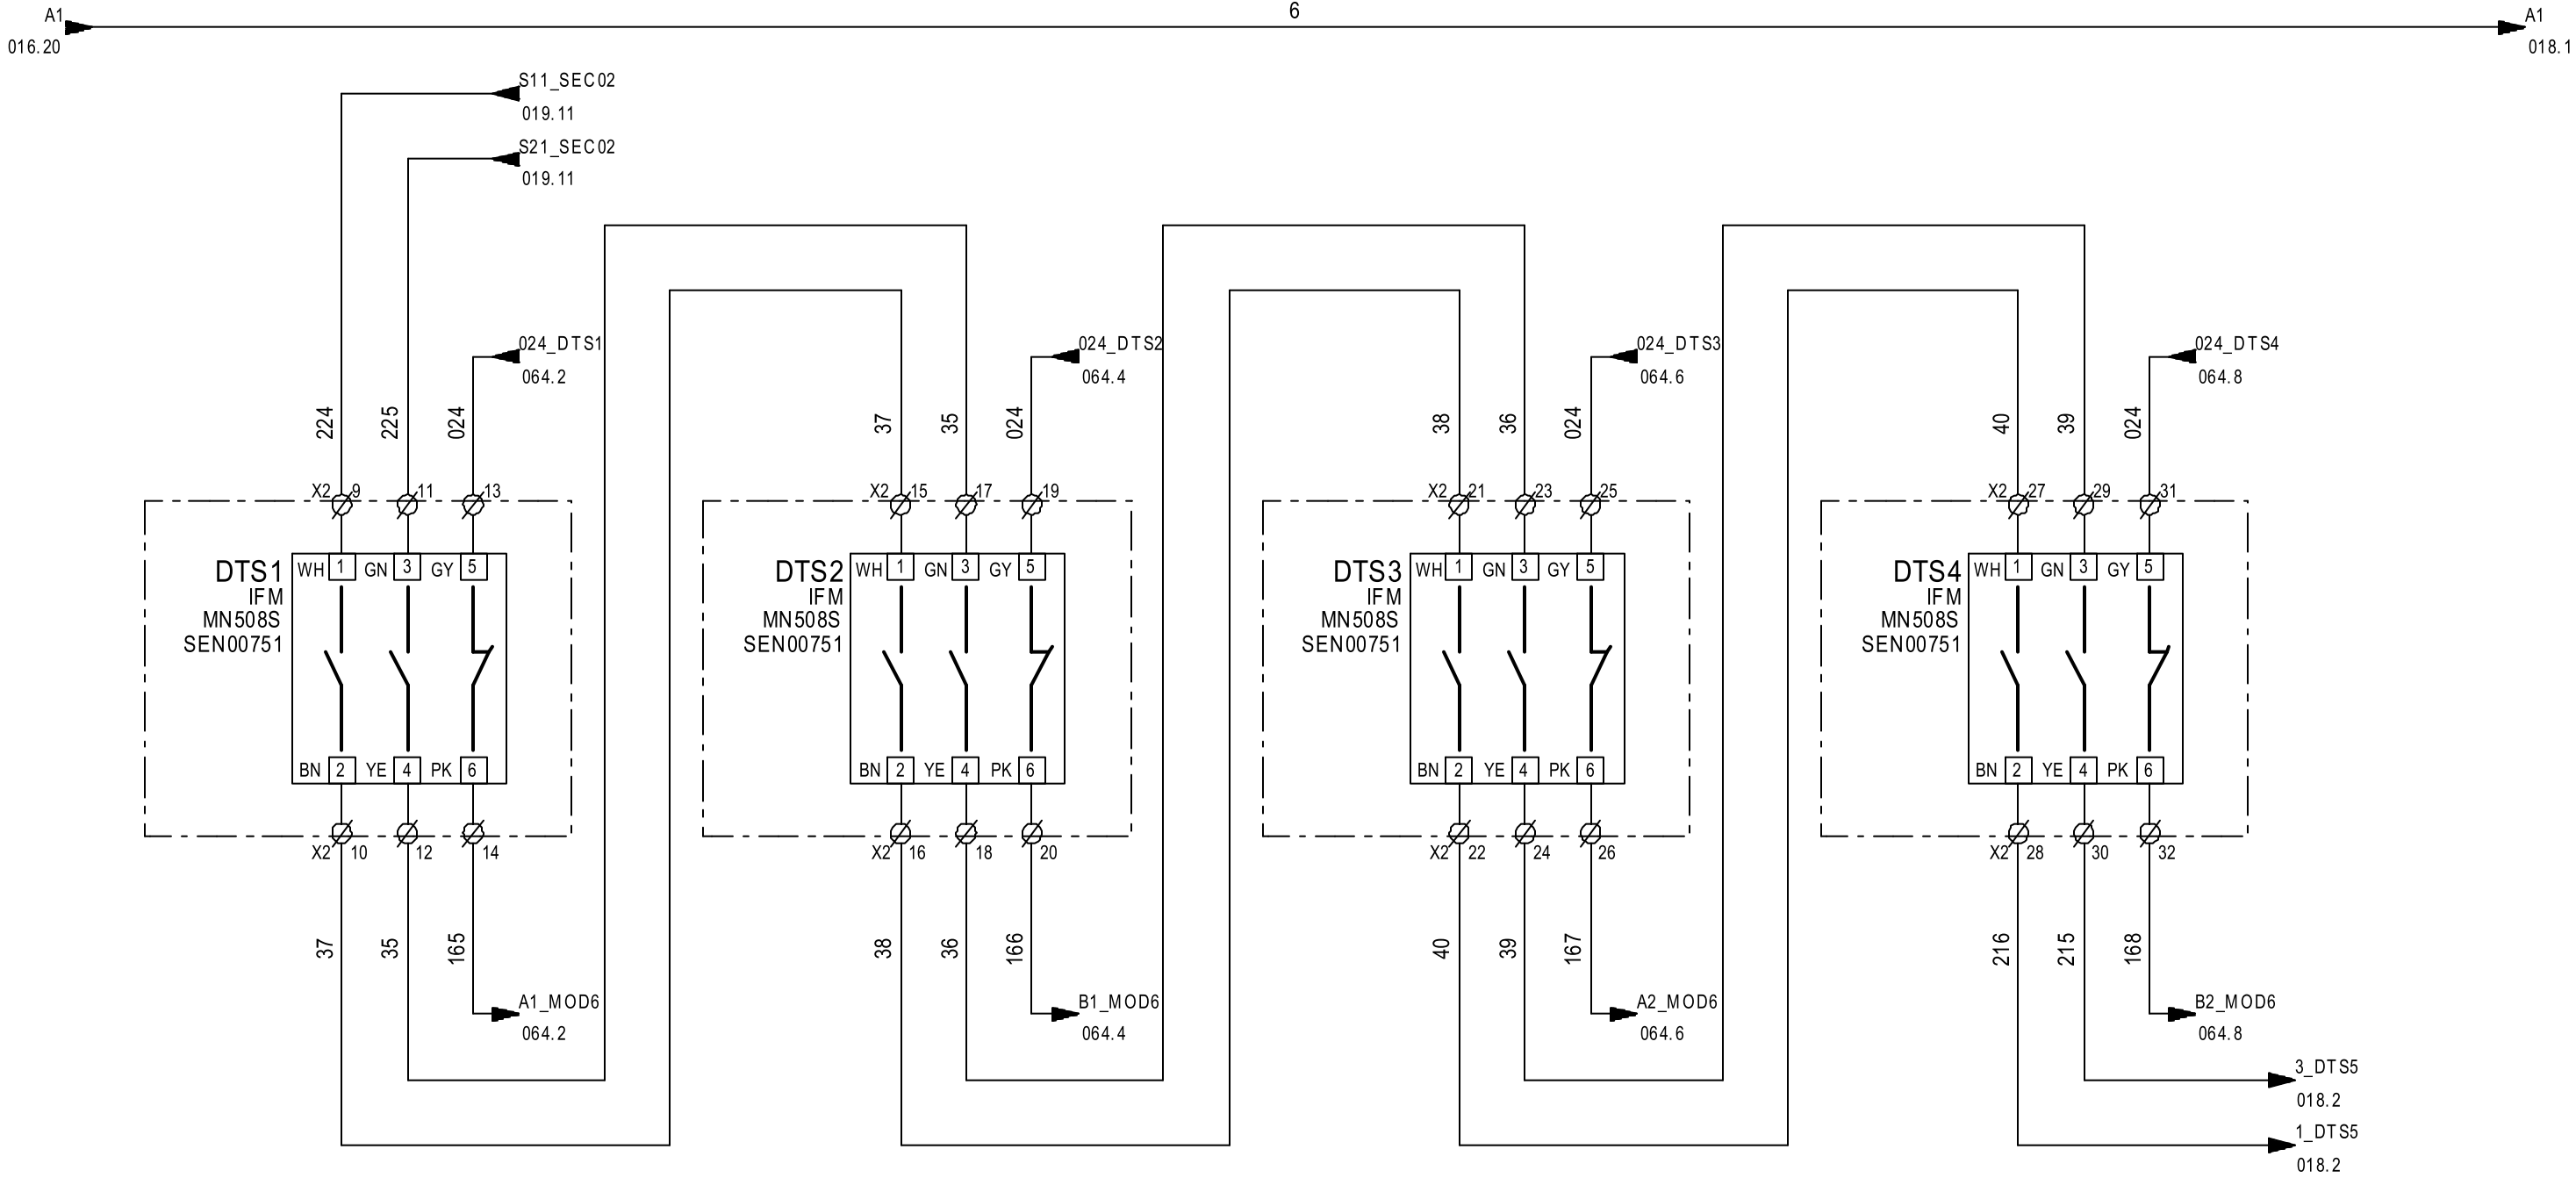


LIGNE SECURITE
CAPTEUR DE PORTE

SECURITY LINE
DOOR SENSOR

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA COMMANDE				 Ecat-iD Campus			CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		CONTROL PLAN							ARTICLE : SMXA-C014221		INDEX : V16			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020									FOLIO : 017/163			

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

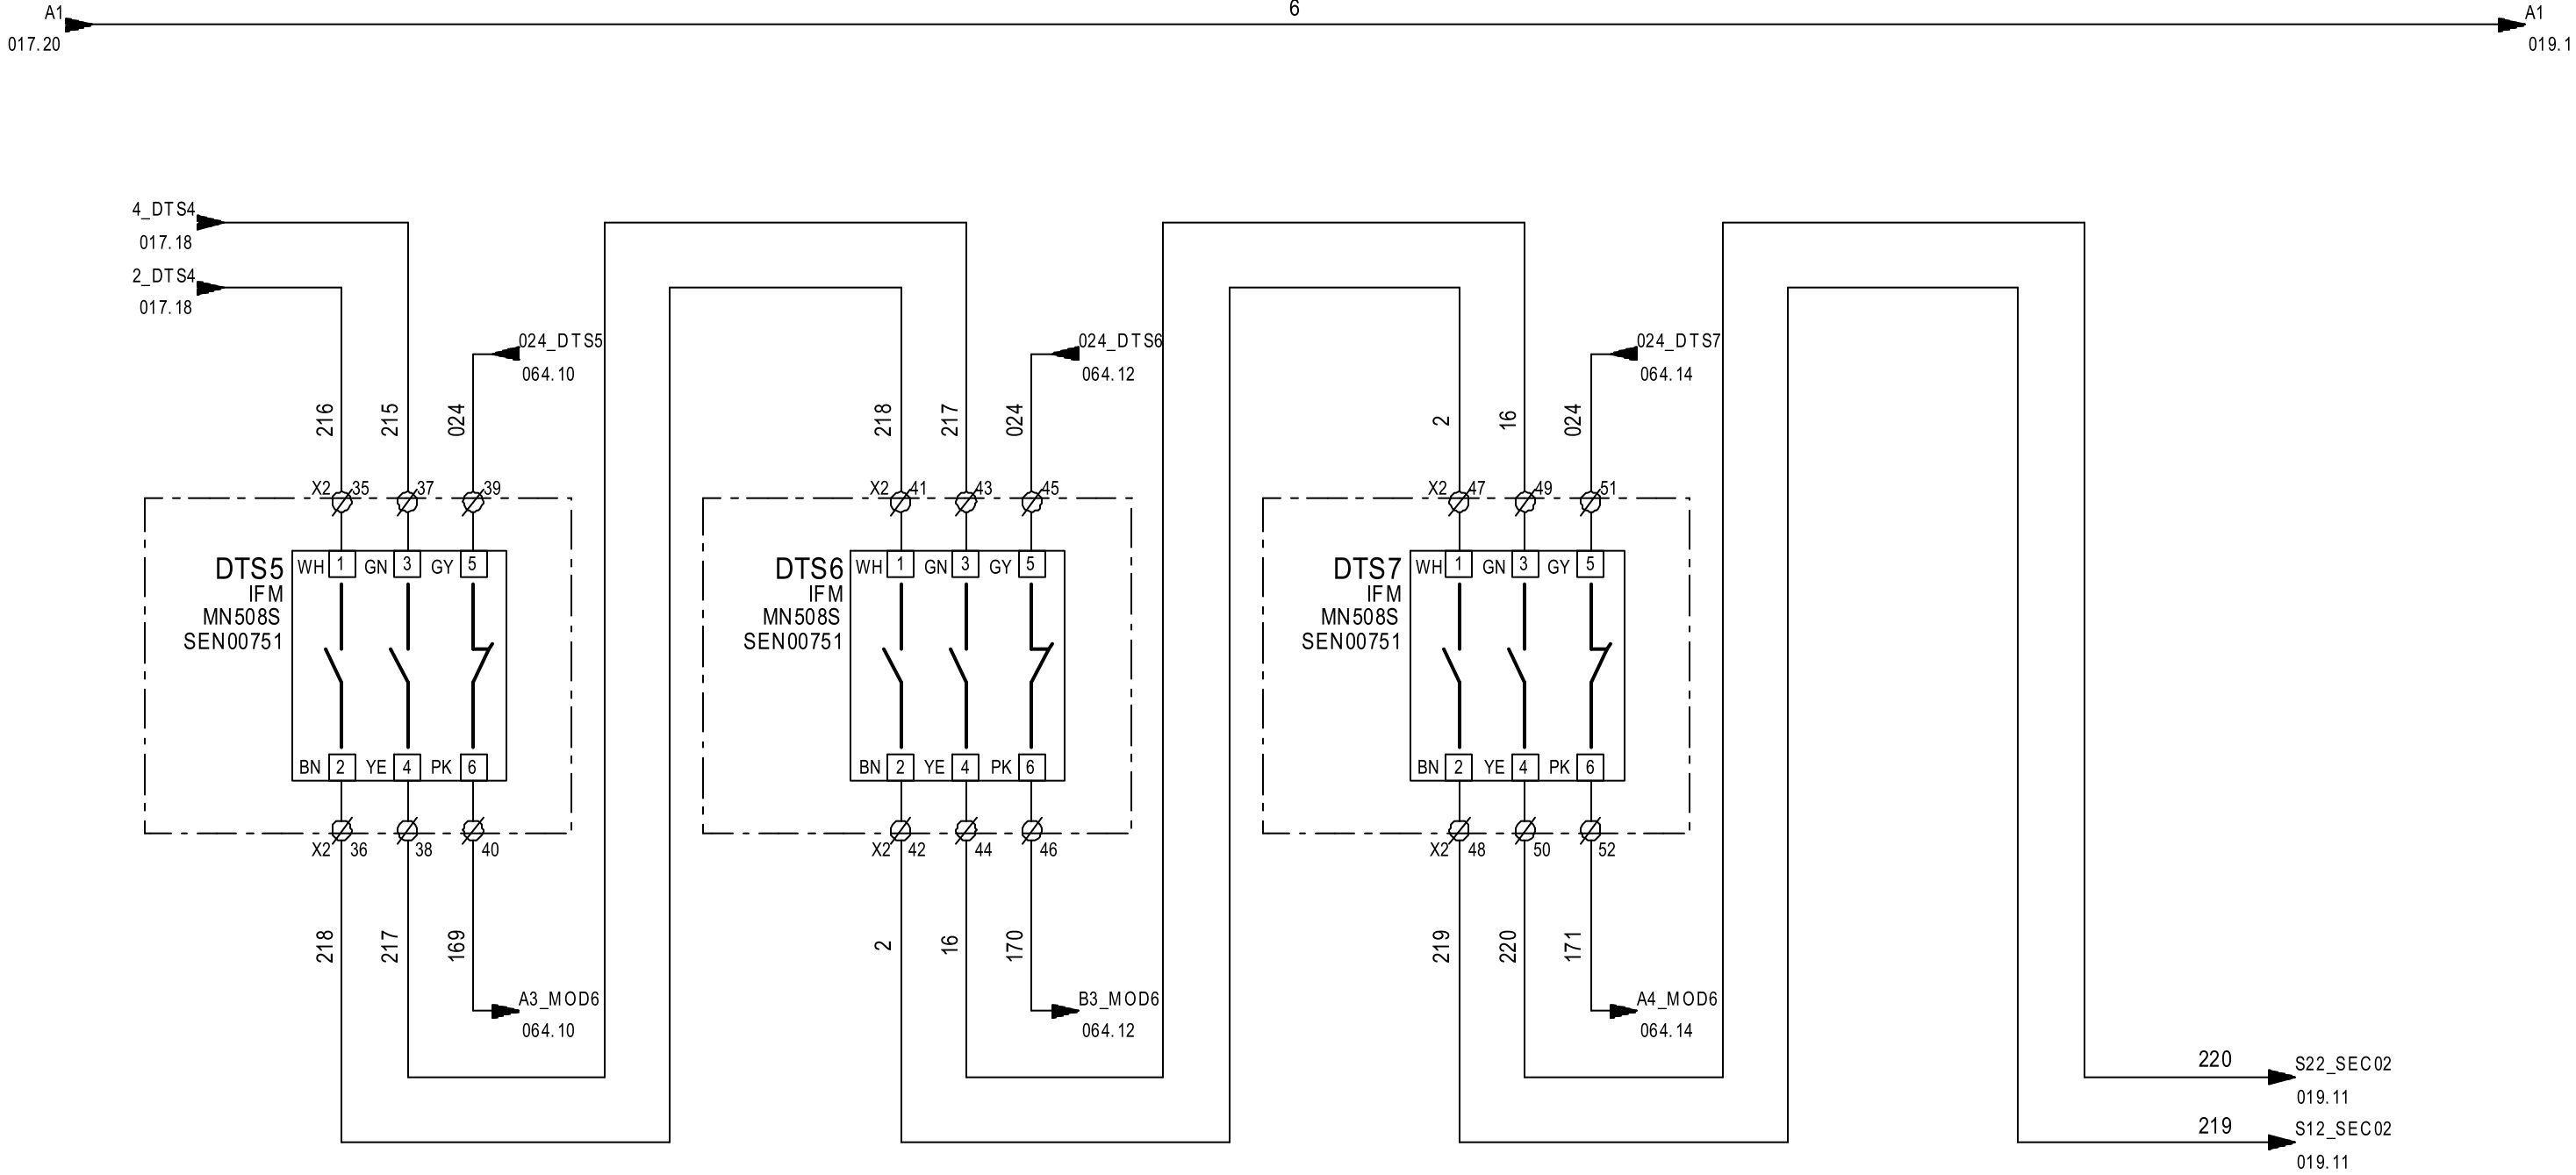


LIGNE SECURITE
CAPTEUR DE PORTE

SECURITY LINE
DOOR SENSOR

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA COMMANDE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		CONTROL PLAN								ARTICLE : SMXA-C014221				INDEX : V16	
			E-mail : ecatid.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 018/163					


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

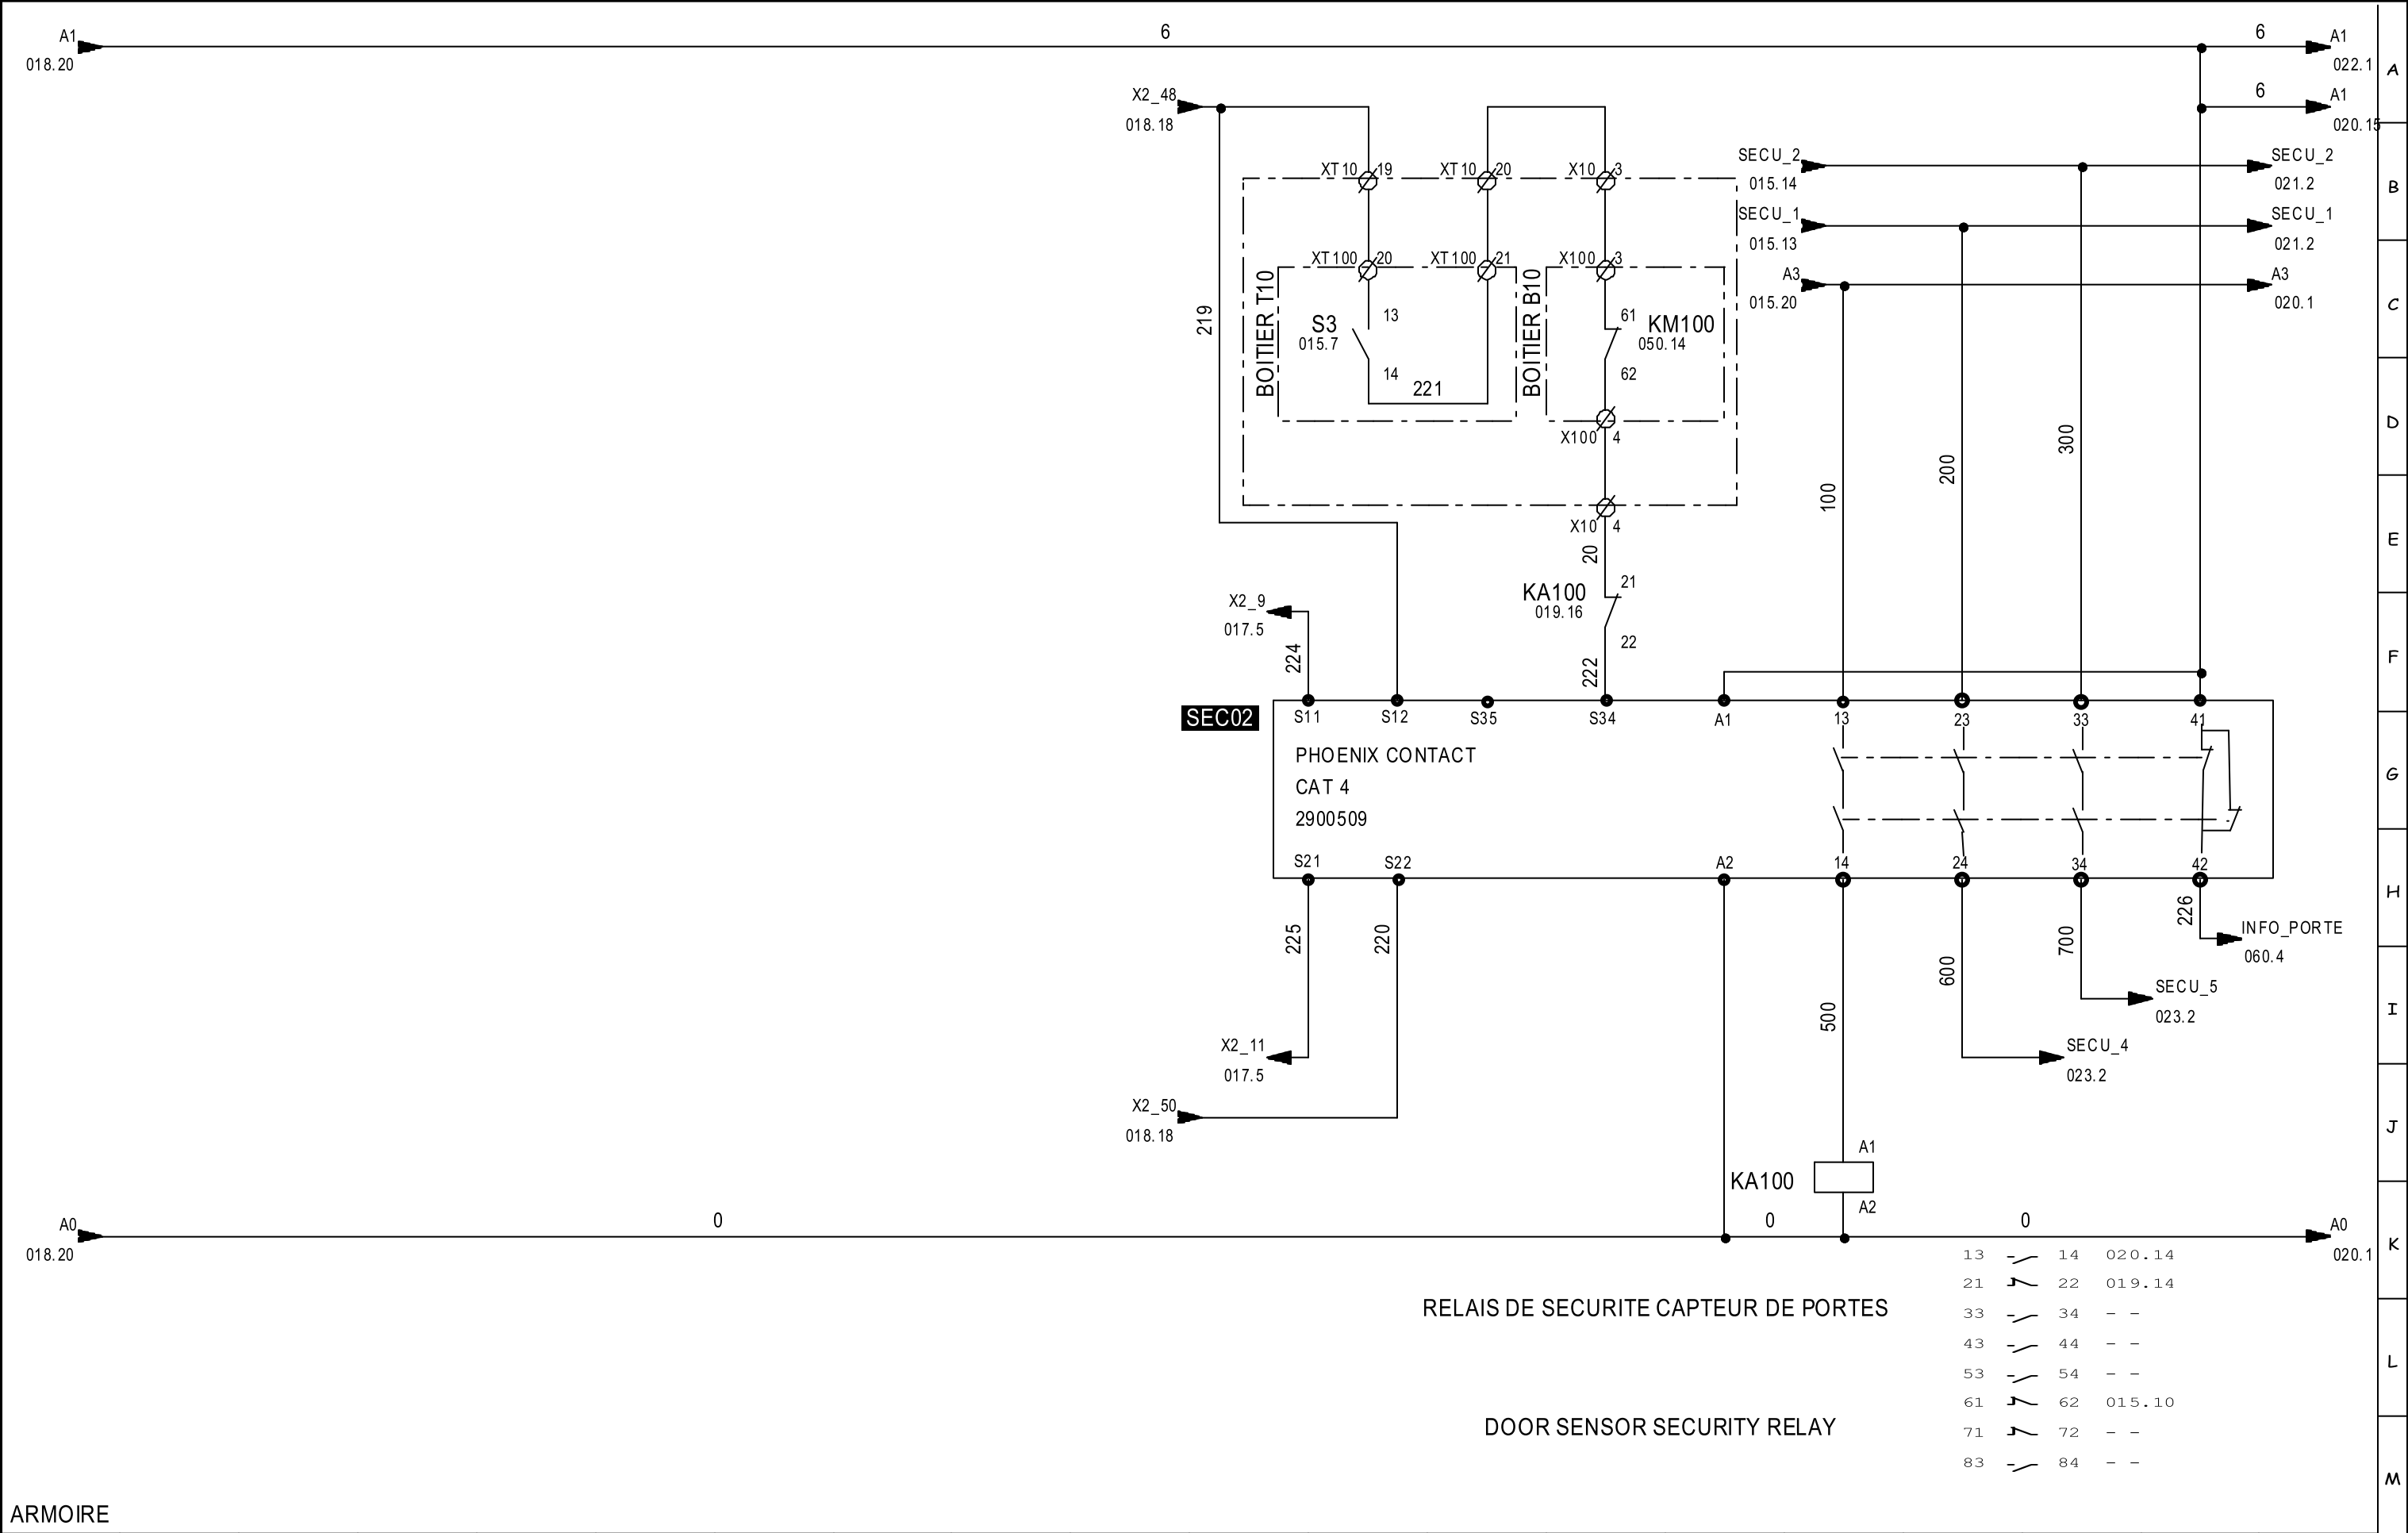

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA COMMANDE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		CONTROL PLAN								ARTICLE : SMXA-C014221		INDEX : V16			
			E-mail :ecatid.service@ceva.com		ENVIRONNEMENT:Version 4.49.F - 23/09/2020				019/163											

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

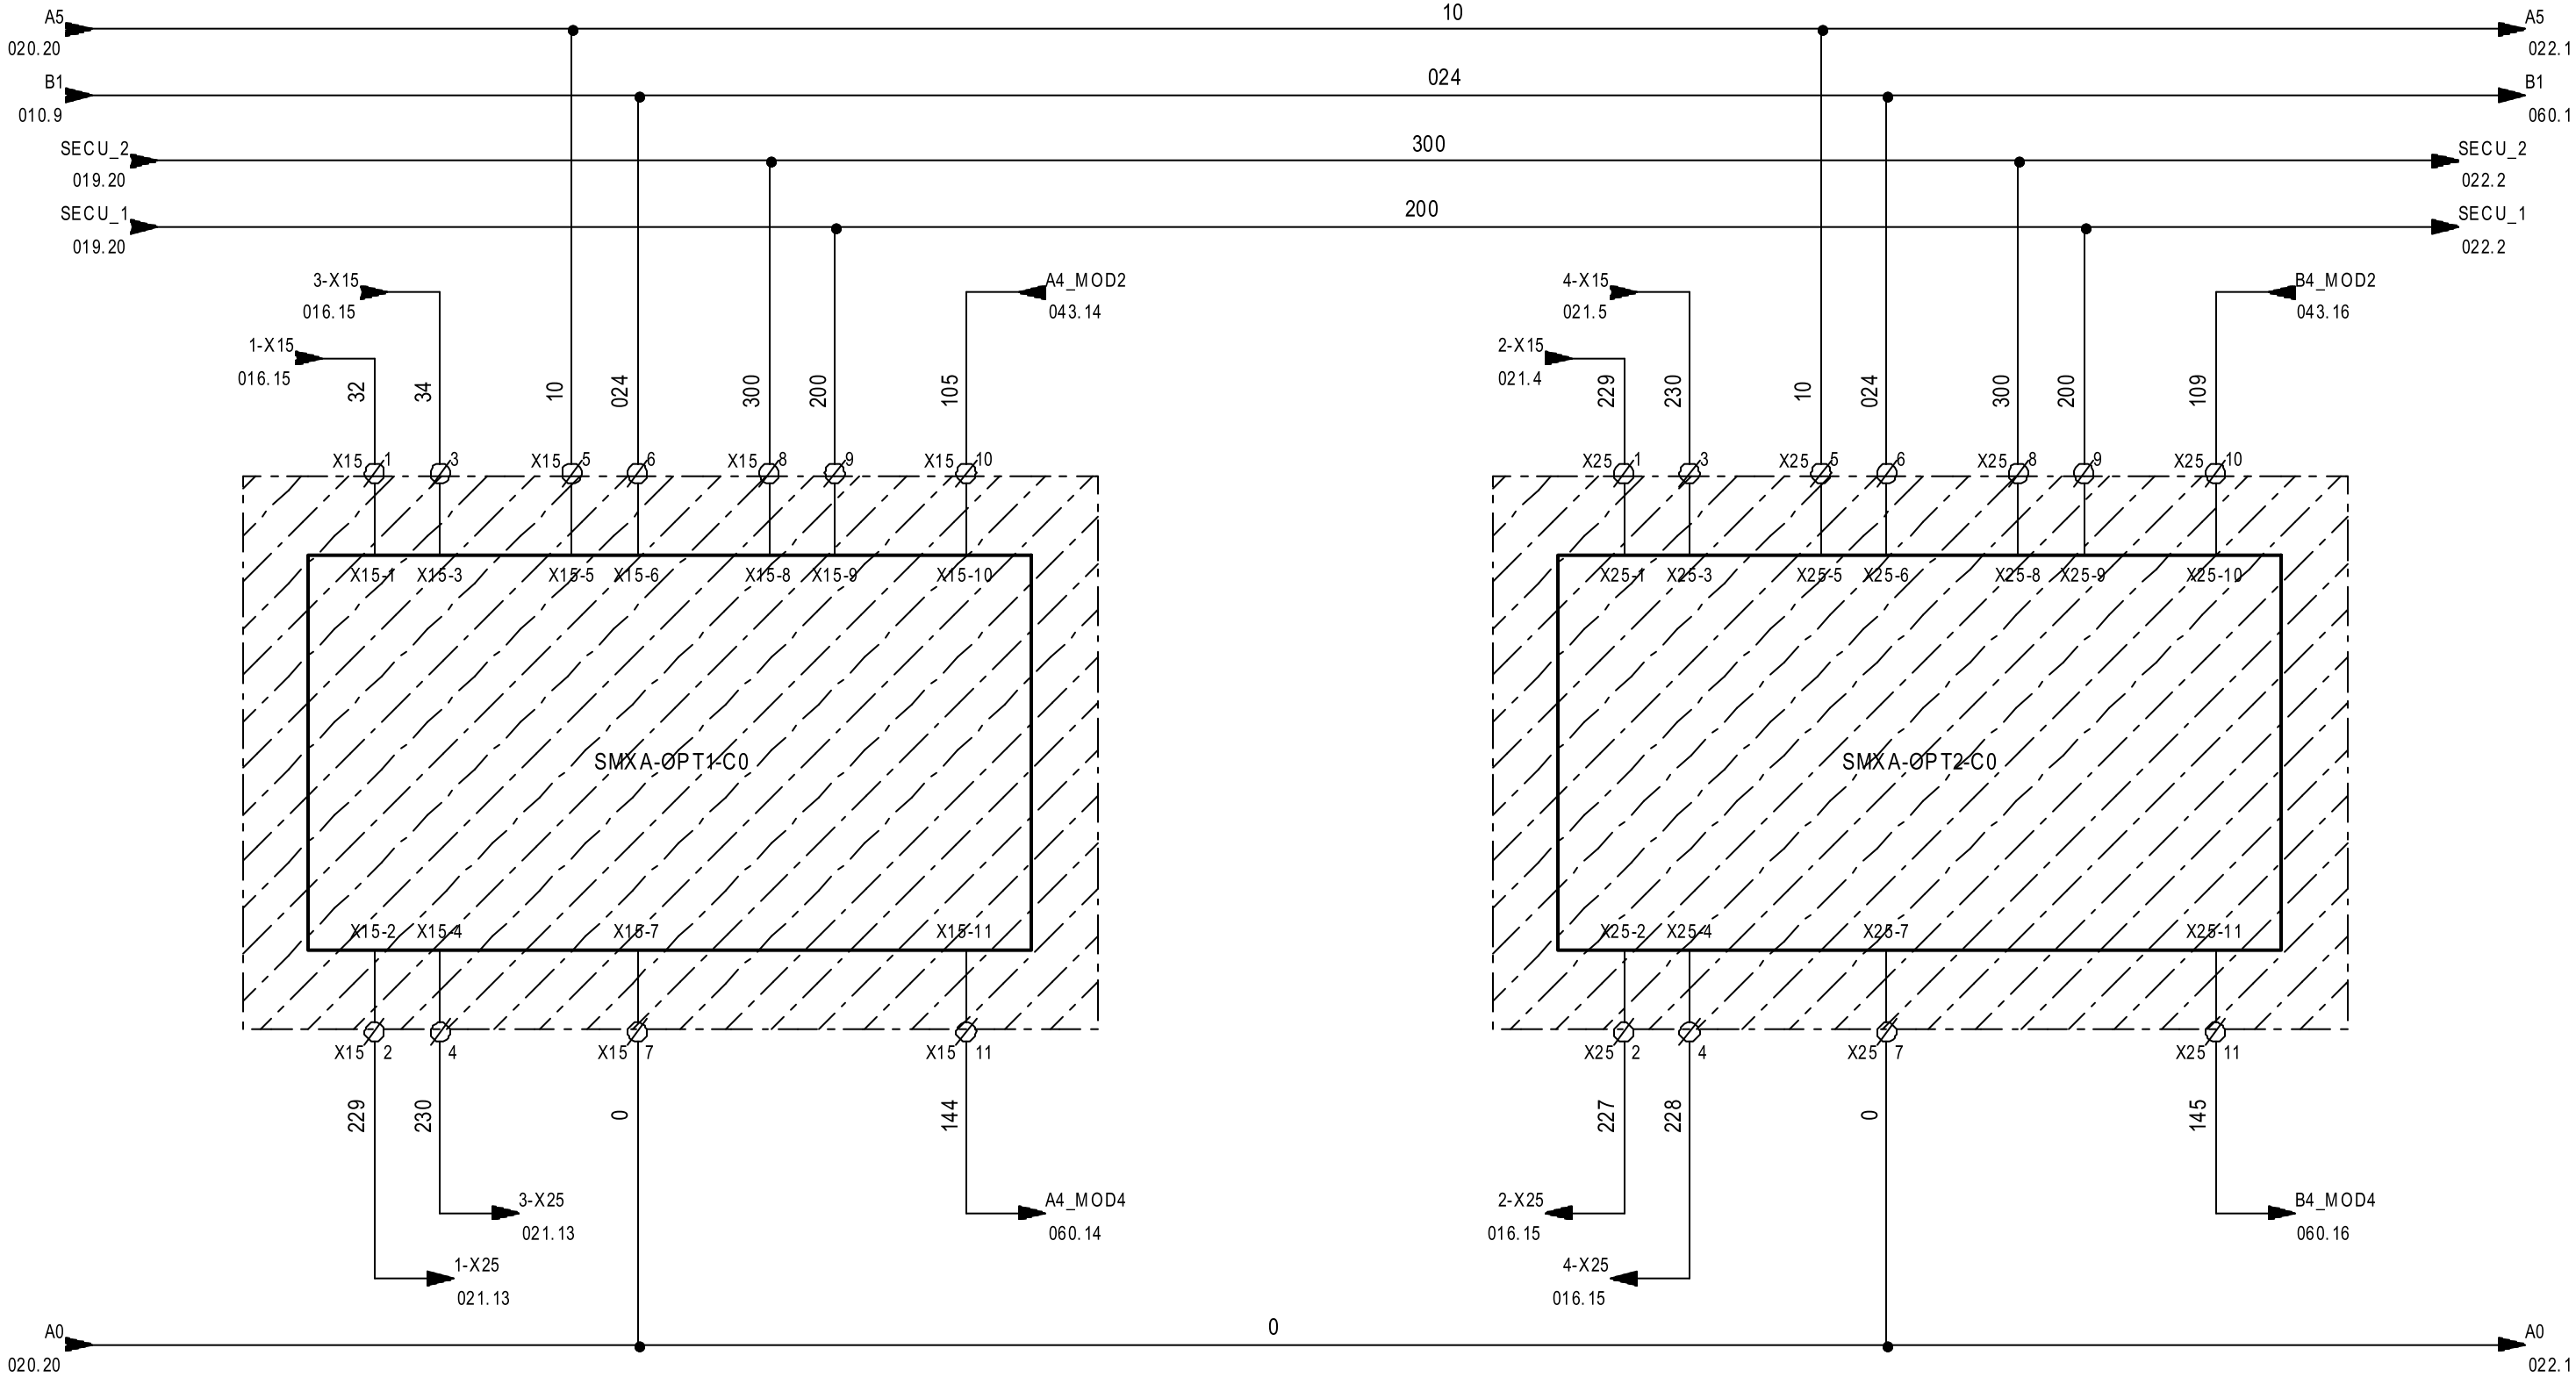

INFORMATION
VERS COFFRET EN ENTREE GENDER SORTING


INFORMATION
VERS COFFRET EN SORTIE GENDER SORTING

INFORMATION TO PANEL
IN INFEED

INFORMATION TO PANEL
IN OUTFEED


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 10/07/2024		SCHEMA COMMANDE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		CONTROL PLAN								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT: Version 4.49.F - 23/09/2020								FOLIO : 021/163					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL - IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

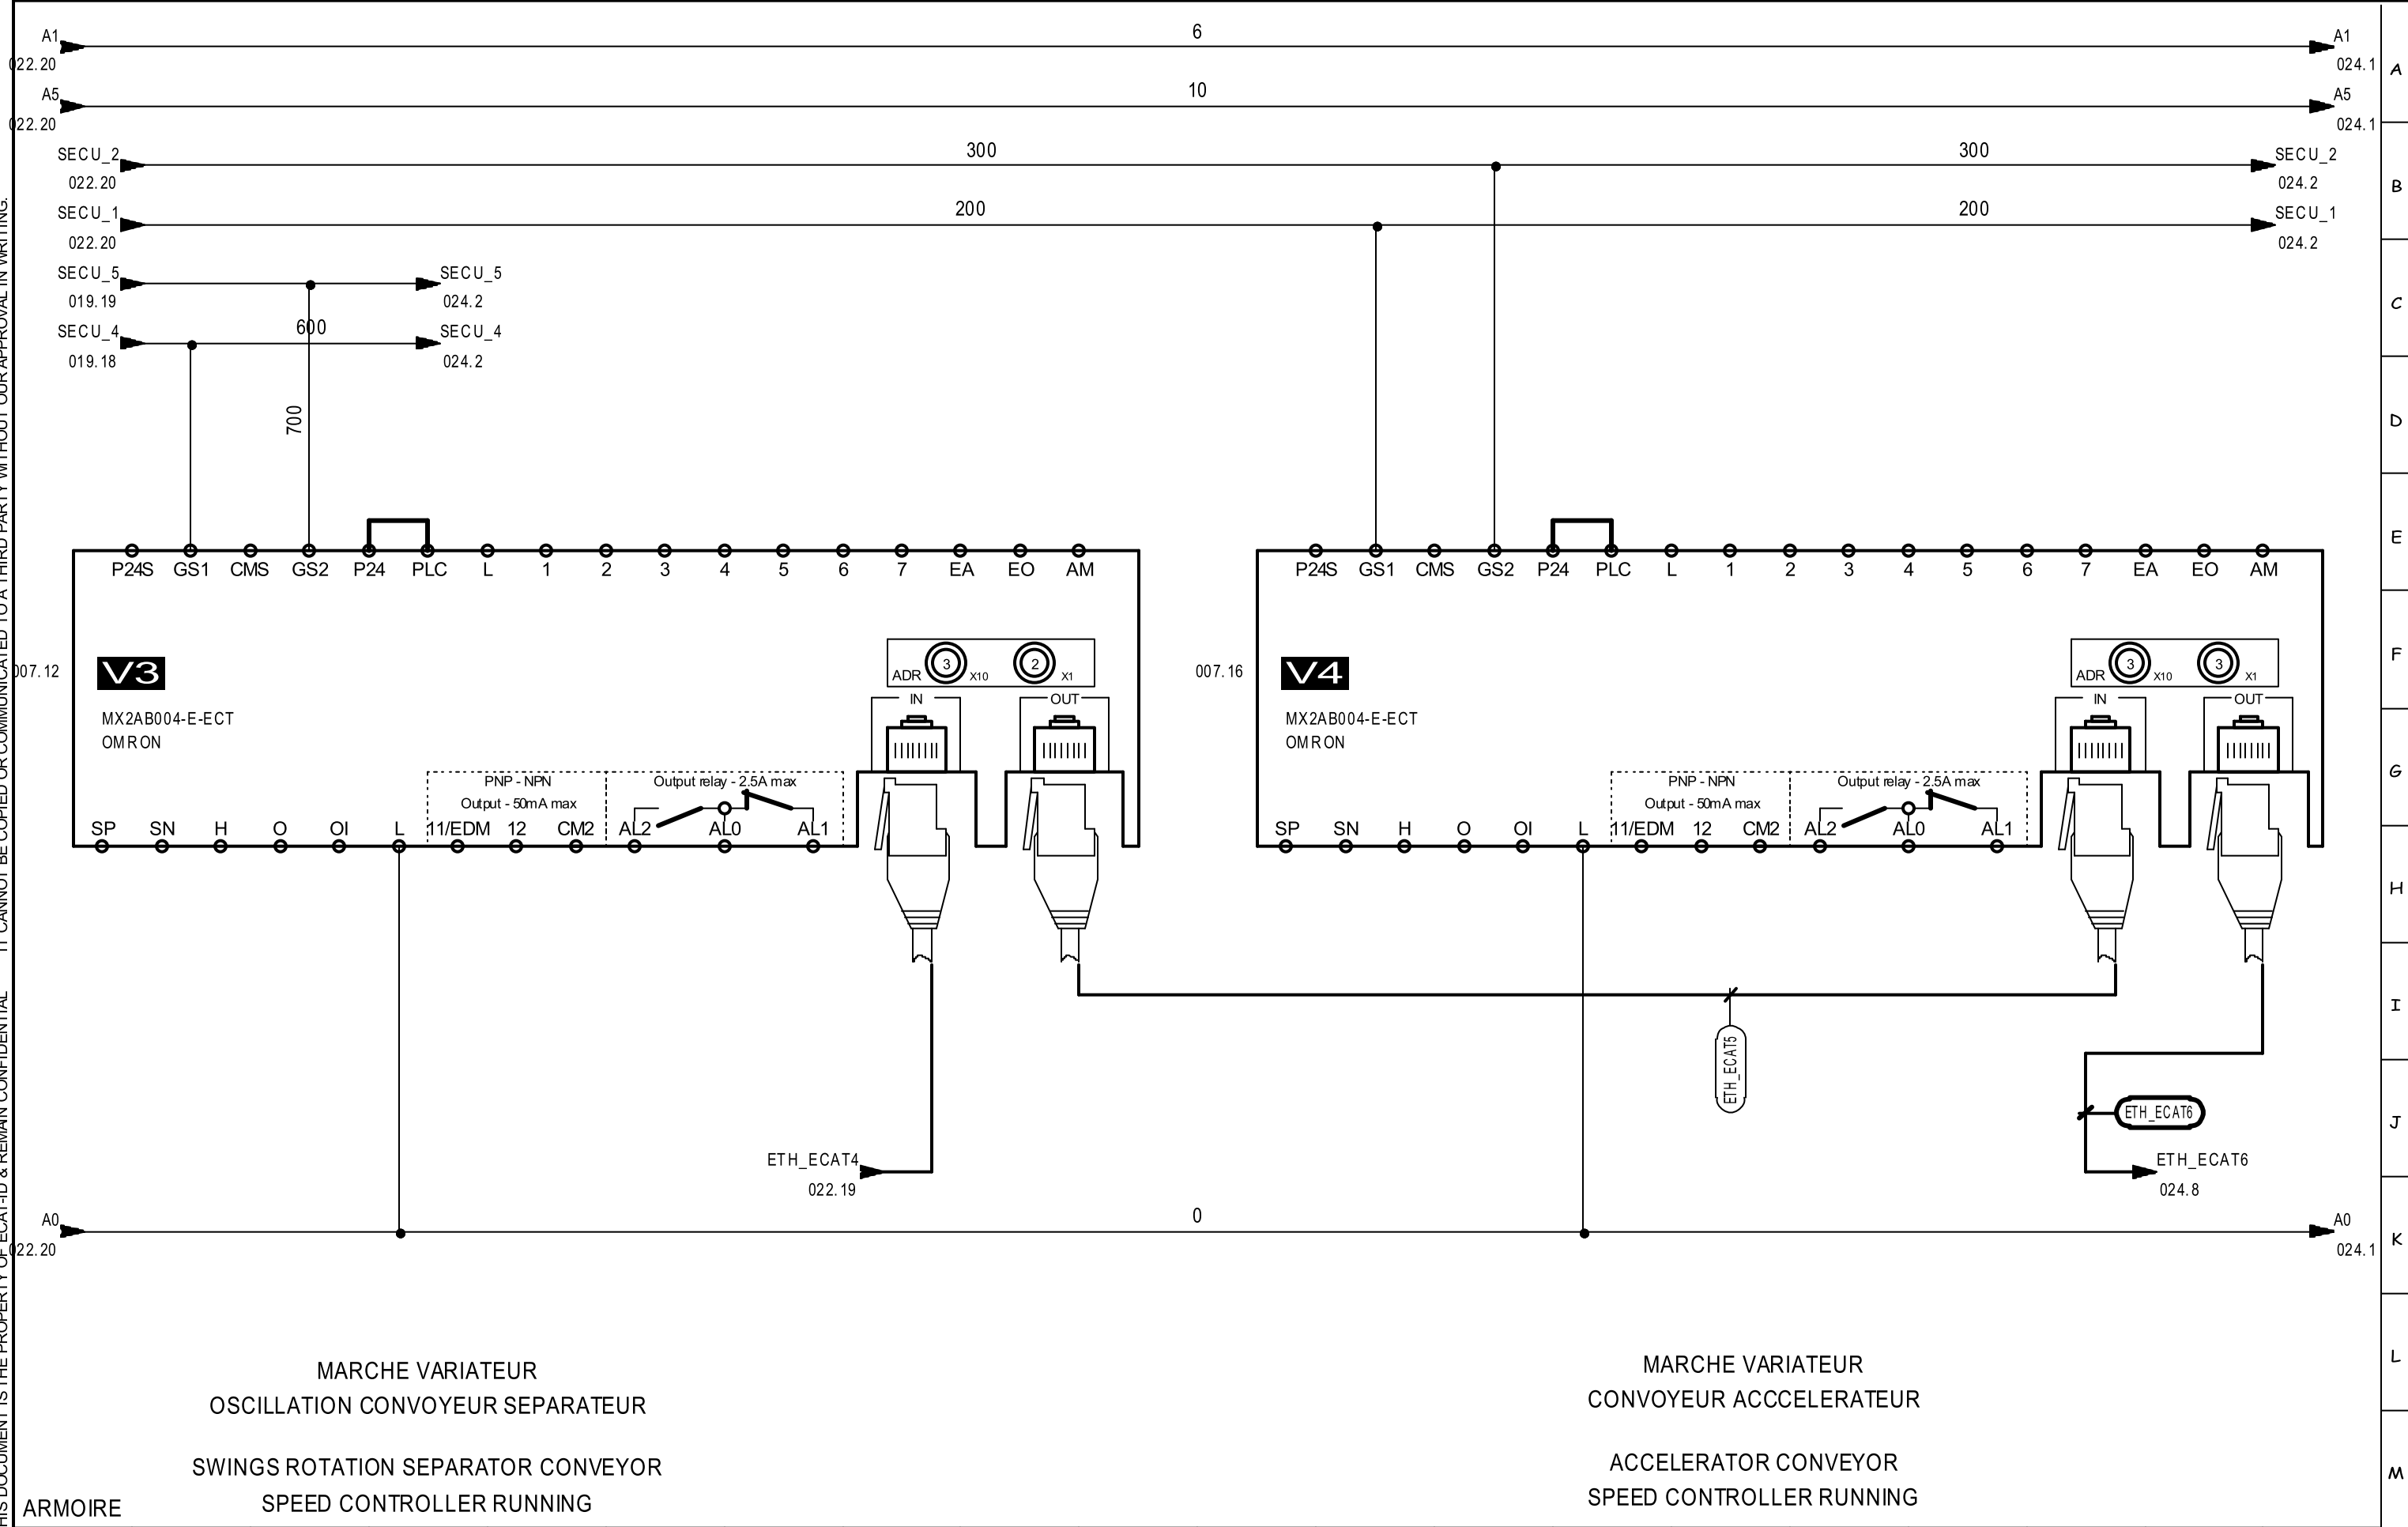

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA COMMANDE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		CONTROL PLAN								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								FOLIO : 023/163					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

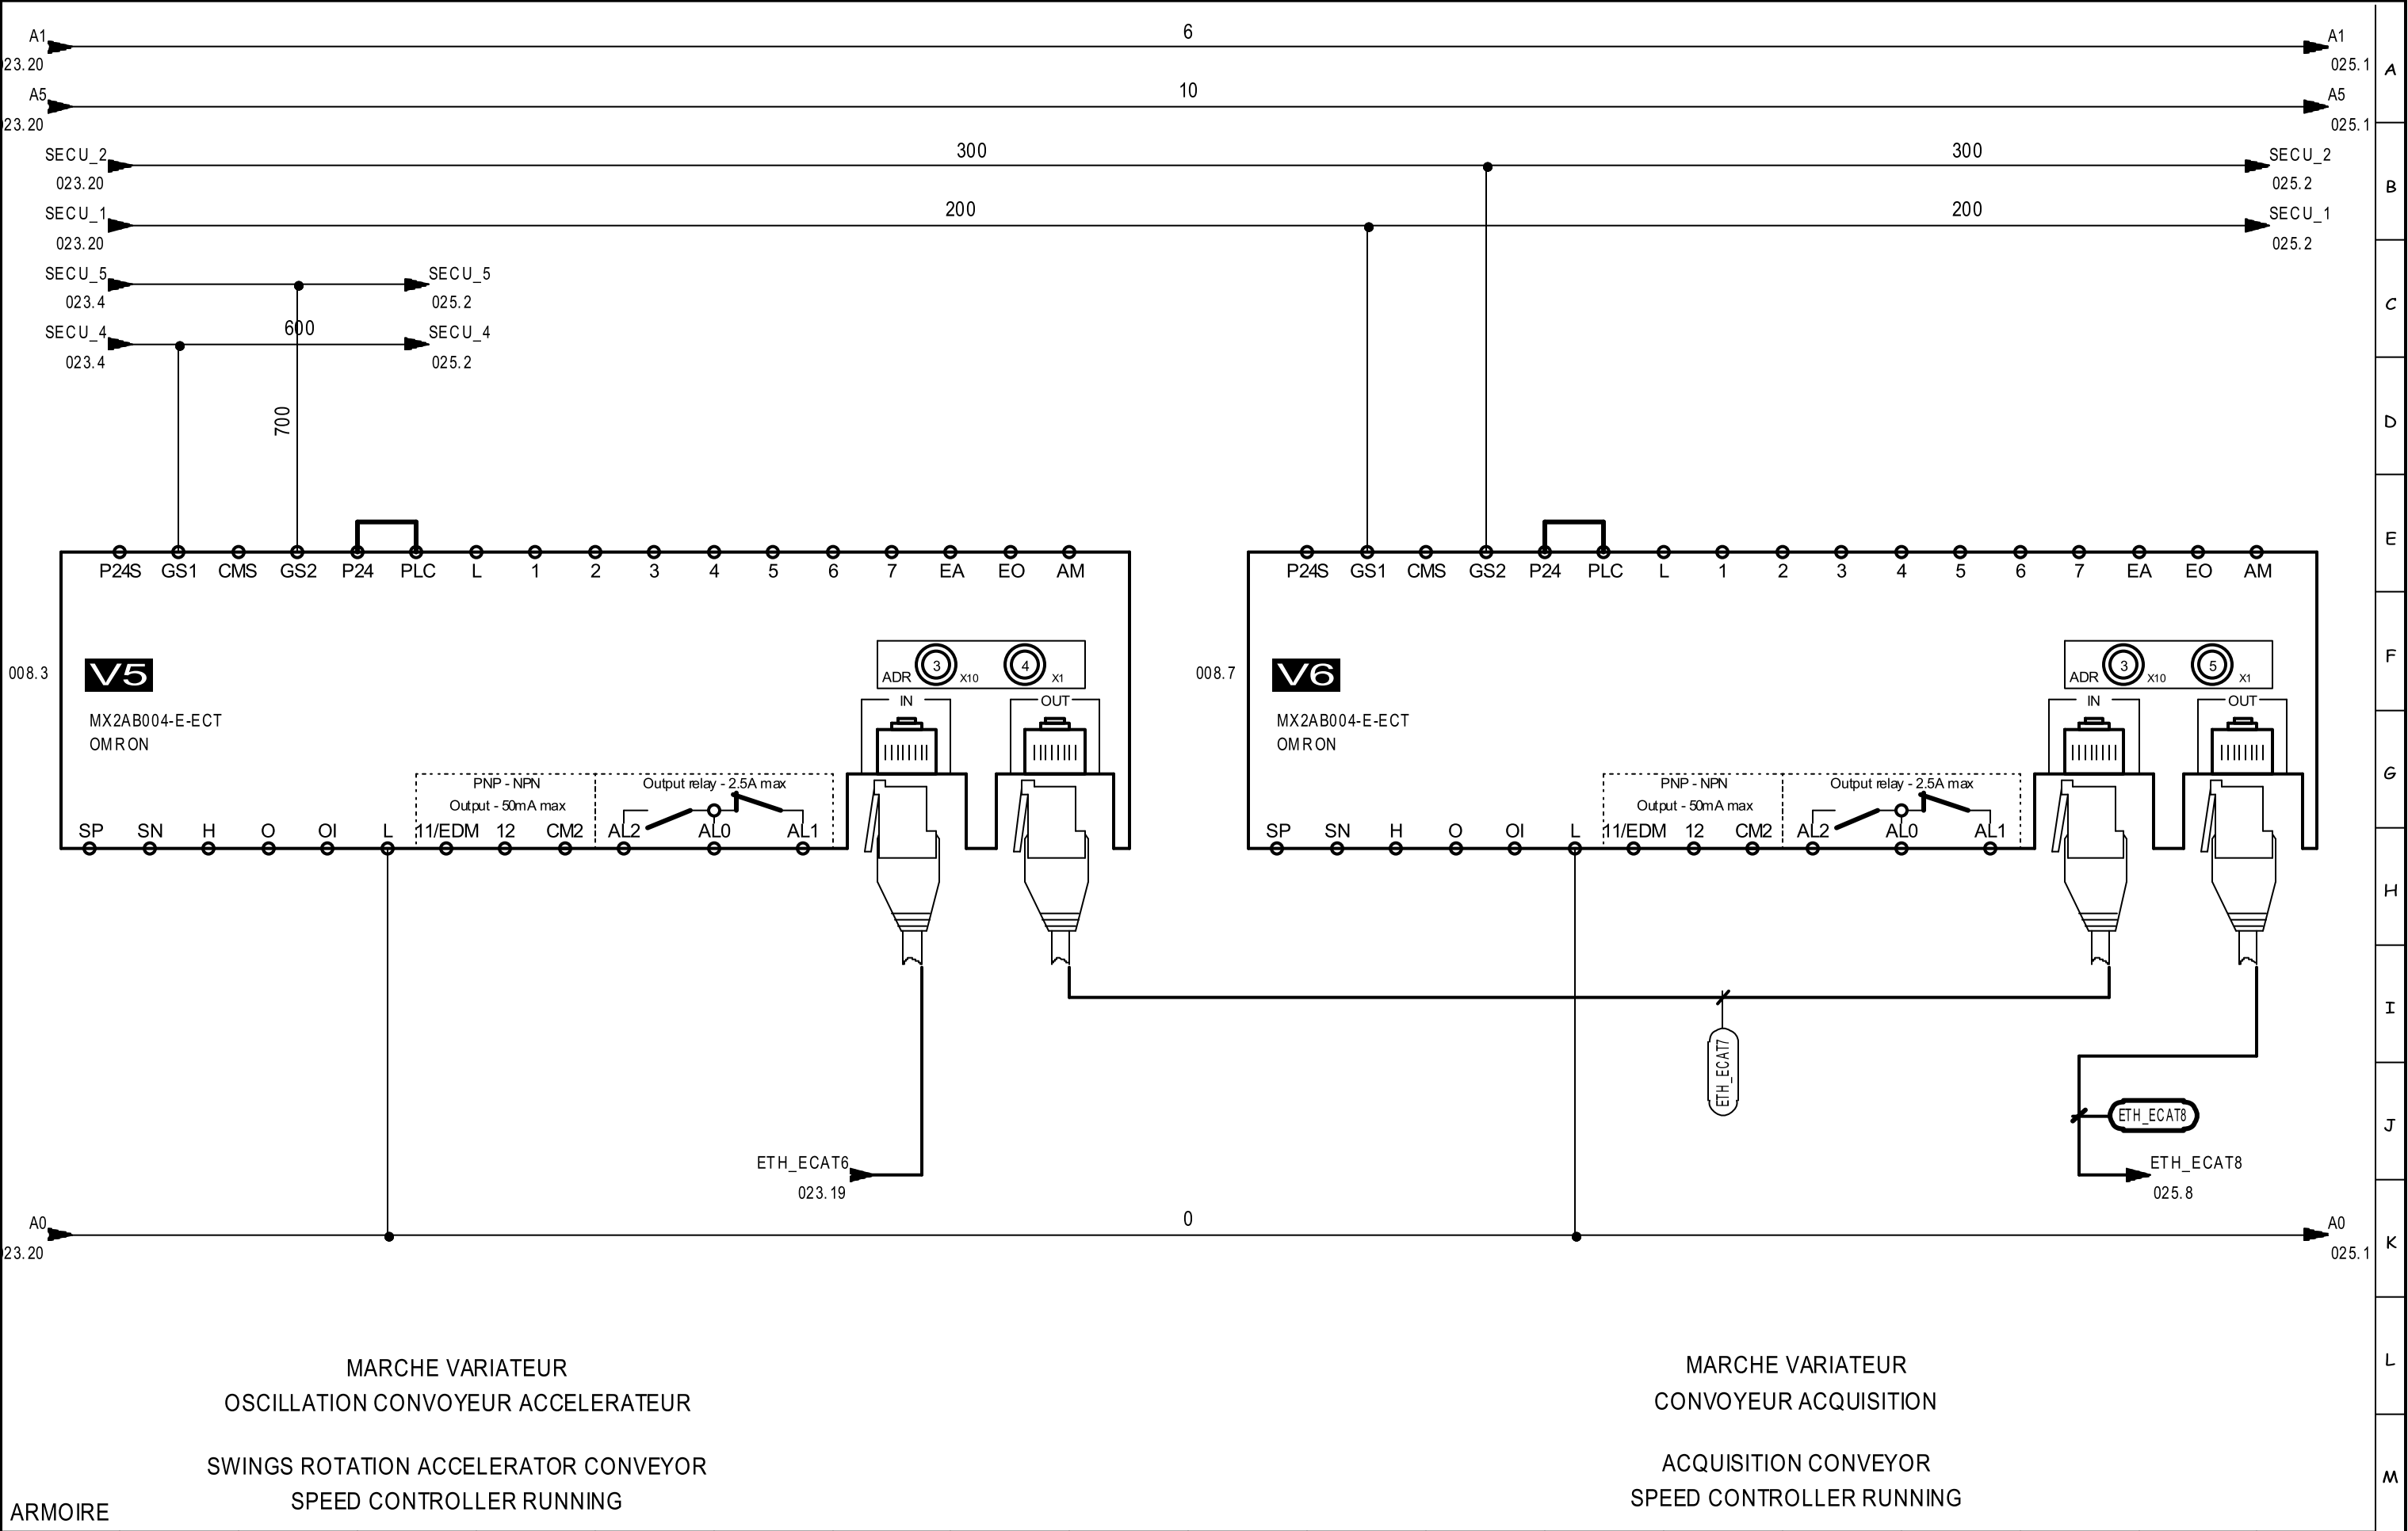

MARCHE VARIATEUR
OSCILLATION CONVOYEUR ACCELERATEUR

SWINGS ROTATION ACCELERATOR CONVEYOR
SPEED CONTROLLER RUNNING


MARCHE VARIATEUR
CONVOYEUR ACQUISITION

ACQUISITION CONVEYOR
SPEED CONTROLLER RUNNING

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA COMMANDE				 Ecat-iD Campus			CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		CONTROL PLAN							ARTICLE :		SMXA-C014221		INDEX : V11	
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020							FOLIO : 024/163					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

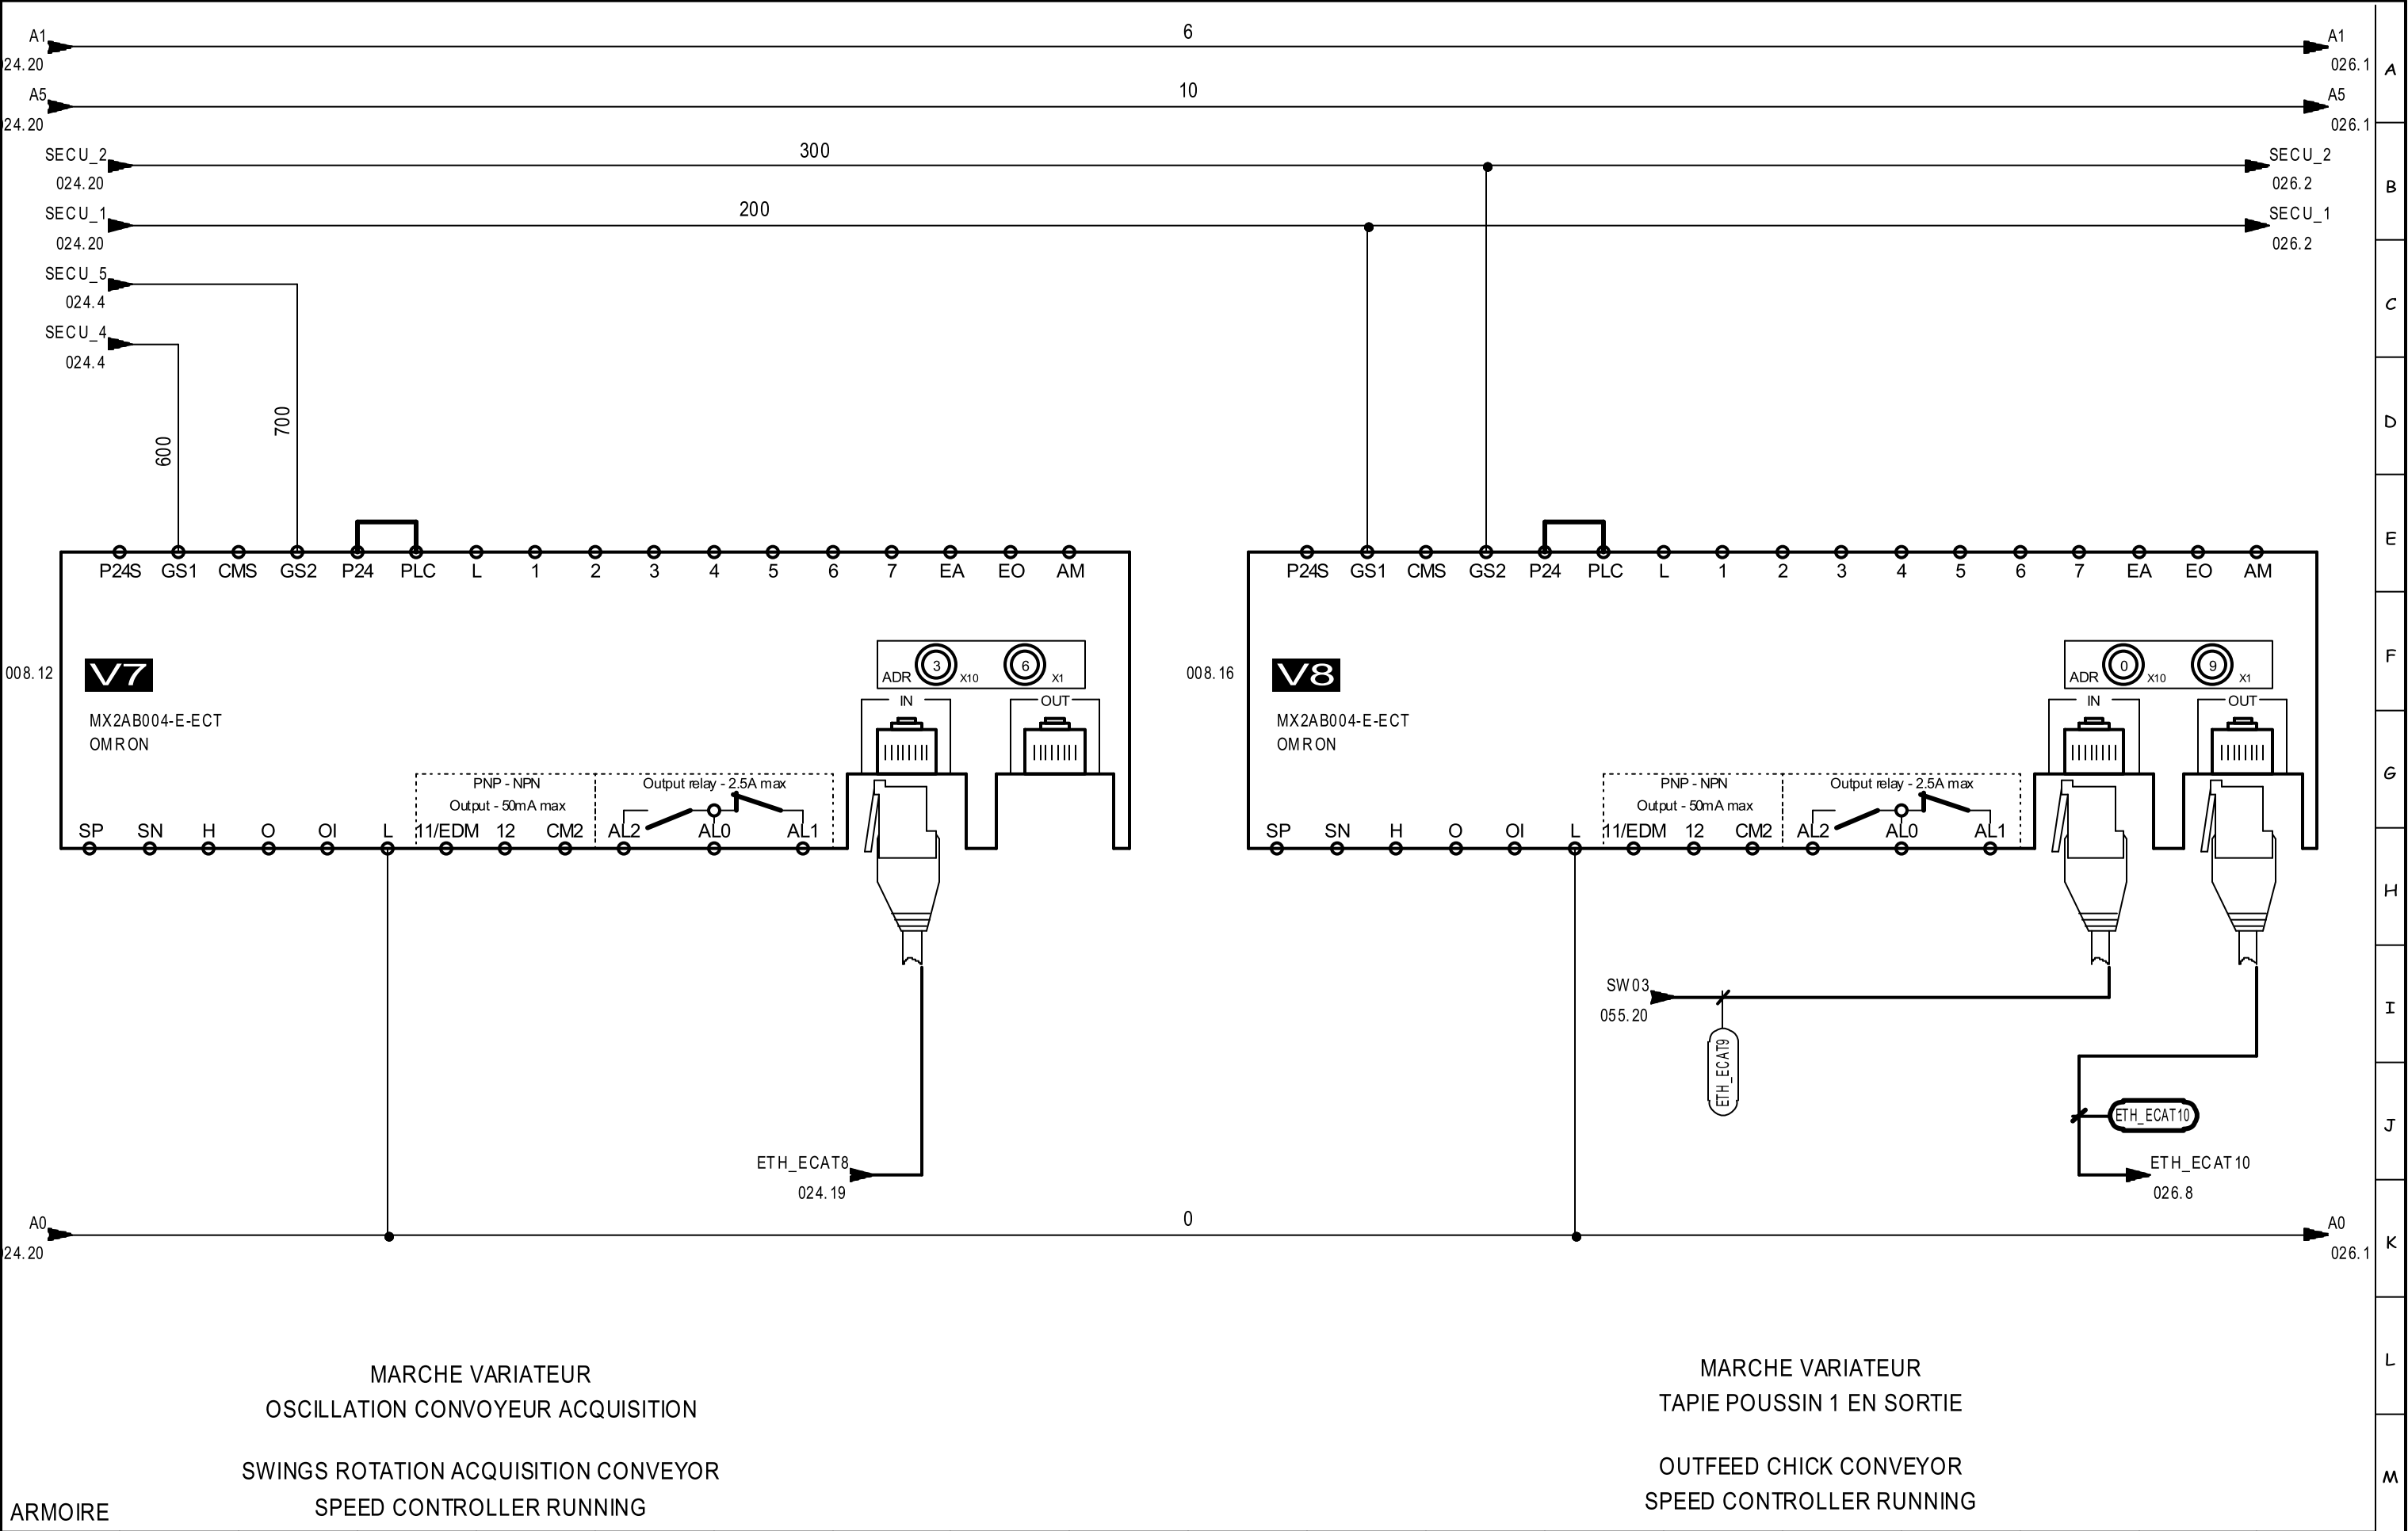

MARCHE VARIATEUR
OSCILLATION CONVOYEUR ACQUISITION


SWINGS ROTATION ACQUISITION CONVEYOR
SPEED CONTROLLER RUNNING

MARCHE VARIATEUR
TAPIE POUSSIN 1 EN SORTIE

OUTFEED CHICK CONVEYOR
SPEED CONTROLLER RUNNING


ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA COMMANDE				 Ecat-iD Campus			CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		CONTROL PLAN							ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020									FOLIO : 025/163			

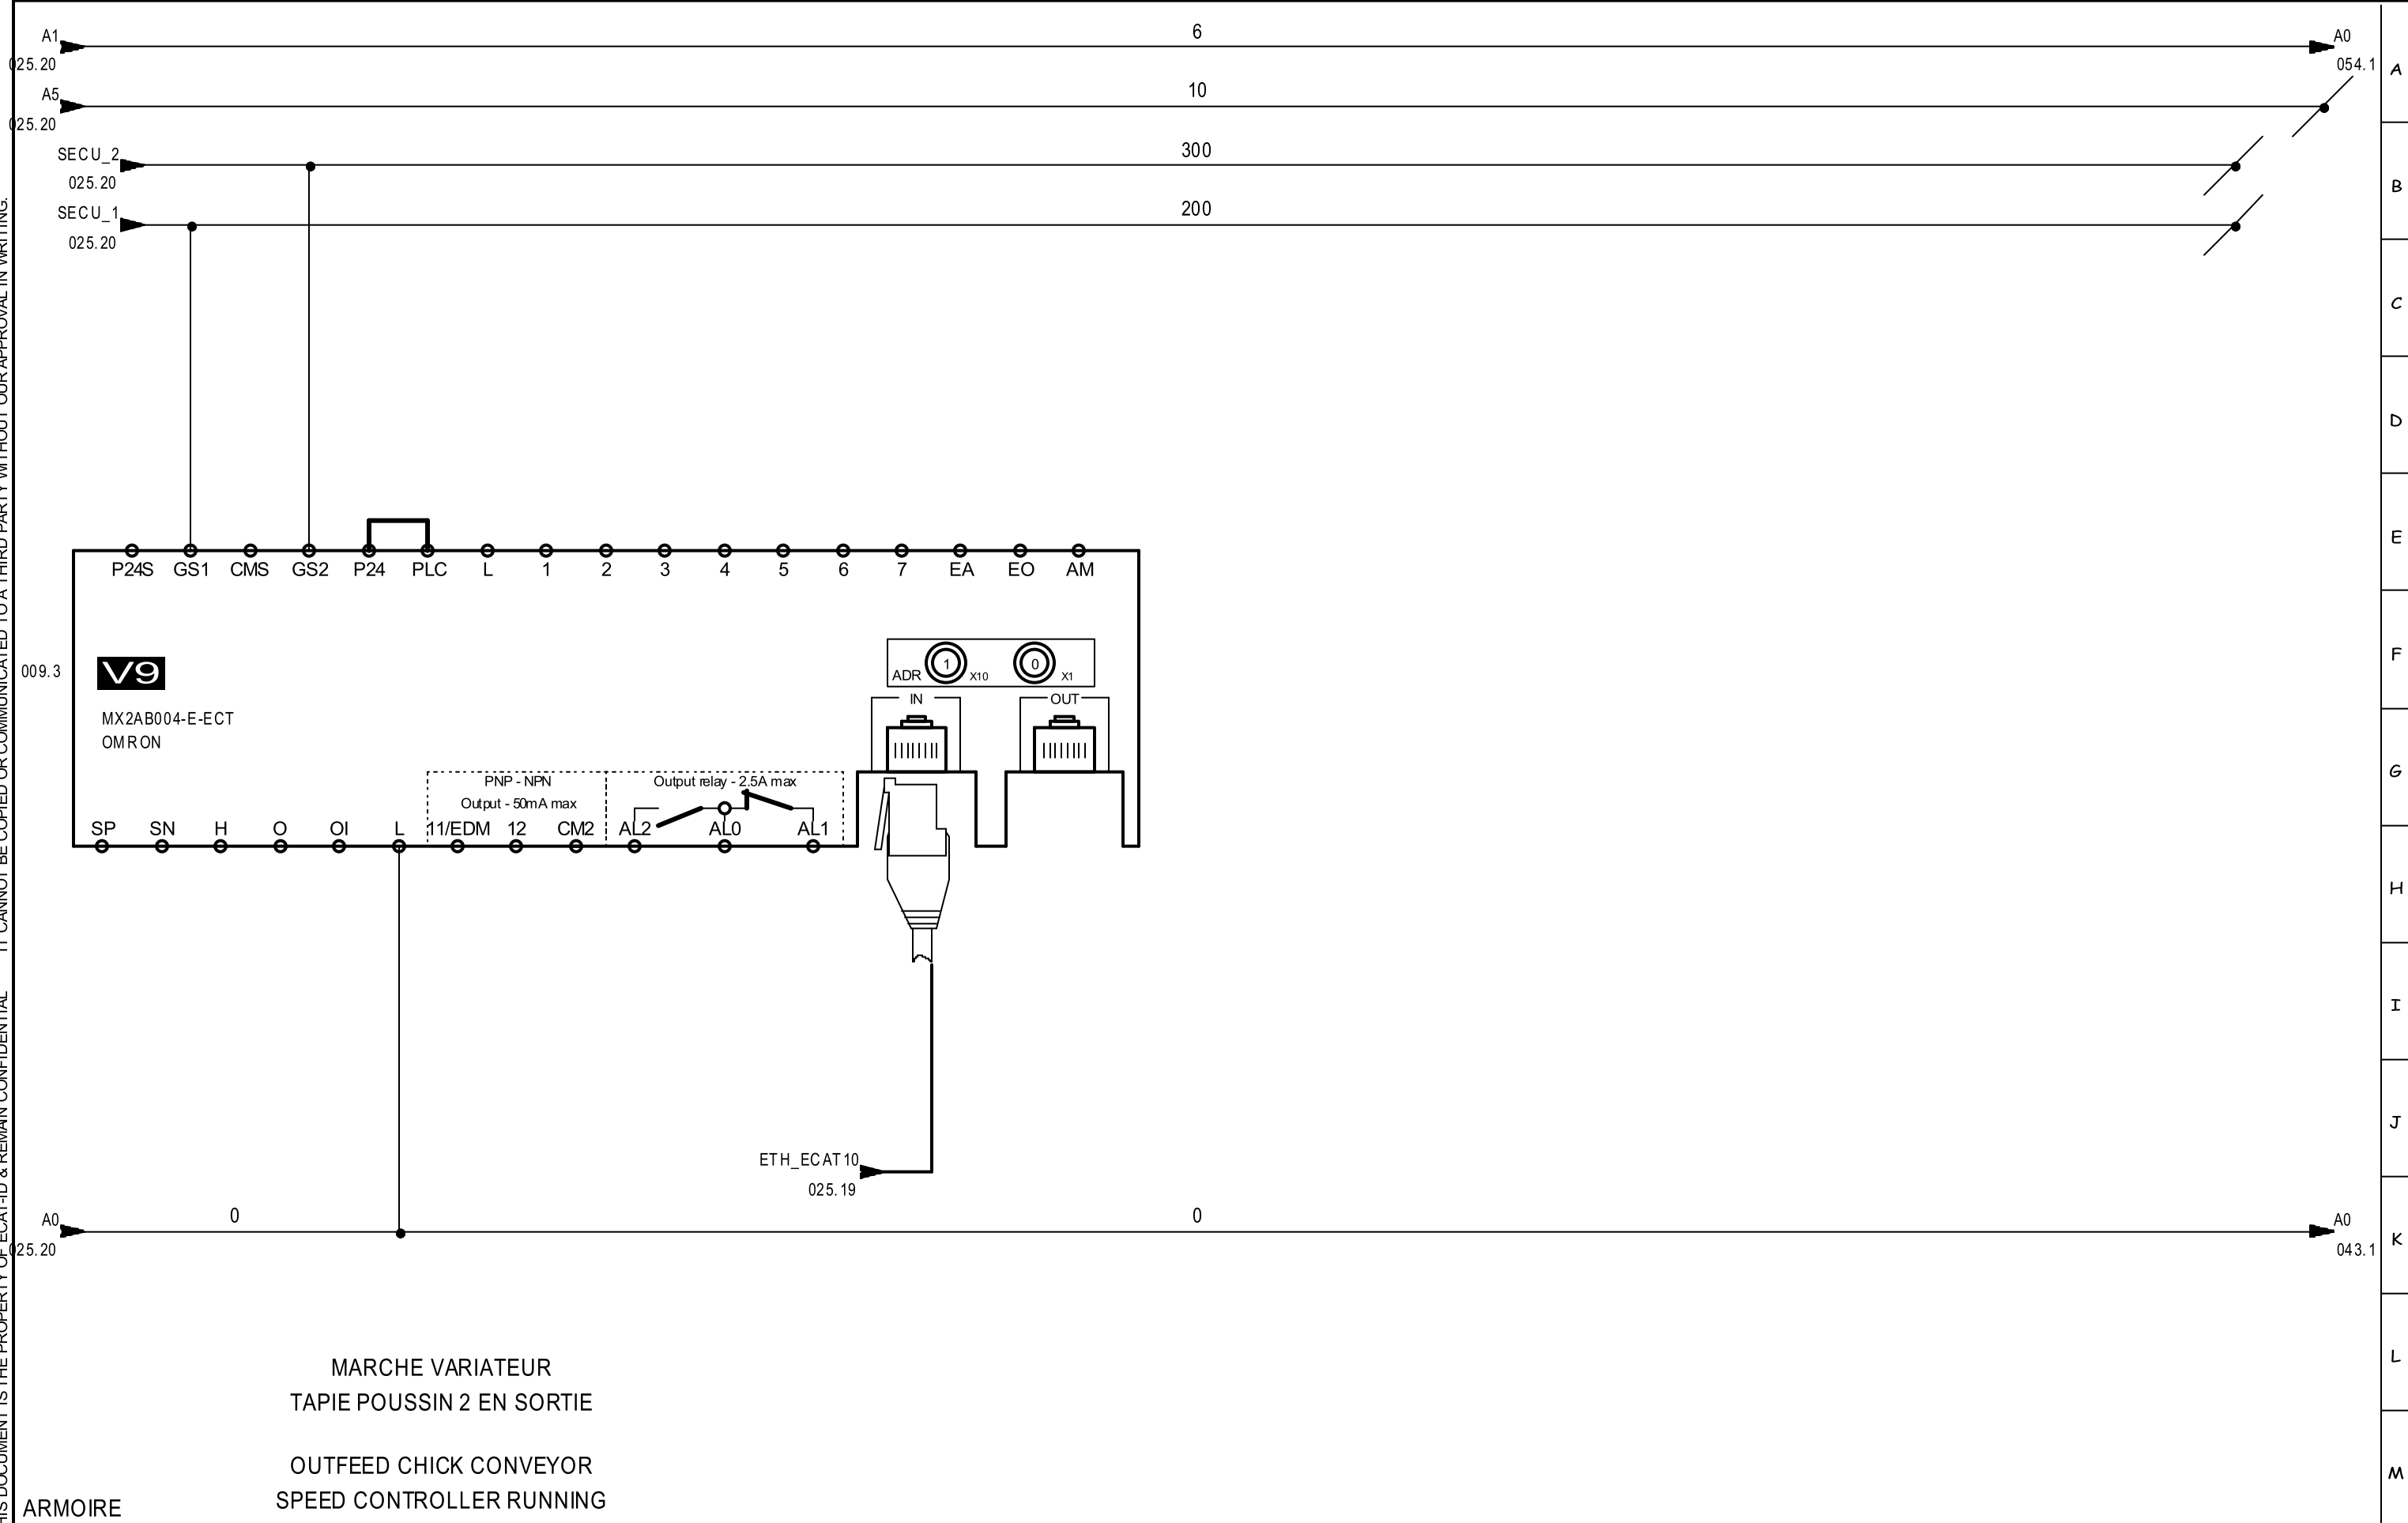


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA COMMANDE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		CONTROL PLAN								ARTICLE : SMXA-C014221				INDEX : V11	
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 026/163					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

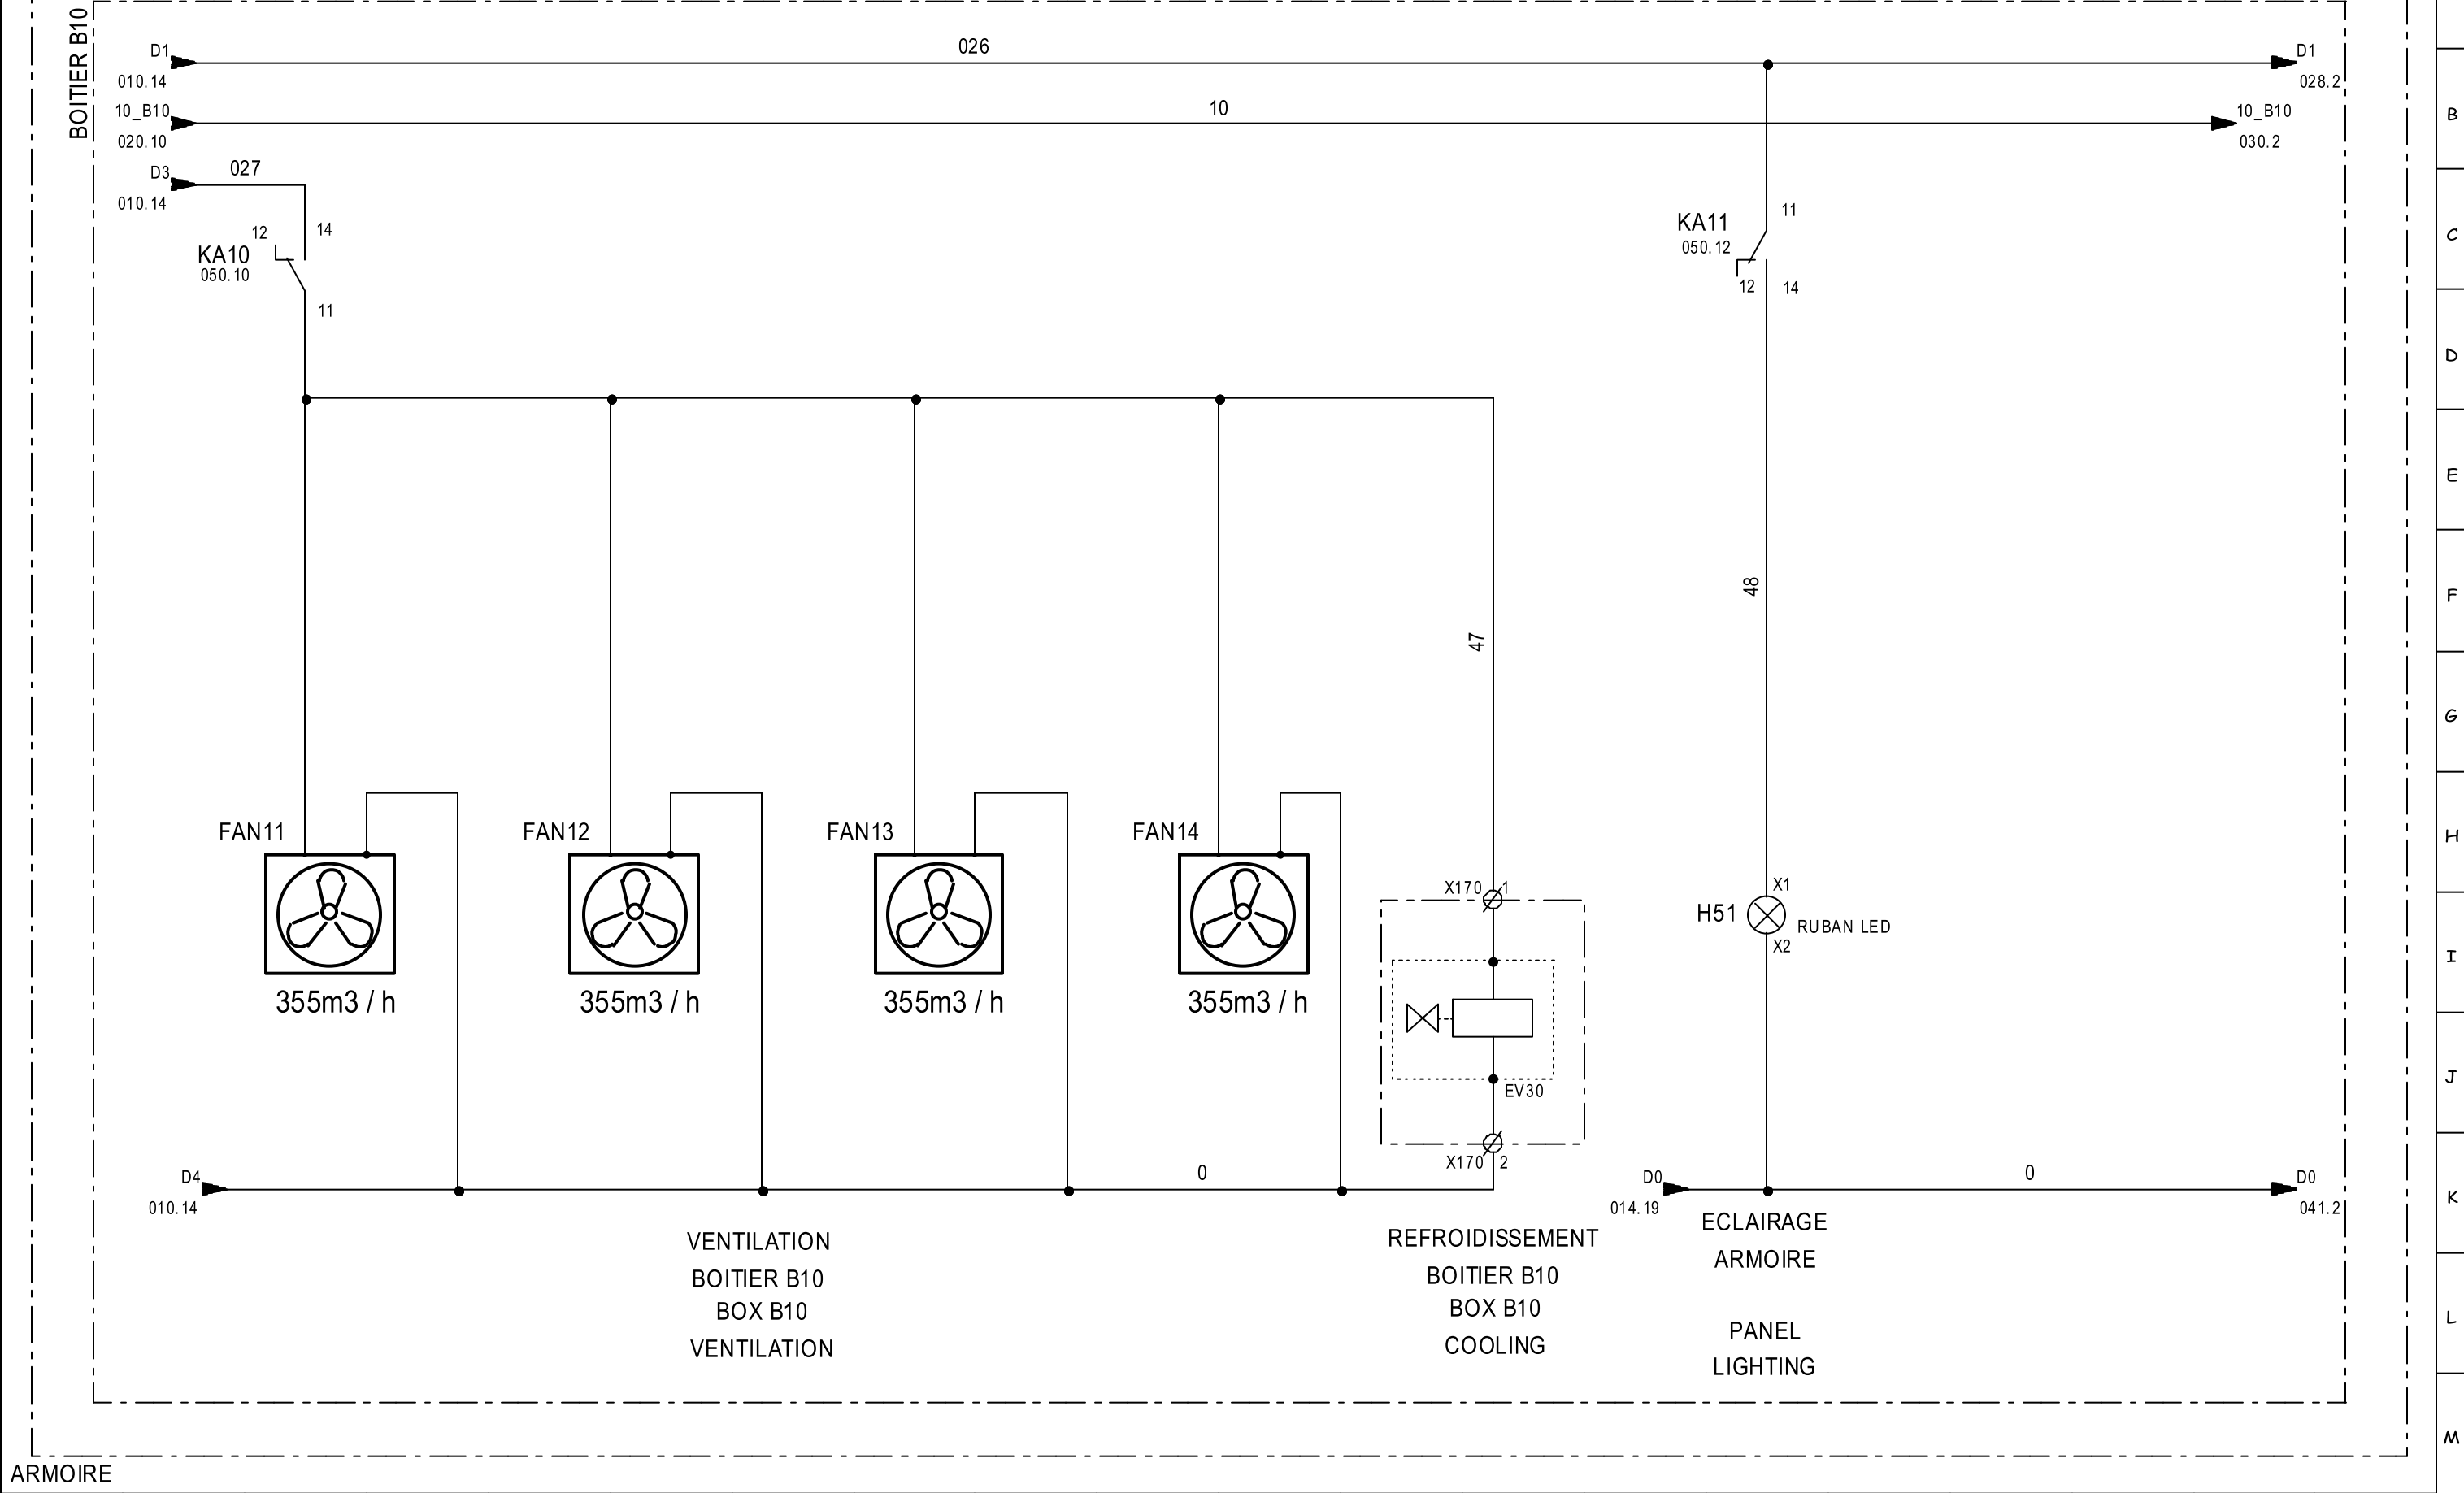


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -		Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecatid.service@ceva.com		Date of creation : Designed by : DB		SCHEMA COMMANDE UAC UAC CONTROL PLAN ENVIRONNEMENT : Version 4.49.F - 23/09/2020		ceva Ecat-iD Campus		CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL		ARTICLE : SMXA-C014221		INDEX : V11 FOLIO : 027/163	

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

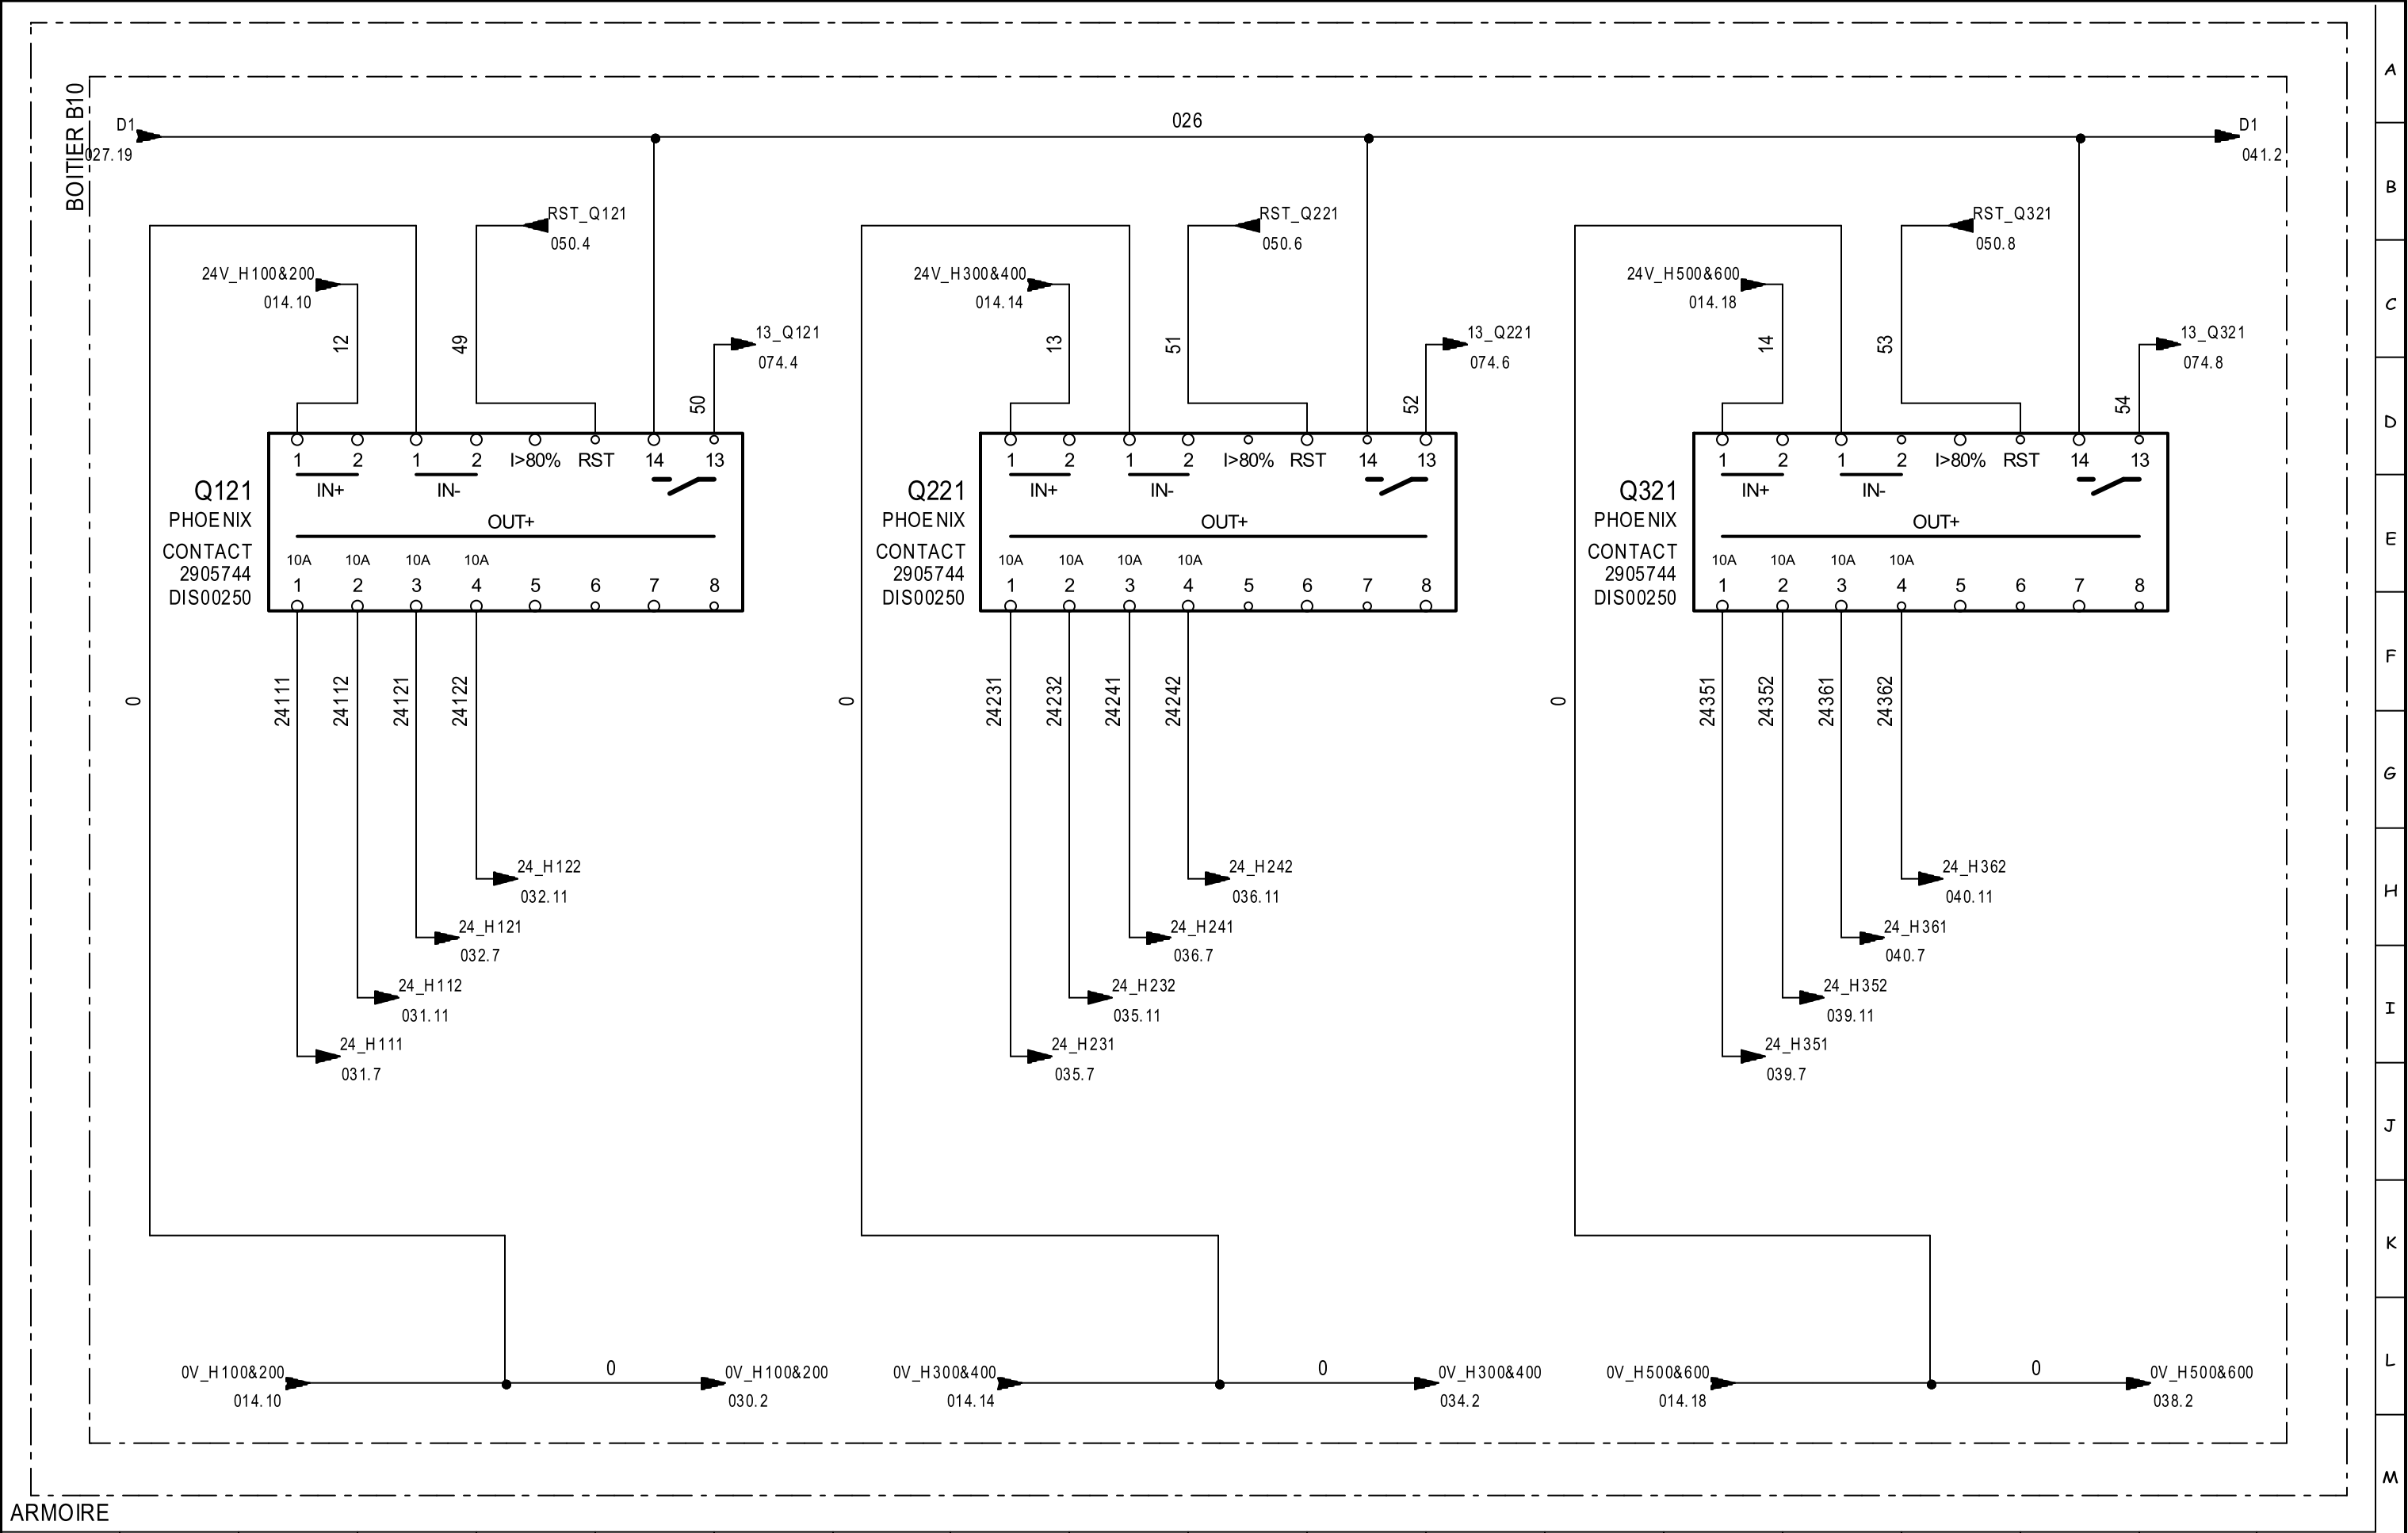

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SCHEMA COMMANDE UAC				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		CONTROL PLAN								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020										FOLIO : 028/163			

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

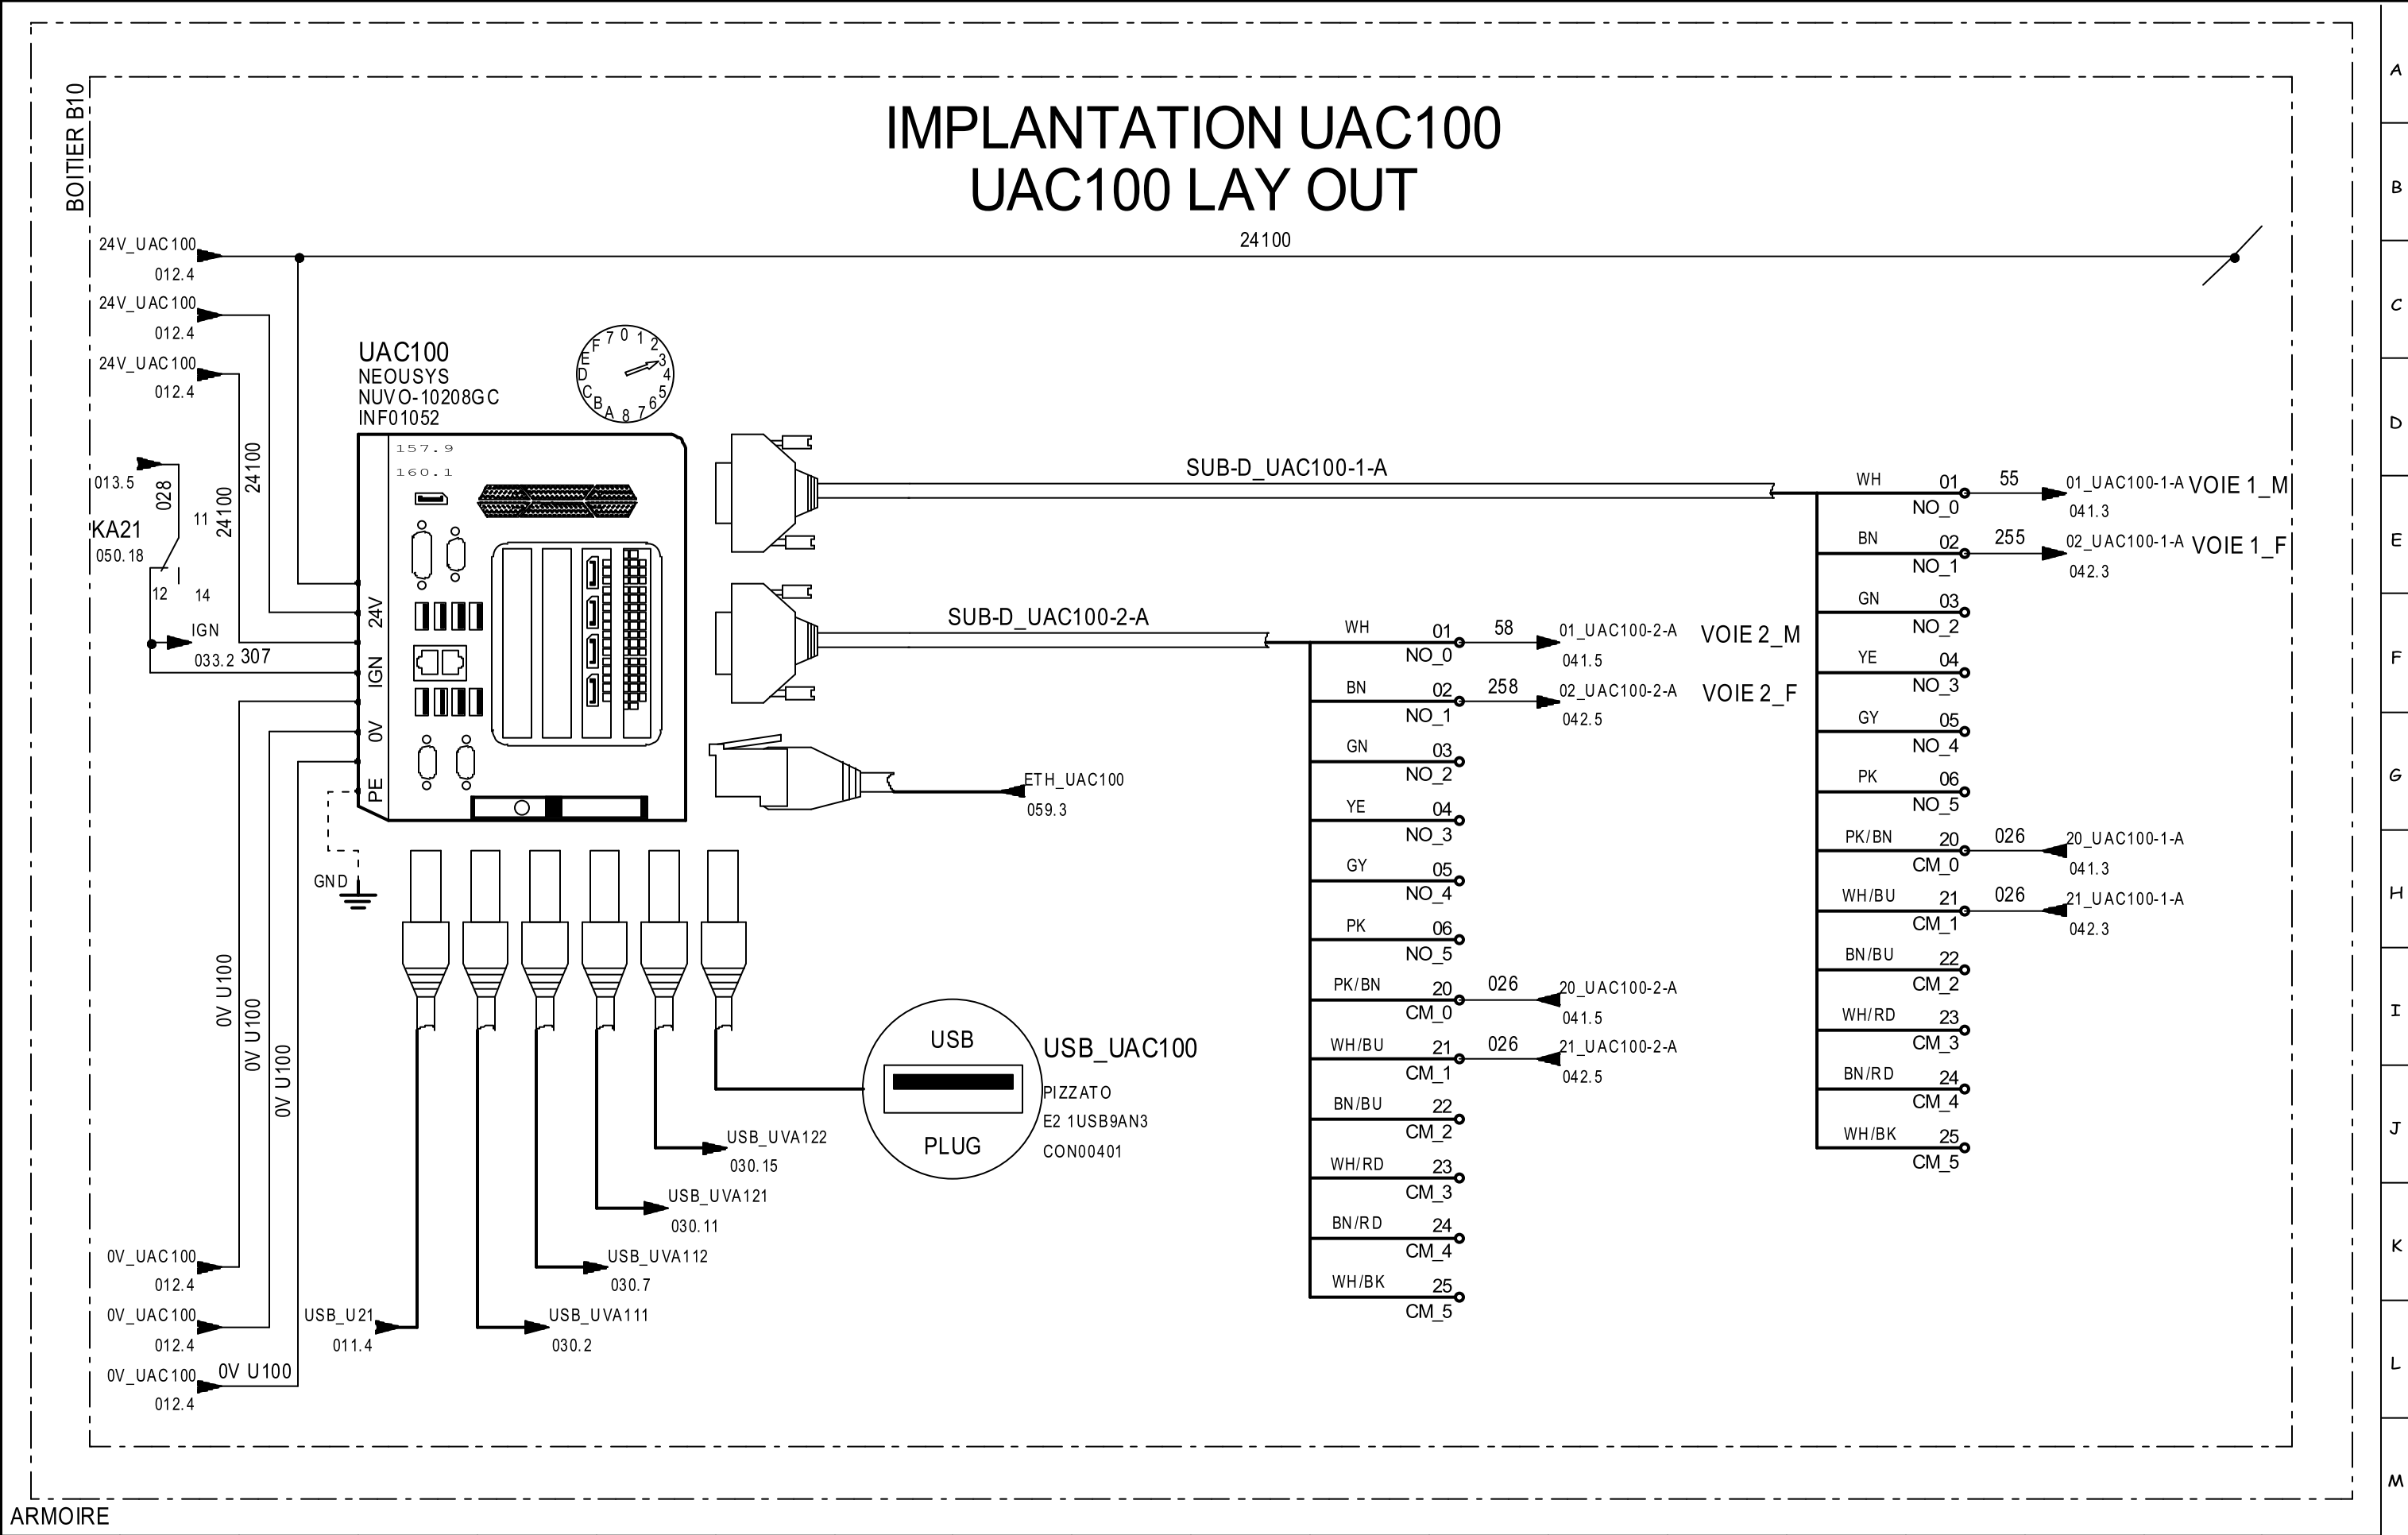


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		IMPLANTATION UAC100				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		UAC100 LAY OUT								ARTICLE :		SMXA-C014221		INDEX : V12	
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020												FOLIO : 029/163	

BOITIER B10

CAMERA VOIE N°1 WAY 1 CAMERA


CAMERA VOIE N°2 WAY 2 CAMERA

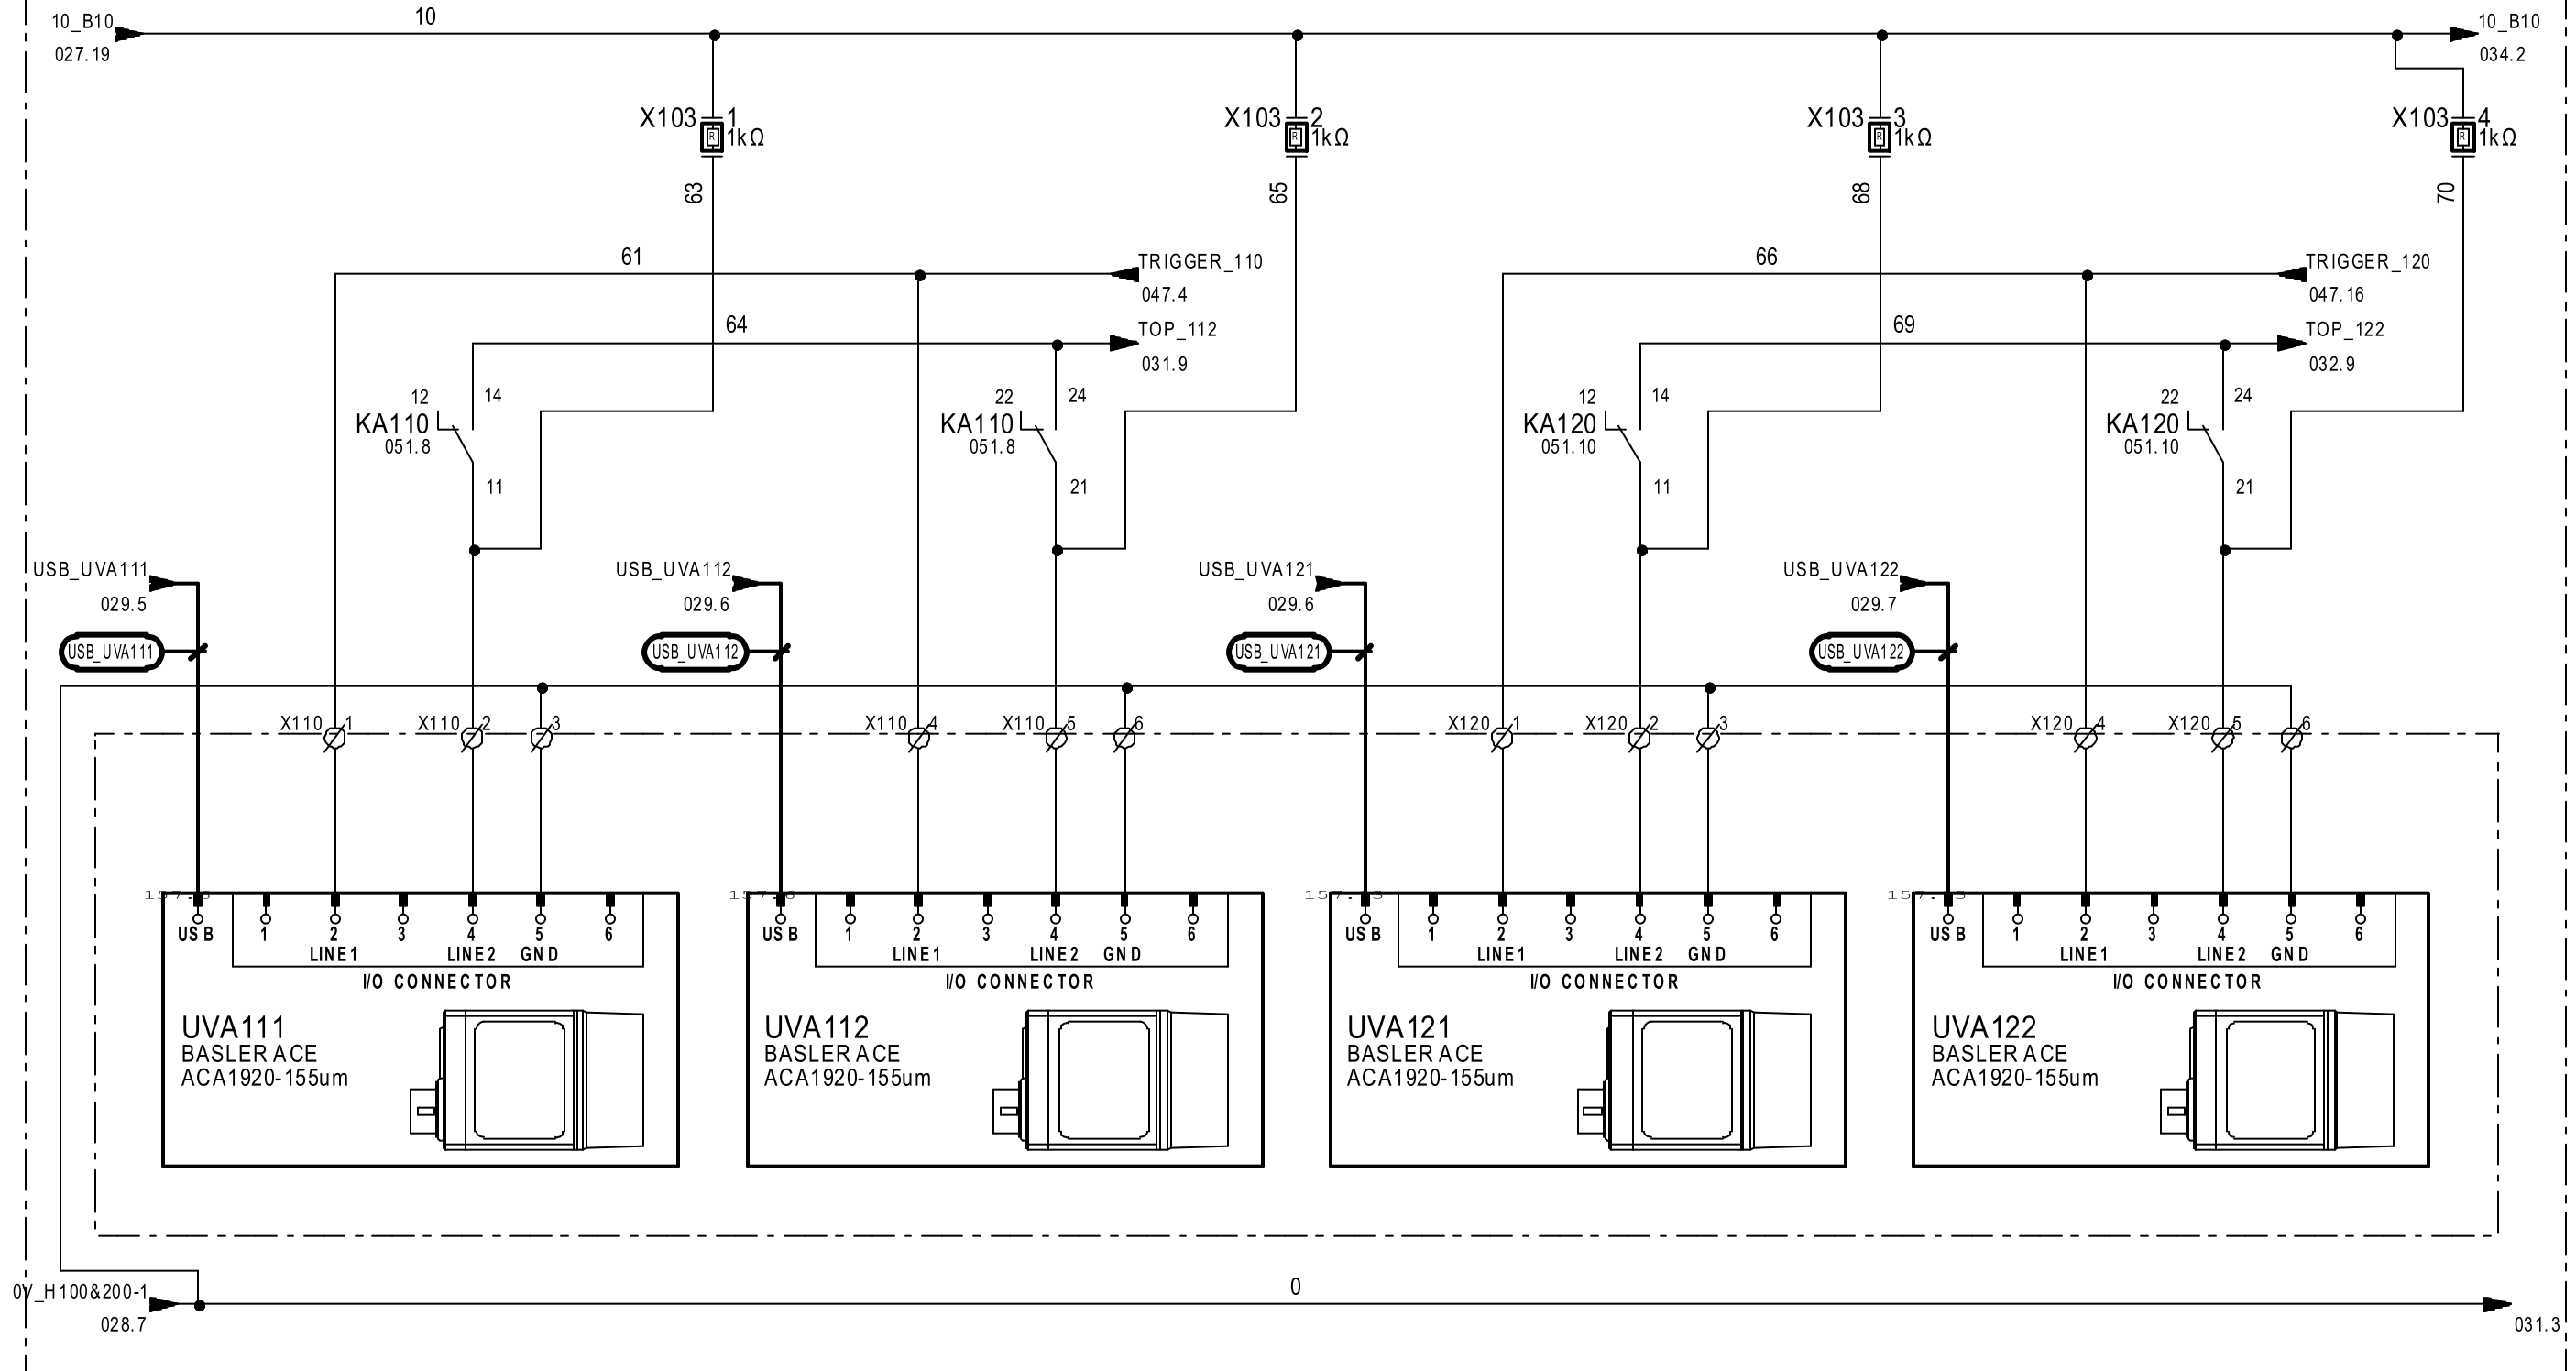

ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -		Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecaticid.service@ceva.com		Date of creation : Designed by : DB		IMPLANTATION CAMERA VOIE 1 & 2 WAY 1 & 2 CAMERA LAY OUT ENVIRONNEMENT: Version 4.49.F - 23/09/2020		 Ecat-iD Campus		CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL		INDEX : V11 FOLIO : 030/163		SMXA-C014221	

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

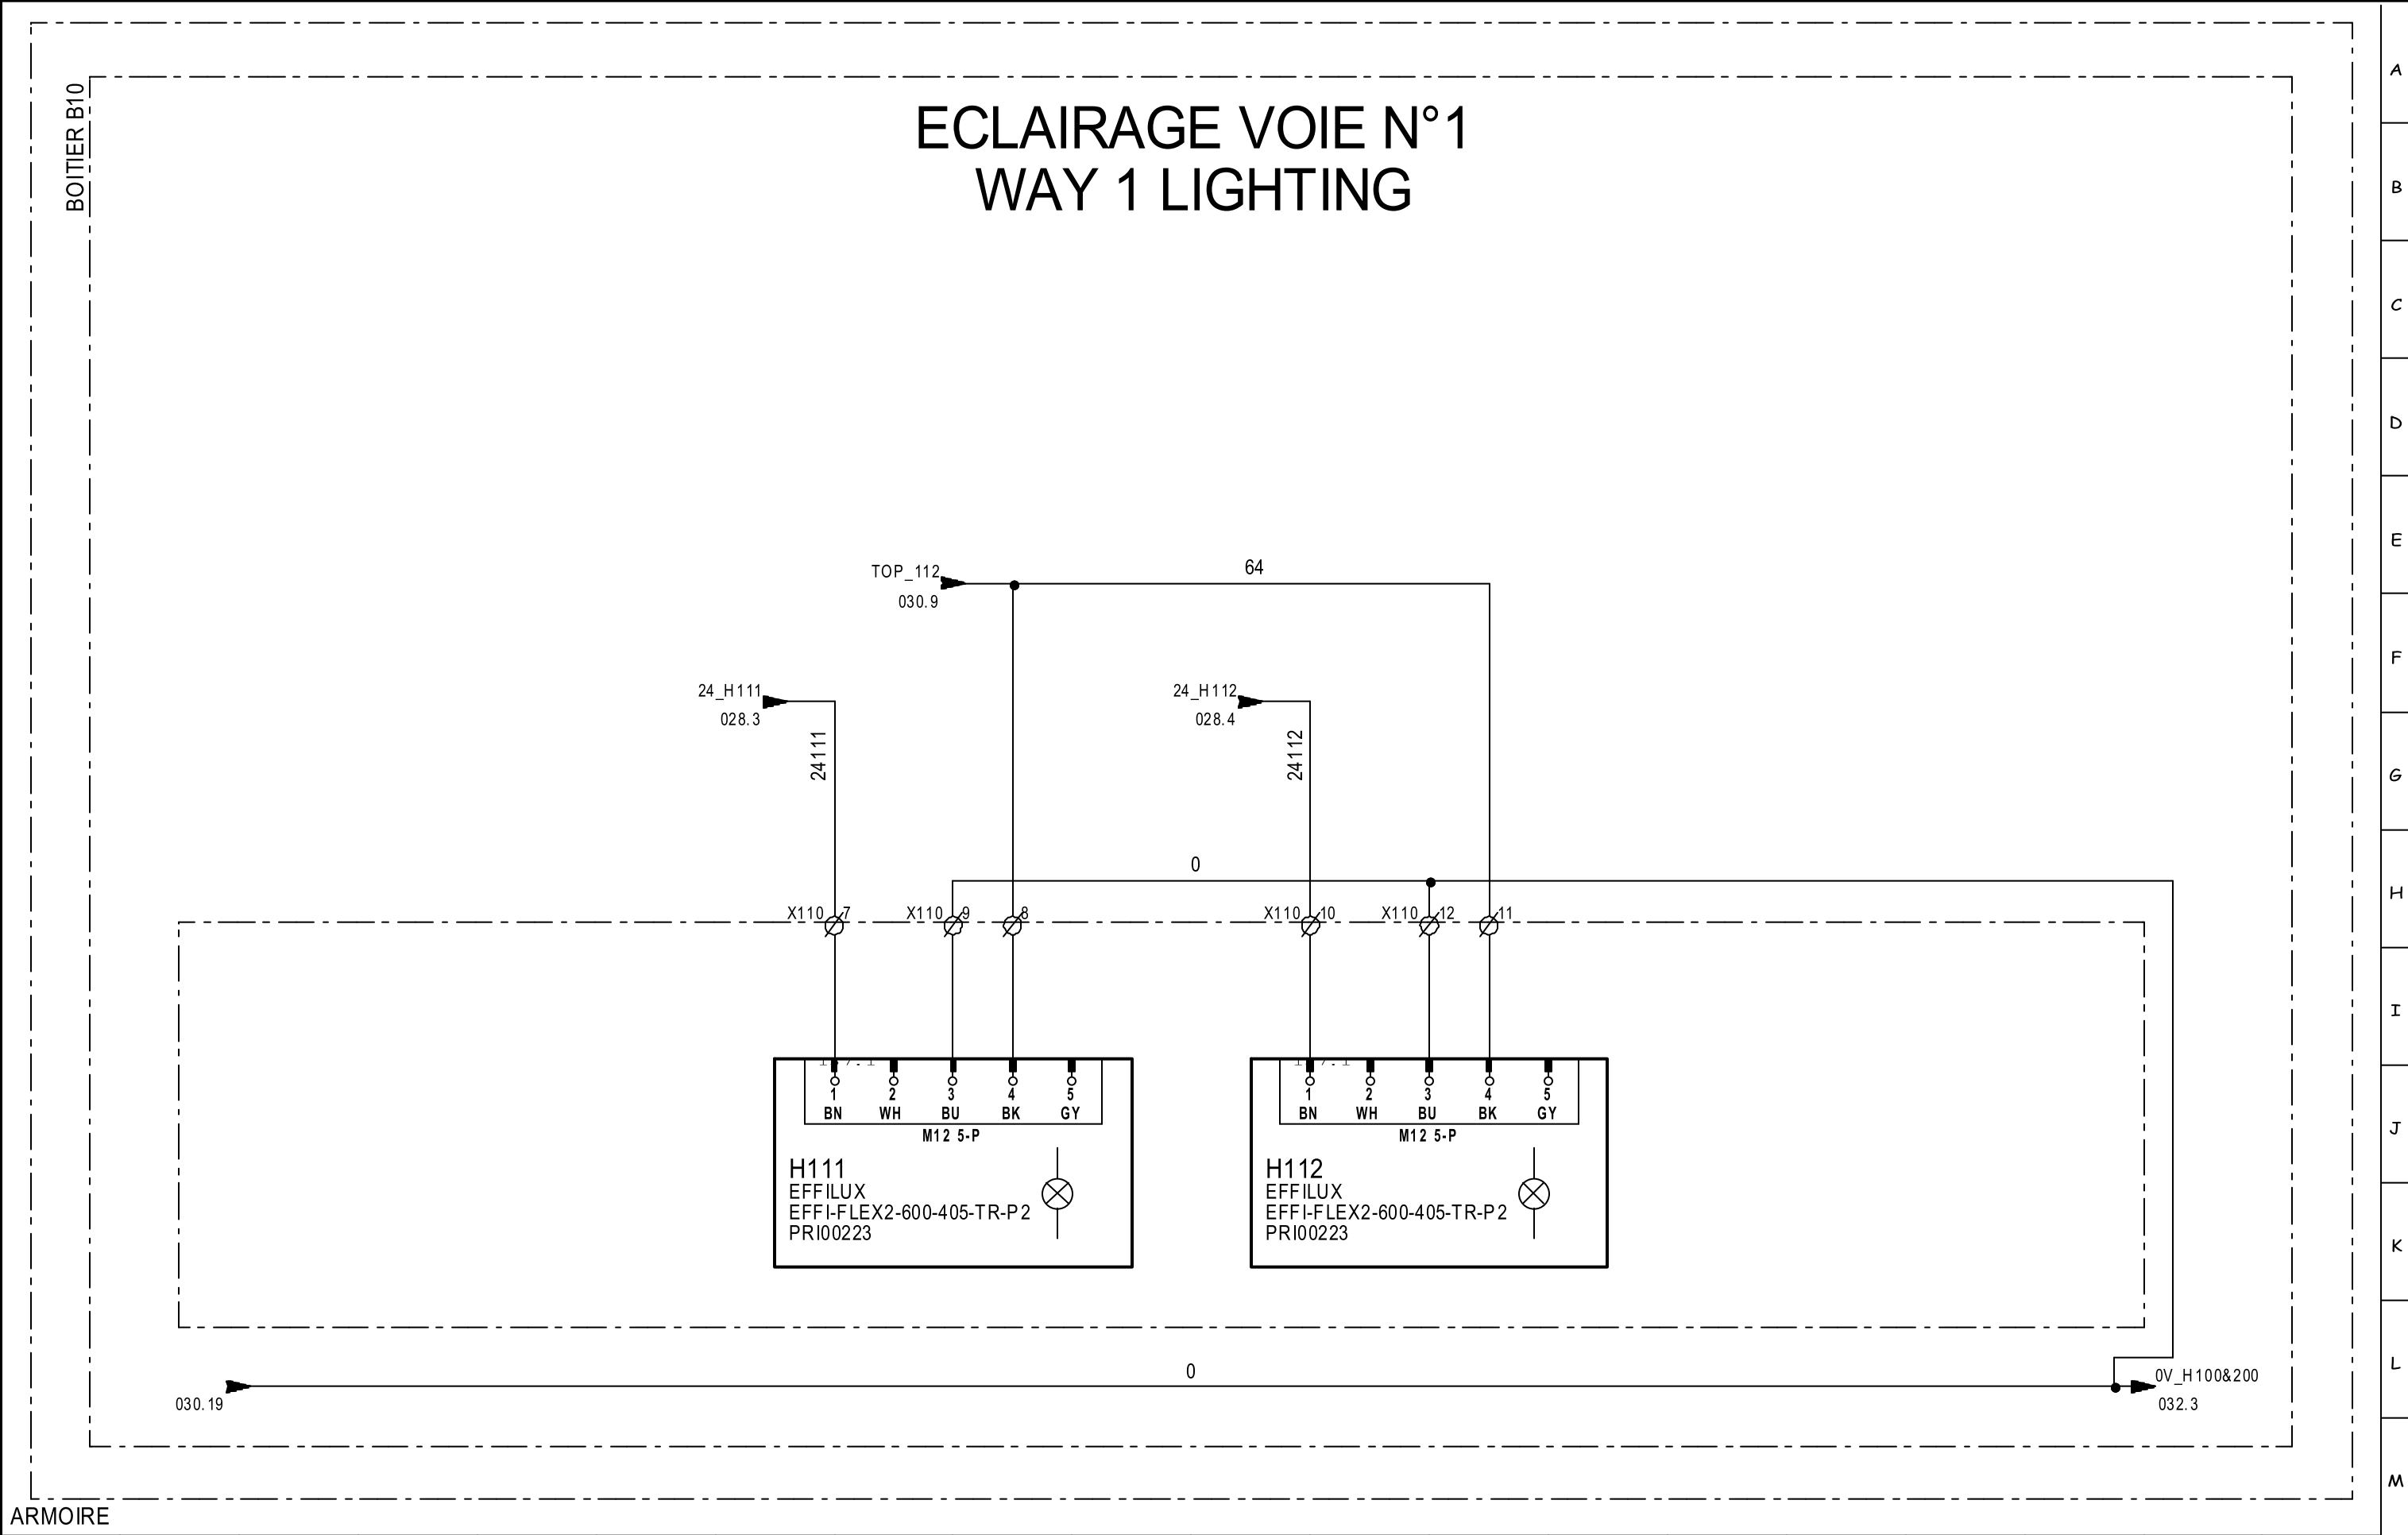


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél :(33).2.98.85.31.36		Date of creation :		IMPLANTATION ECLAIRAGE VOIE 1				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax :(33).2.98.85.31.38		Designed by : DB		WAY 1 LIGHTING LAY OUT								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020												FOLIO : 031/163	

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

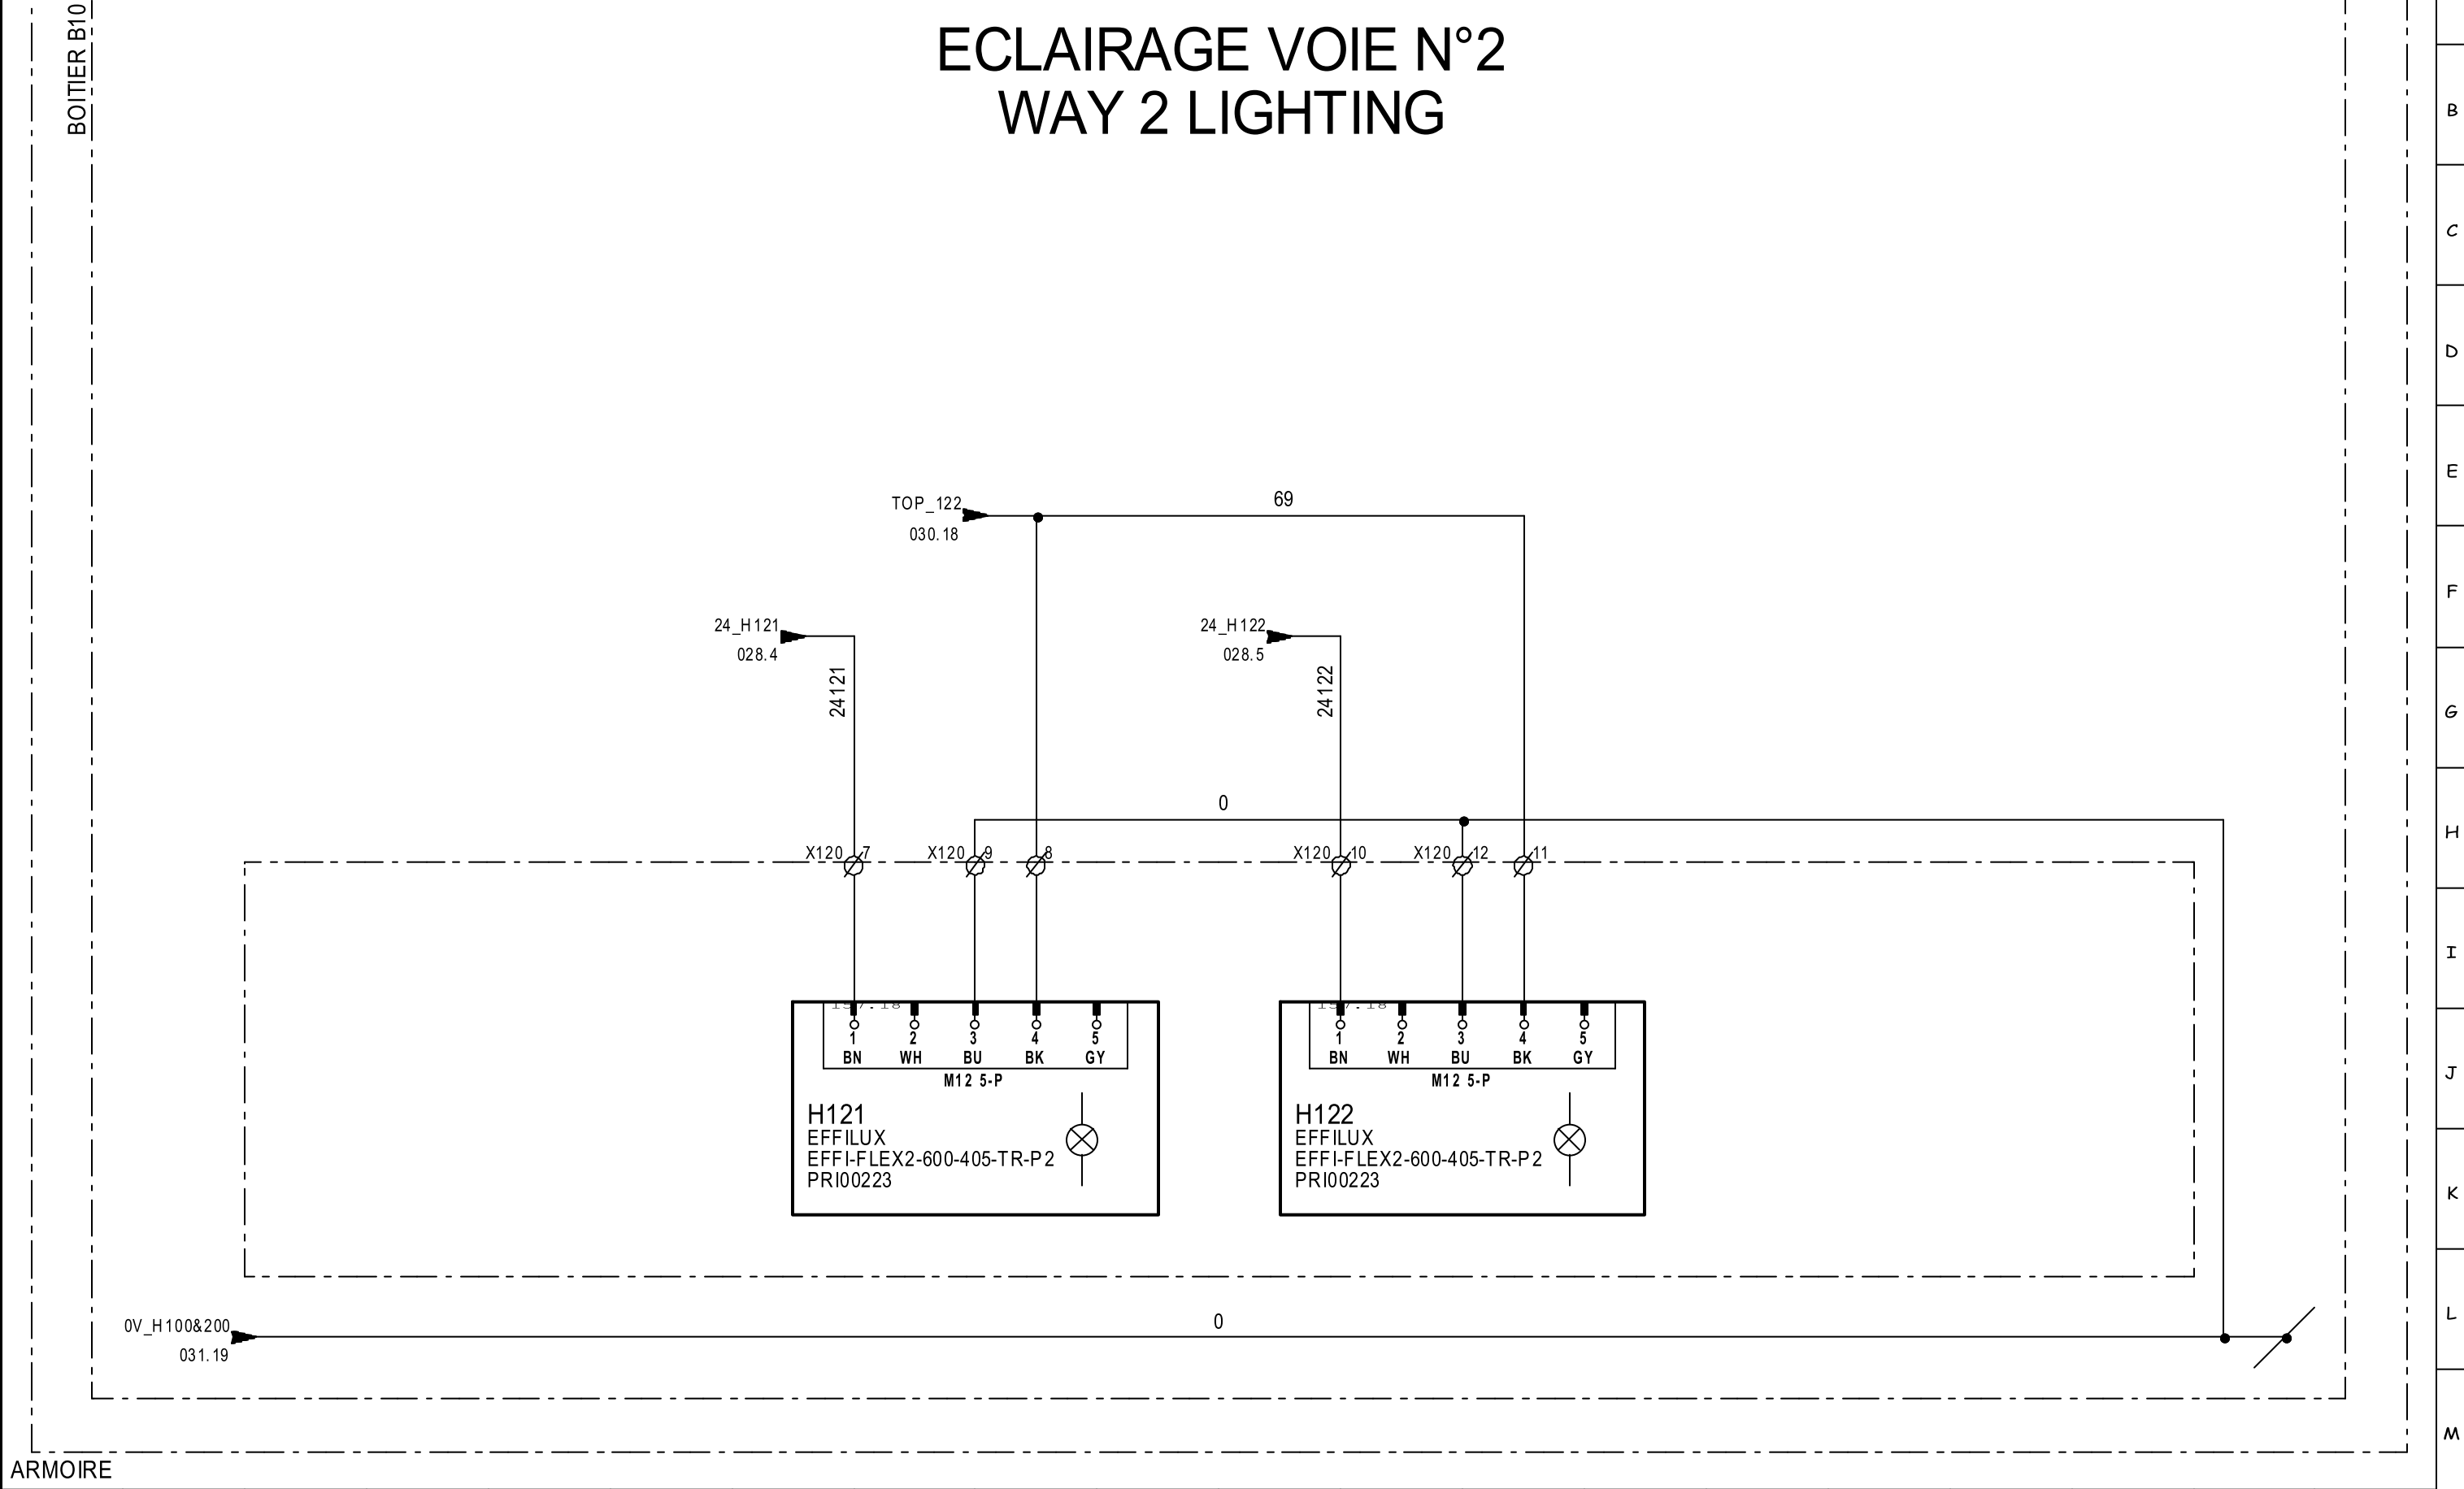

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		IMPLANTATION ECLAIRAGE VOIE 2				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		WAY 2 LIGHTING LAY OUT								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020										FOLIO : 032/163			

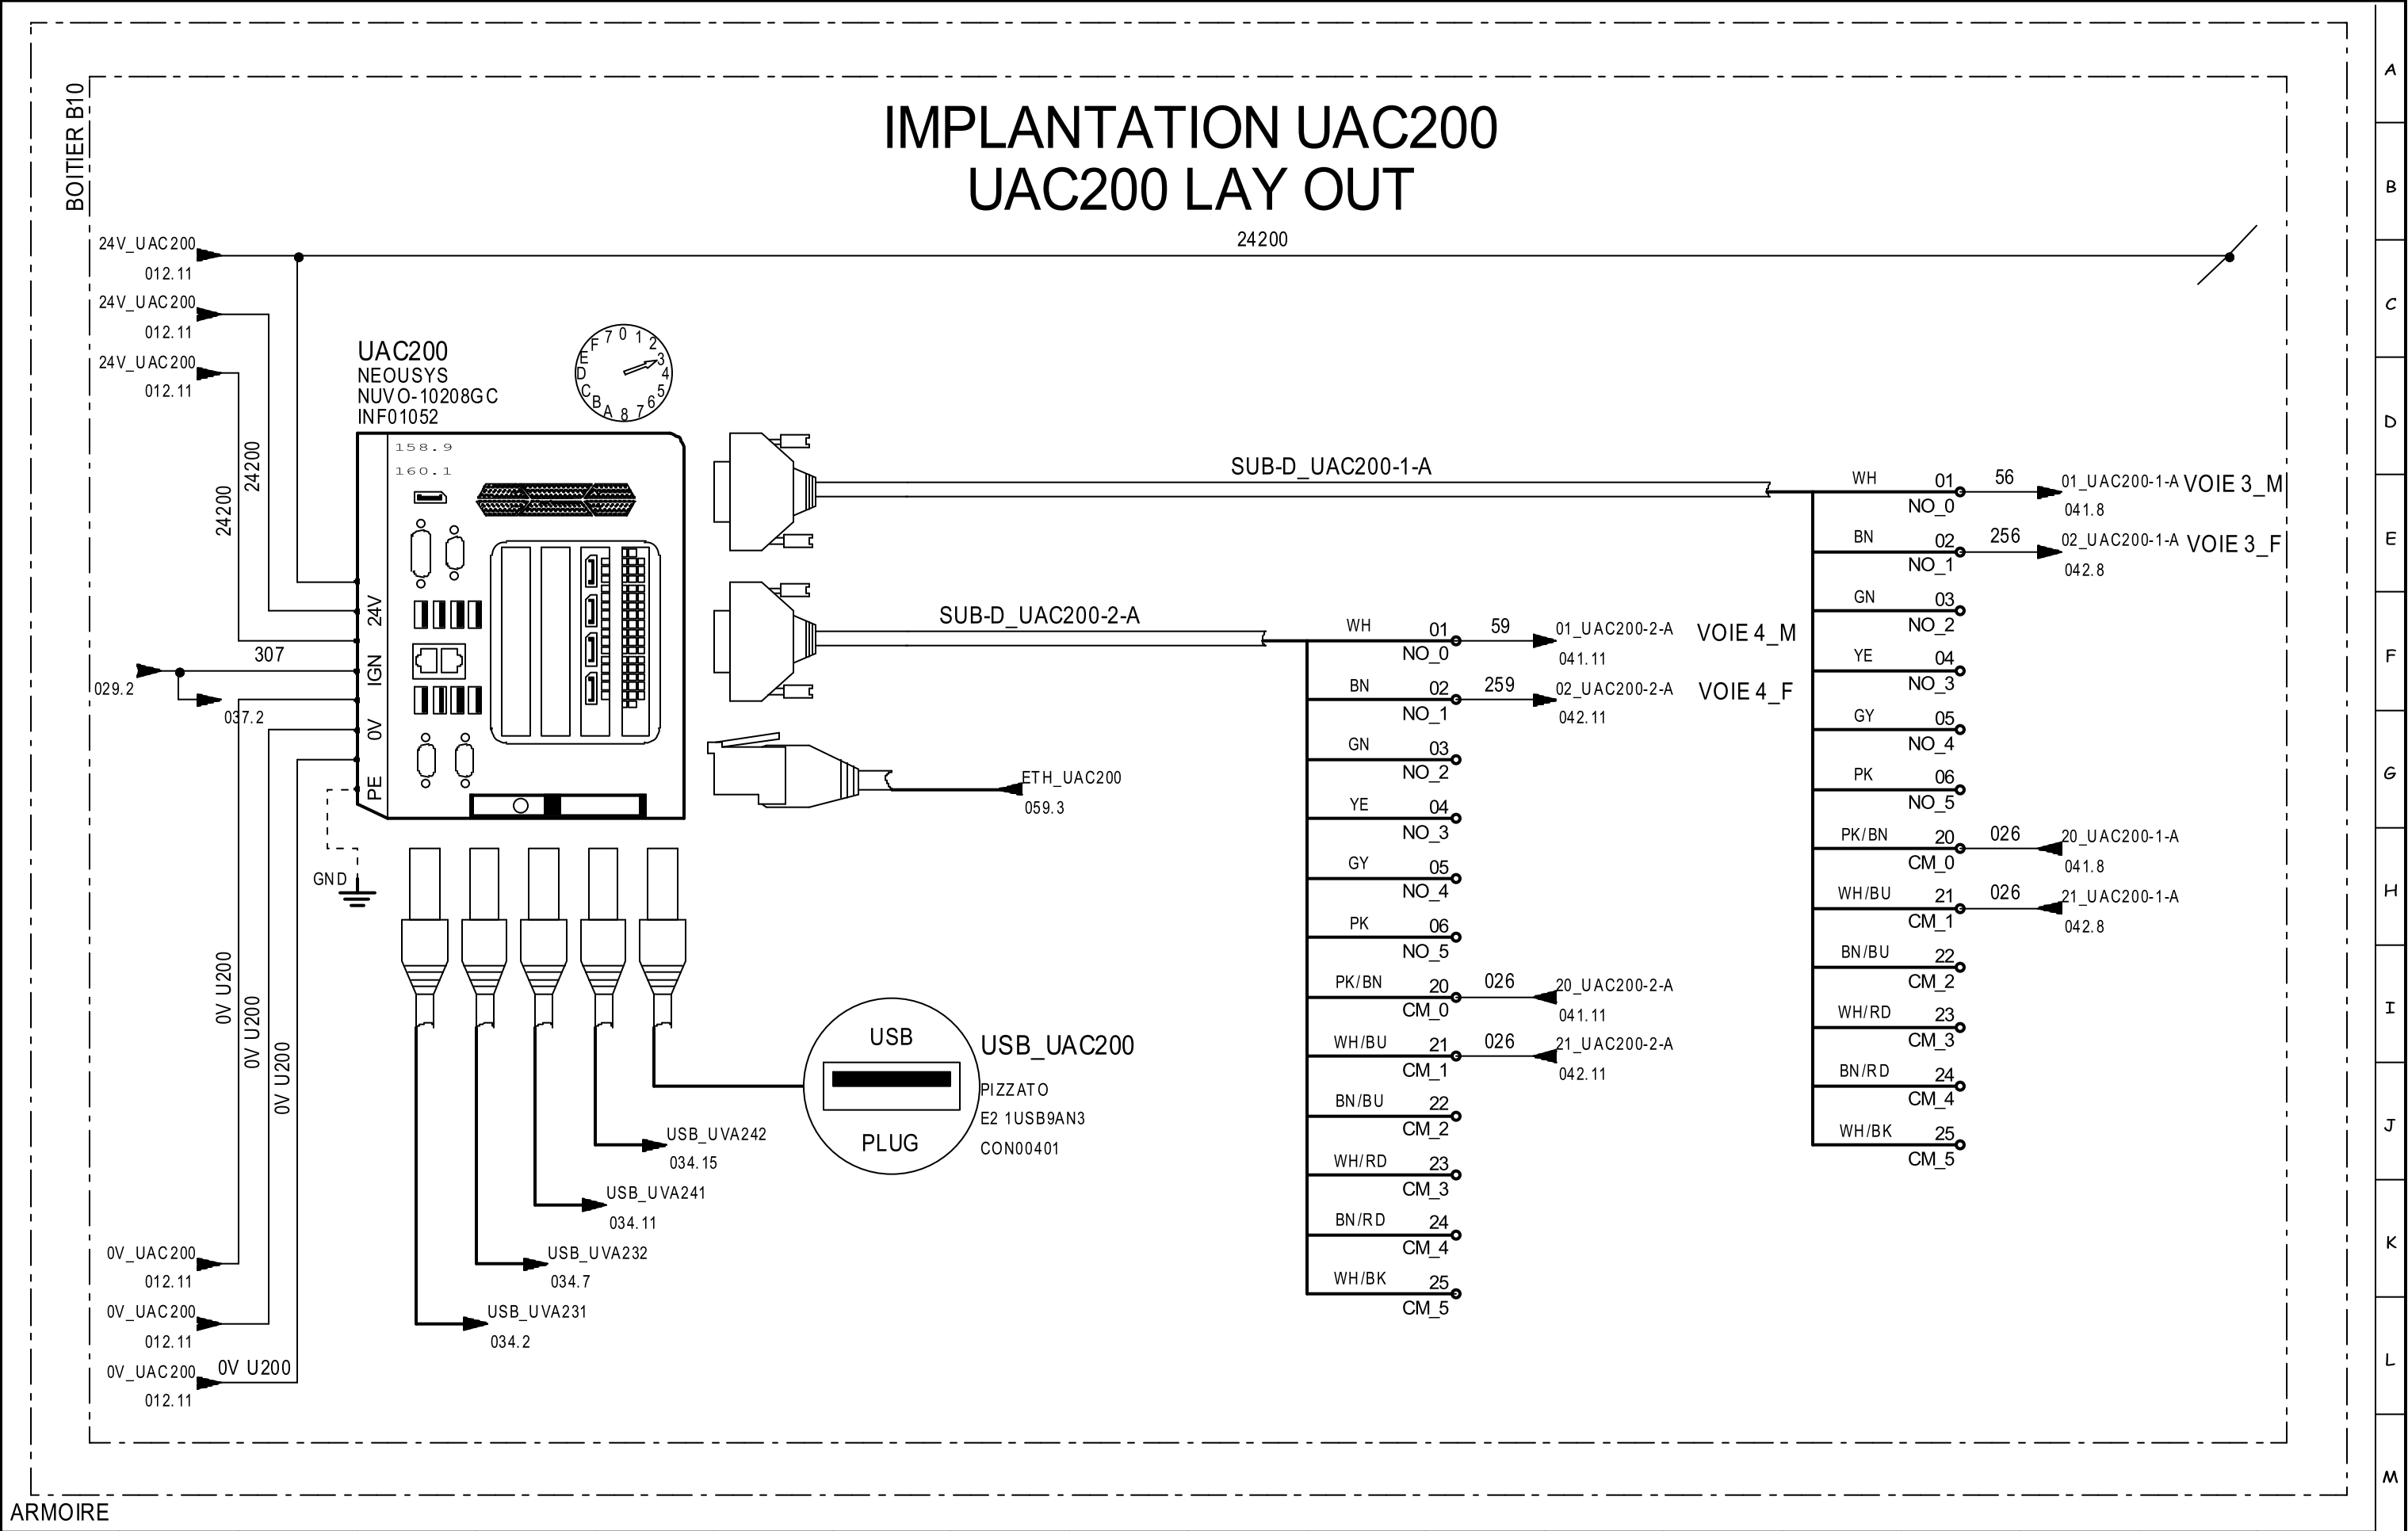


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -			Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecatid.service@ceva.com		Date of creation : Designed by : DB		IMPLANTATION UAC200 UAC200 LAY OUT ENVIRONNEMENT: Version 4.49.F - 23/09/2020				ceva Ecat-iD Campus			CONTRACT : C01422 ARTICLE : SMXA-C014221		CUSTOMER : COOP LAR		COUNTRY : BRESIL INDEX : V12 FOLIO : 033/163	

BOITIER B10

VISION VOIE N°3 WAY 3 VISION


VISION VOIE N°4 WAY 4 VISION

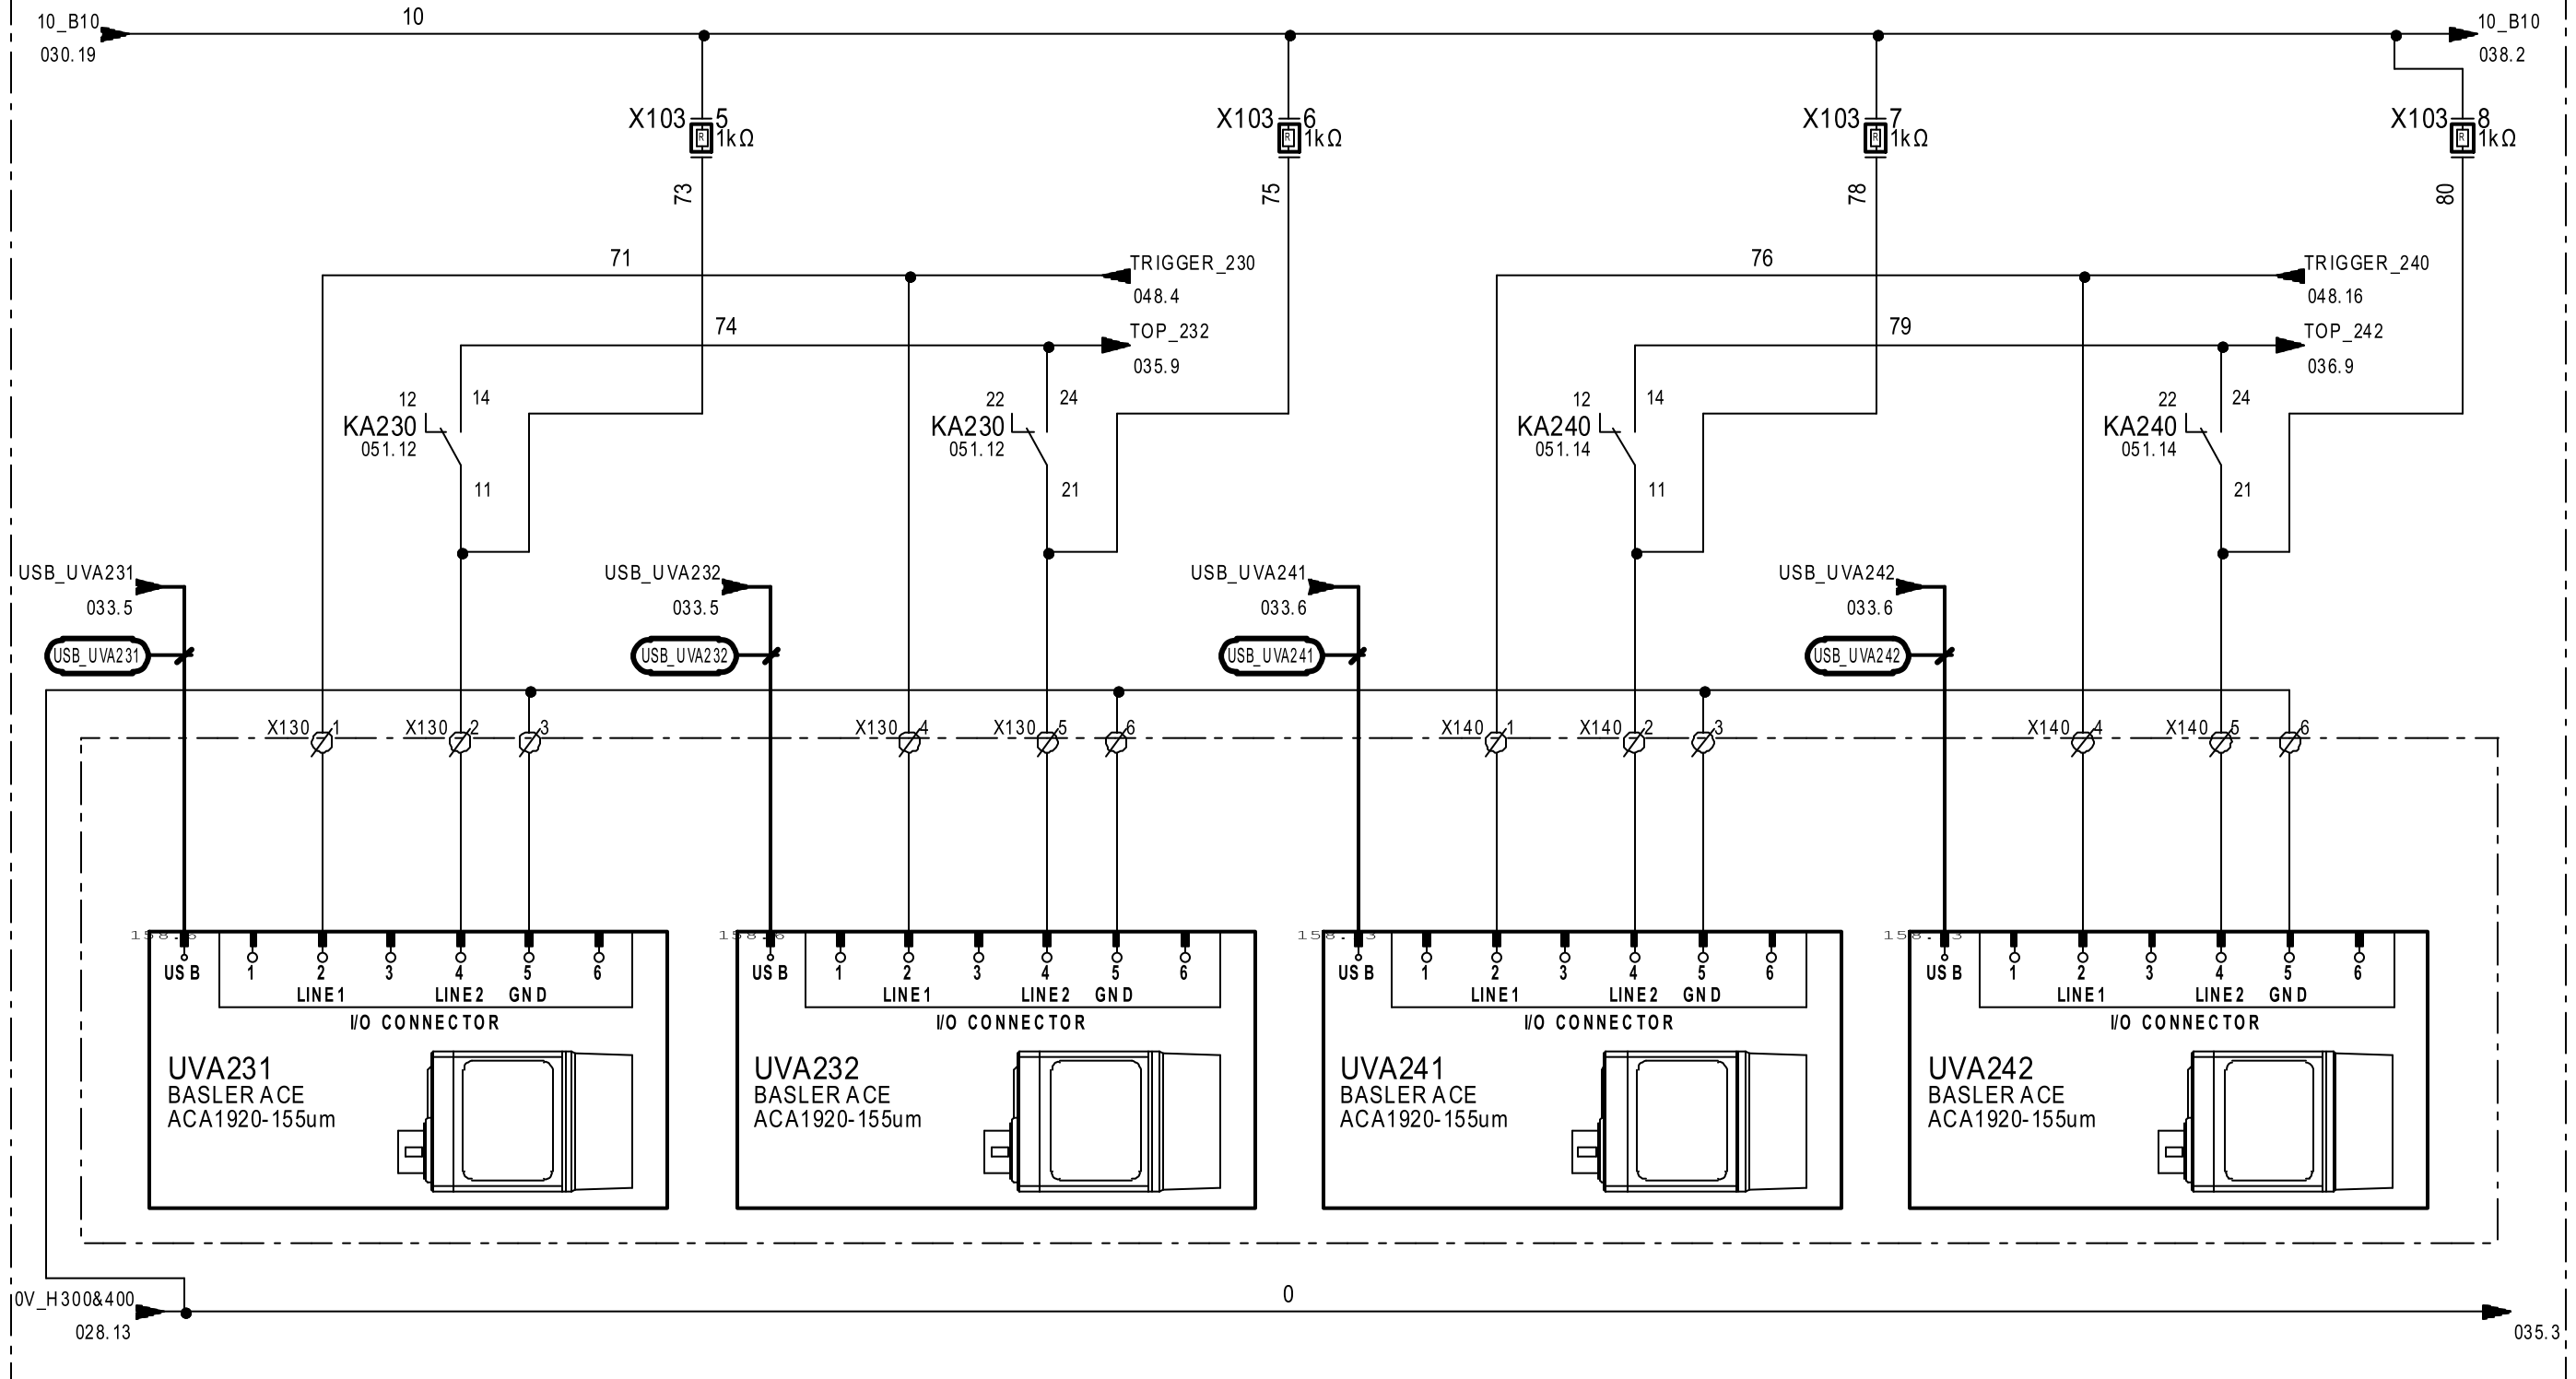

ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -			Tél : (33).2.98.85.31.36		Date of creation :		IMPLANTATION CAMERA VOIE 3 & 4				 Ecat-iD Campus			CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		WAY 3 & 4 CAMERA LAY OUT							ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com		ENVIRONNEMENT:Version 4.49.F - 23/09/2020				034/163										

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

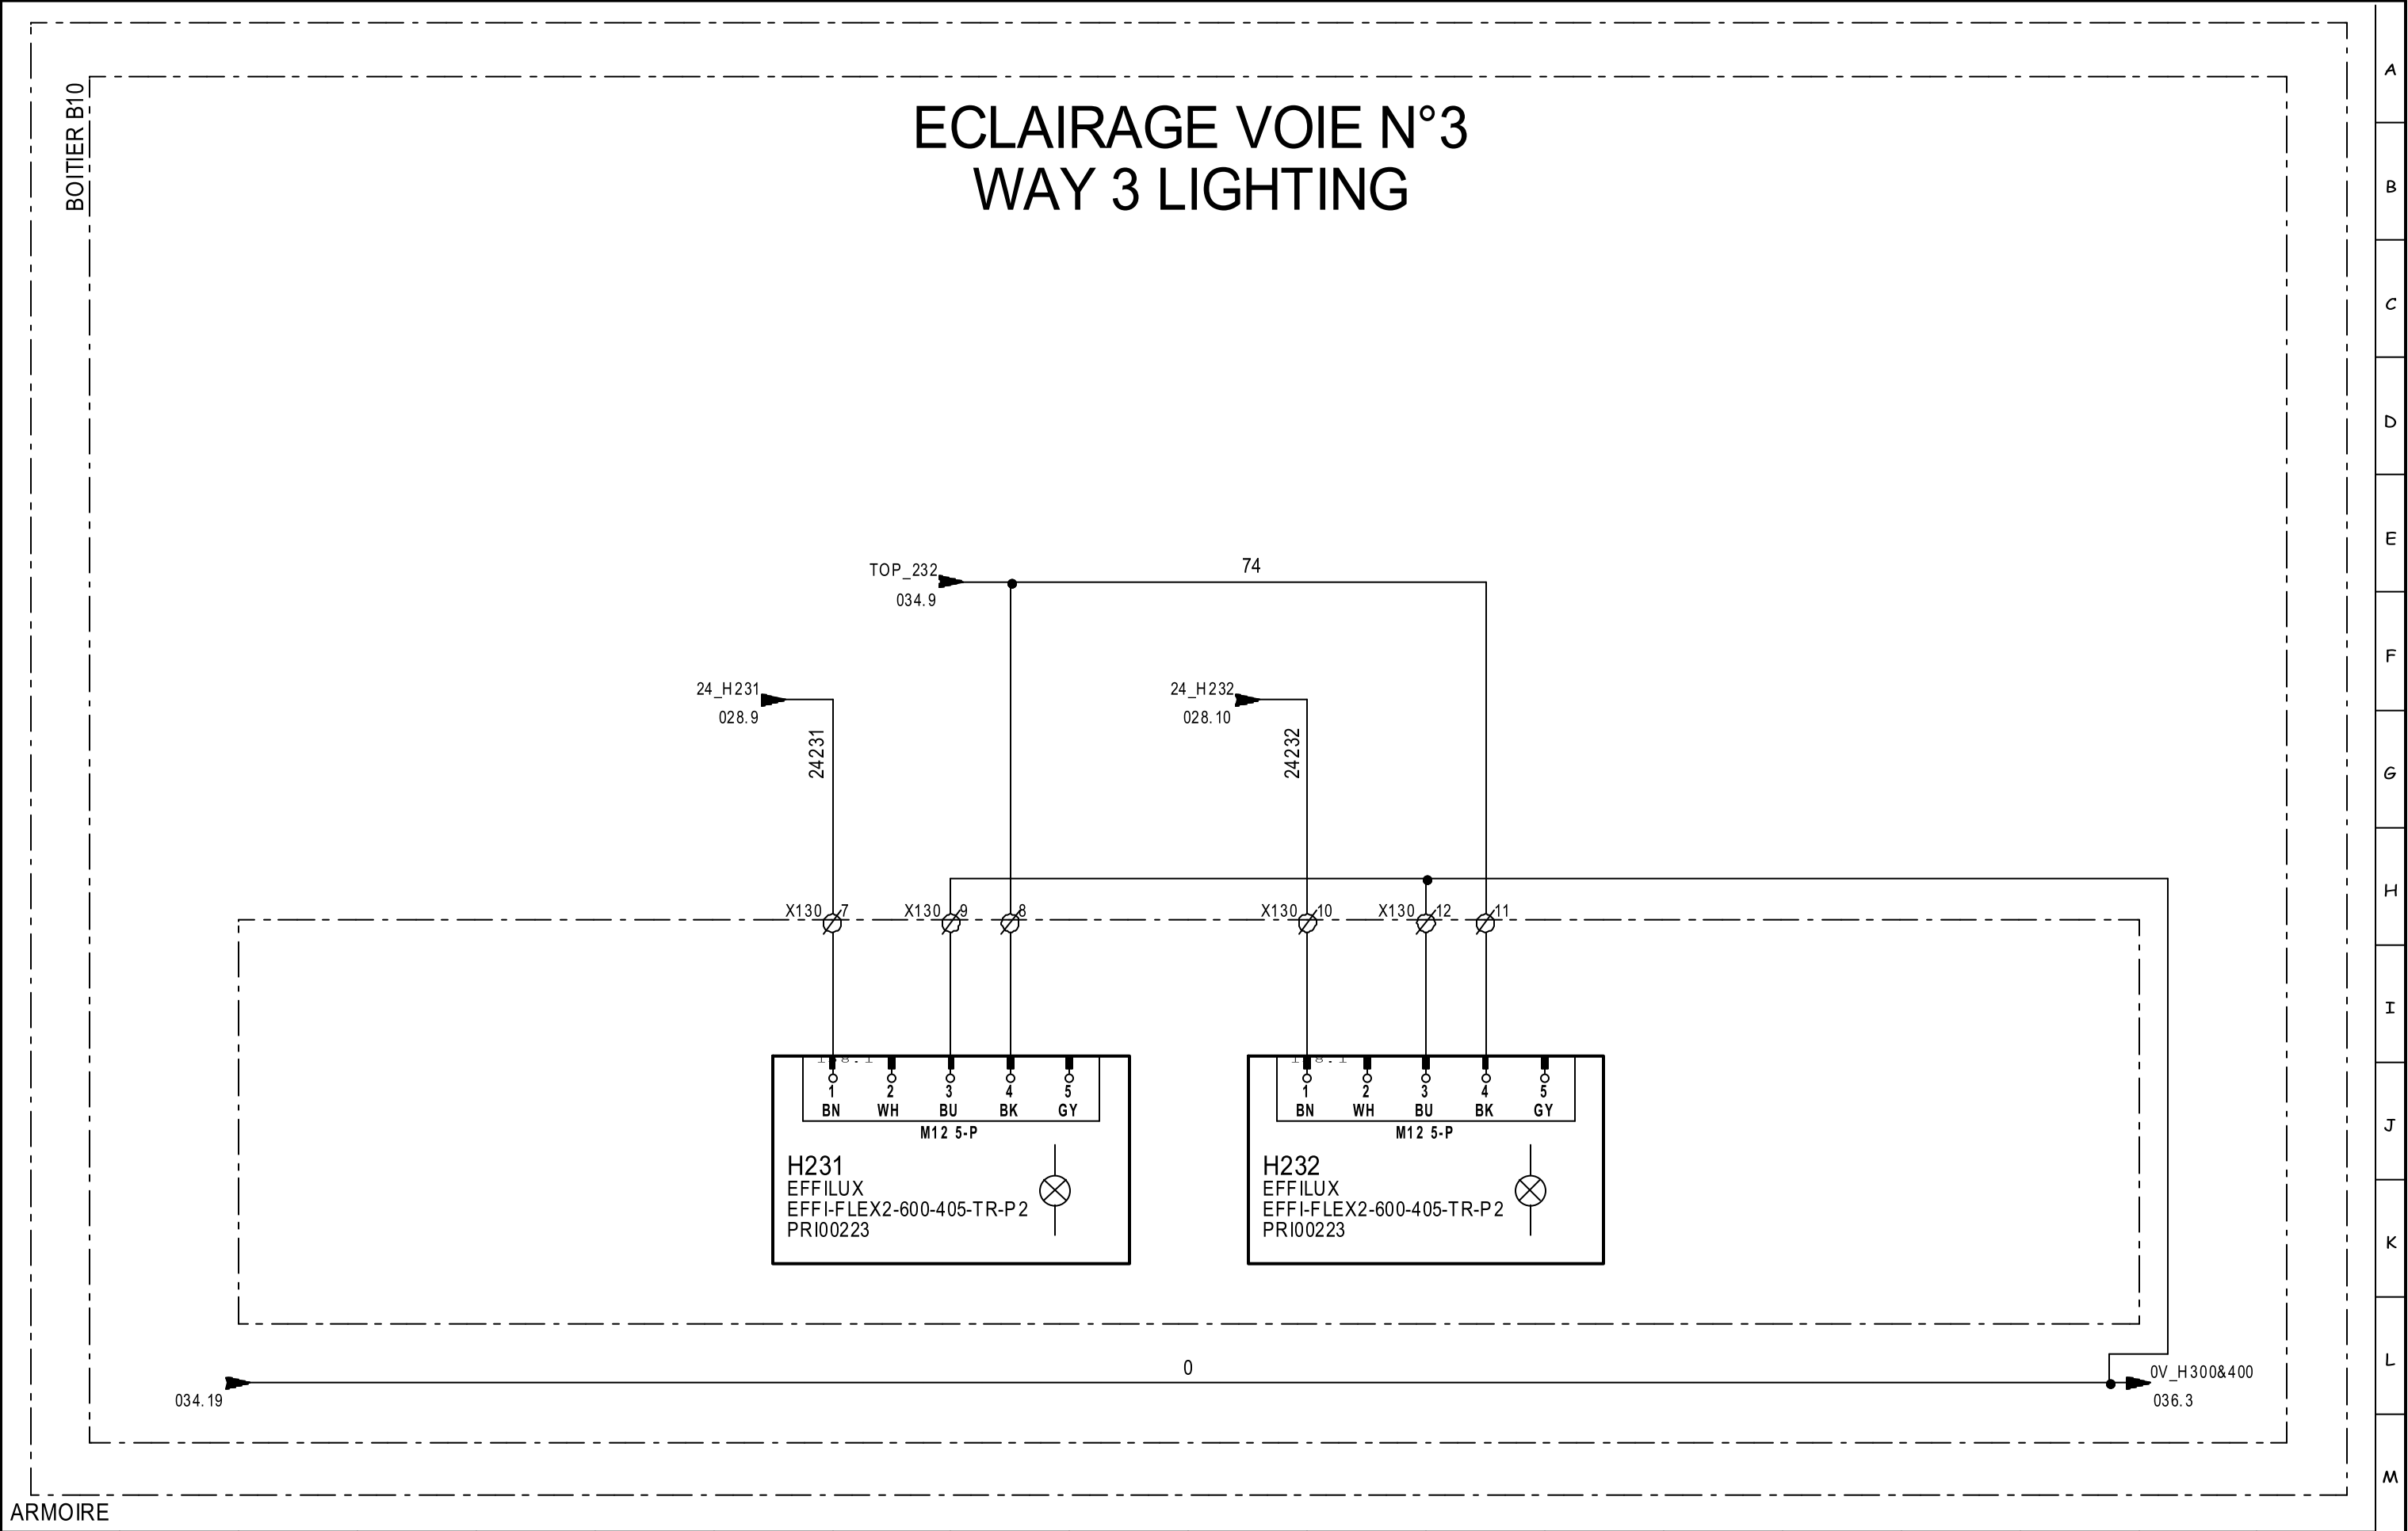

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		IMPLANTATION ECLAIRAGE VOIE 3				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		WAY 3 LIGHTING LAY OUT								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020										FOLIO : 035/163			


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

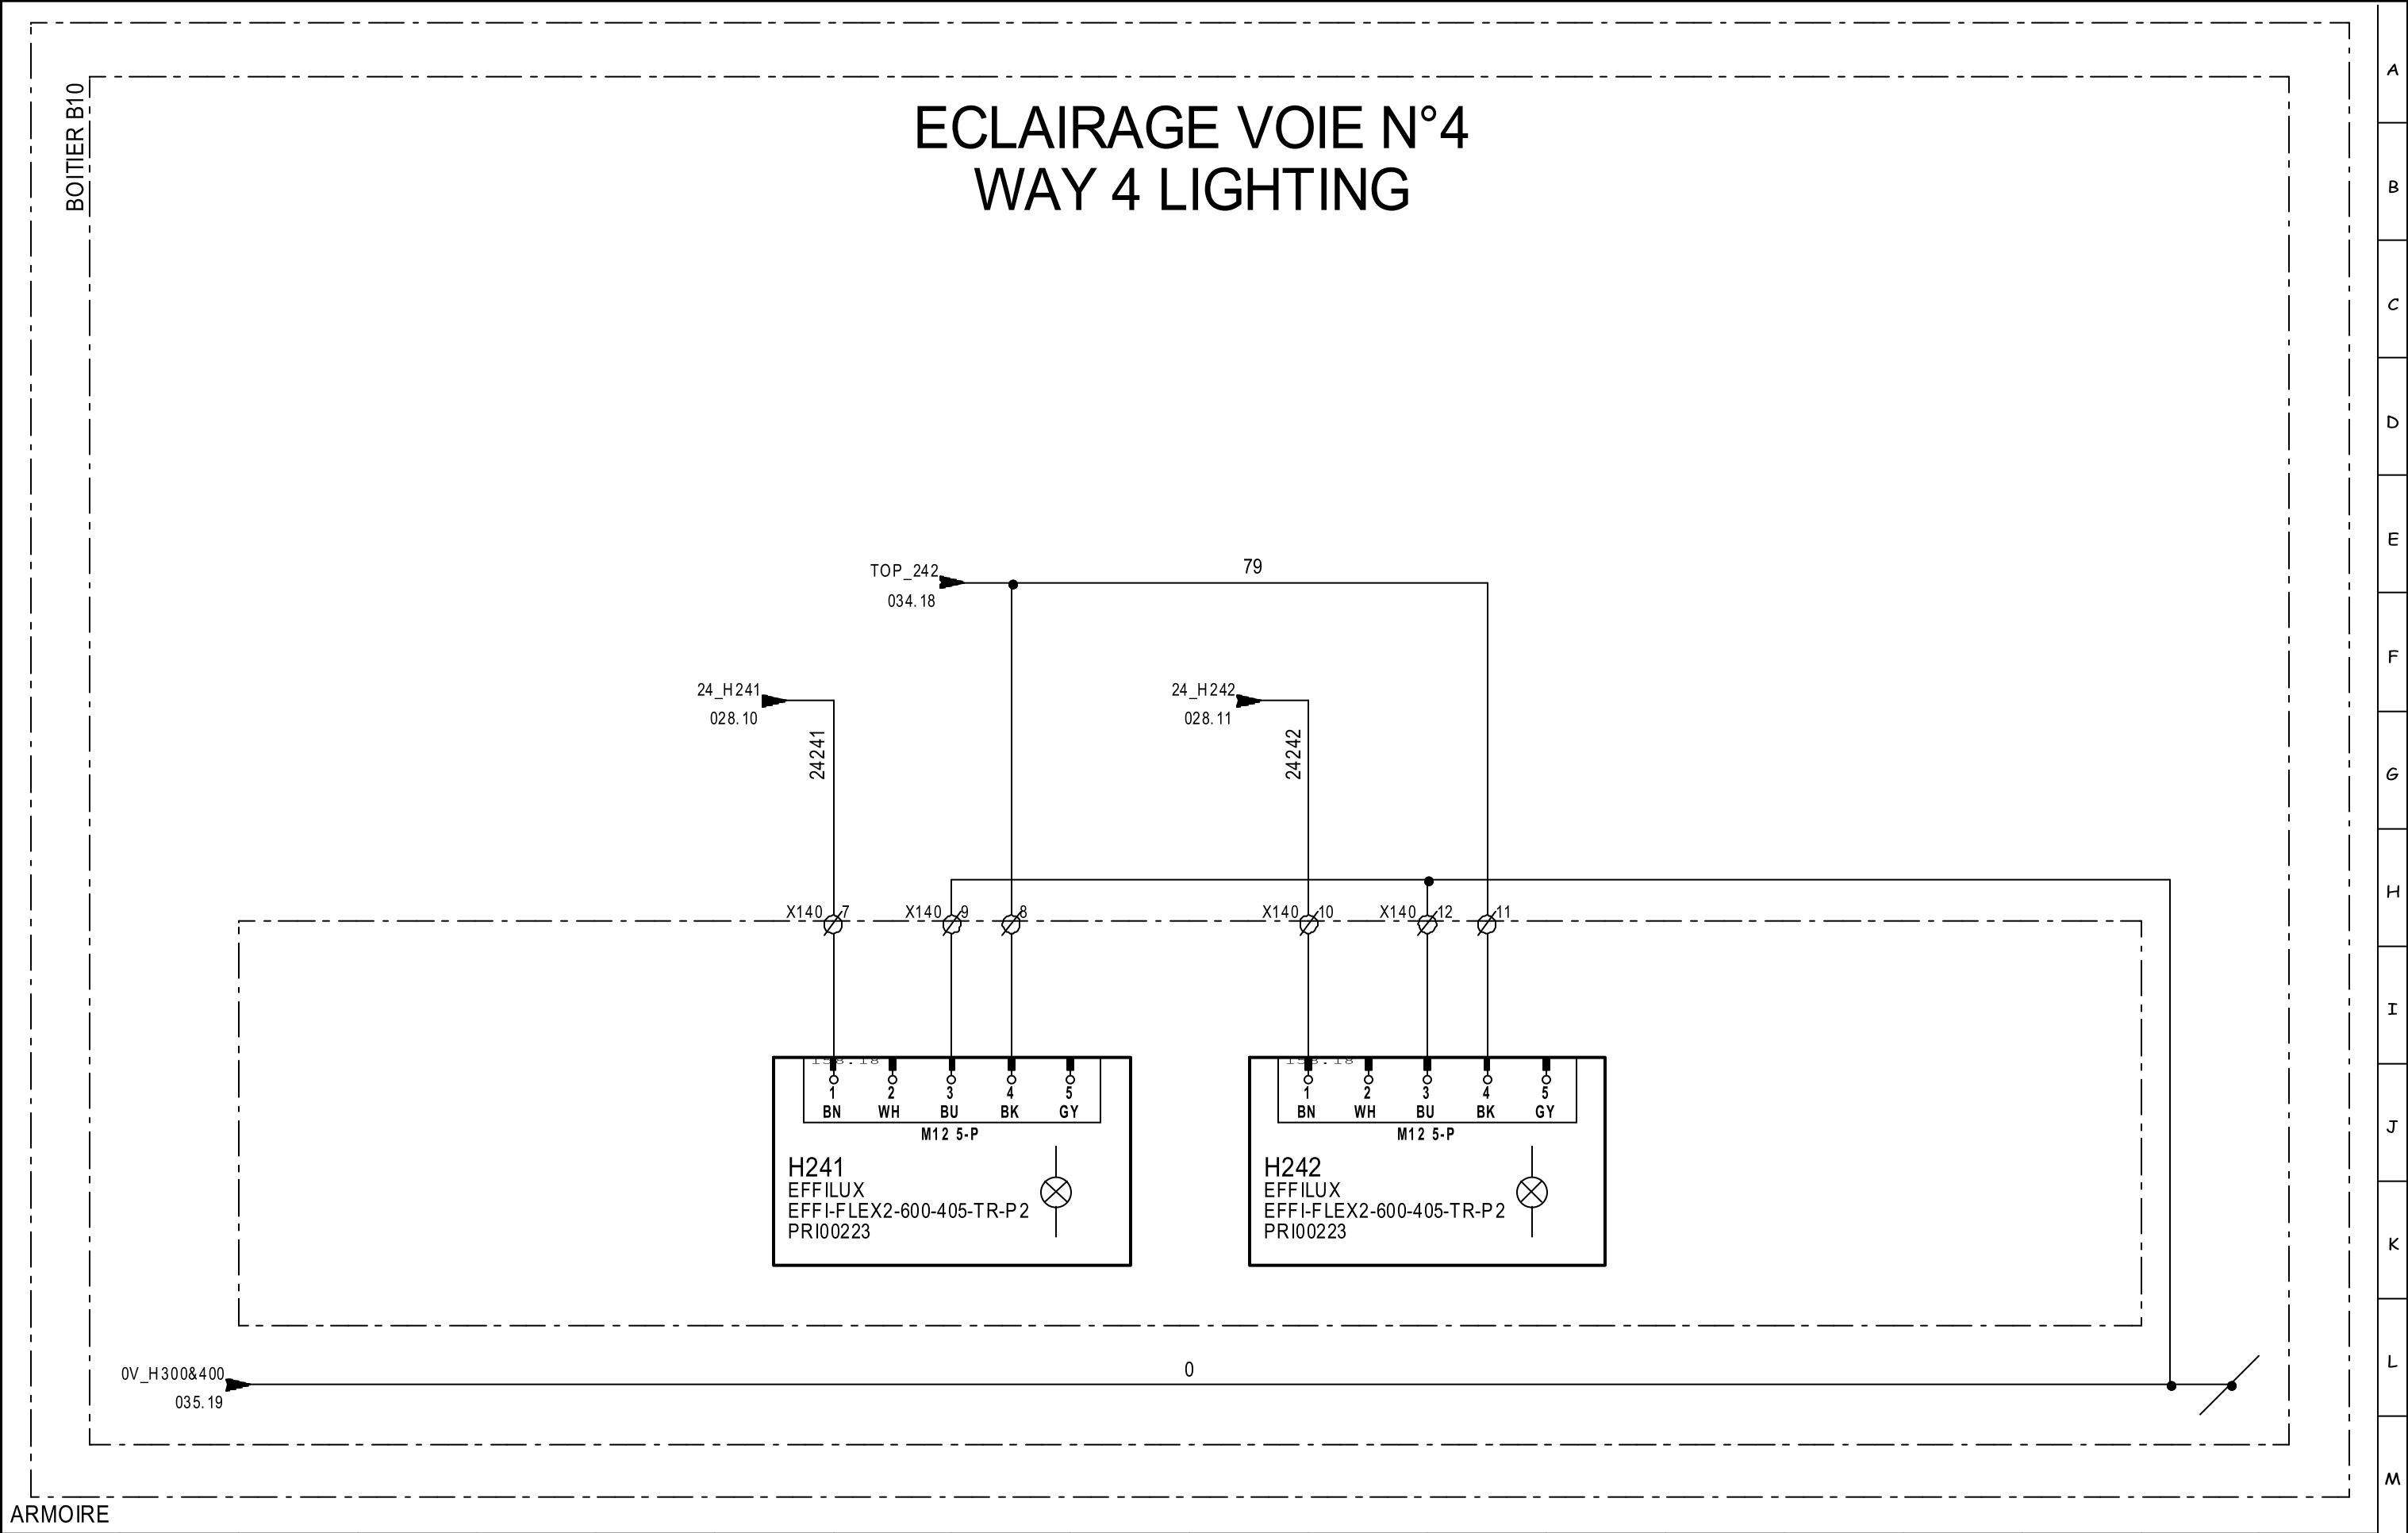

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		IMPLANTATION ECLAIRAGE VOIE 4				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		WAY 4 LIGHTING LAY OUT								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 036/163			

IMPLANTATION UAC300

UAC300 LAY OUT

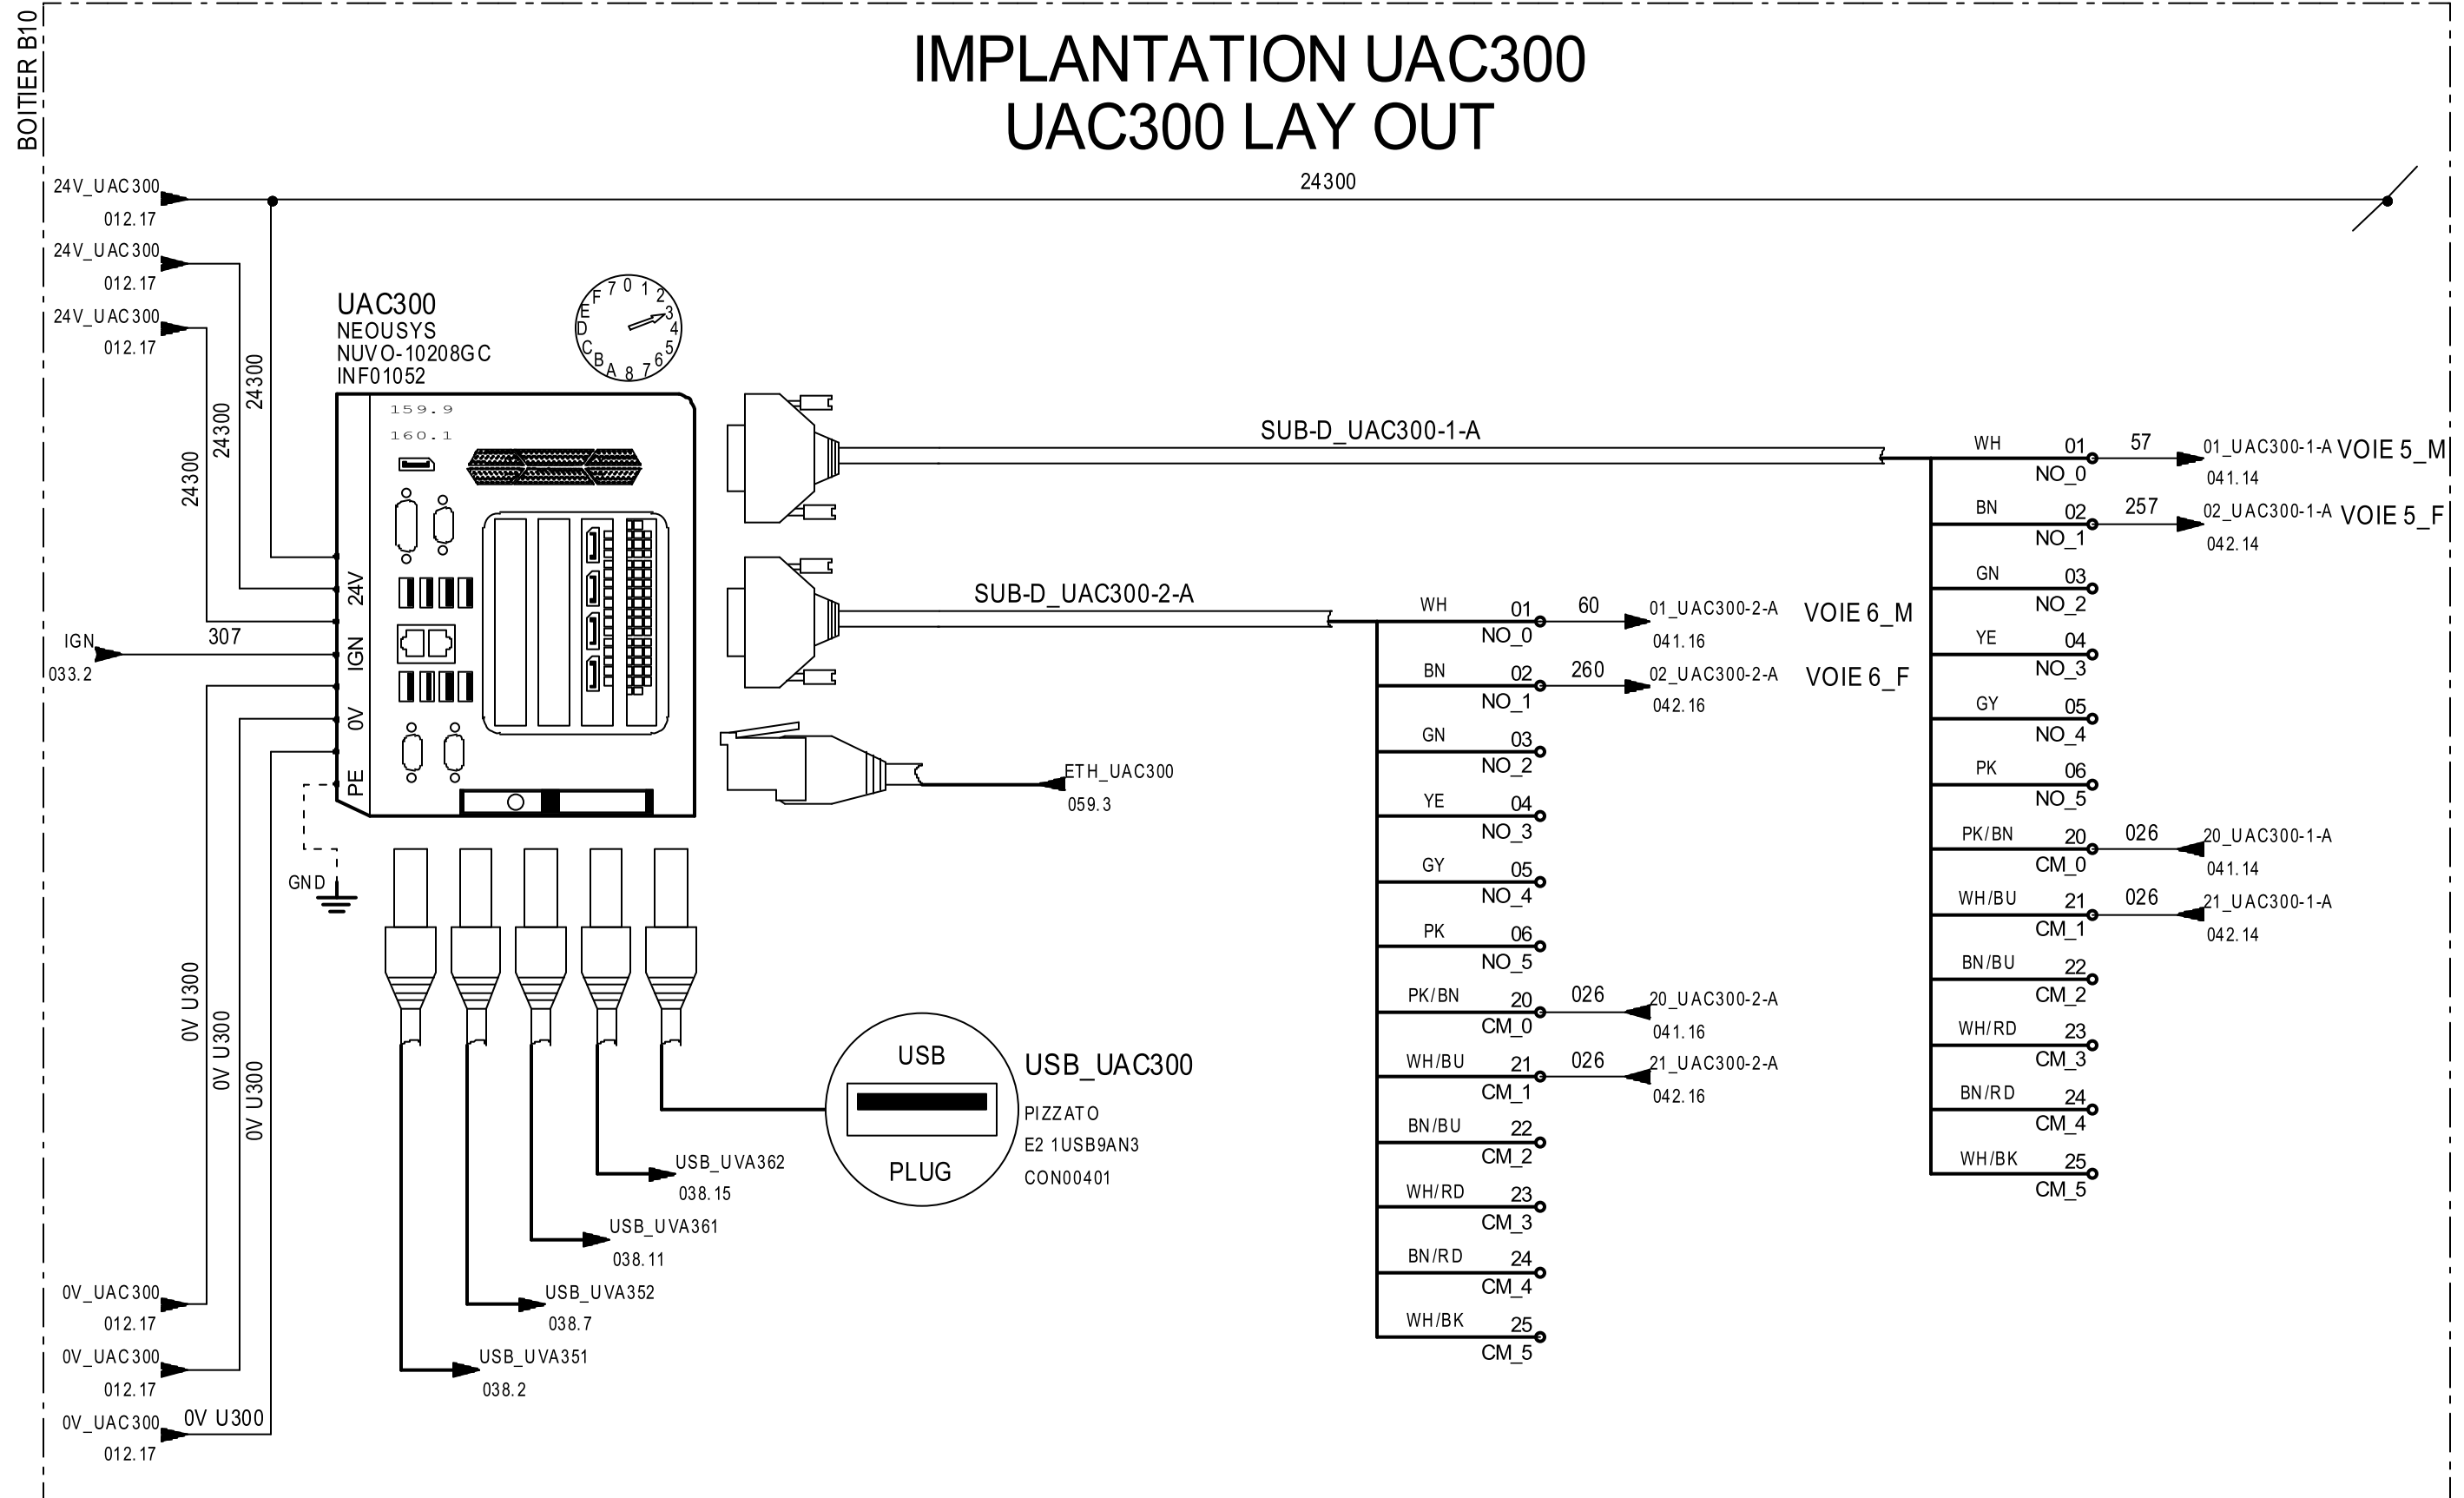

ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -			Tél : (33).2.98.85.31.36		Date of creation :		IMPLANTATION UAC300				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		UAC300 LAY OUT								ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecatic.service@ceva.com		ENVIRONNEMENT:Version 4.49.F - 23/09/2020				FOLIO : 037/163											

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

BOITIER B10

VISION VOIE N°5 WAY 5 VISION


VISION VOIE N°6 WAY 6 VISION

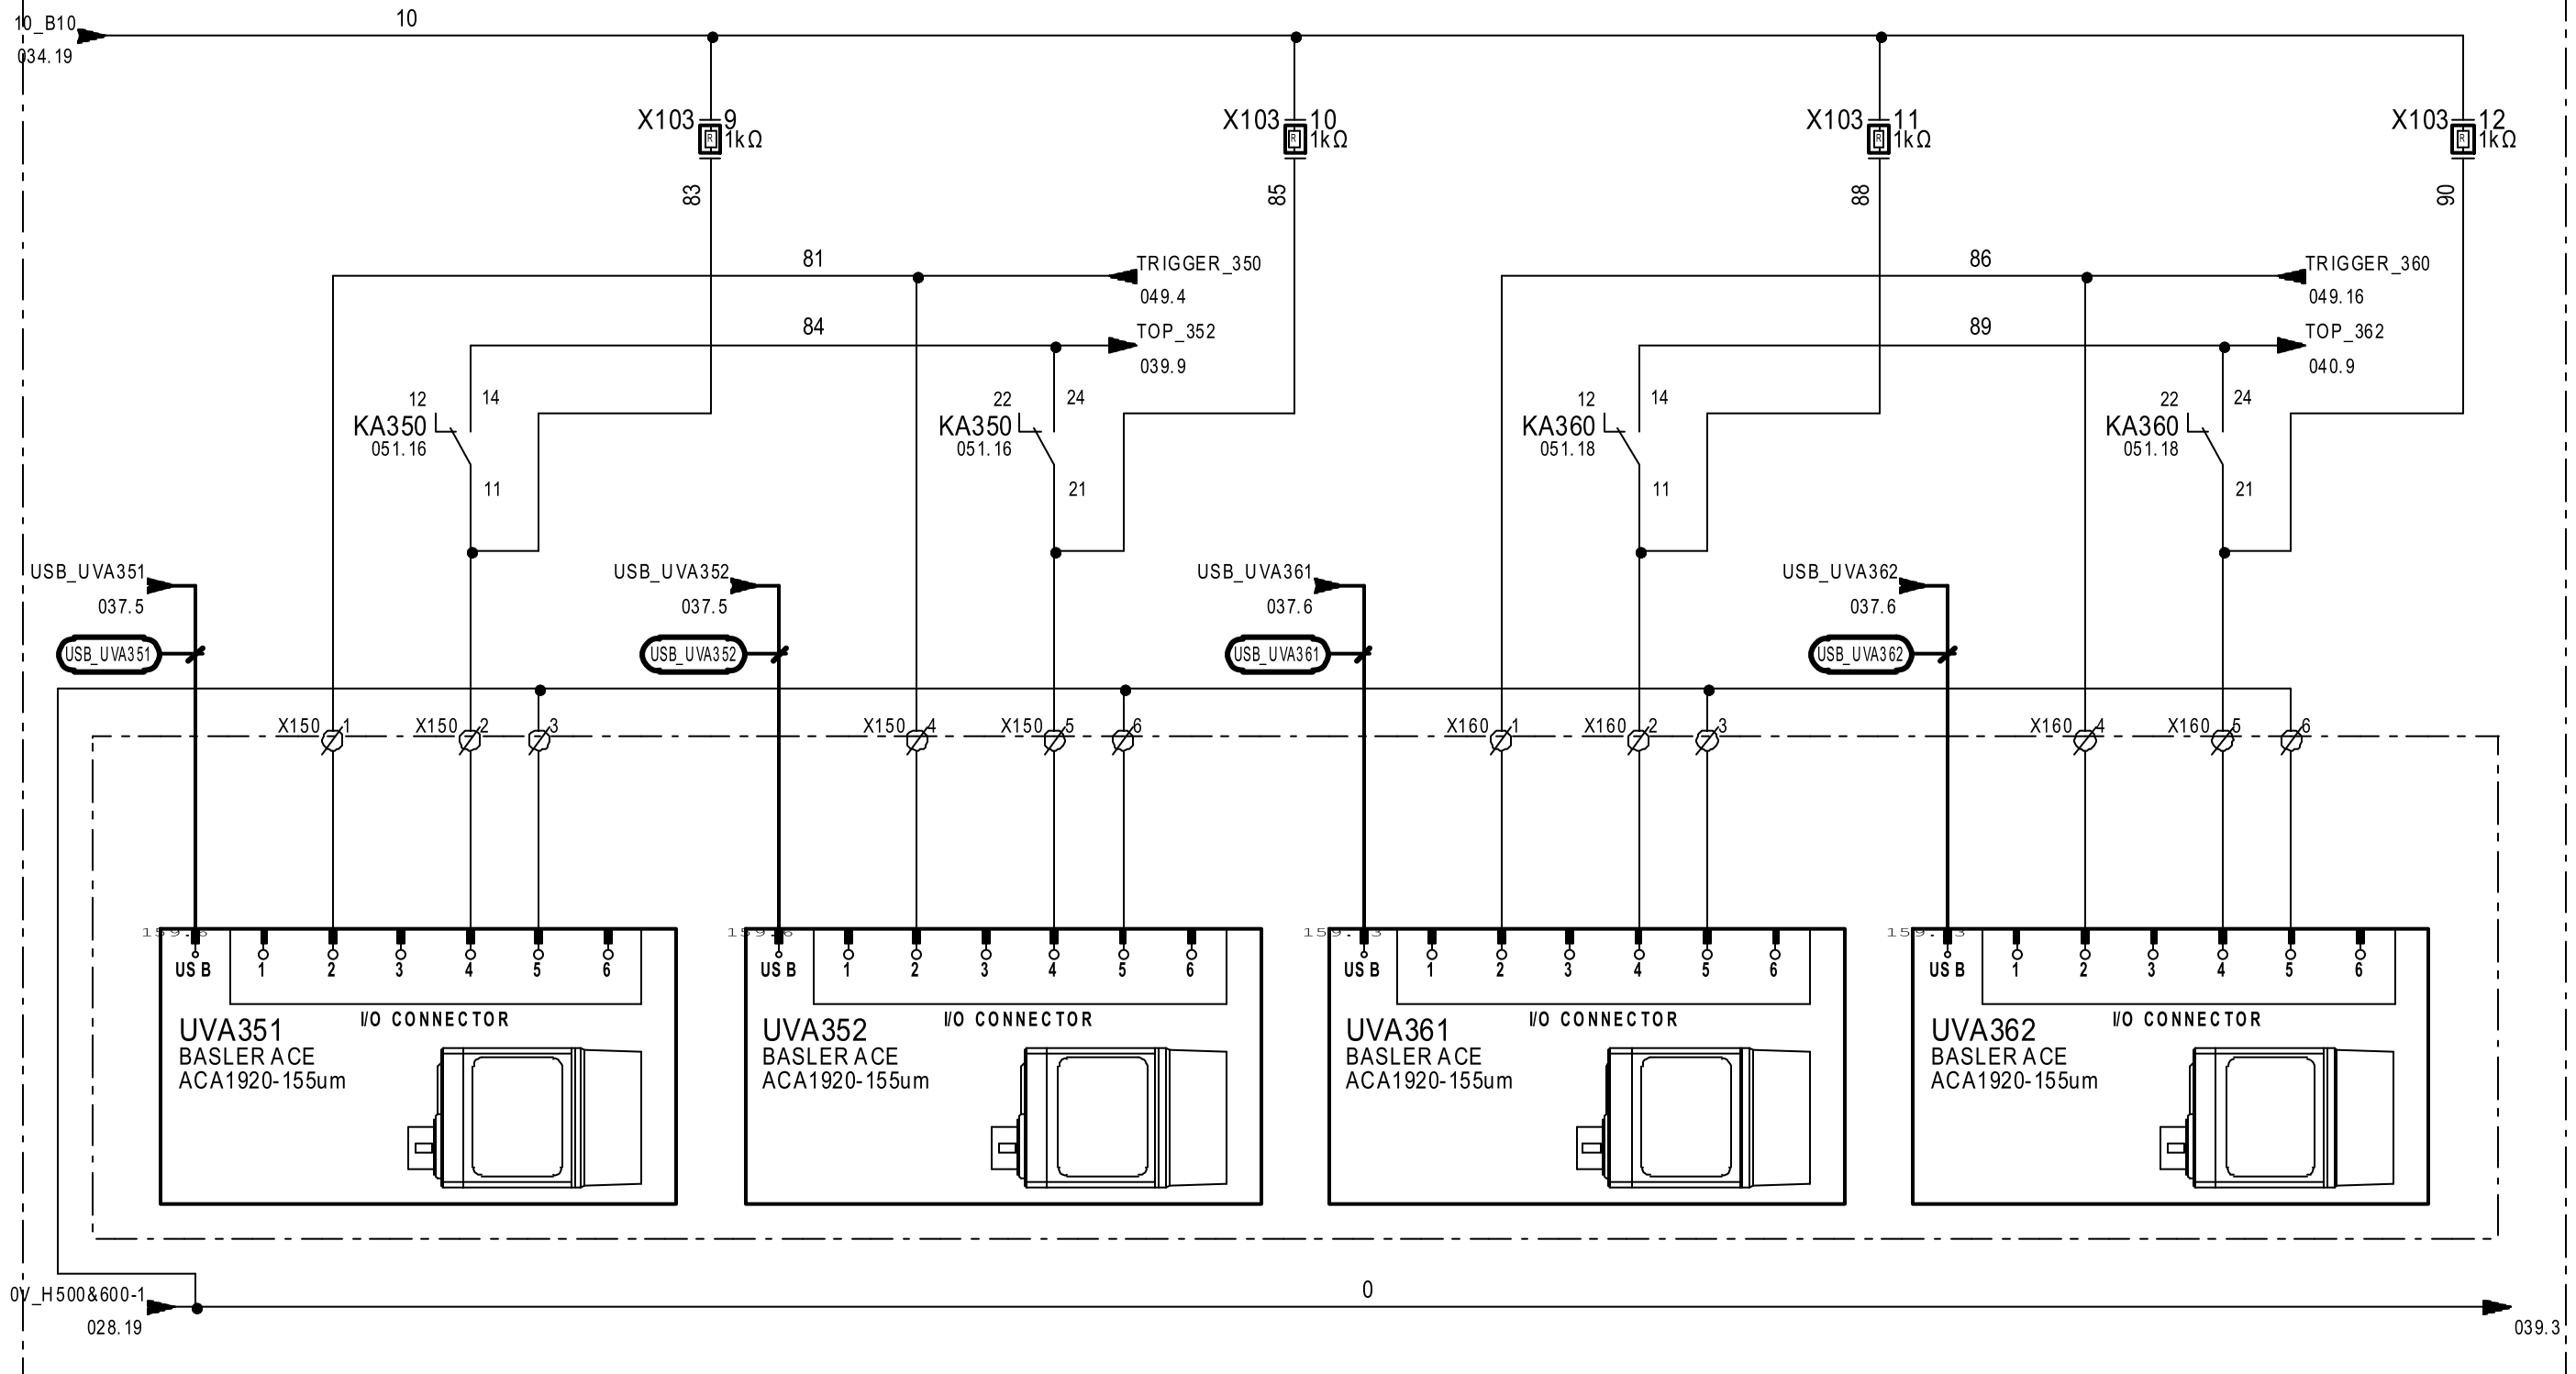

ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -		Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecaticid.service@ceva.com		Date of creation : Designed by : DB		IMPLANTATION CAMERA VOIE 5 & 6 WAY 5 & 6 CAMERA LAY OUT ENVIRONNEMENT : Version 4.49.F - 23/09/2020		 Ecat-iD Campus		CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL		INDEX : V11 FOLIO : 038/163		SMXA-C014221	

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

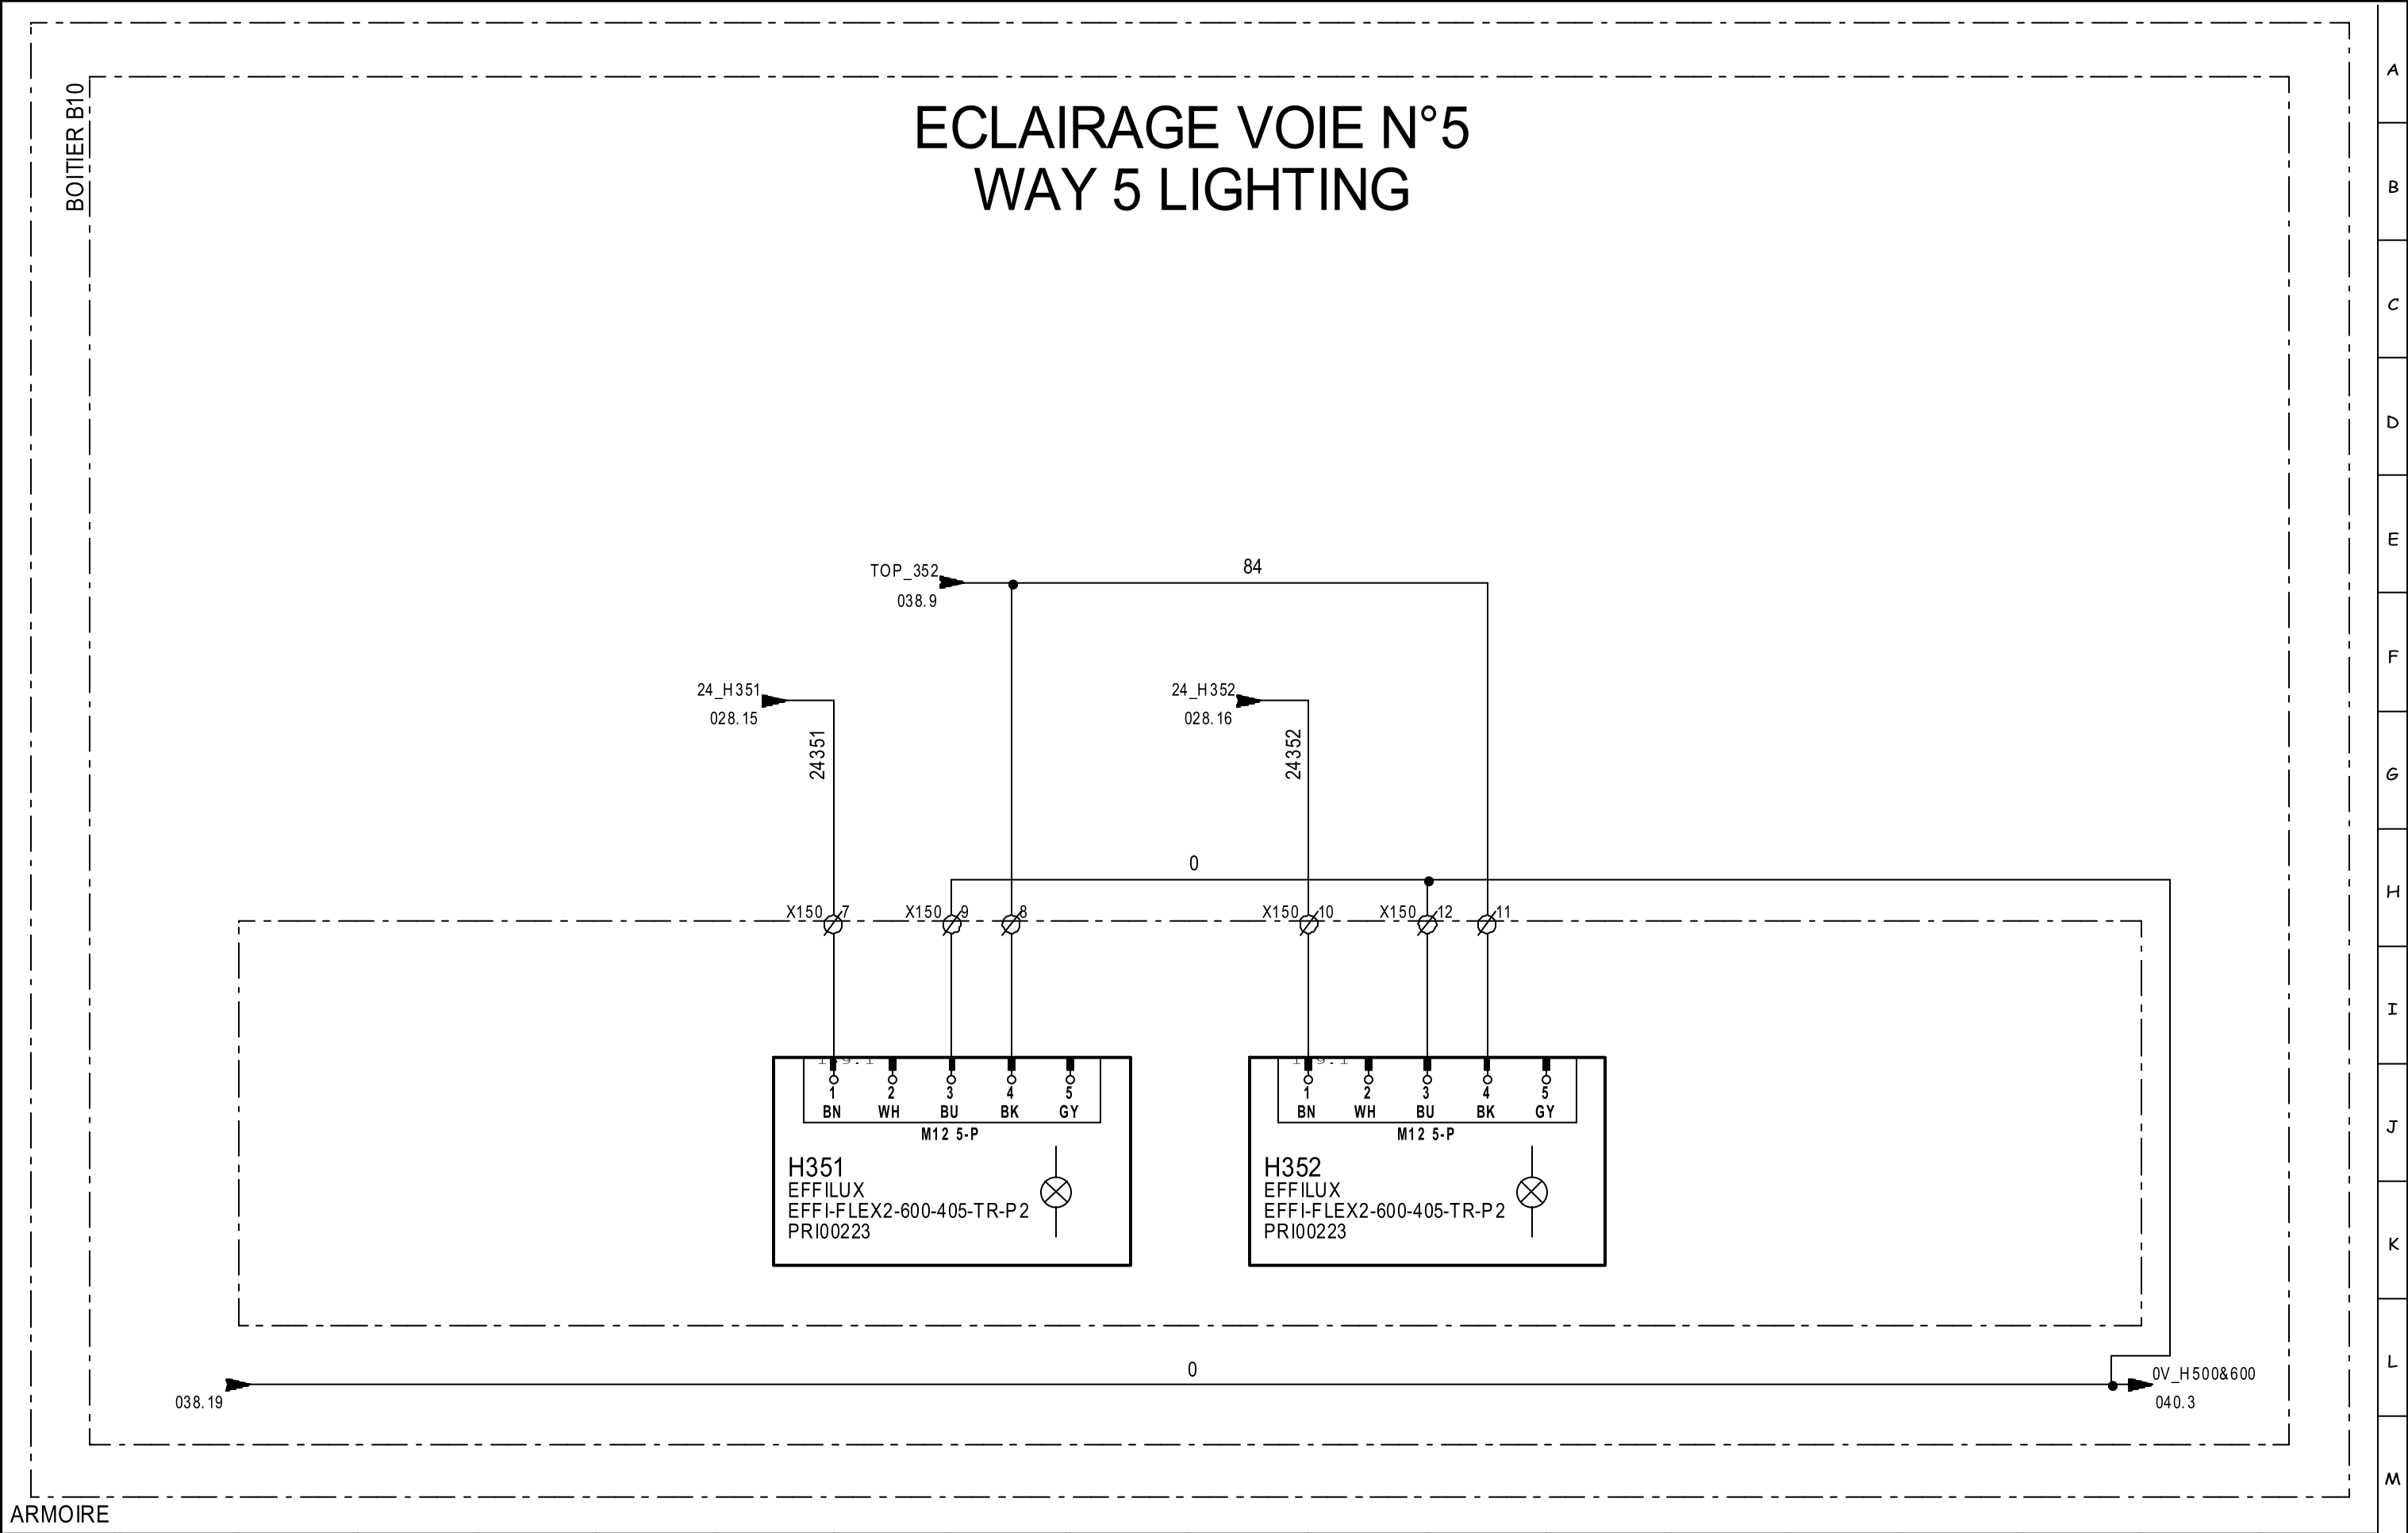


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		IMPLANTATION ECLAIRAGE VOIE 5				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		WAY 5 LIGHTING LAY OUT								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 039/163			

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

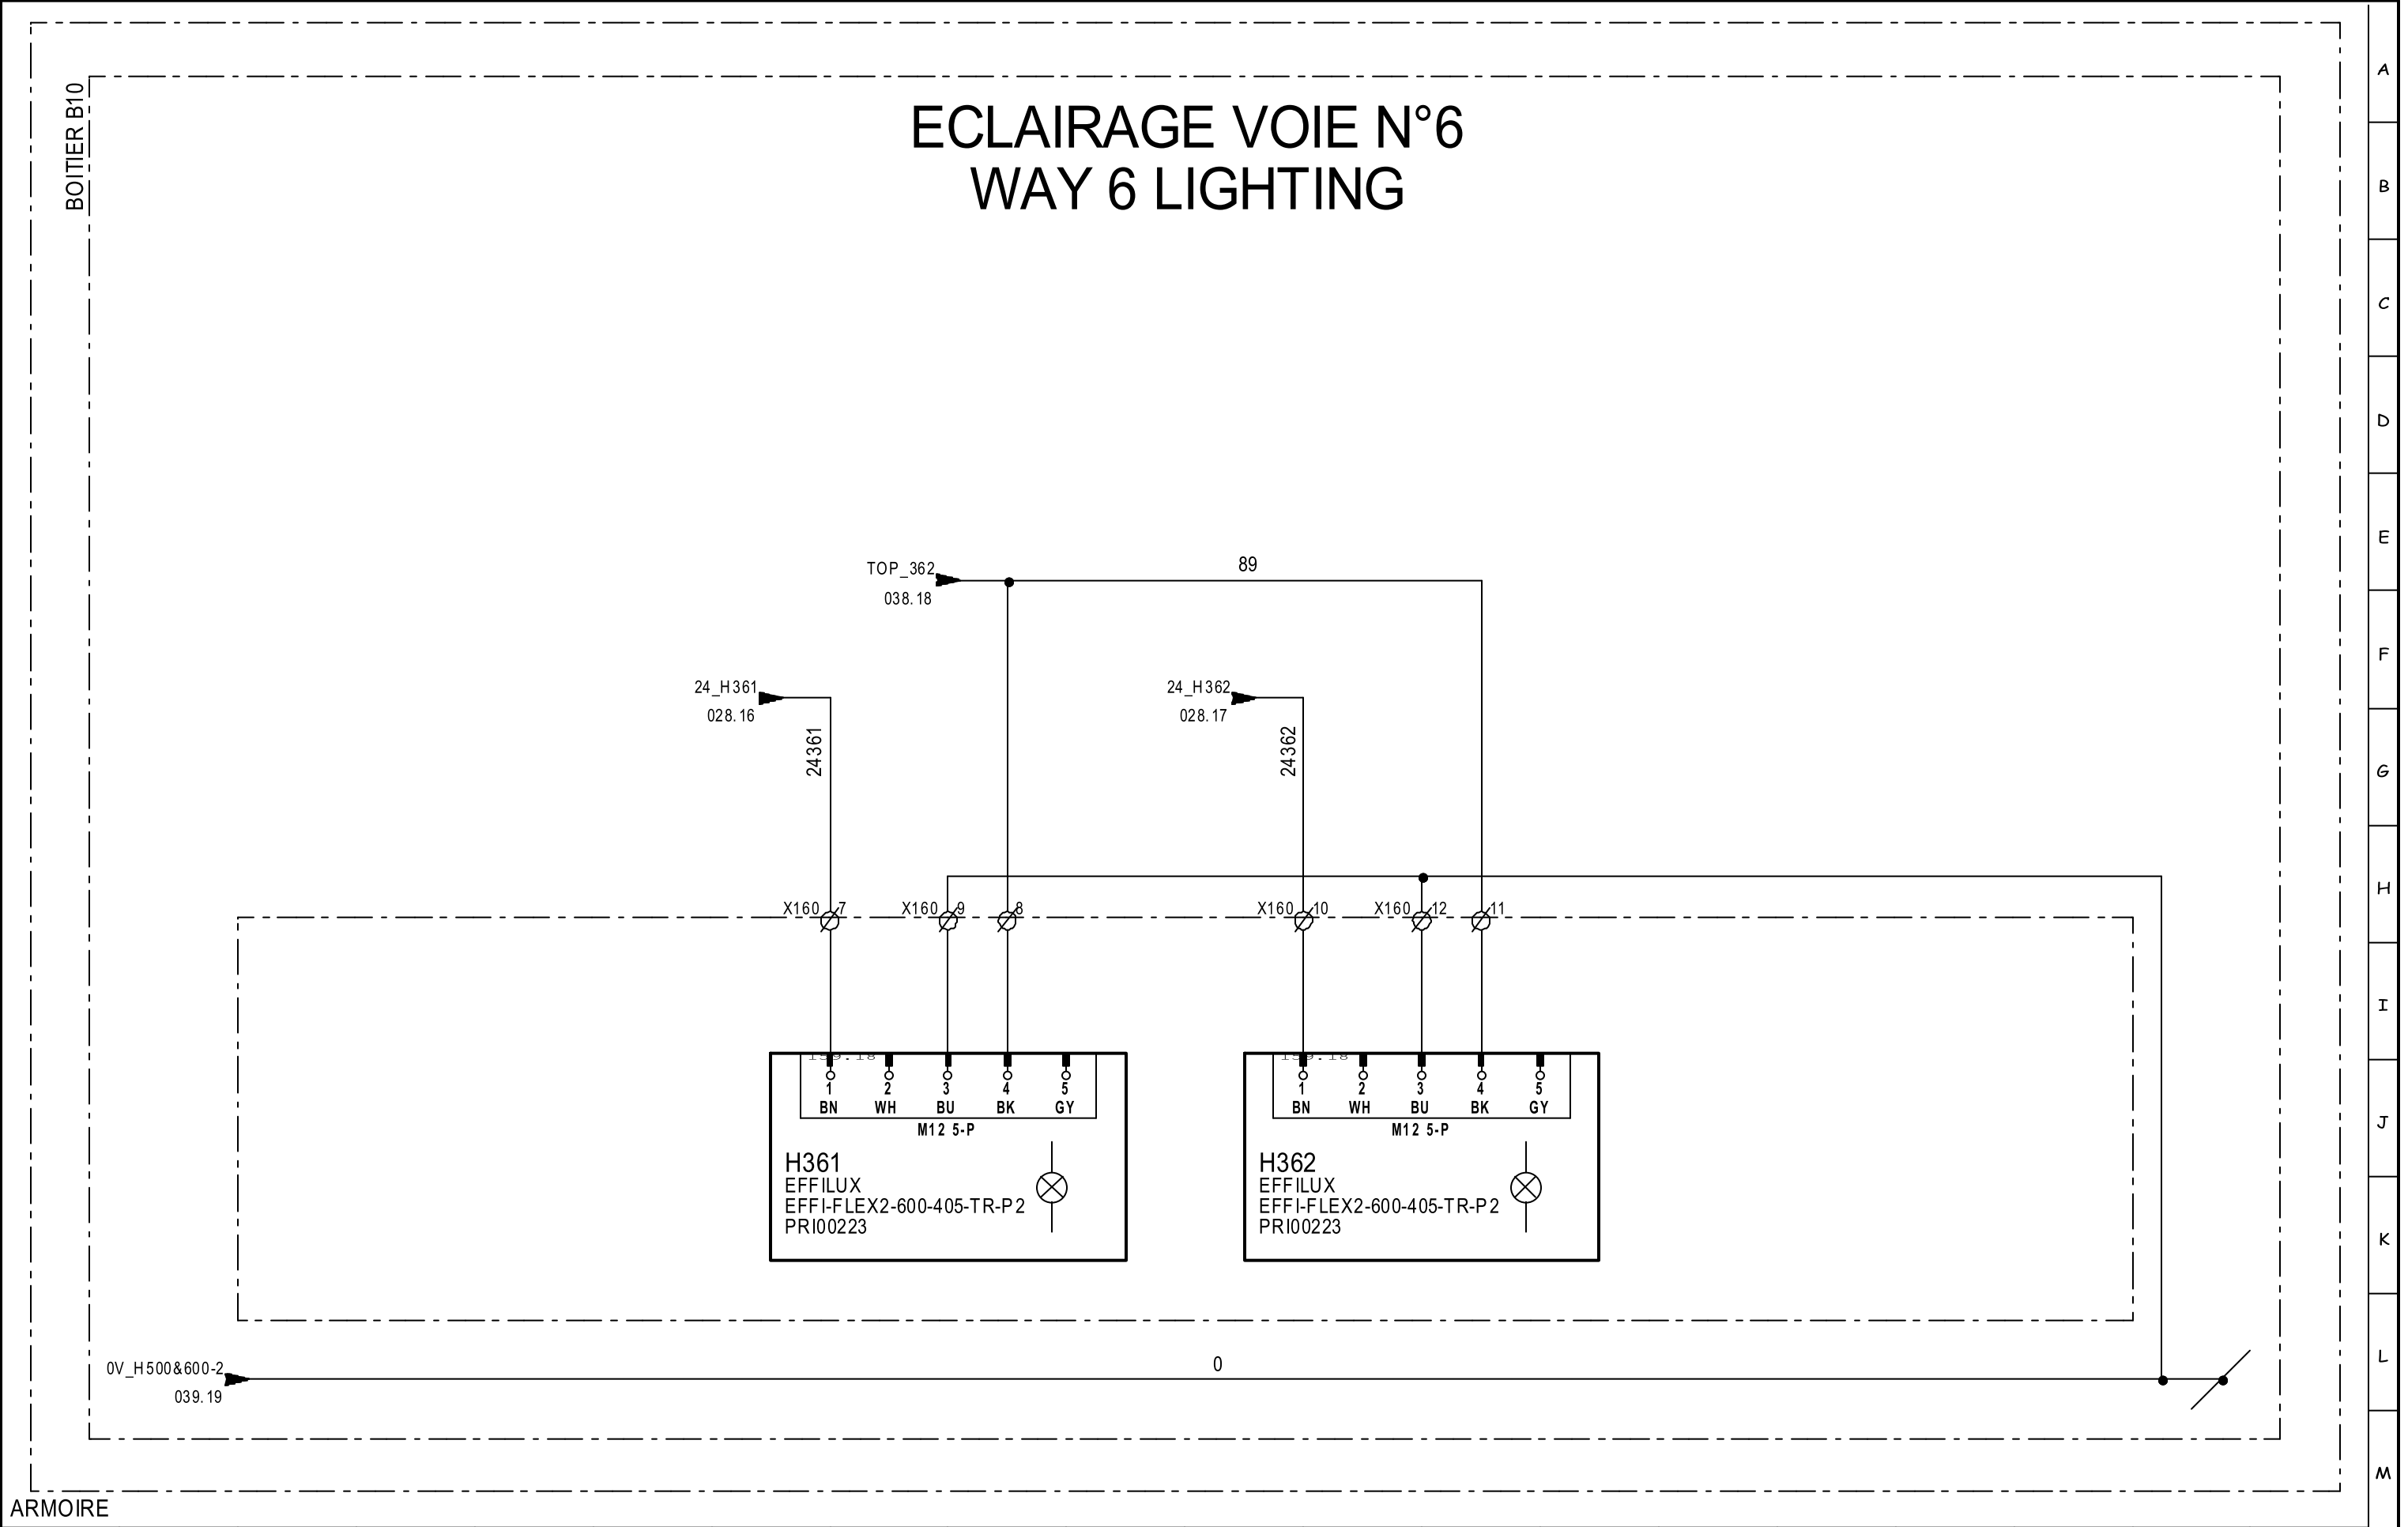


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

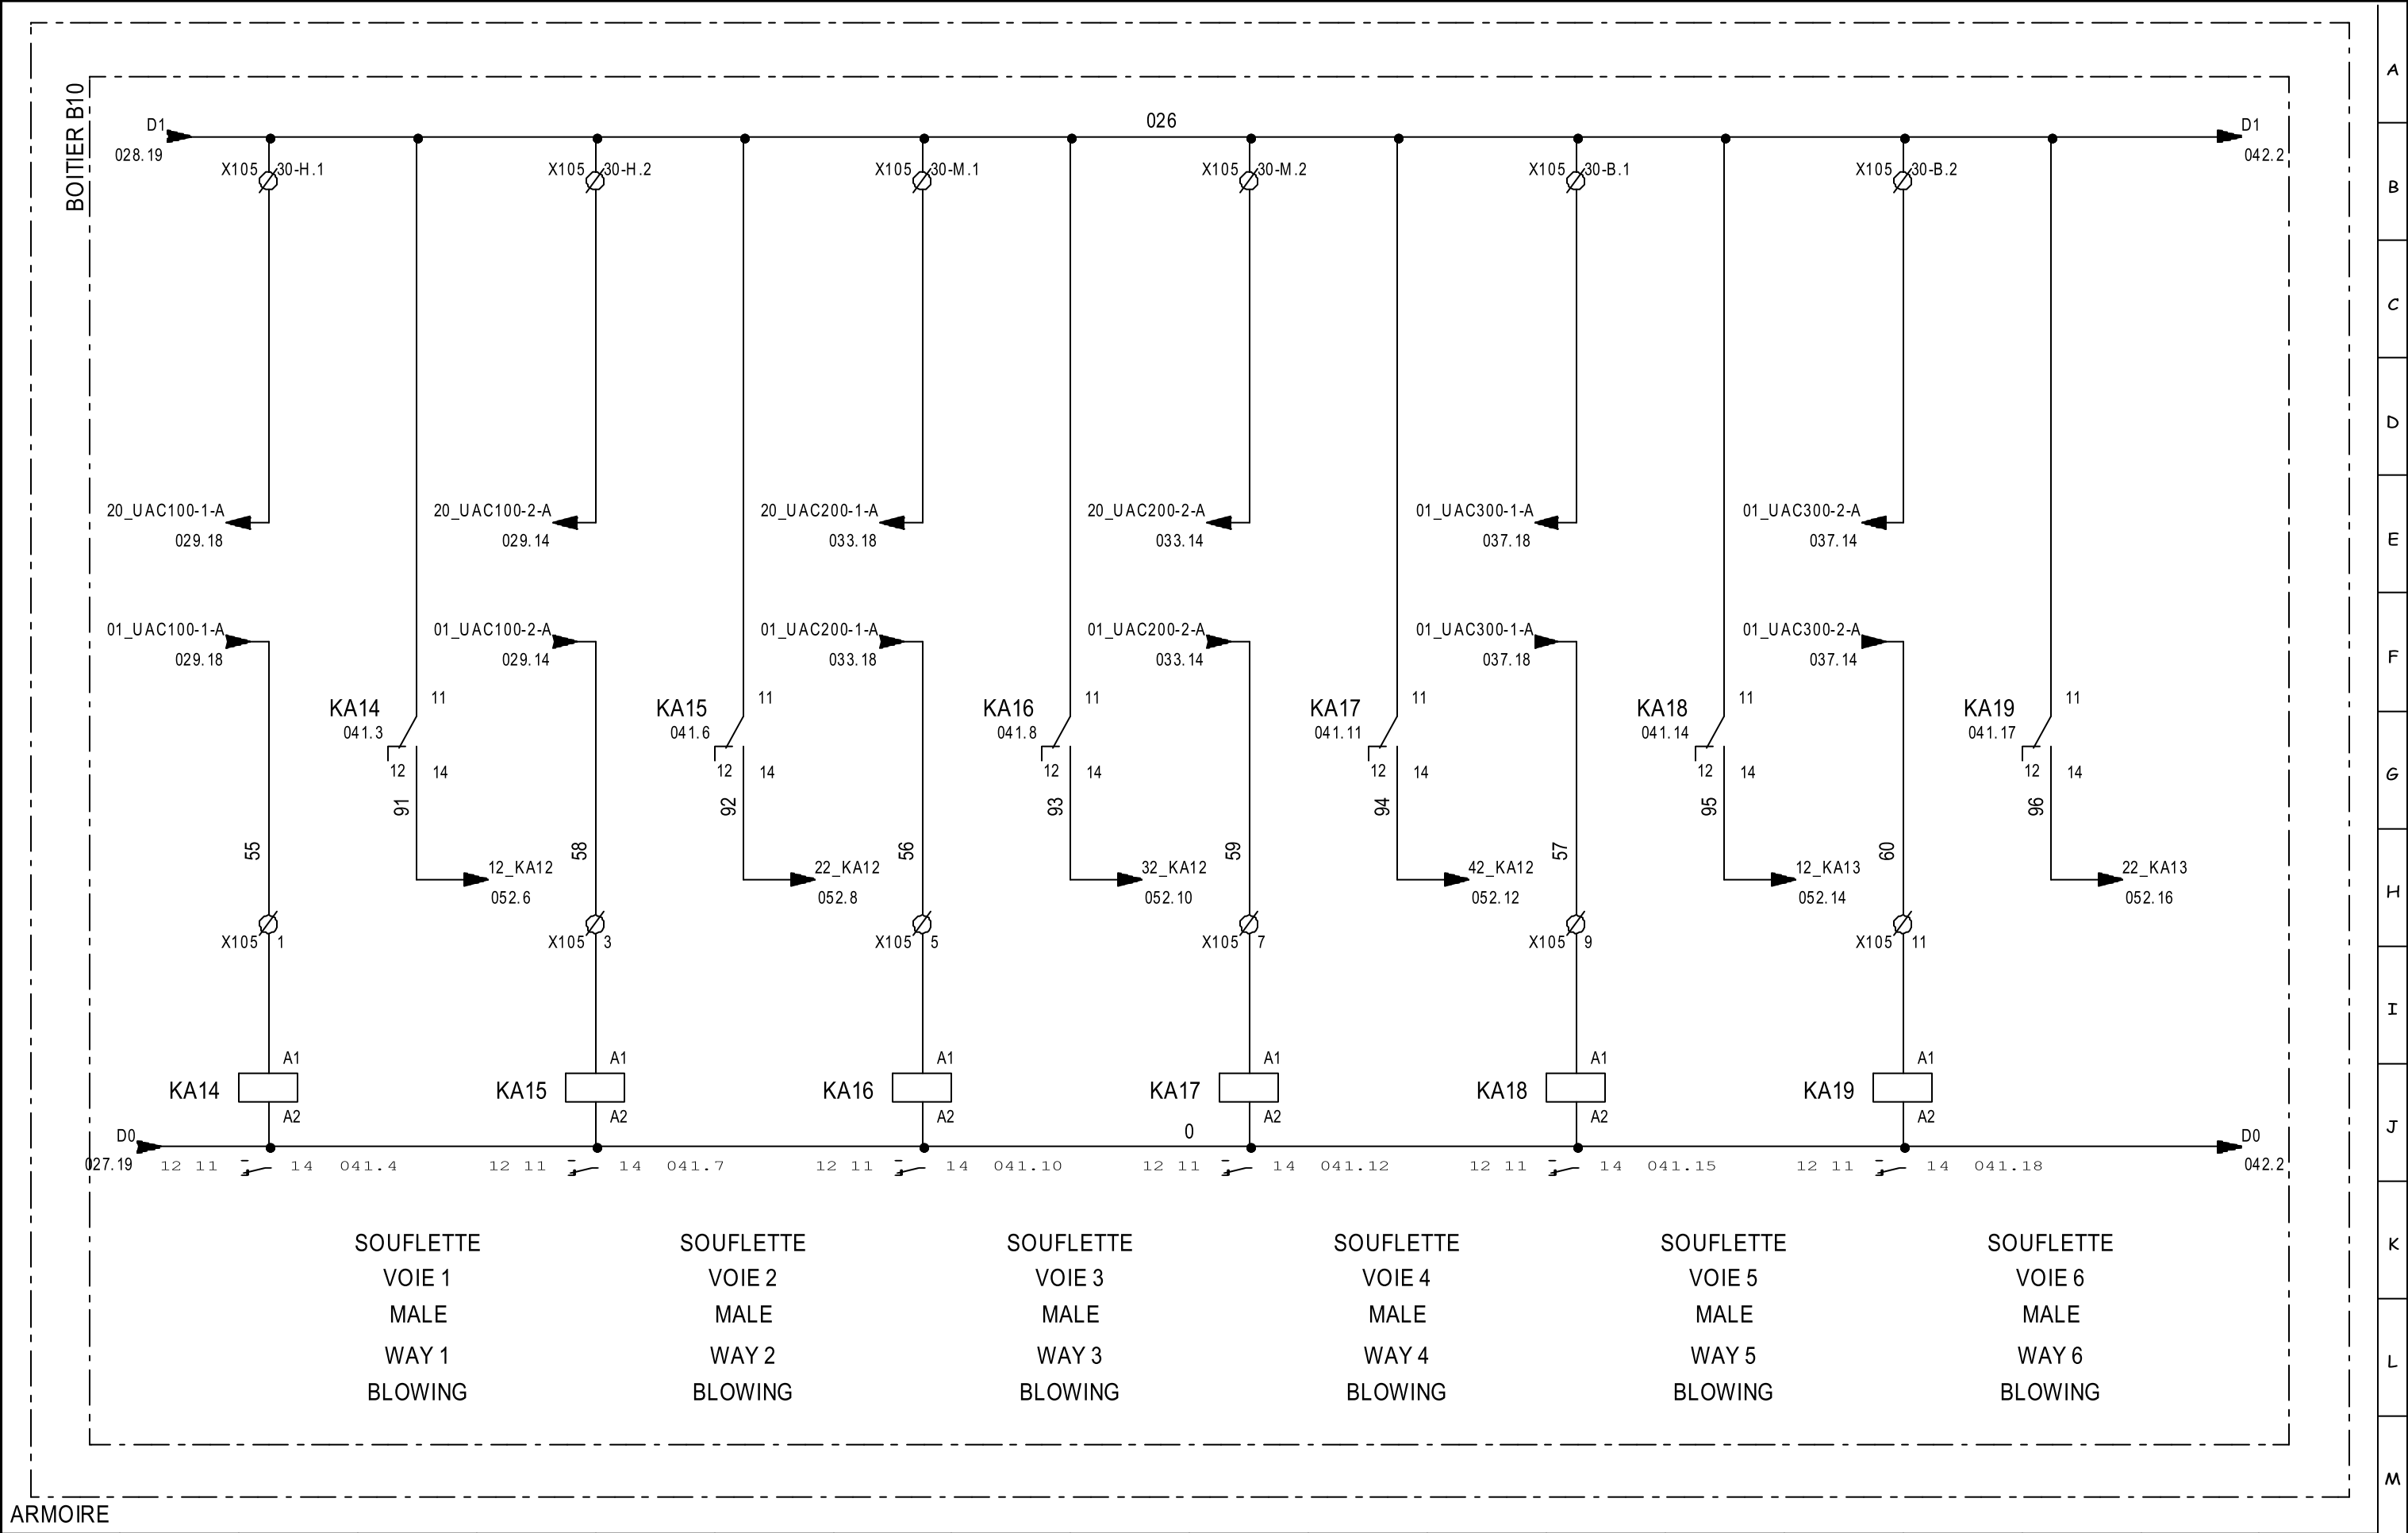

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20			
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél :(33).2.98.85.31.36		Date of creation : 05/12/2023		SCHEMA COMMANDE UAC				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL			
			Fax :(33).2.98.85.31.38		Designed by : DB										ARTICLE :		INDEX : V12					
			E-mail :ecatid.service@ceva.com		ENVIRONNEMENT:Version 4.49.F - 23/09/2020				SMXA-C014221						FOLIO : 041/163							


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

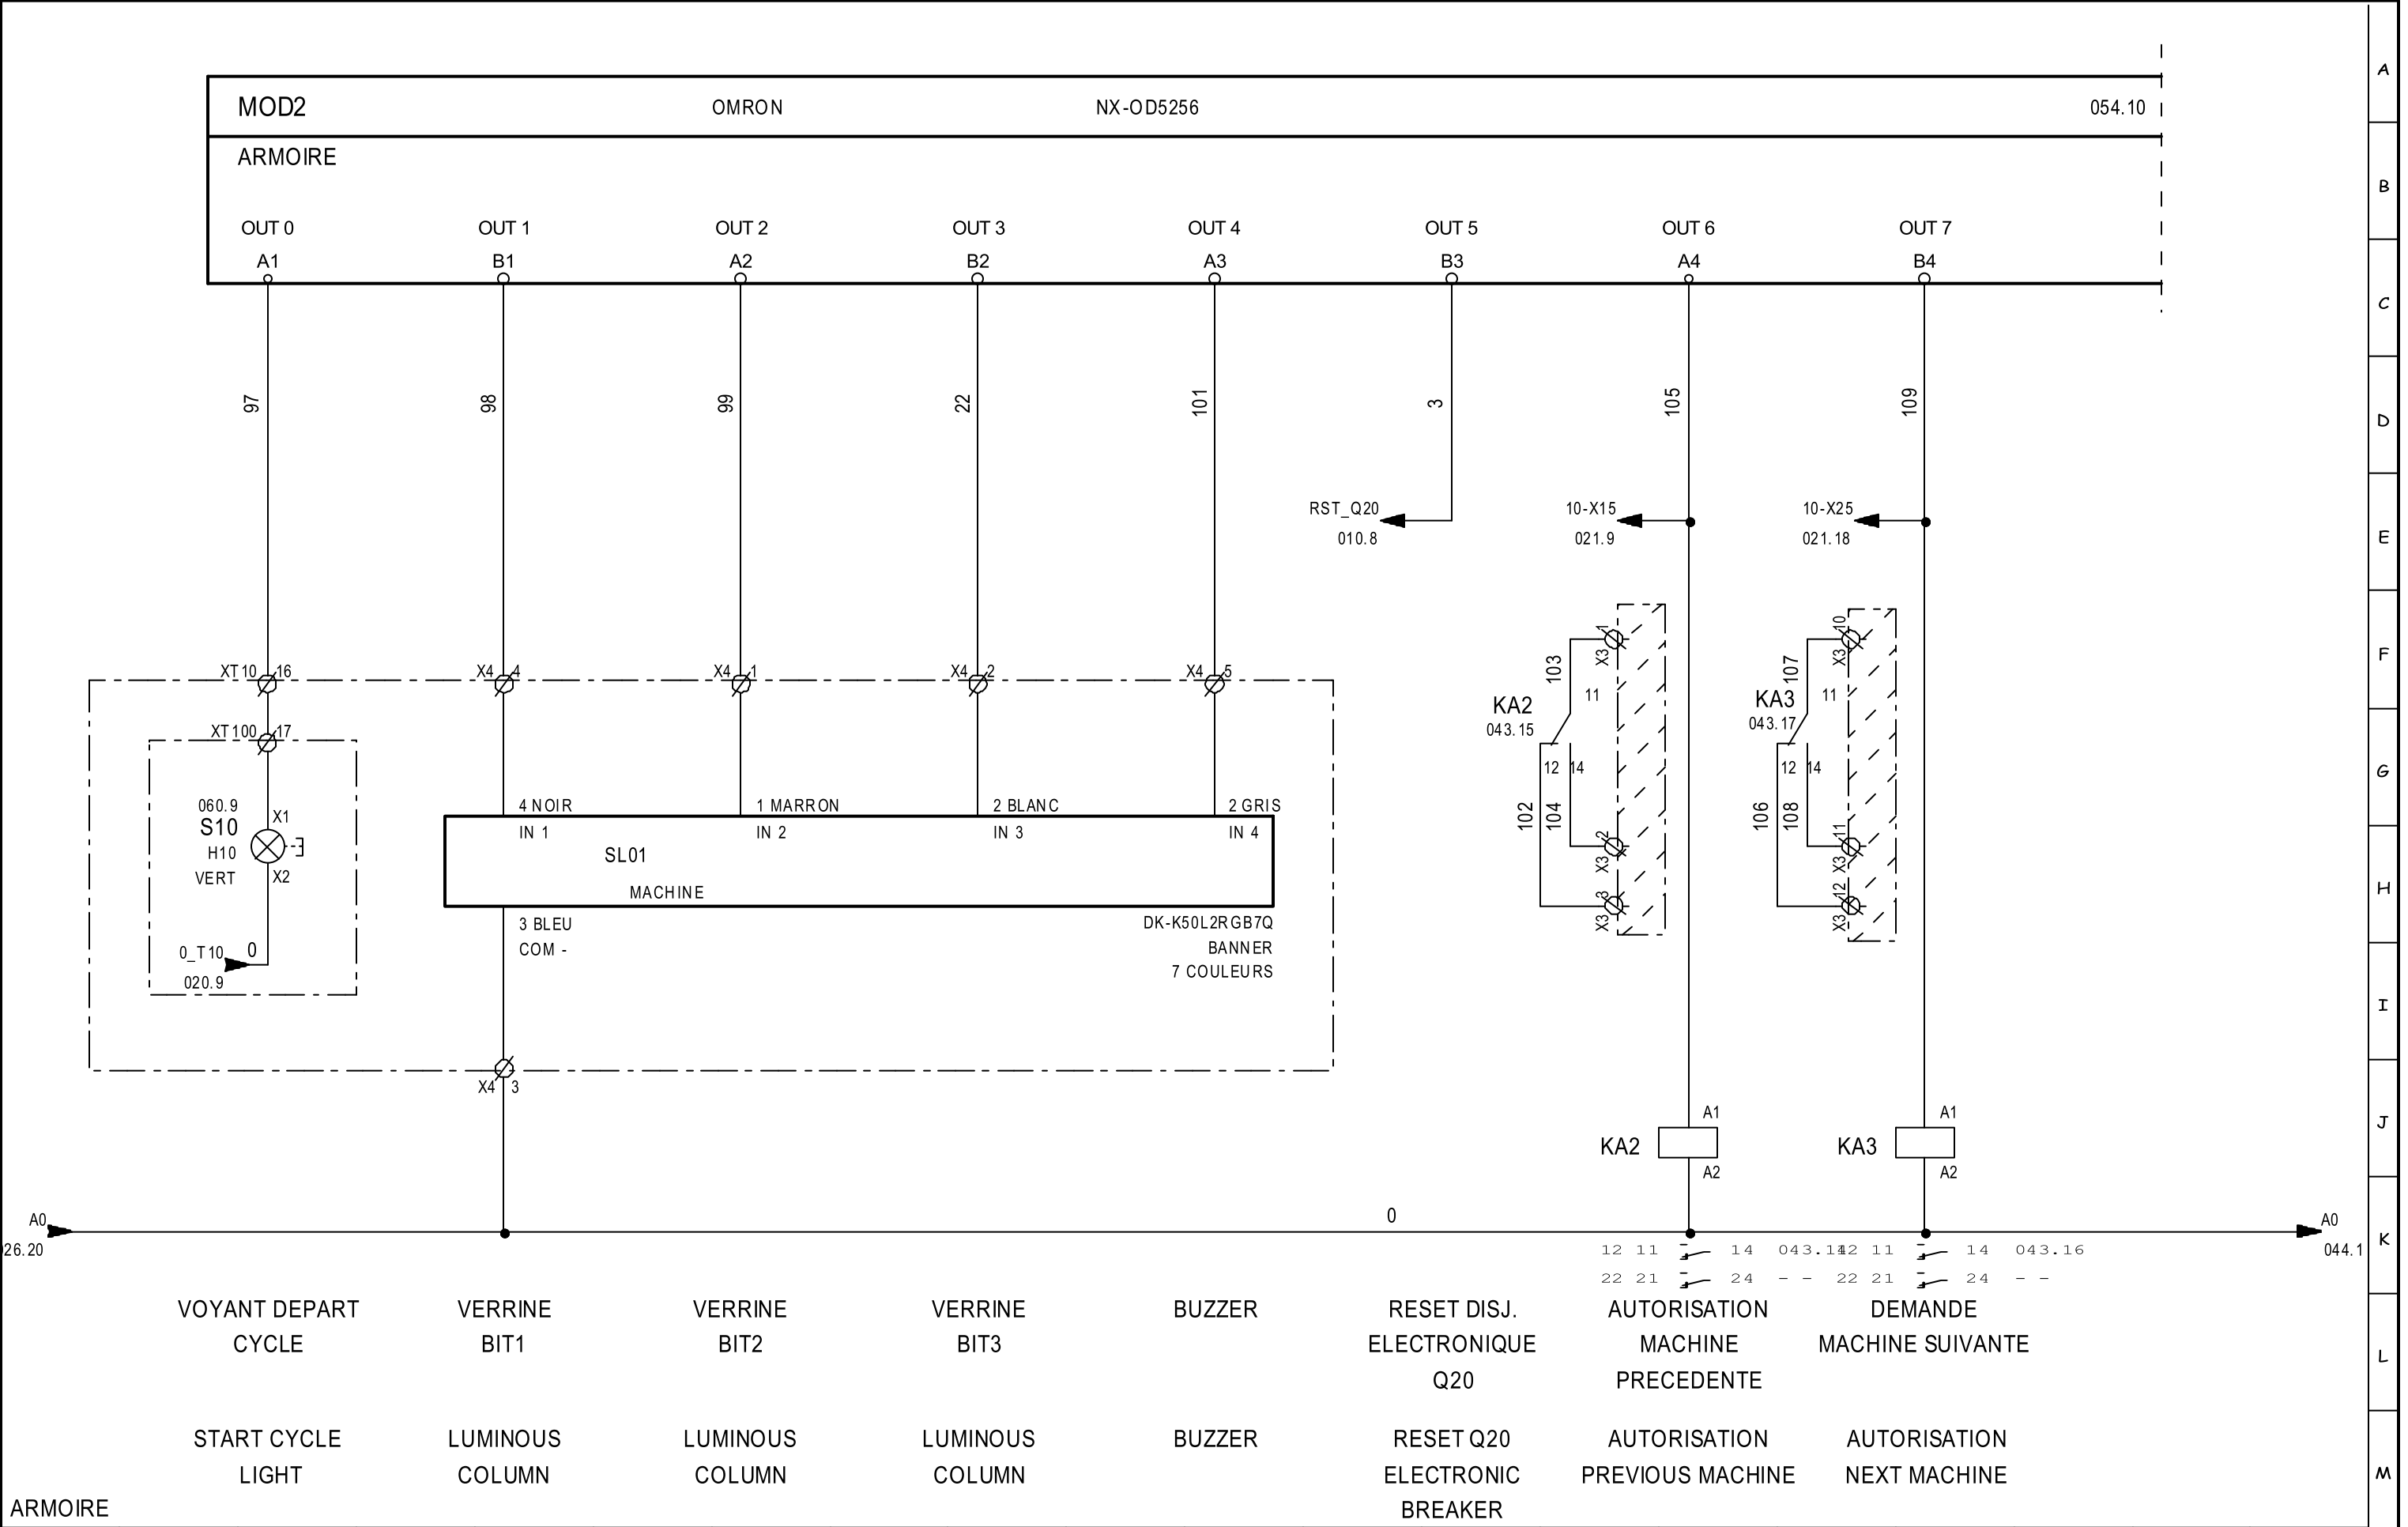

ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SORTIES MOD2				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		OUTPUTS MOD2								ARTICLE :		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 043/163			

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

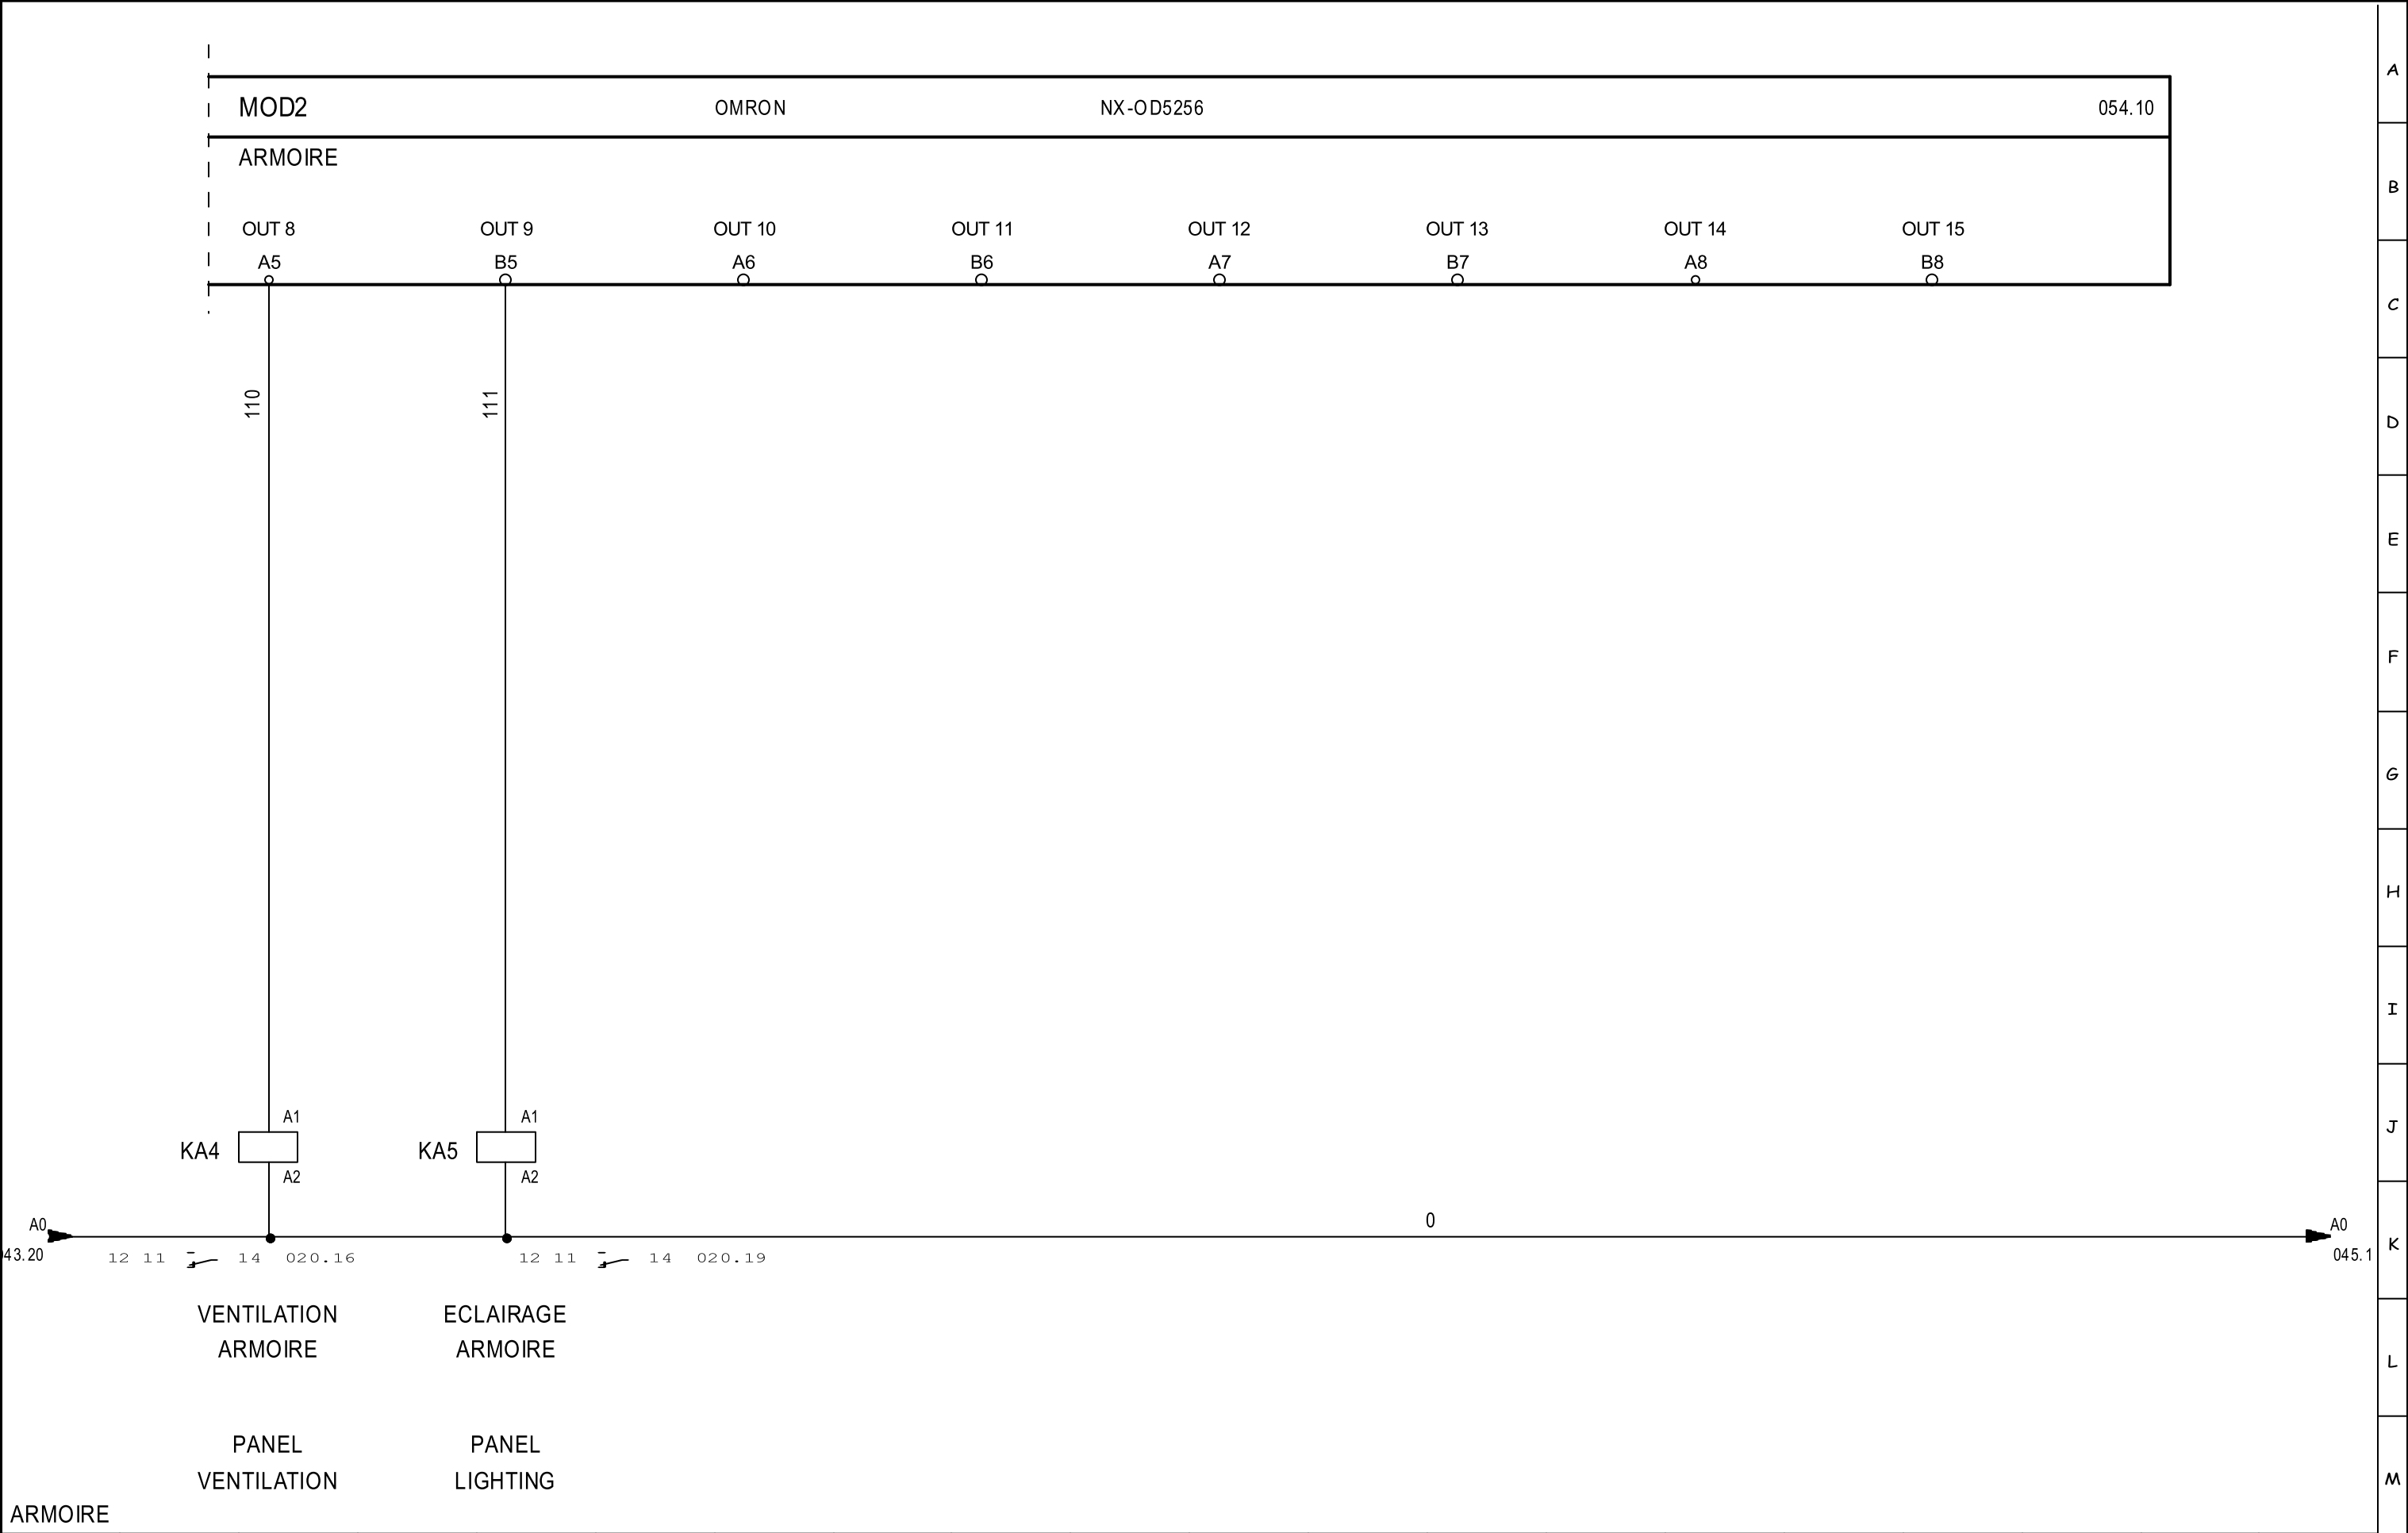

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SORTIES MOD2				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		OUTPUTS MOD2								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail : ecatid.service@ceva.com		ENVIRONNEMENT : Version 4.49.F - 23/09/2020				SMXA-C014221						FOLIO : 044/163					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

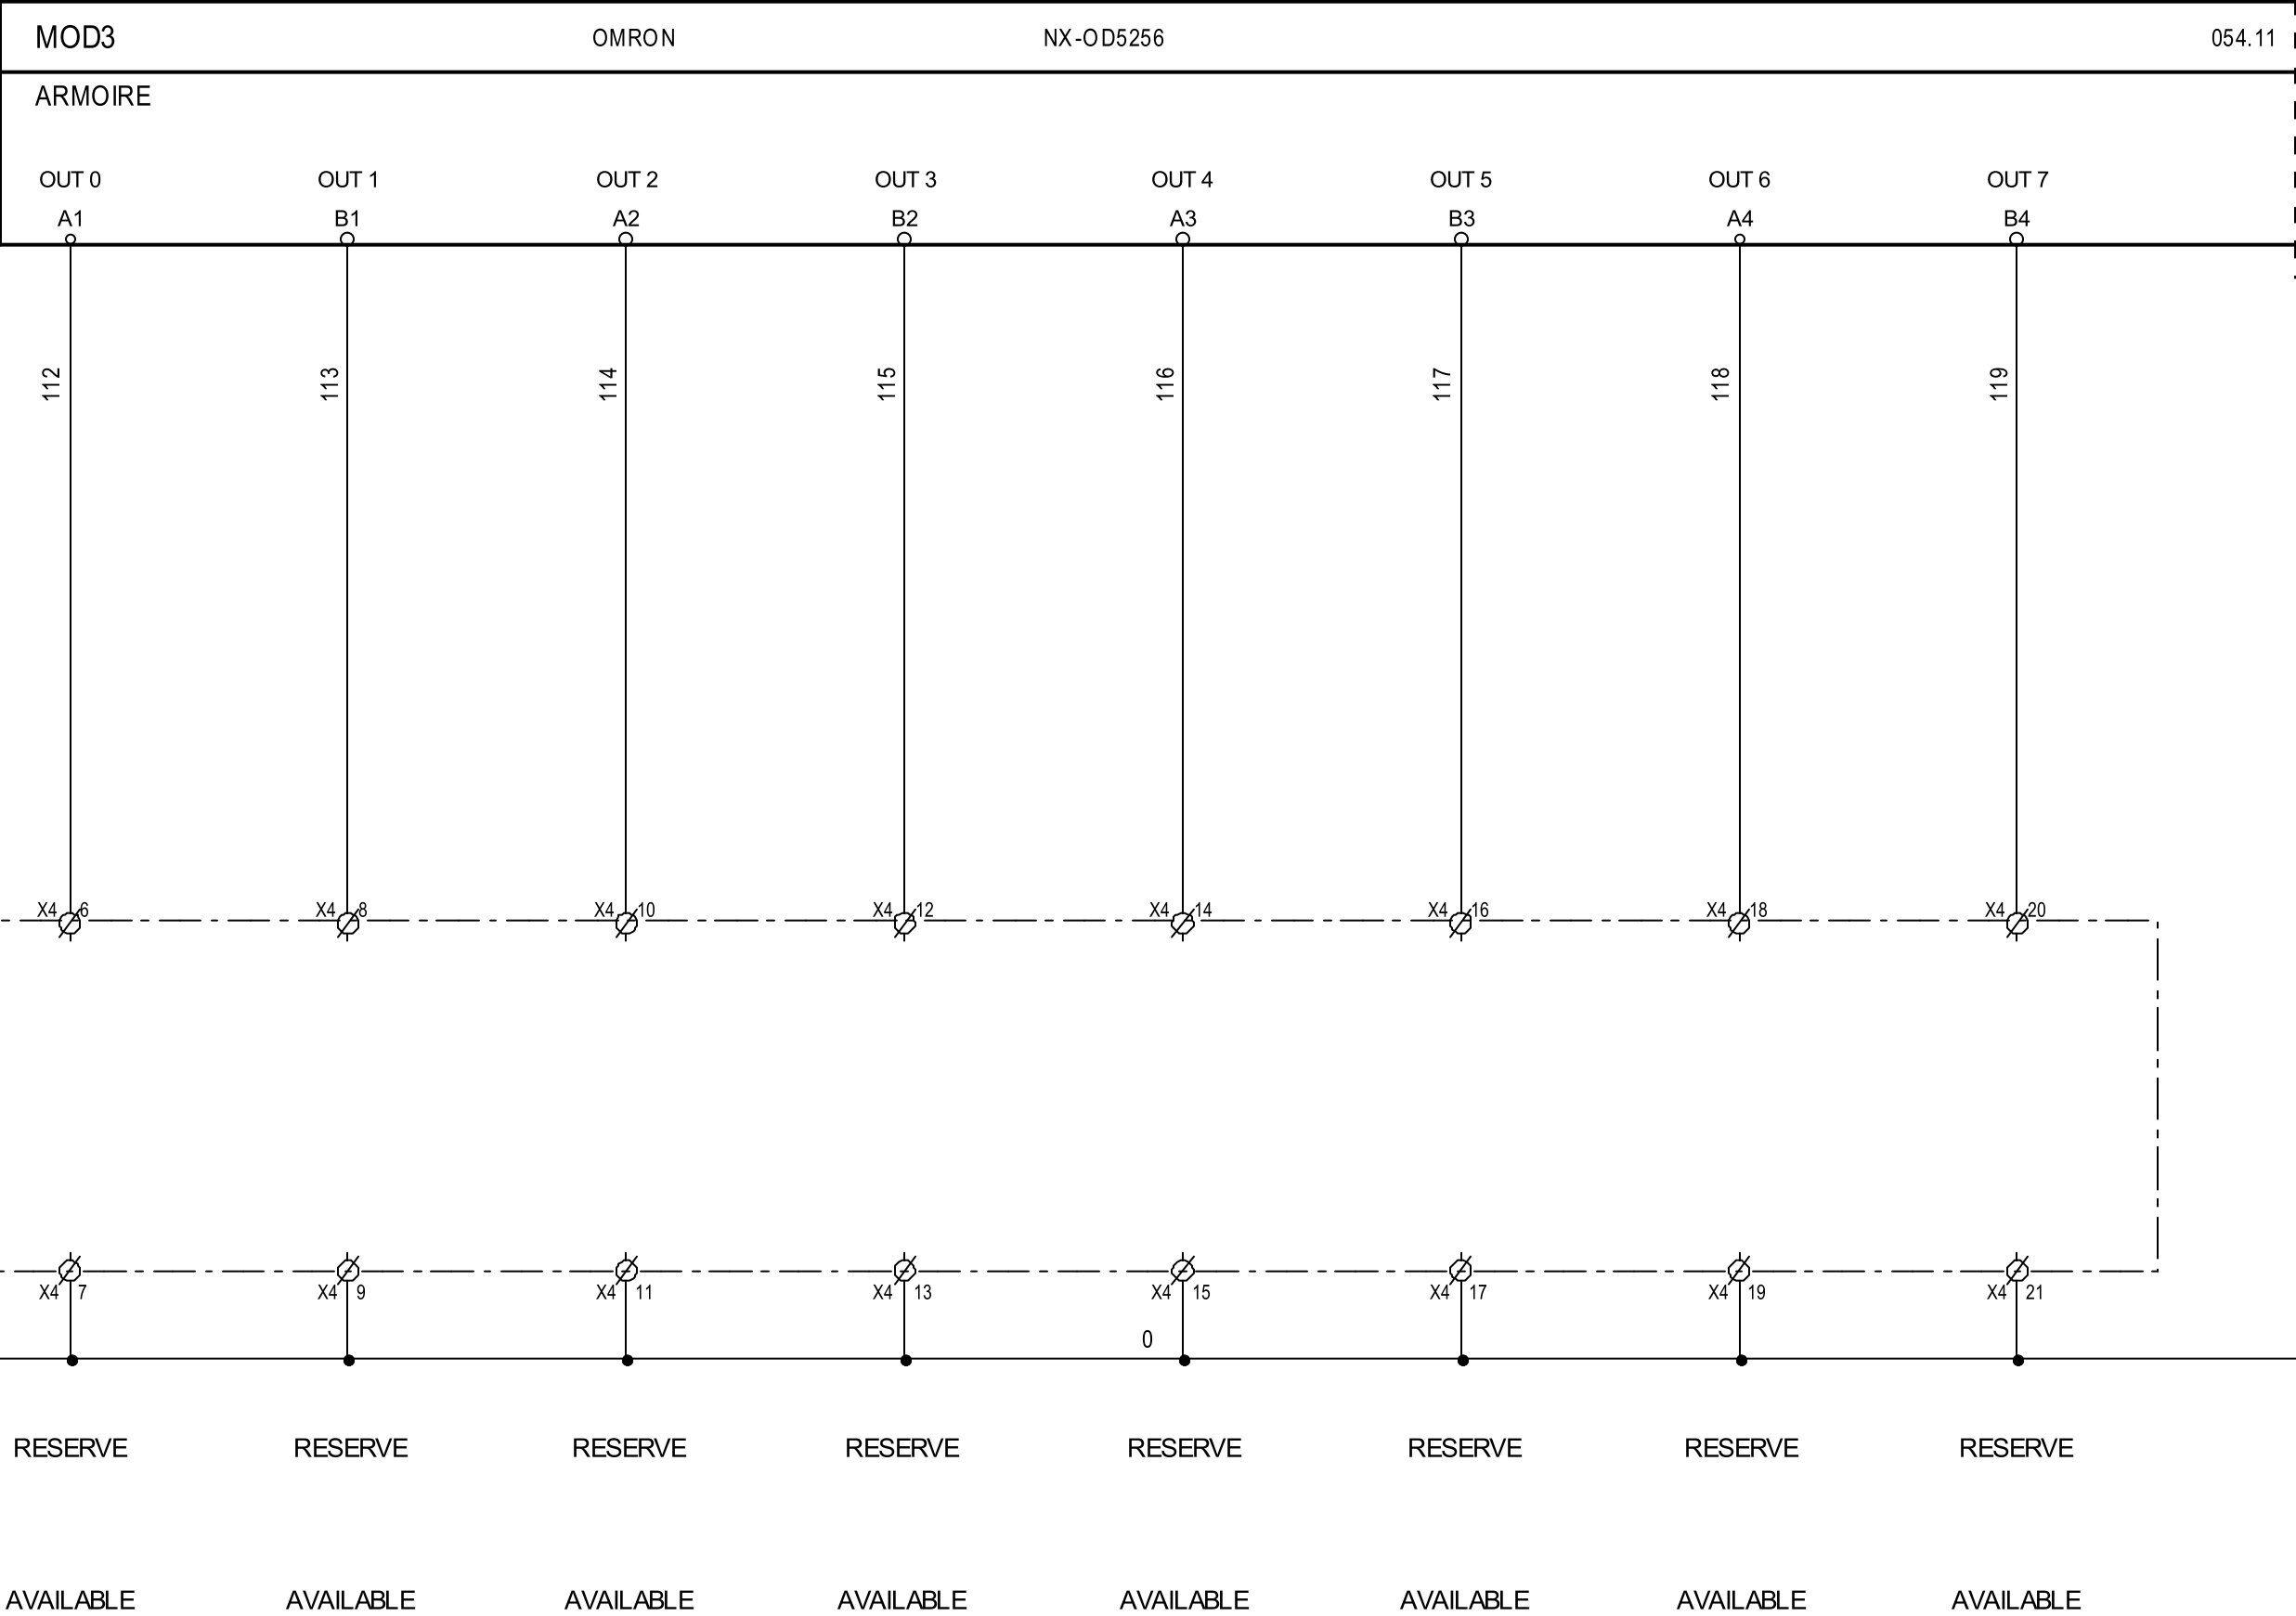


ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SORTIES MOD3				 Ecat-iD Campus			CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		OUTPUTS MOD3							ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail : ecatid.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020									FOLIO : 045/163			


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

MOD3		OMRON		NX-OD5256		054.11	
ARMOIRE							
OUT 8	OUT 9	OUT 10	OUT 11	OUT 12	OUT 13	OUT 14	OUT 15
A5	B5	A6	B6	A7	B7	A8	B8

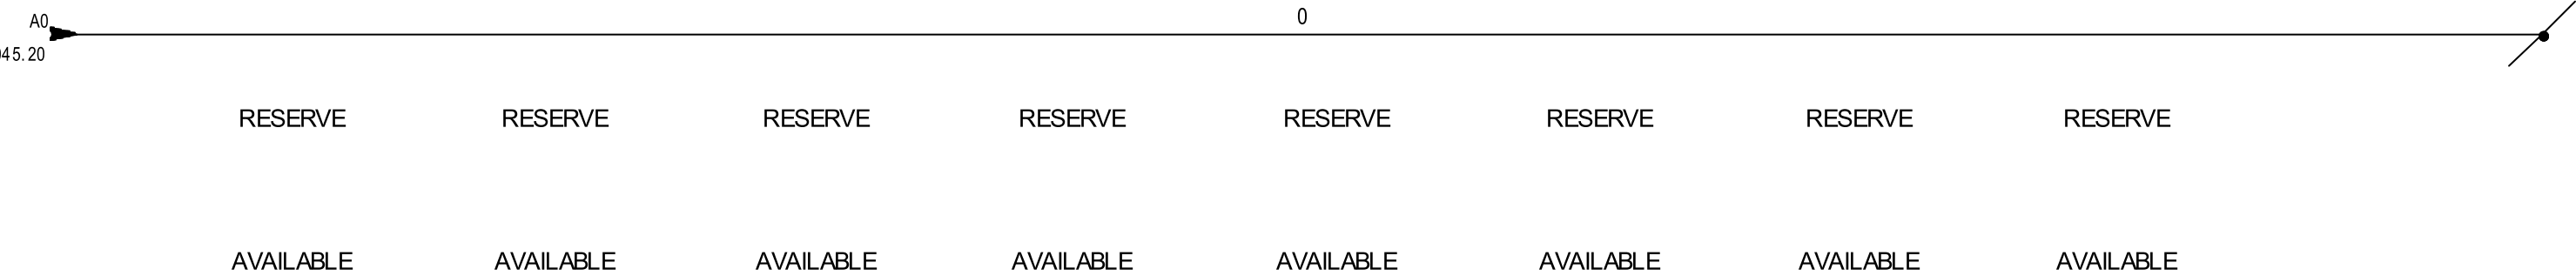


ARMOIRE																				
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SORTIES MOD3				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		OUTPUTS MOD3								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 046/163			

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

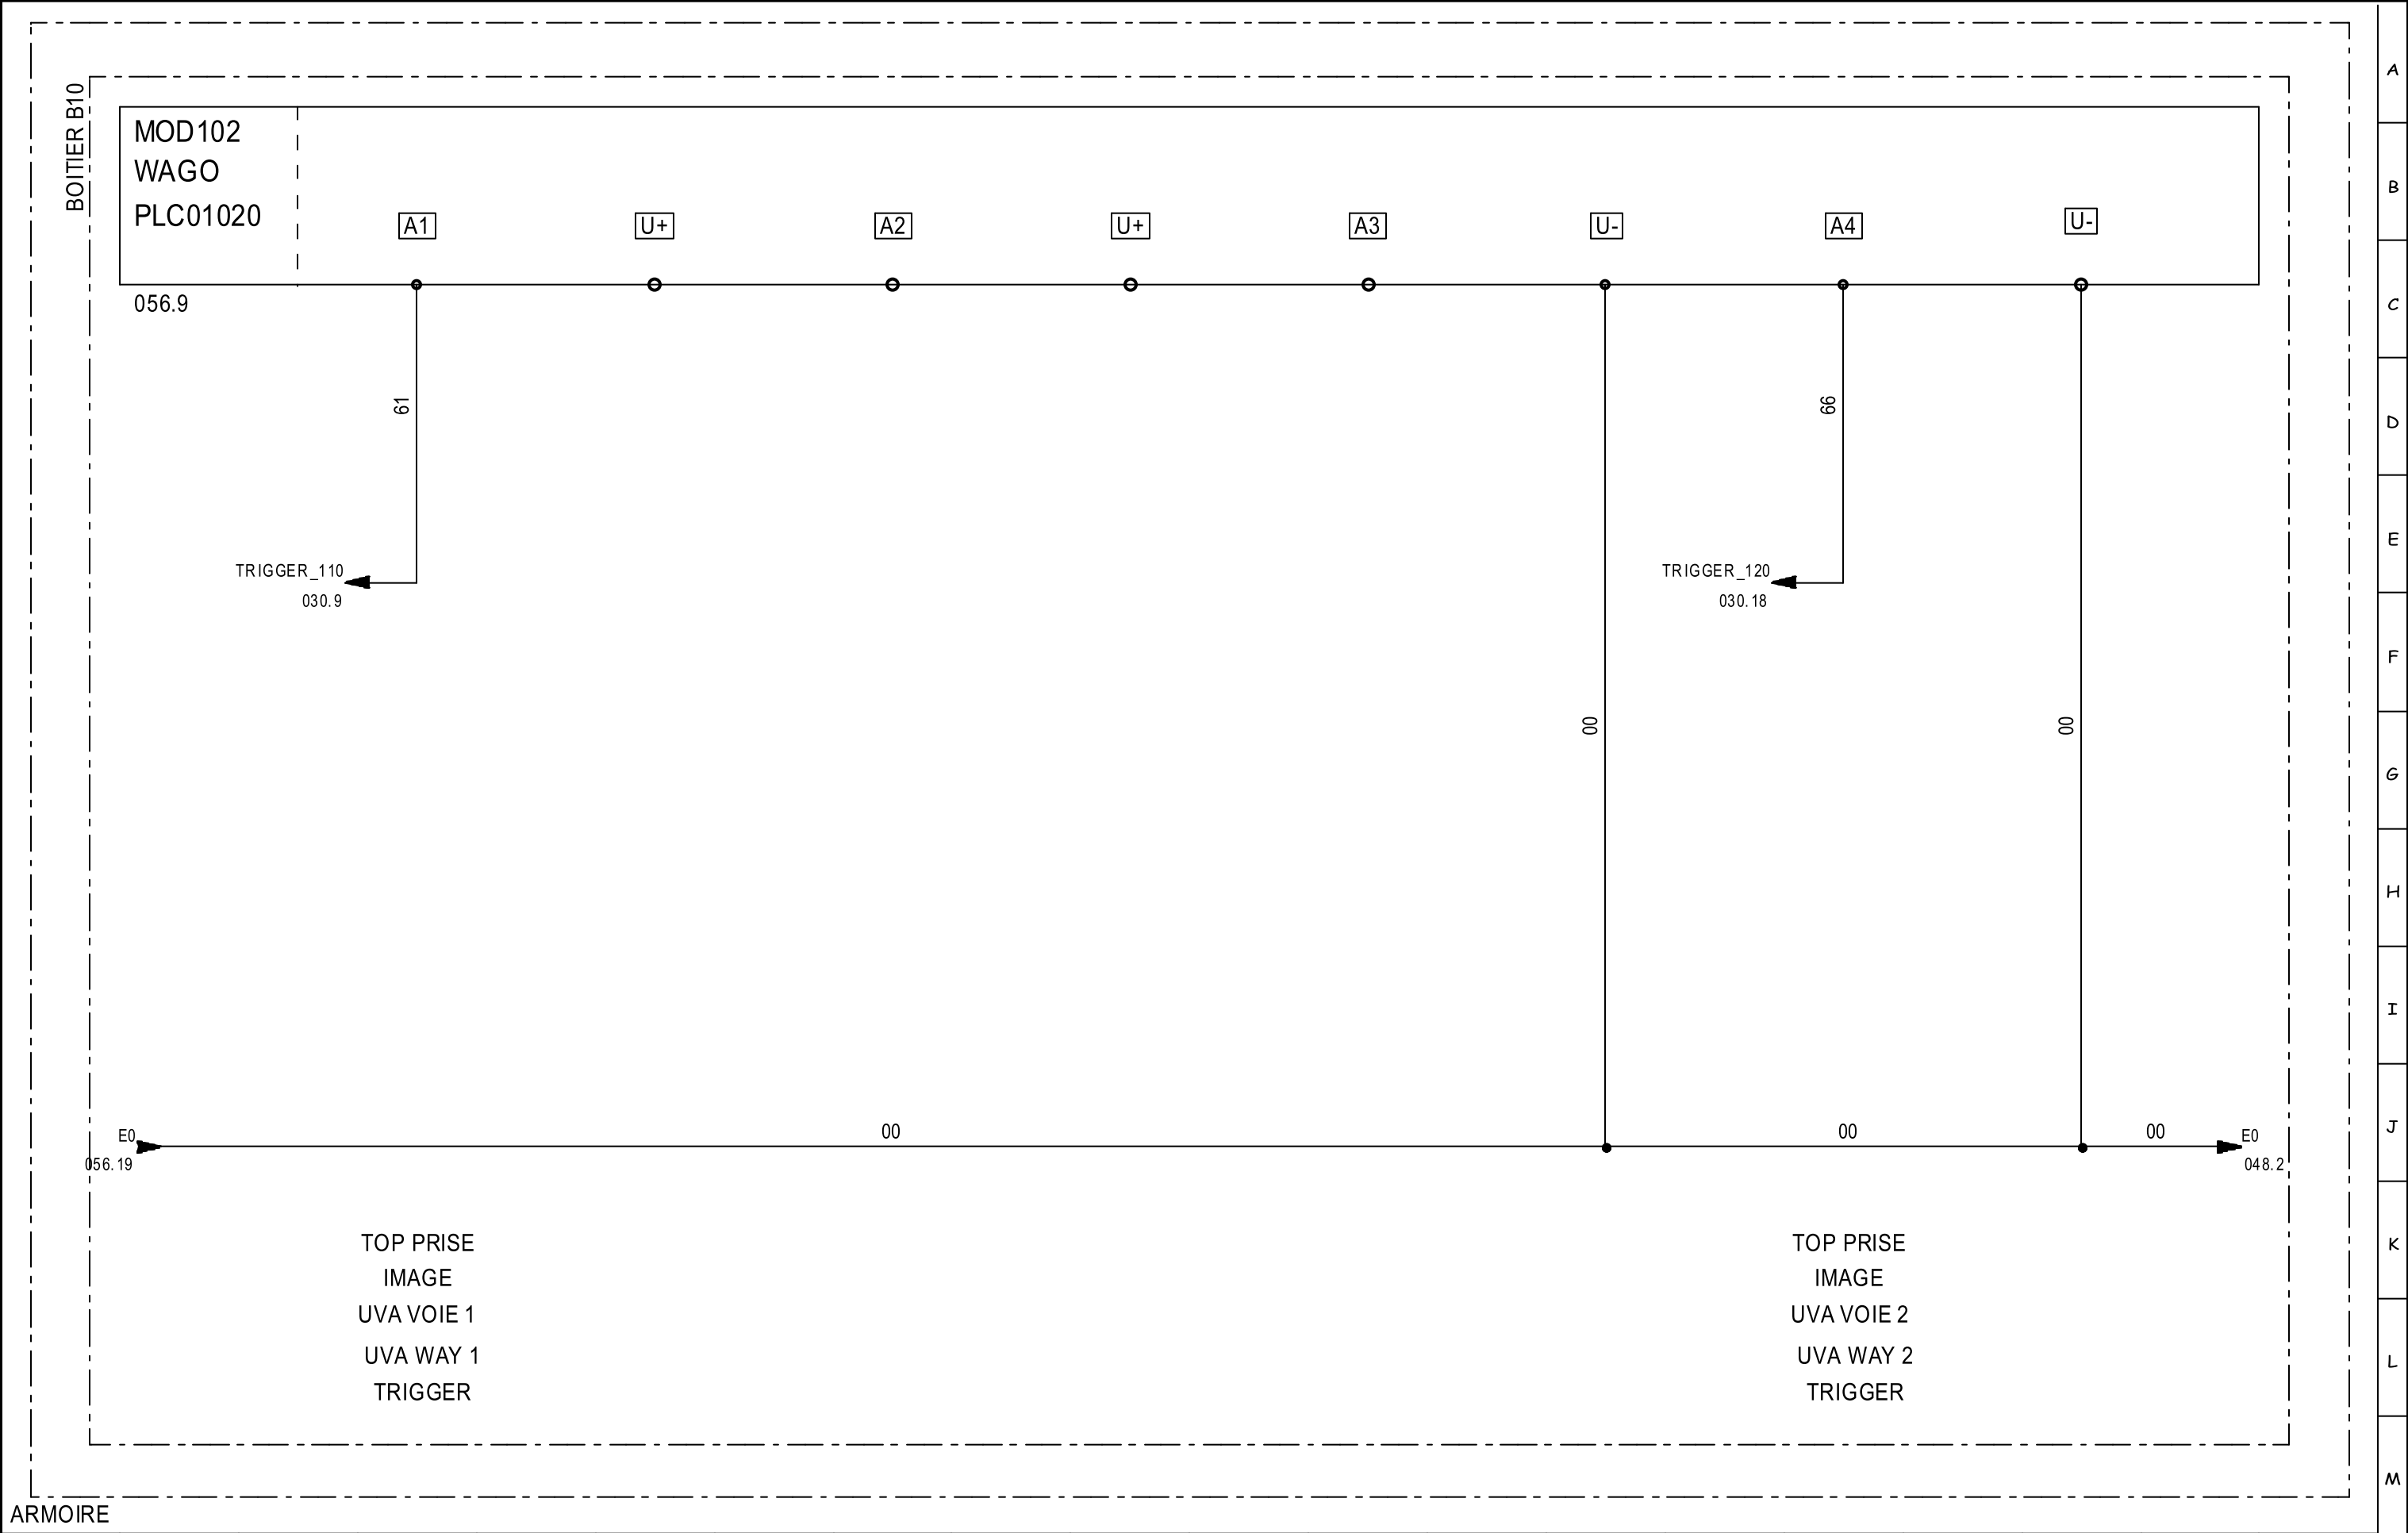

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SORTIES MOD102				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		OUTPUTS MOD102								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail : ecatid.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 047/163			


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

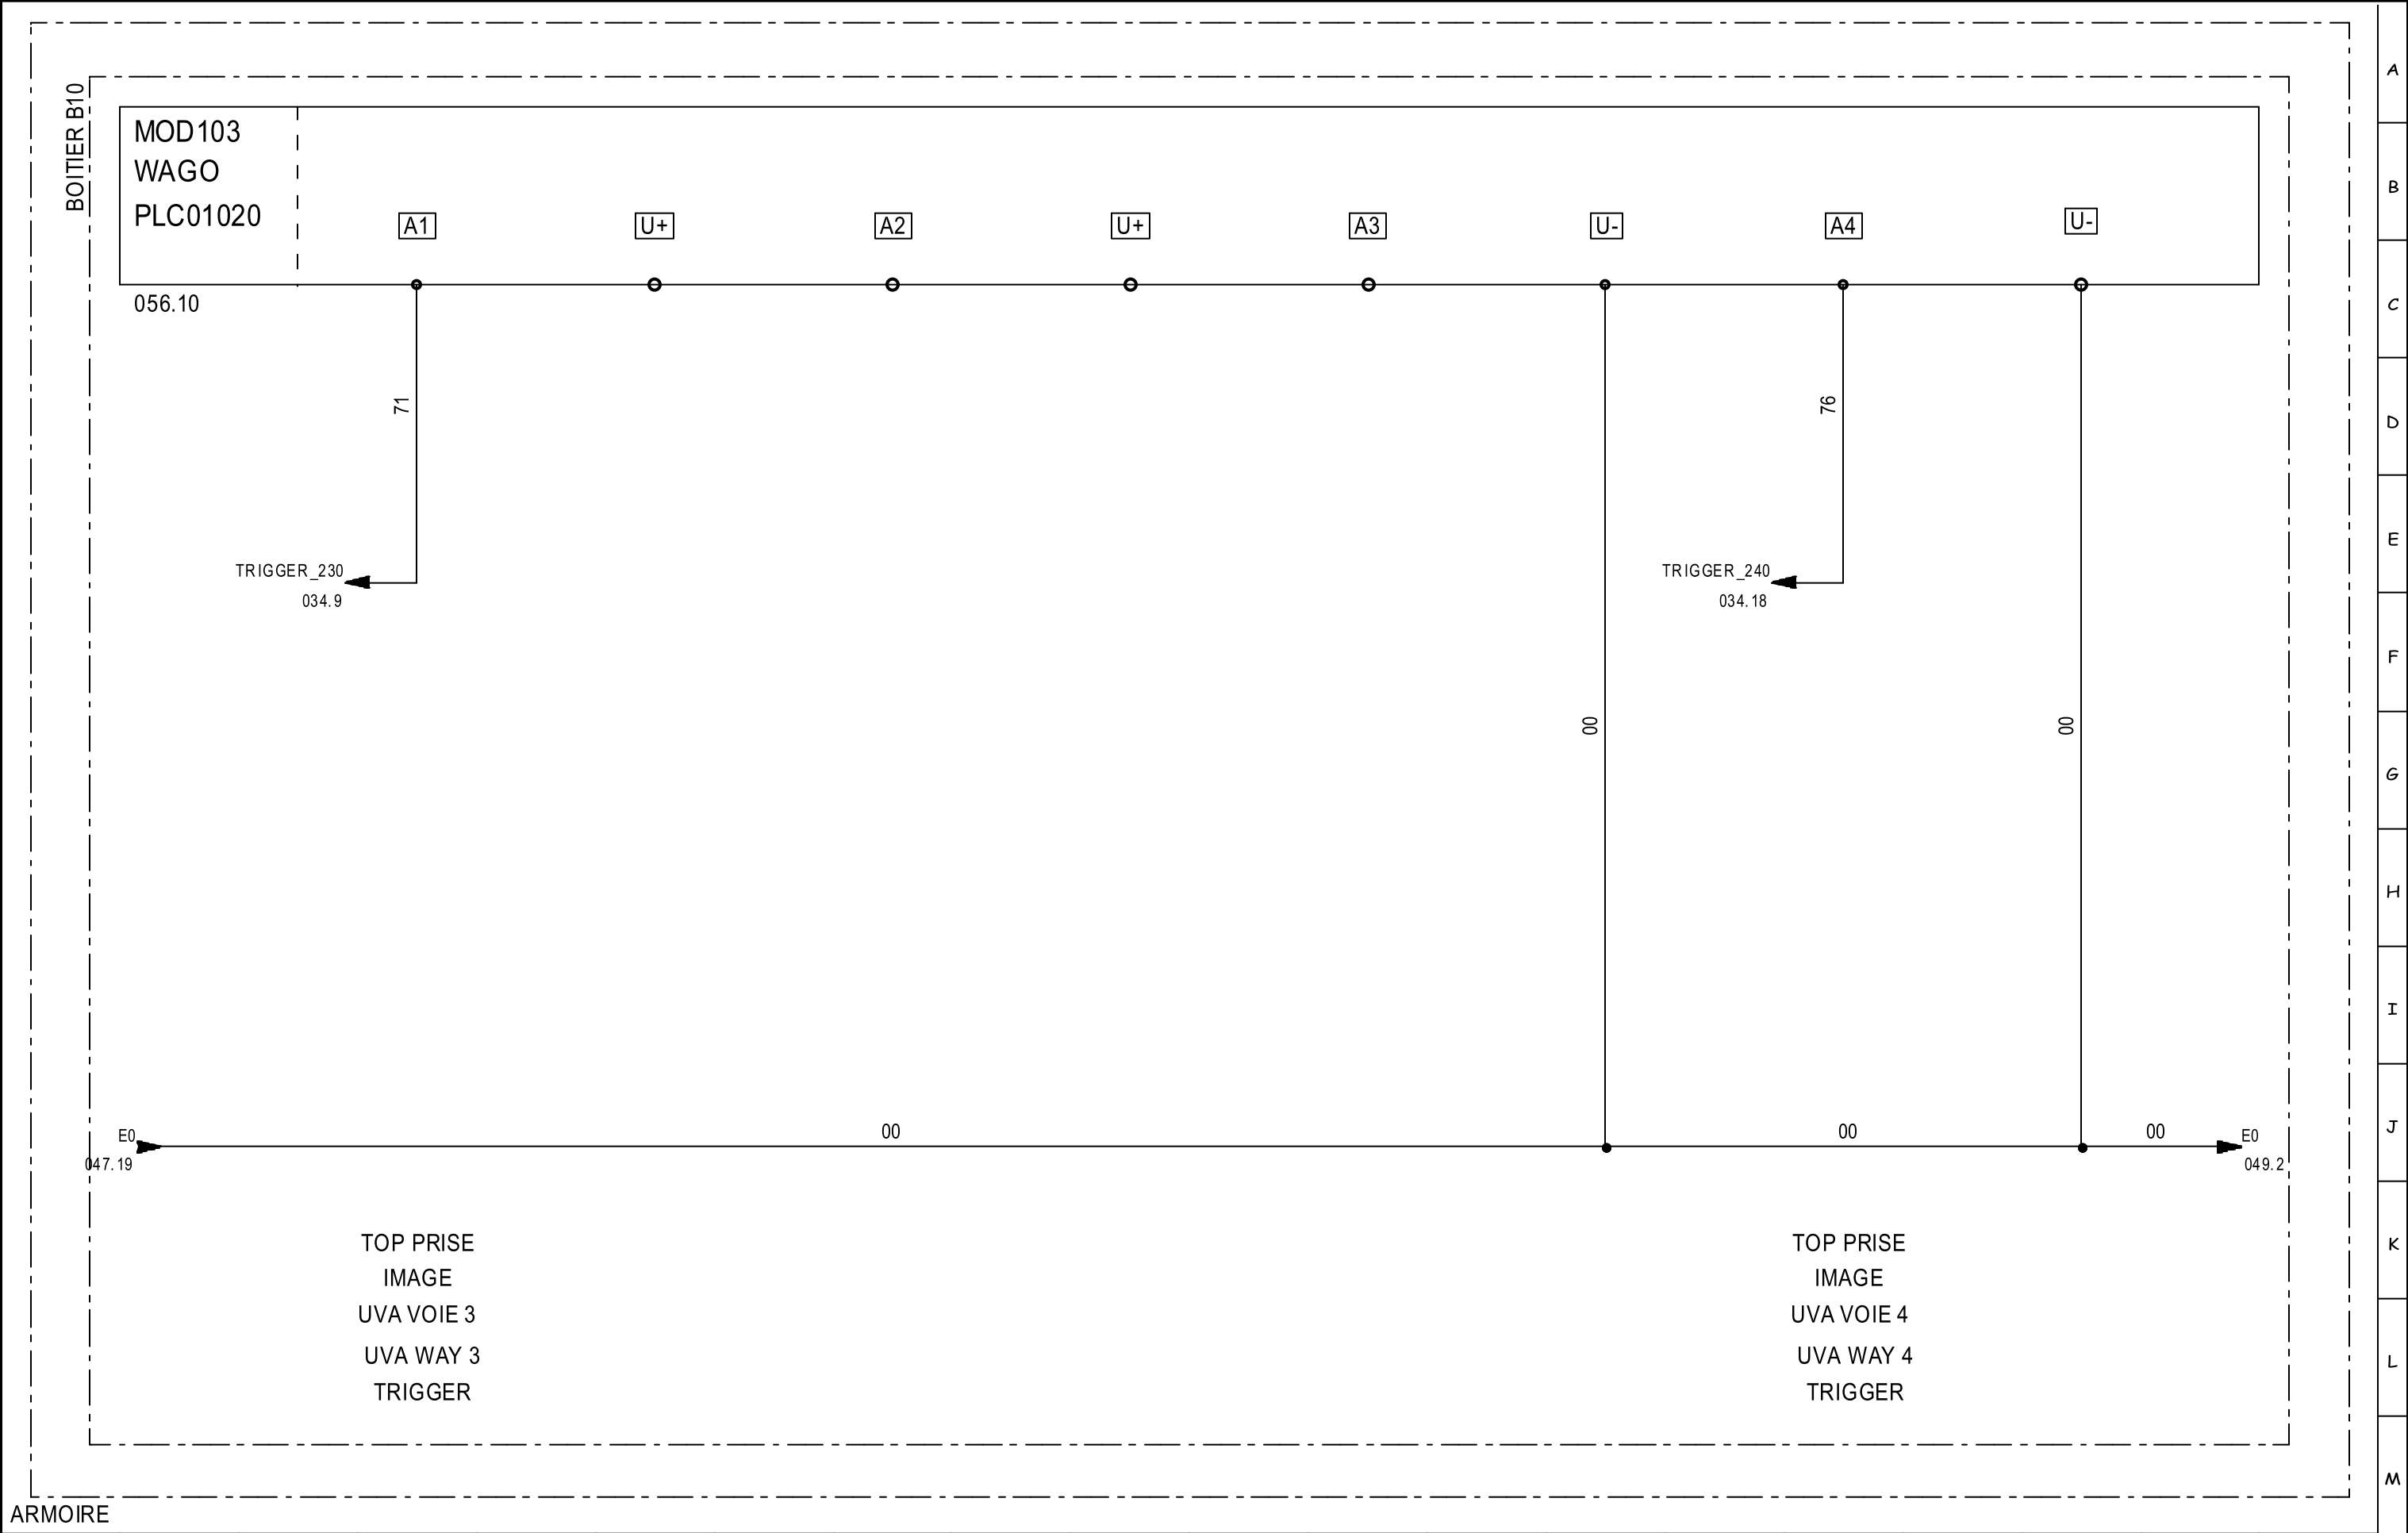


ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SORTIES MOD103				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		OUTPUTS MOD103								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 048/163			


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

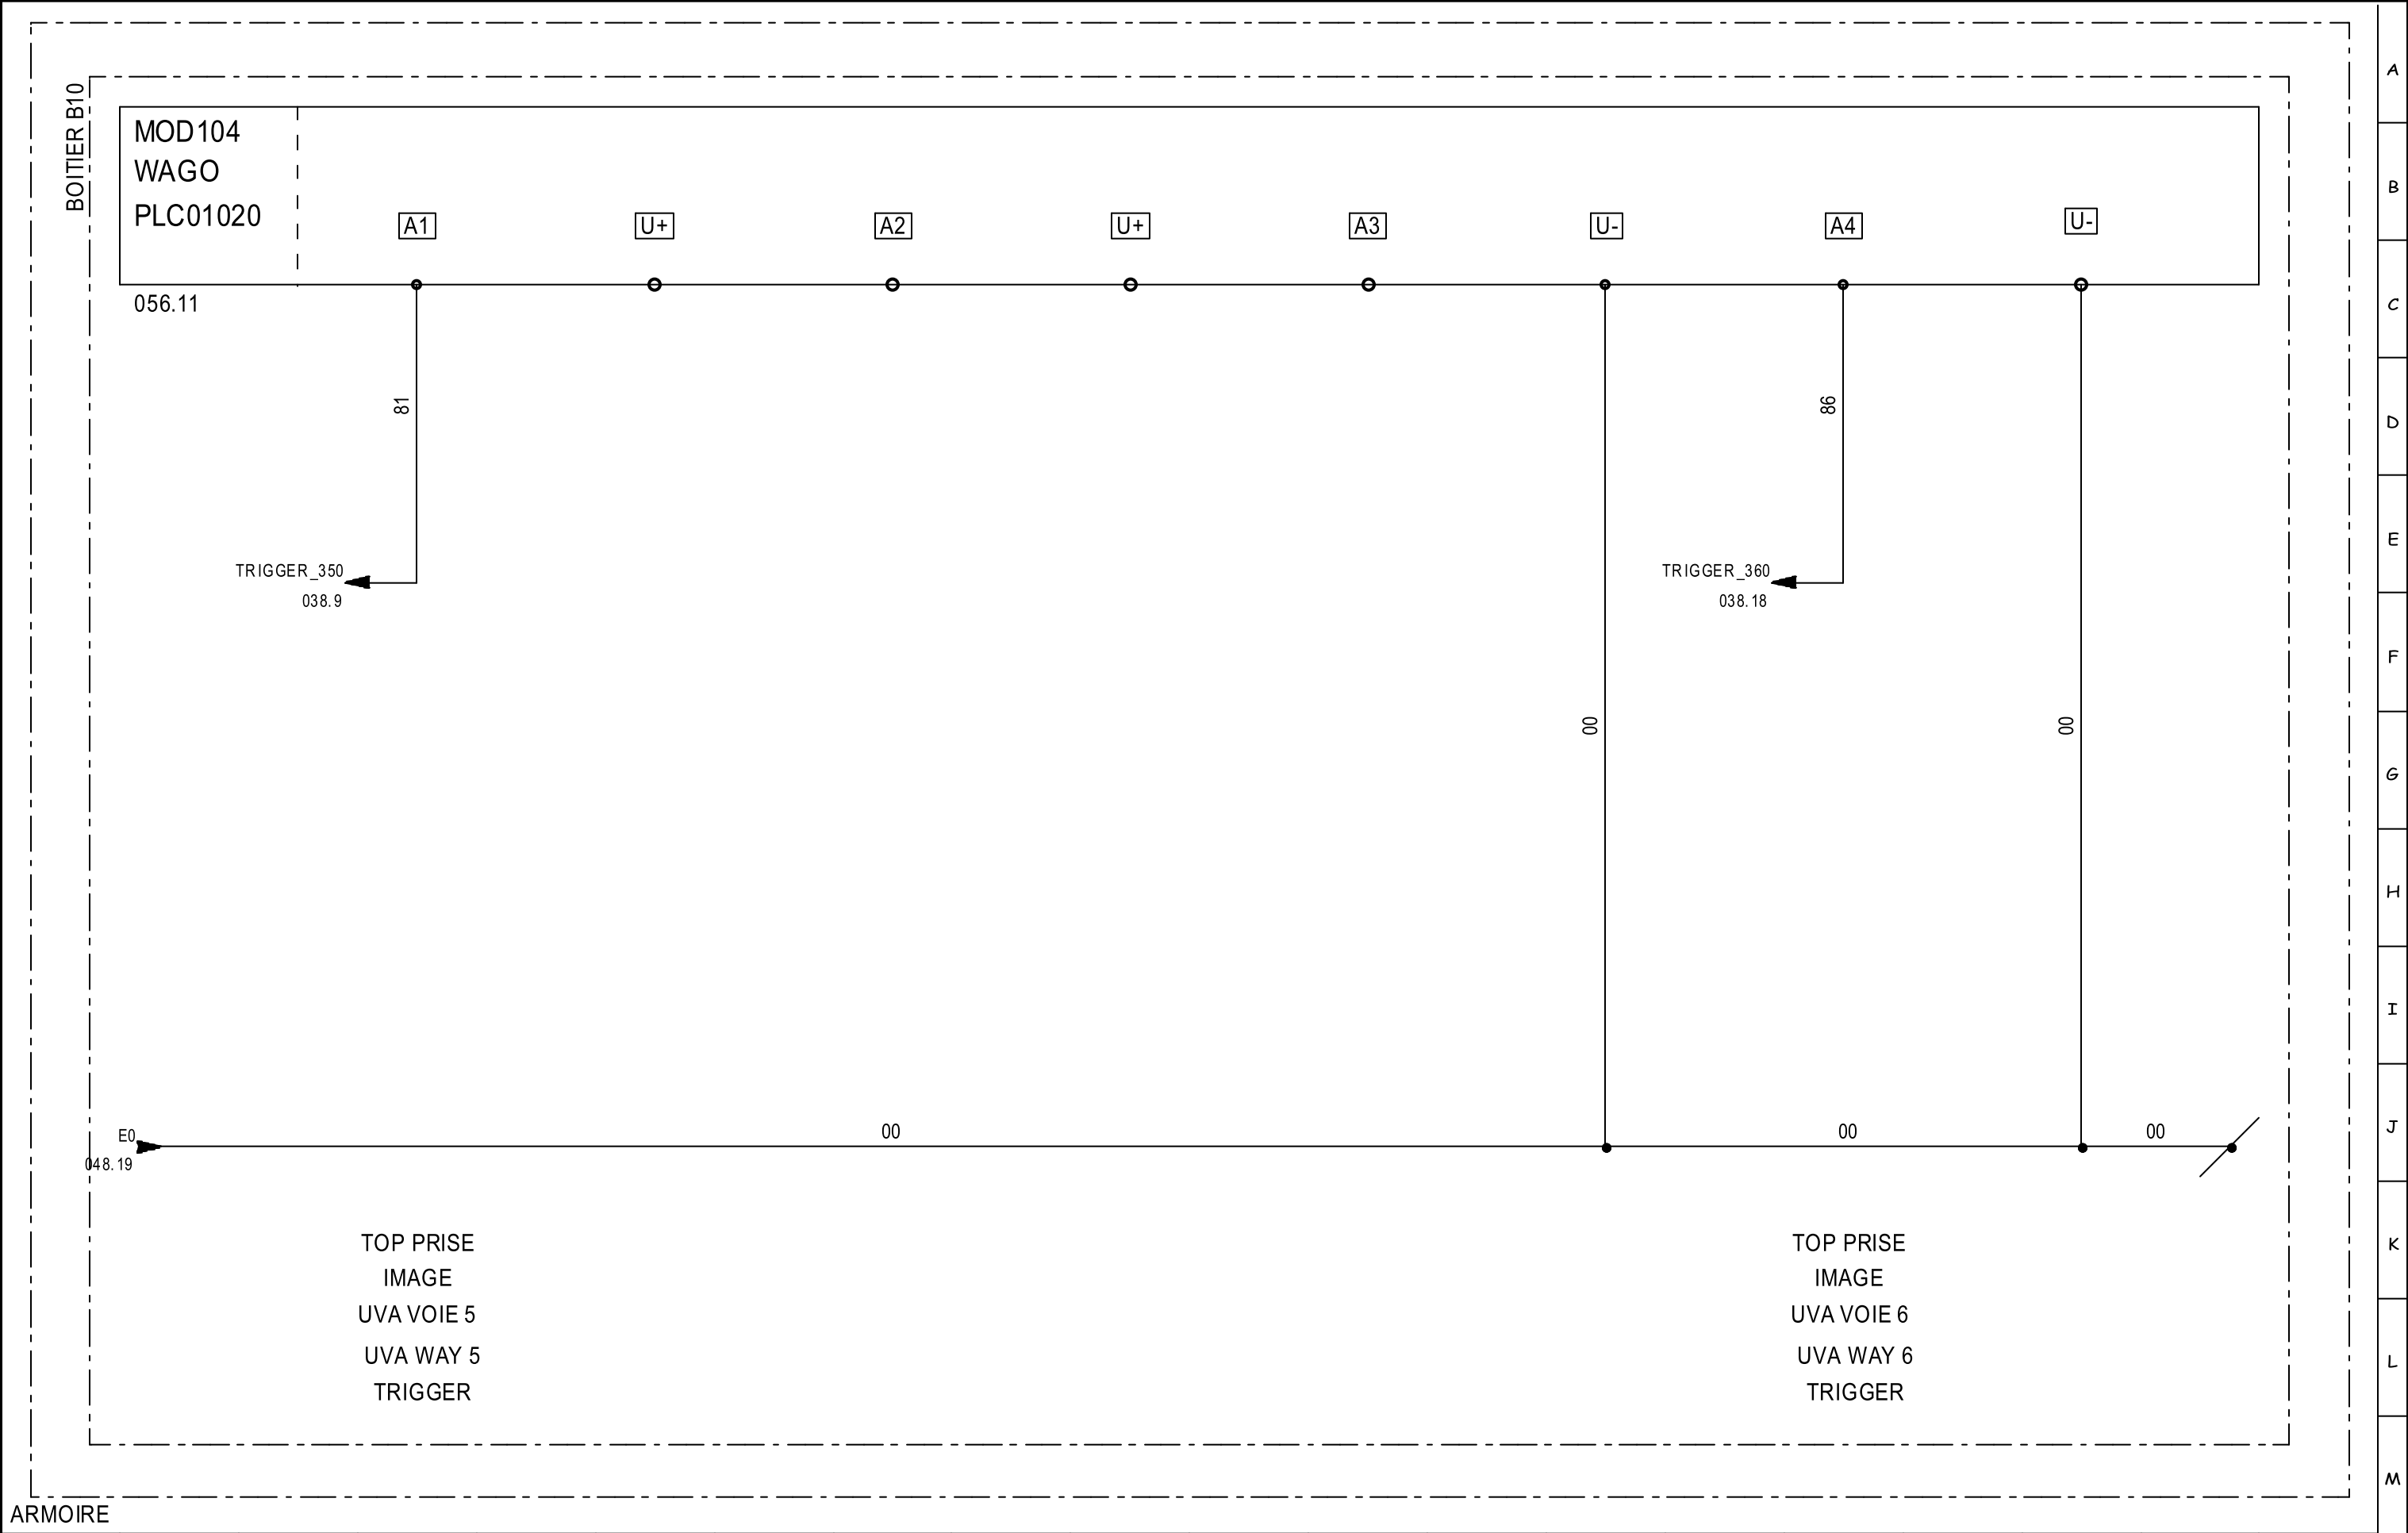

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		SORTIES MOD104				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		OUTPUTS MOD104								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 049/163			

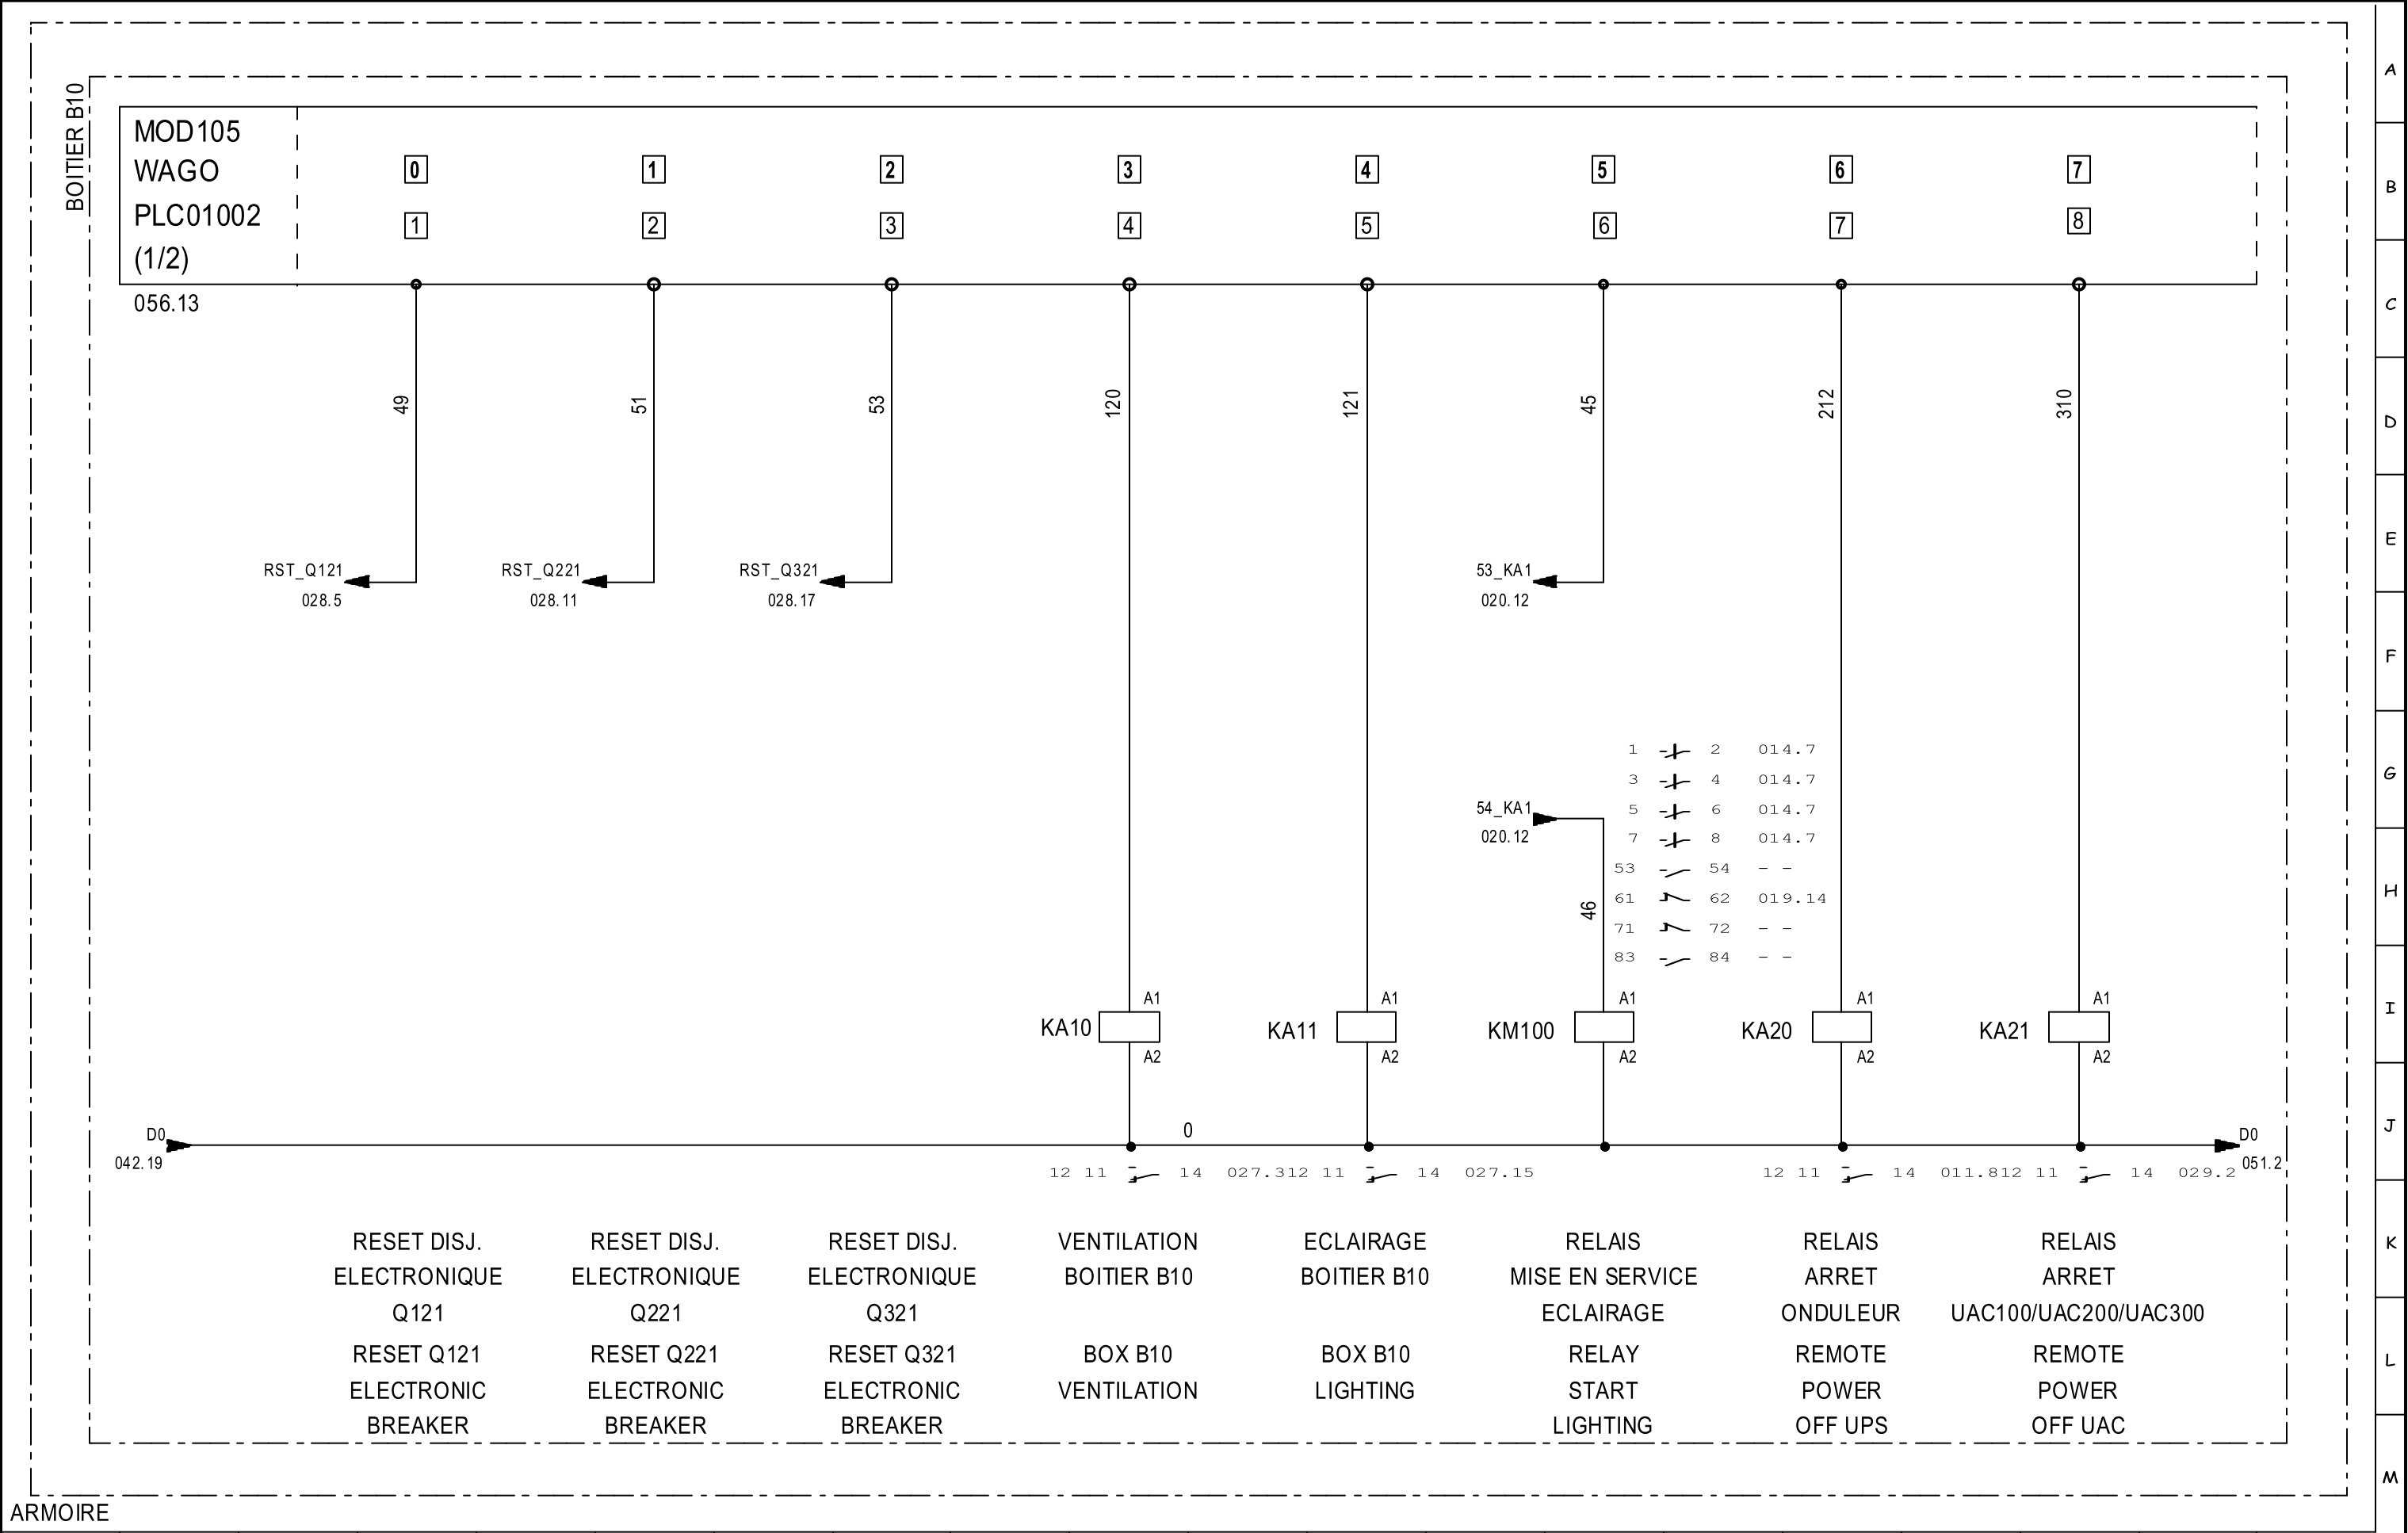


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

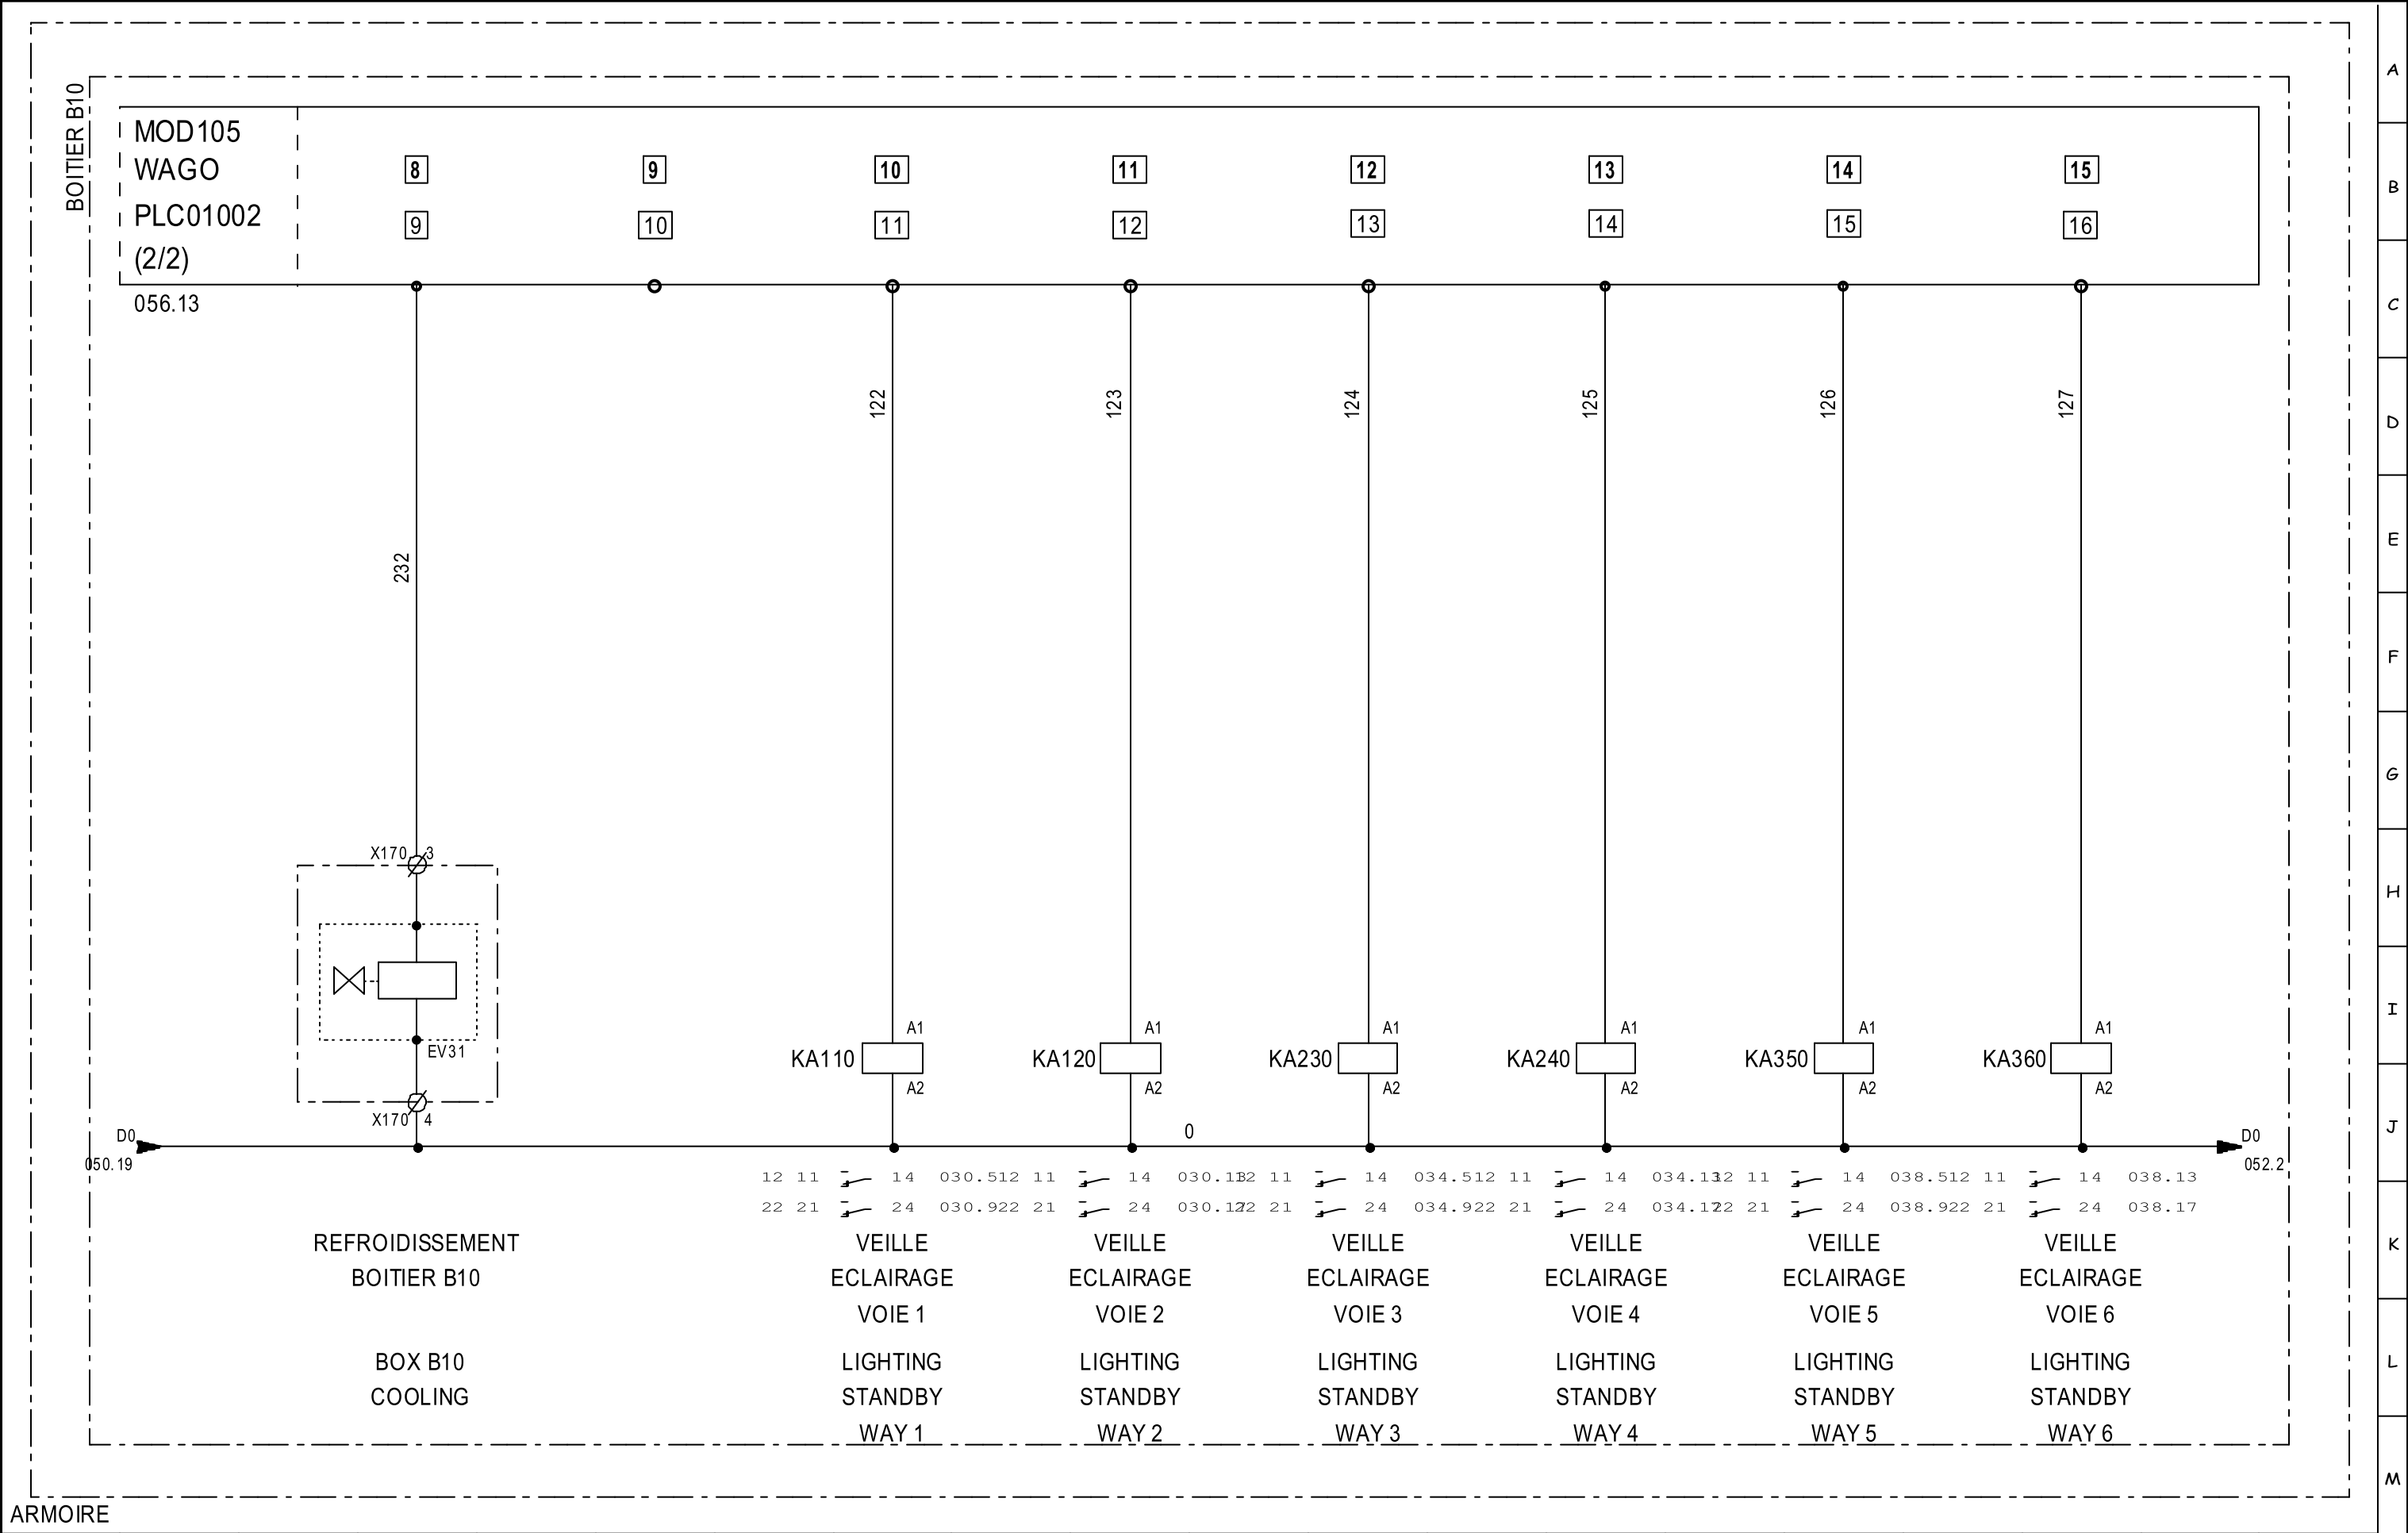

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél :(33).2.98.85.31.36		Date of creation :		SORTIES MOD105				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax :(33).2.98.85.31.38		Designed by : DB		OUTPUTS MOD105								ARTICLE :		SMXA-C014221		INDEX : V11	
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								FOLIO : 051/163					


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

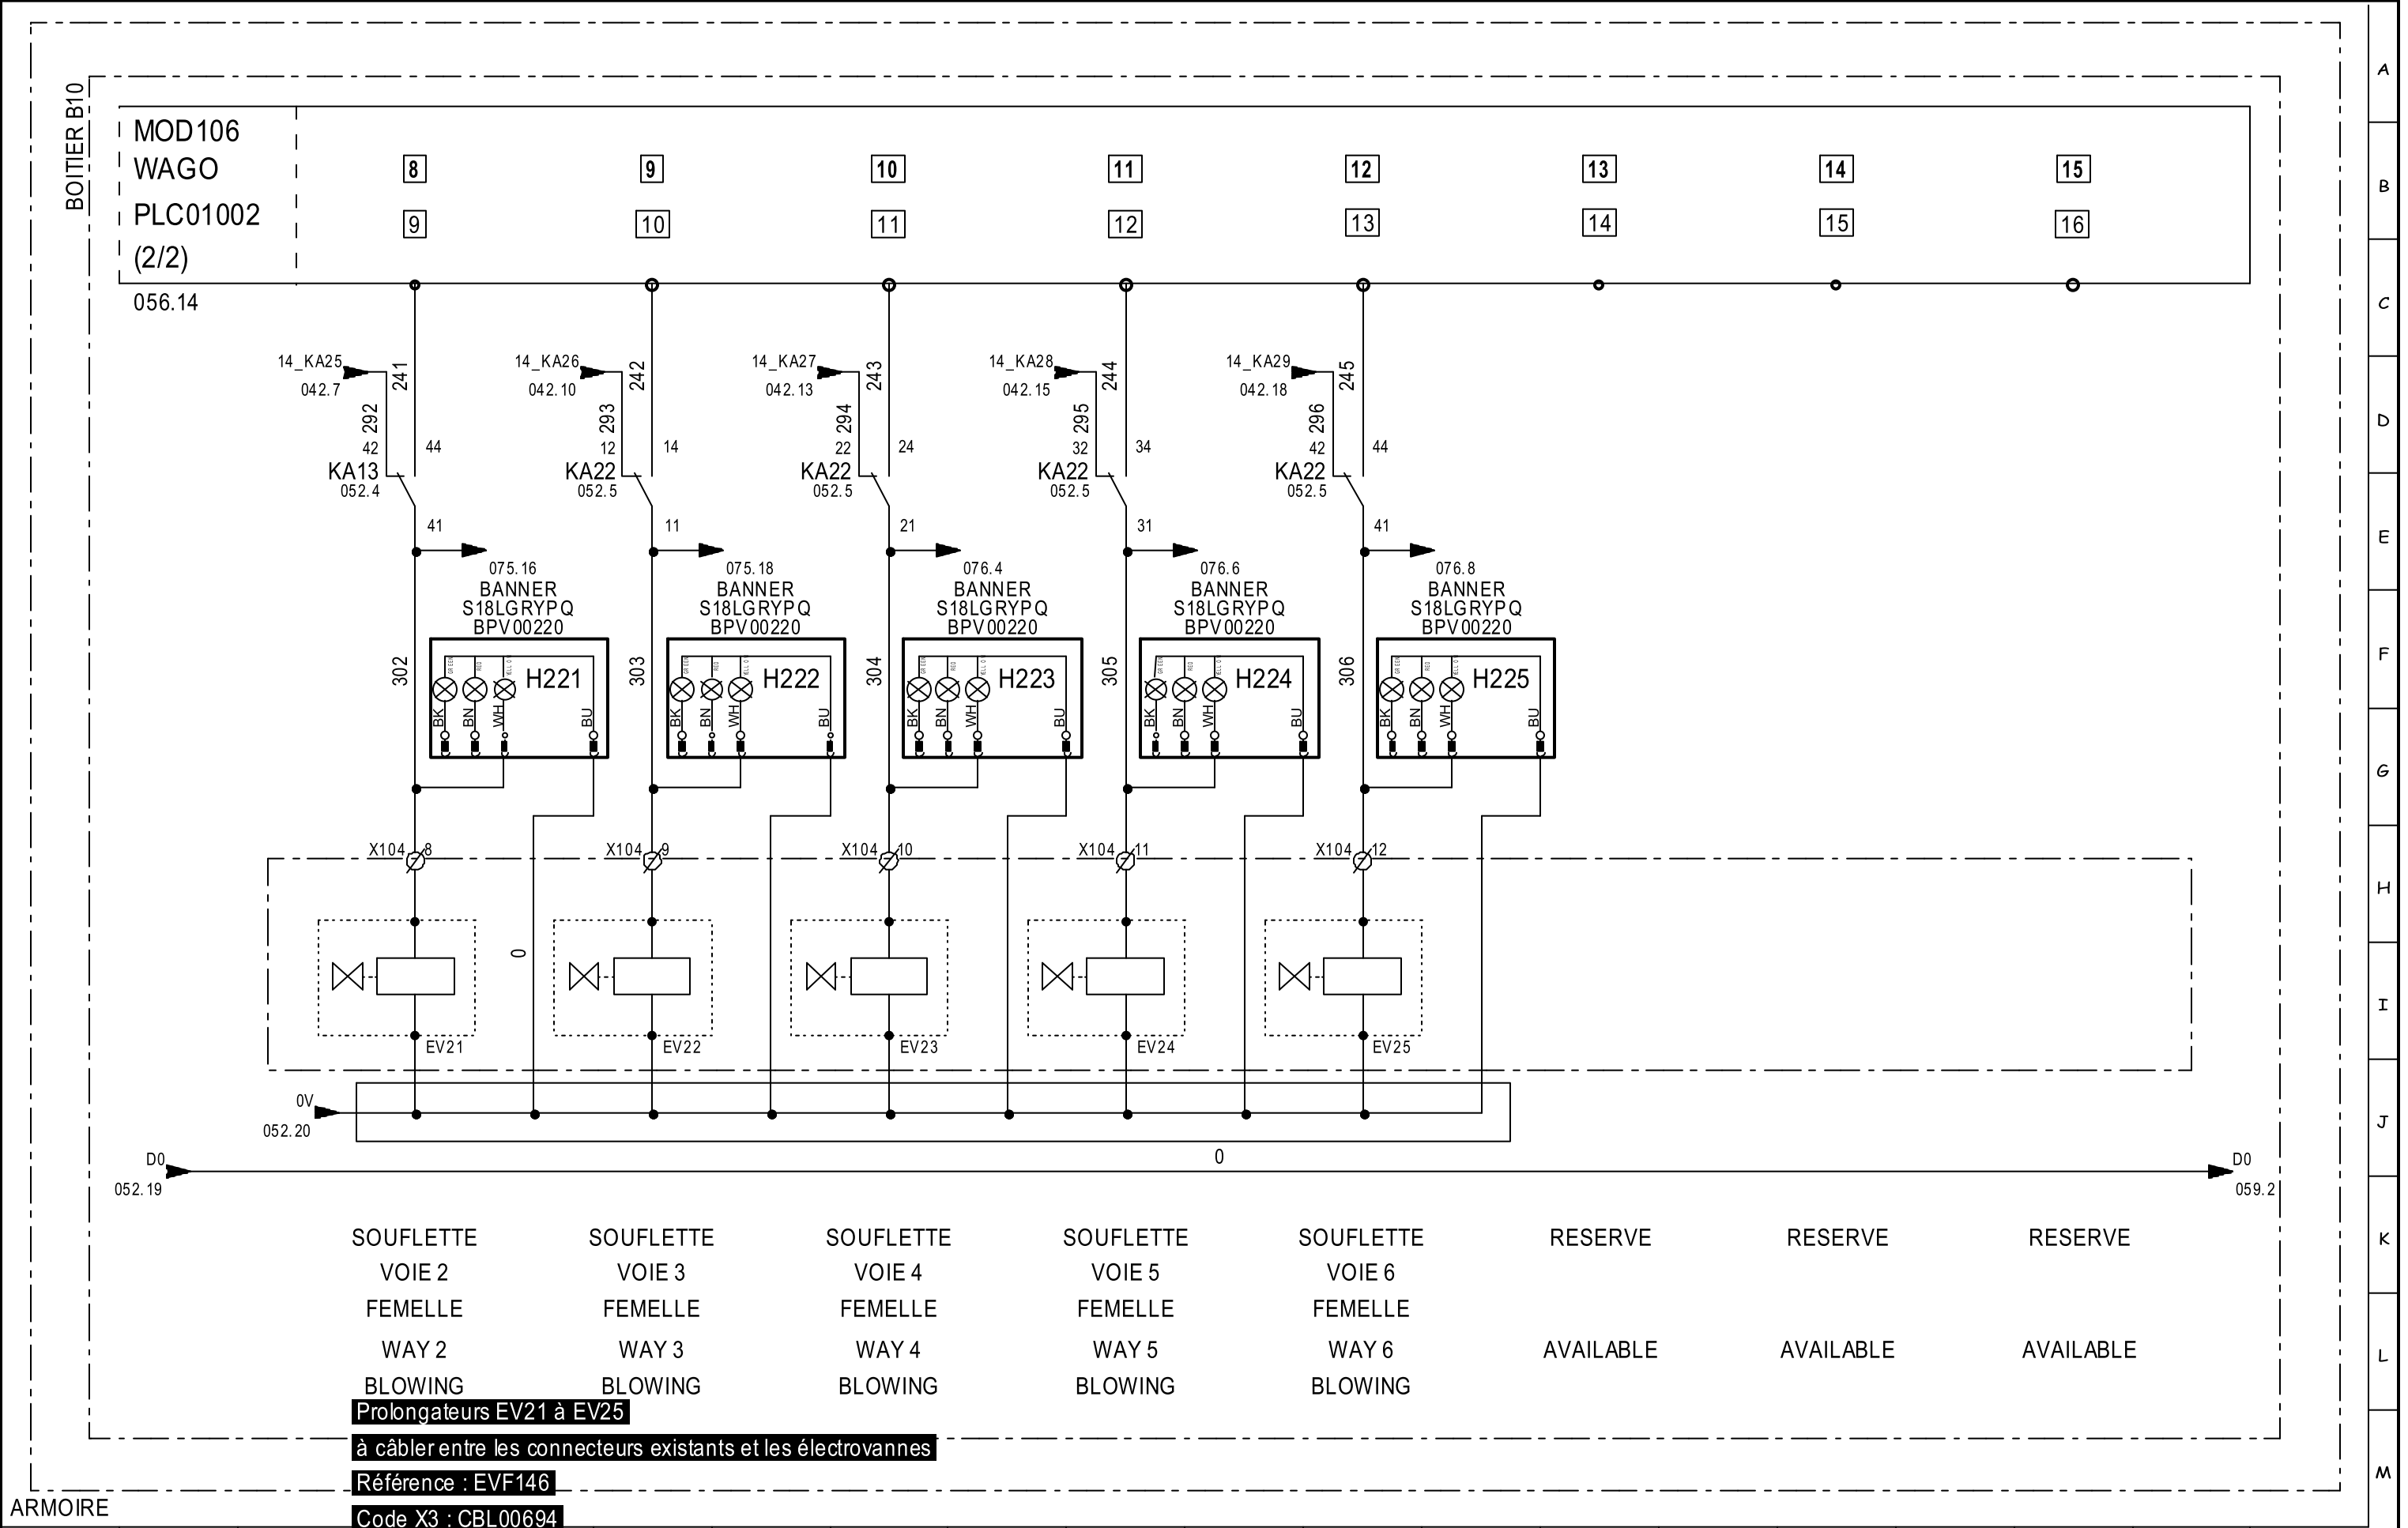

ARMOIRE

1		2		3		4		5		6		7		8		9		10		11		12		13		14		15		16		17		18		19		20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -				Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecaticid.service@ceva.com				Date of creation :				SORTIES MOD106				 Ecat-iD Campus								CONTRACT : C01422				CUSTOMER : COOP LAR				COUNTRY : BRESIL							
								Designed by : DB				OUTPUTS MOD106												ARTICLE : SMXA-C014221								INDEX : V16							
												ENVIRONNEMENT:Version 4.49.F - 23/09/2020												FOLIO : 053/163															

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

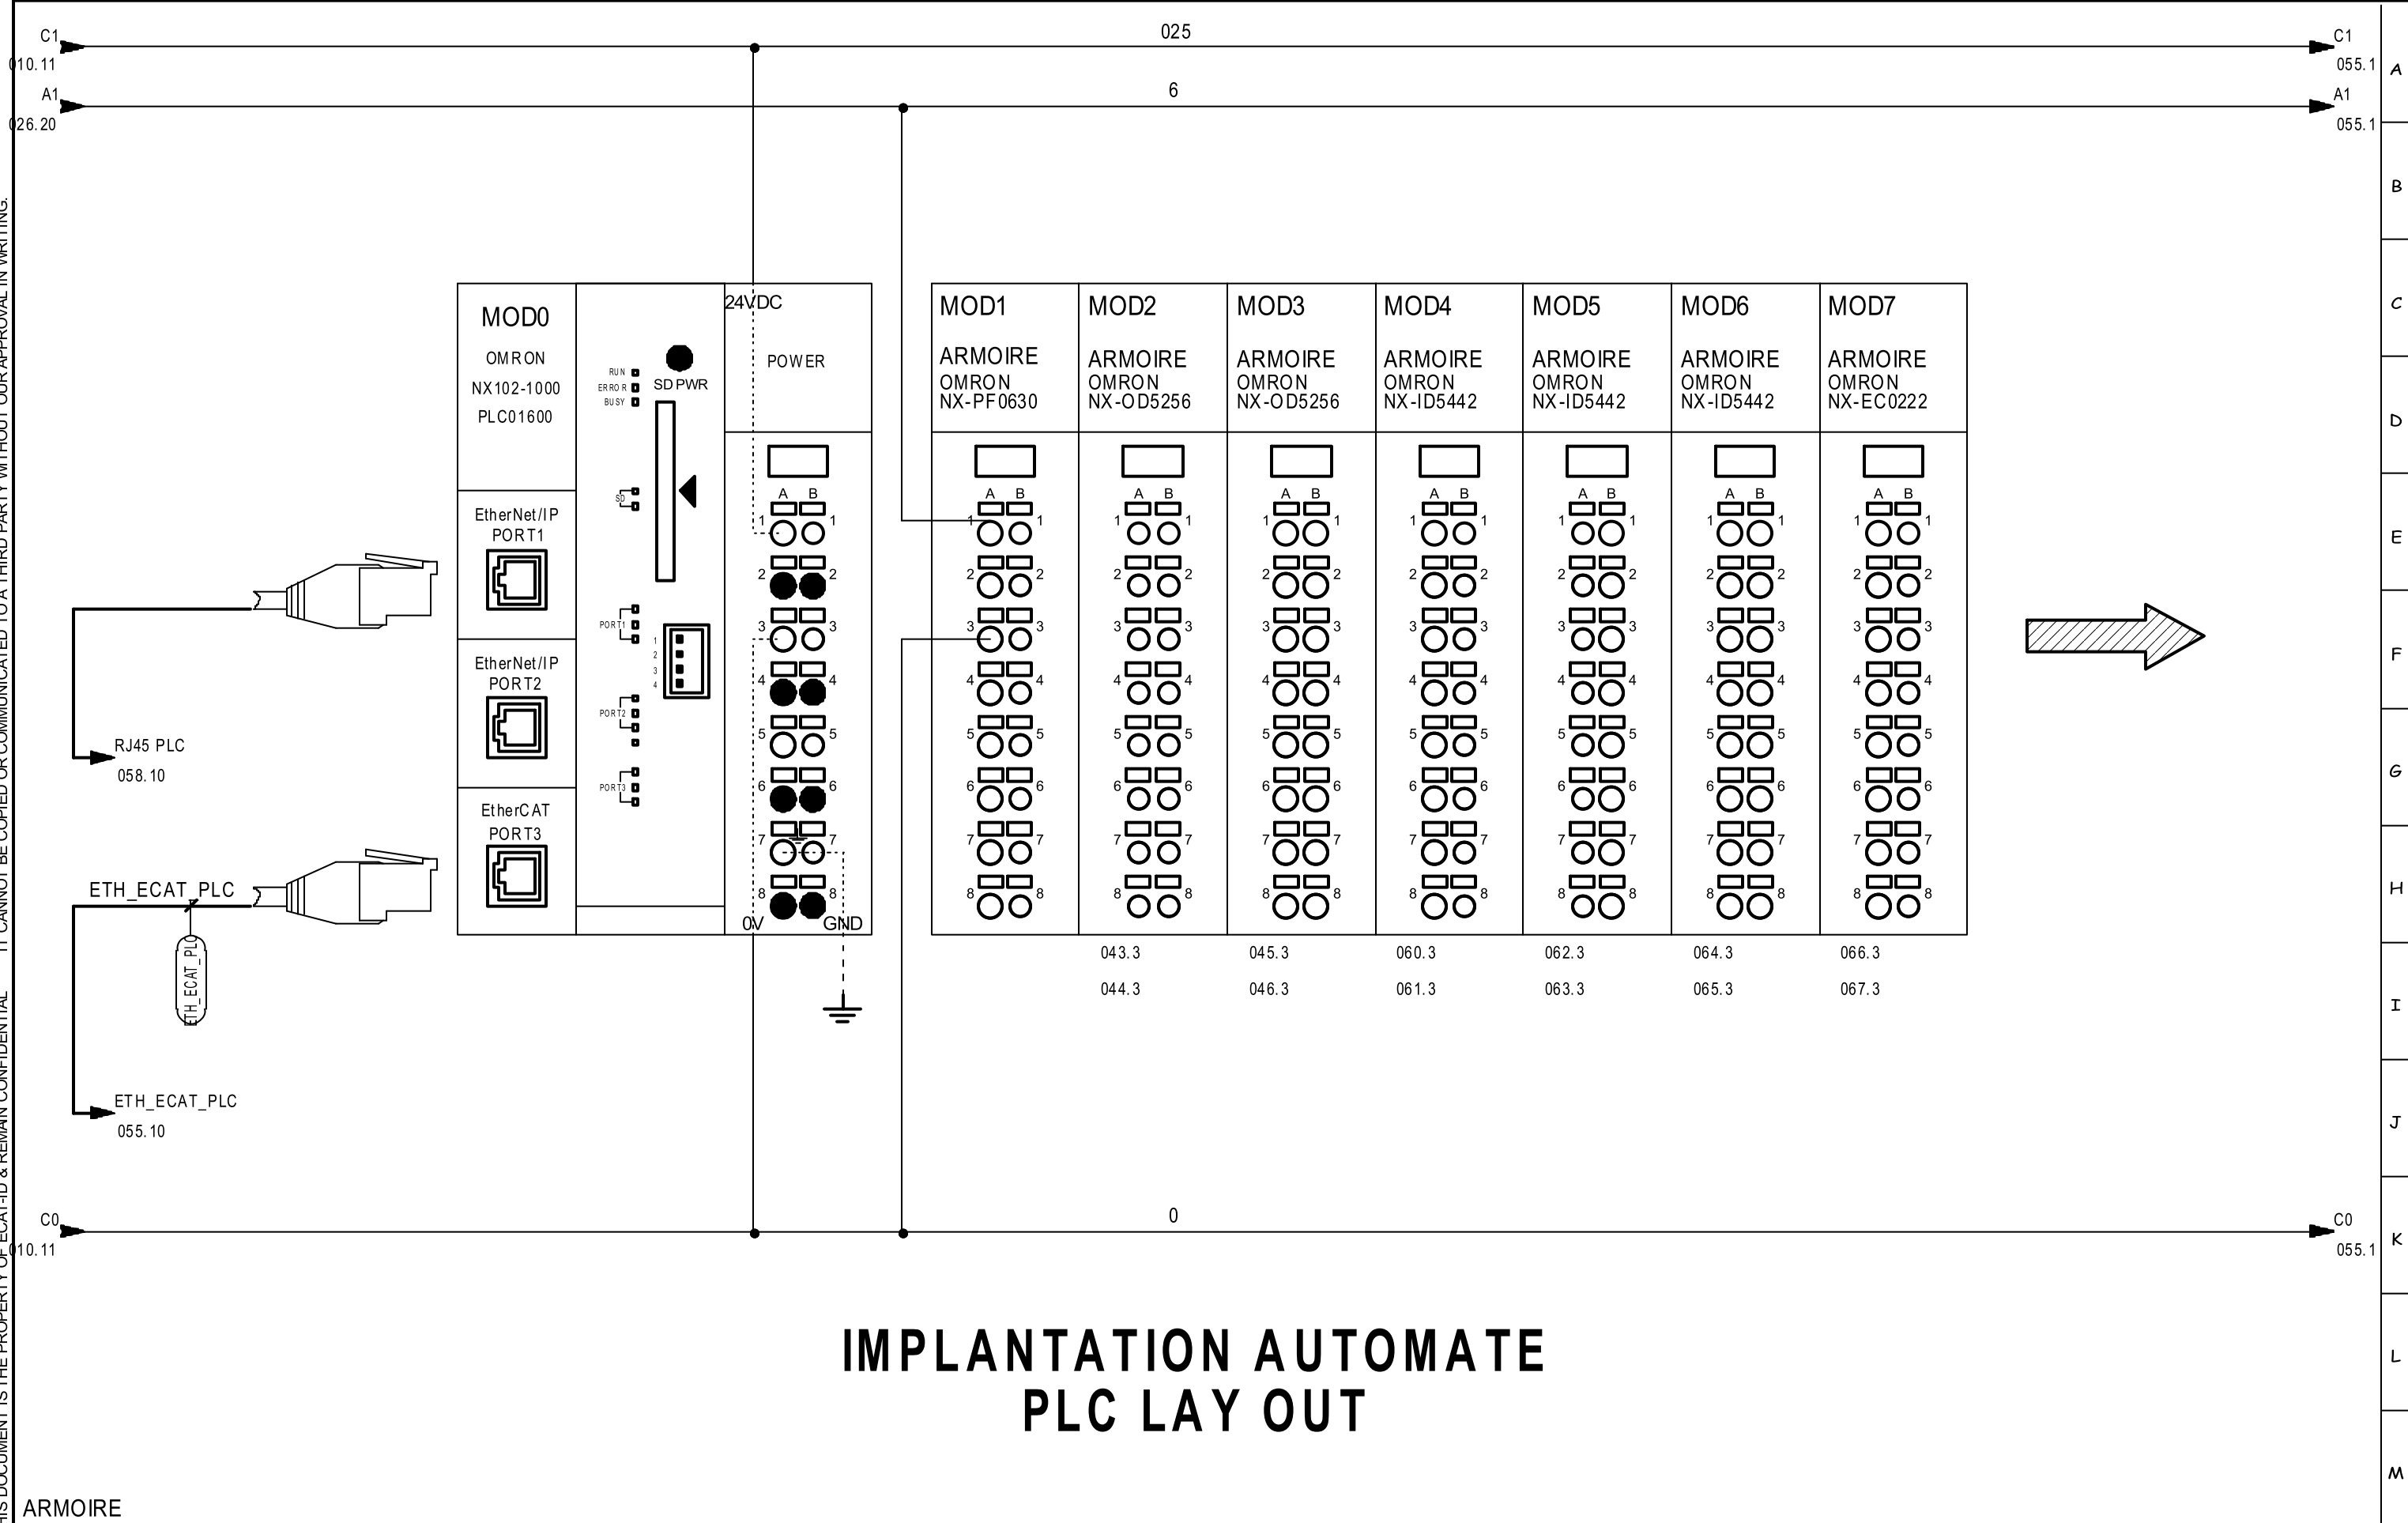


IMPLANTATION AUTOMATE PLC LAY OUT


ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		IMPLANTATION AUTOMATE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		PLC LAY OUT								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail : ecatid.service@ceva.com				ENVIRONNEMENT: Version 4.49.F - 23/09/2020										FOLIO : 054/163			

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

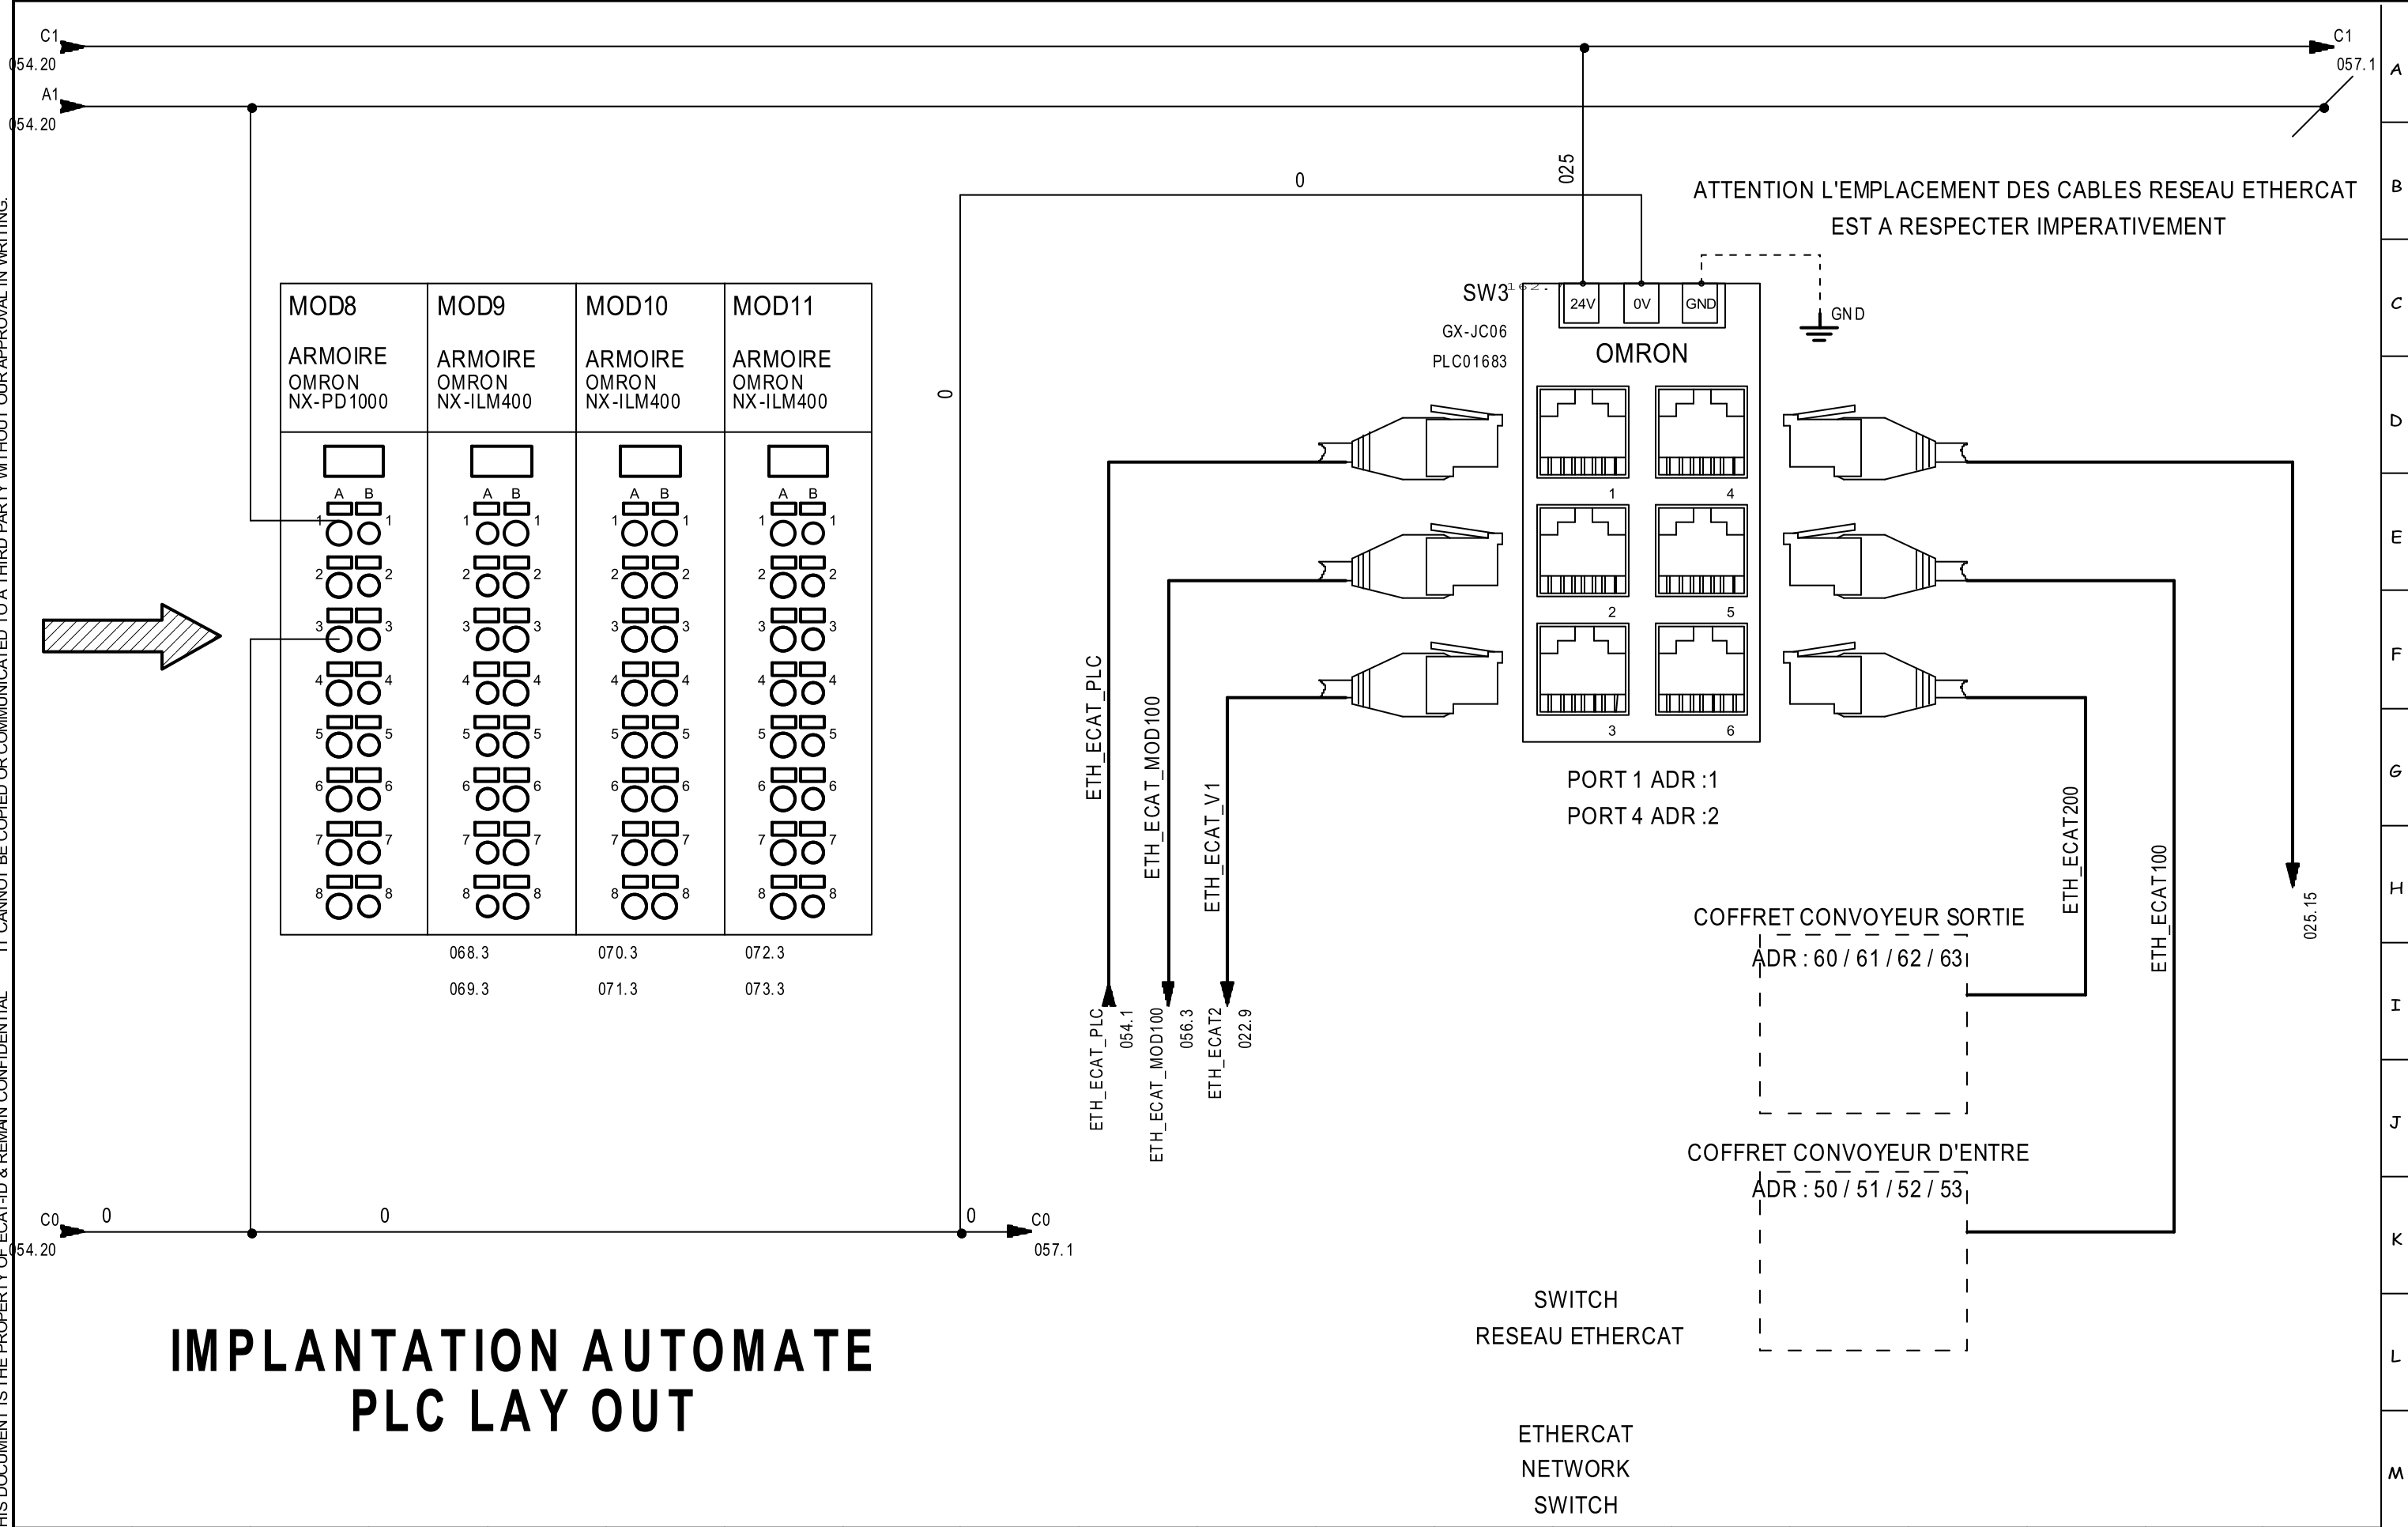

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 05/04/2024		IMPLANTATION AUTOMATE				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		PLC LAY OUT								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020										FOLIO : 055/163			

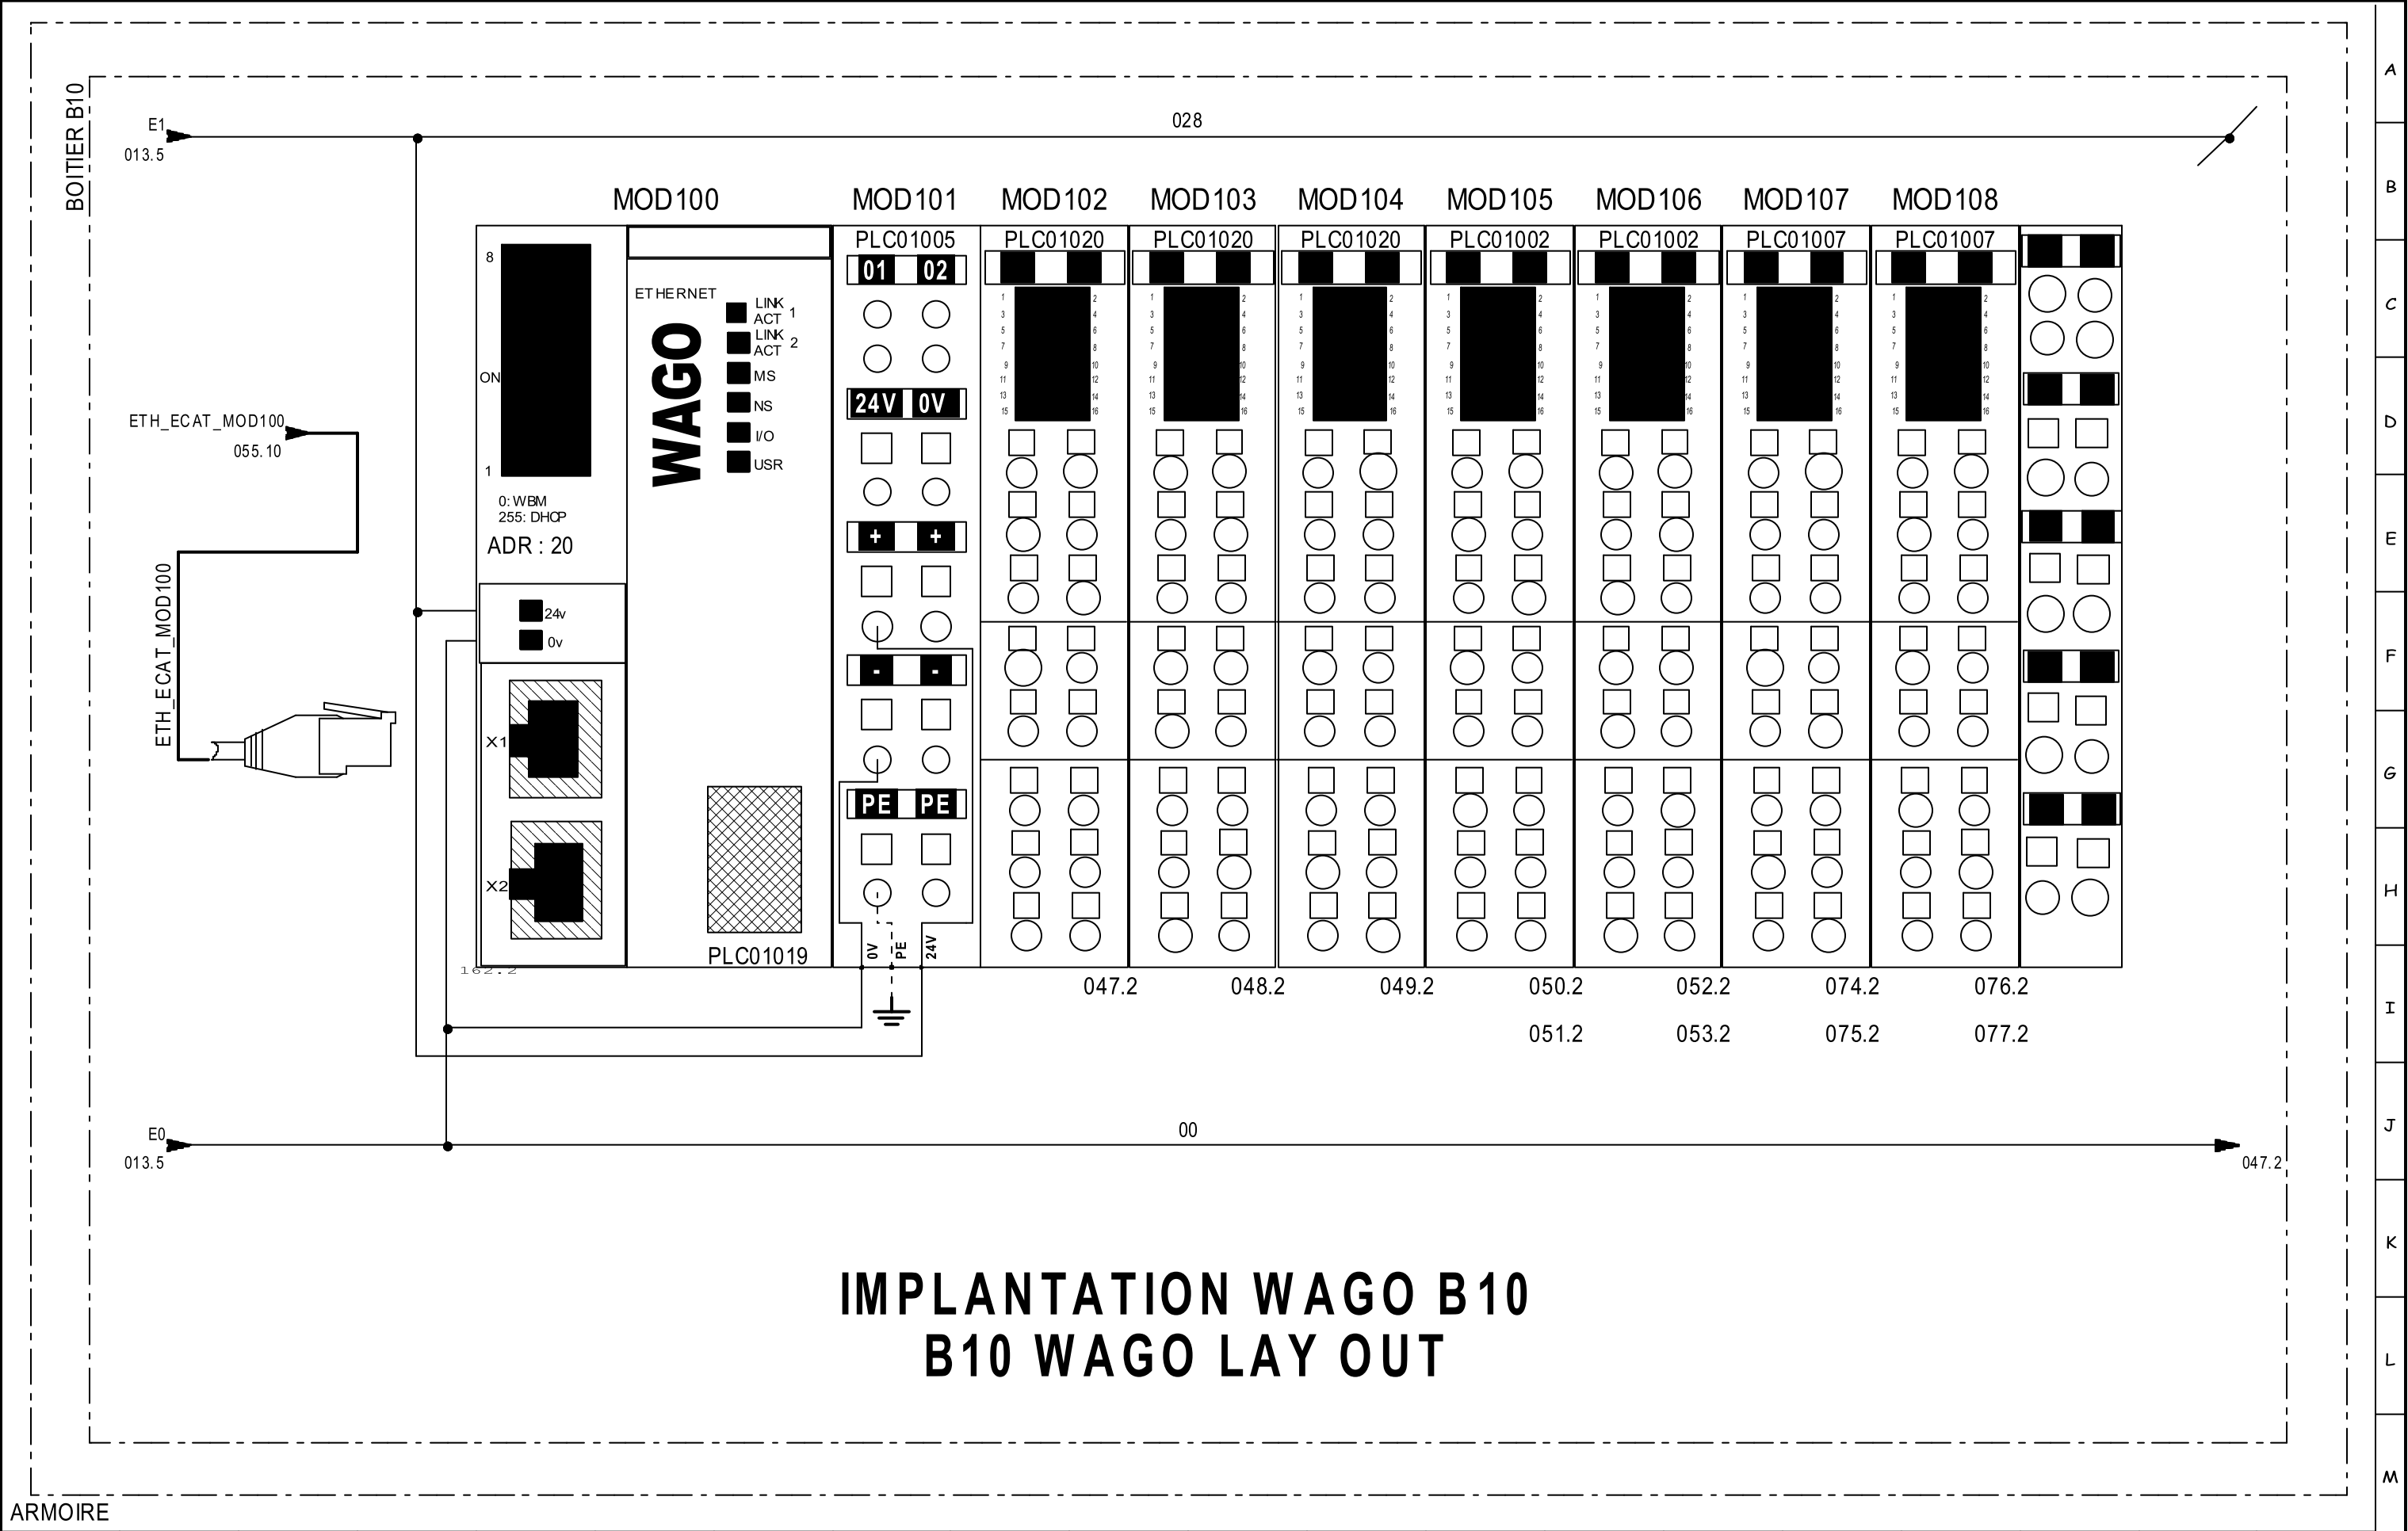


IMPLANTATION WAGO B10
B10 WAGO LAY OUT

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -		Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecaticid.service@ceva.com		Date of creation : Designed by : DB		IMPLANTATION WAGO B10 WAGO B10 LAY OUT ENVIRONNEMENT : Version 4.49.F - 23/09/2020		ceva Ecat-iD Campus		CONTRACT : C01422		CUSTOMER : COOP LAR		ARTICLE : SMXA-C014221		COUNTRY : BRESIL		INDEX : V12 FOLIO : 056/163	

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

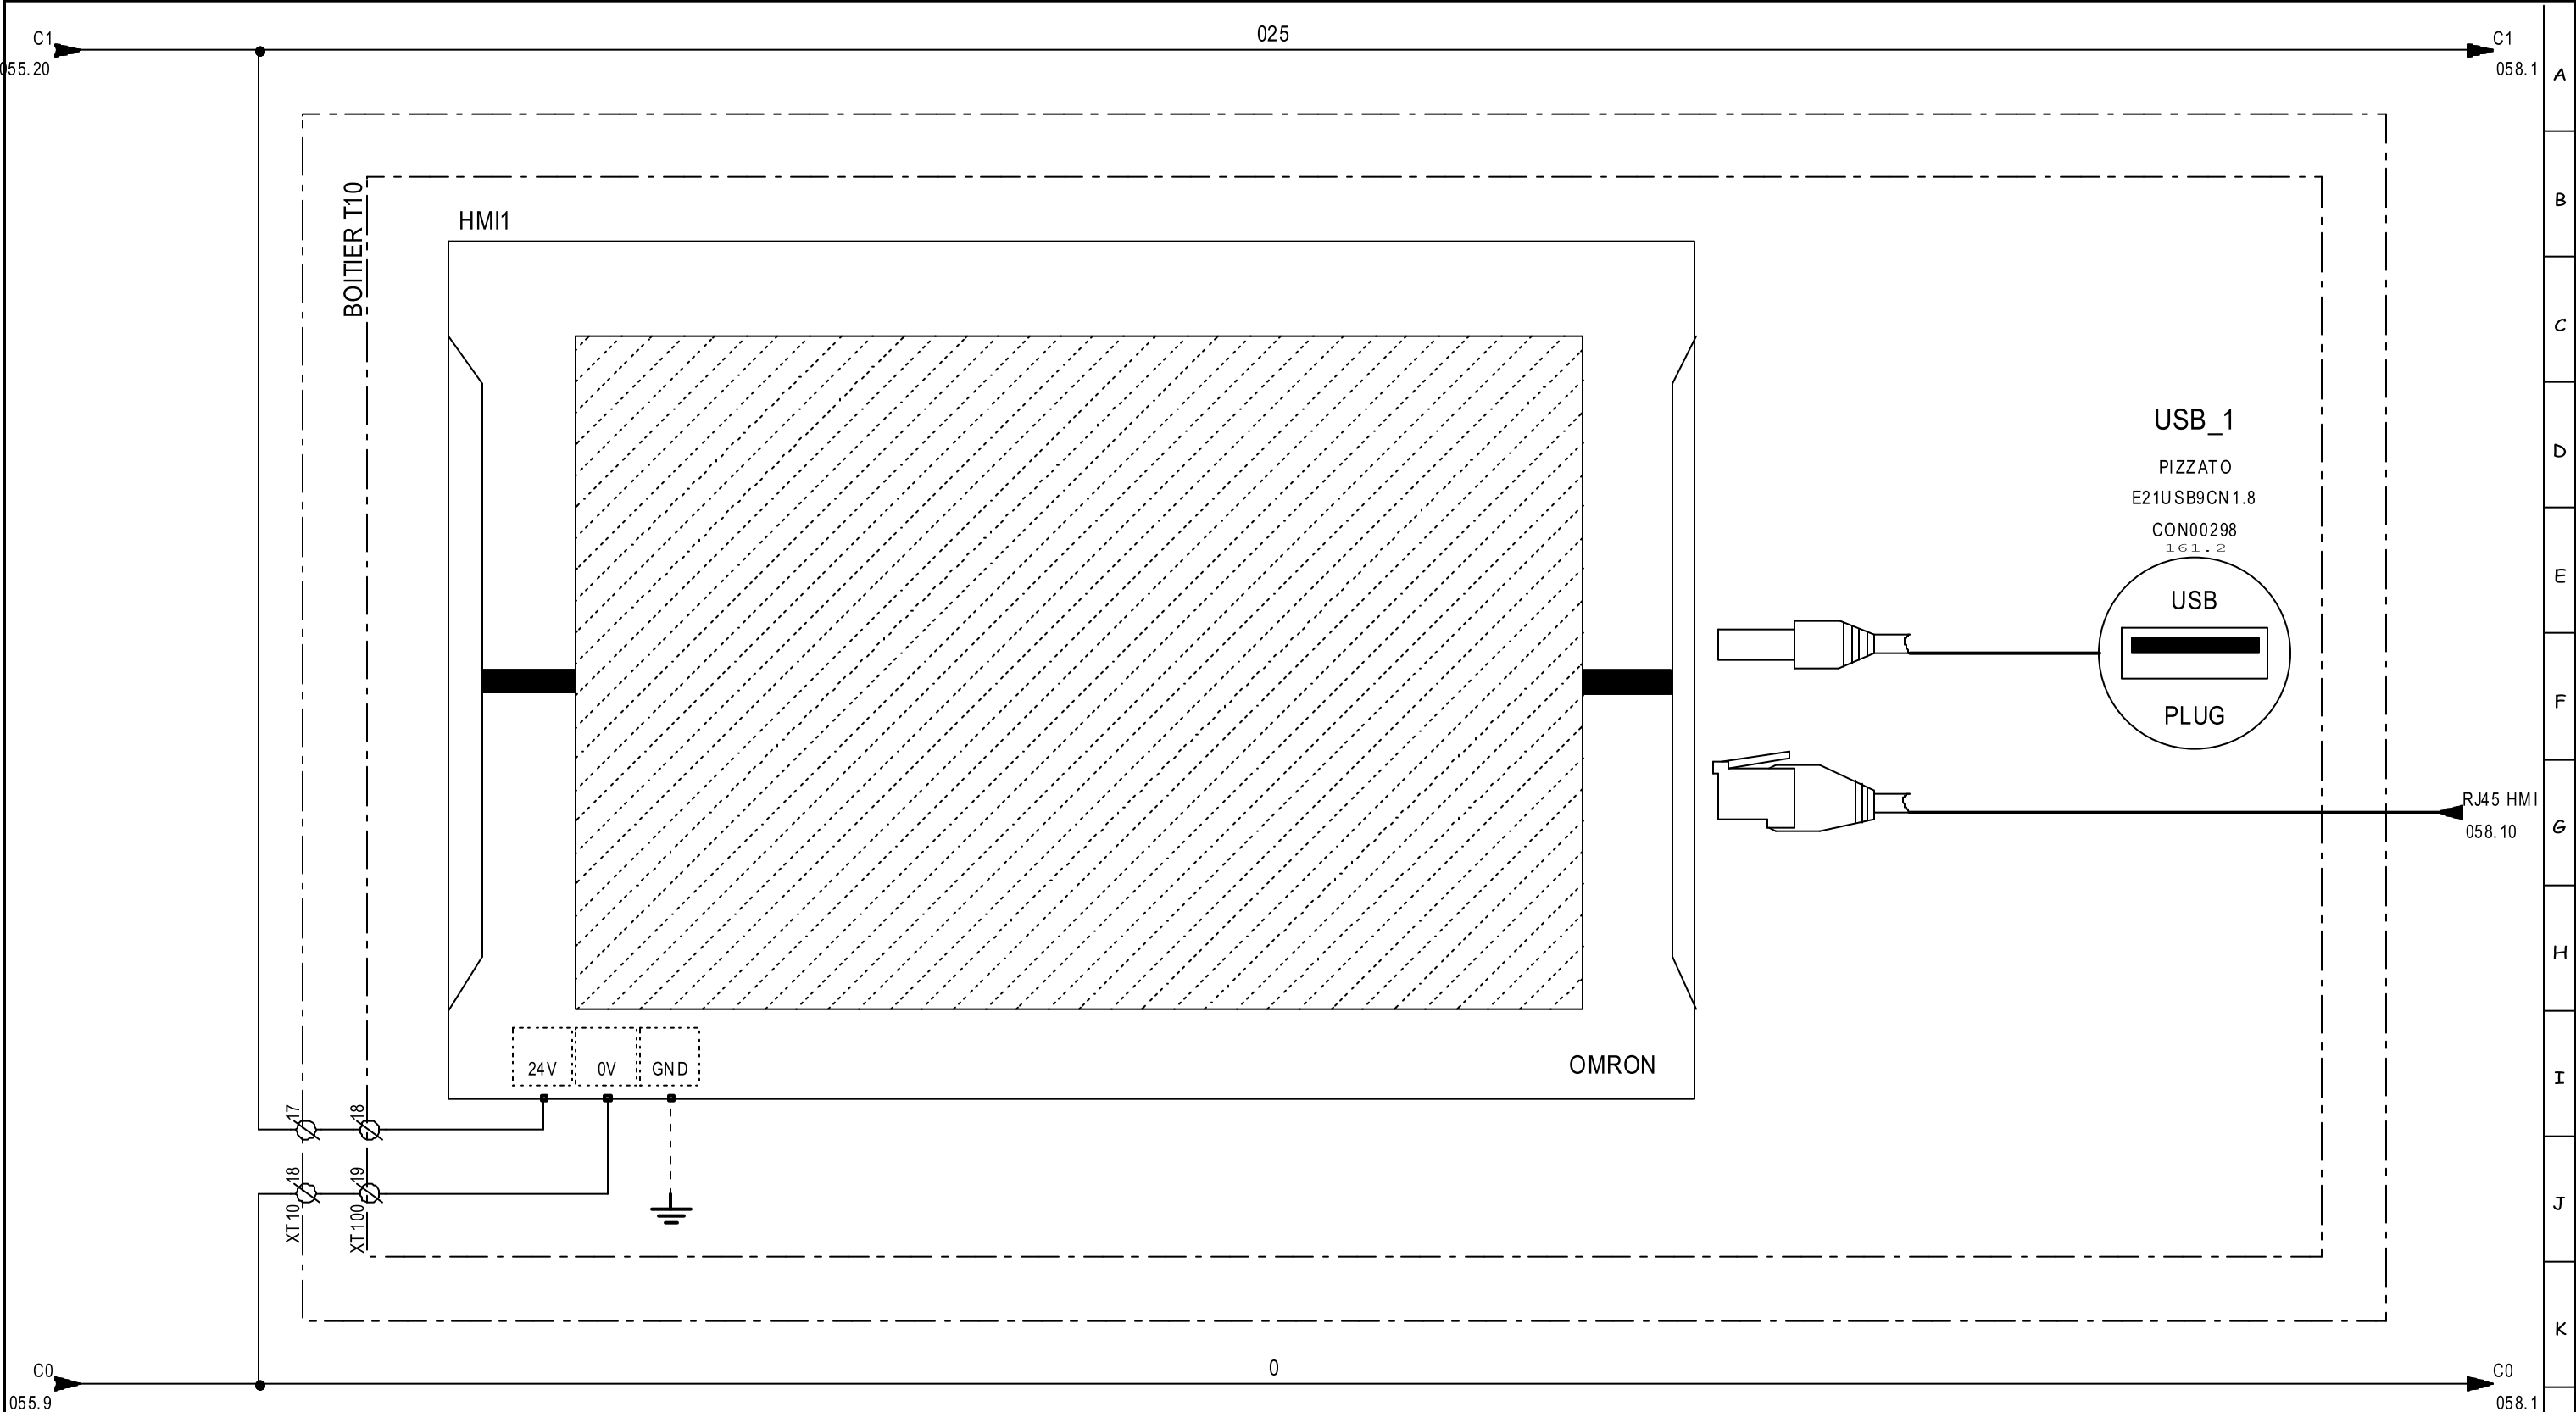


IMPLANTATION IHM

IHM LAY OUT

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		IMPLANTATION IHM				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		DISPLAY LAY OUT								ARTICLE : SMXA-C014221				INDEX : V11	
			E-mail : ecatid.service@ceva.com				ENVIRONNEMENT: Version 4.49.F - 23/09/2020								057/163					


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

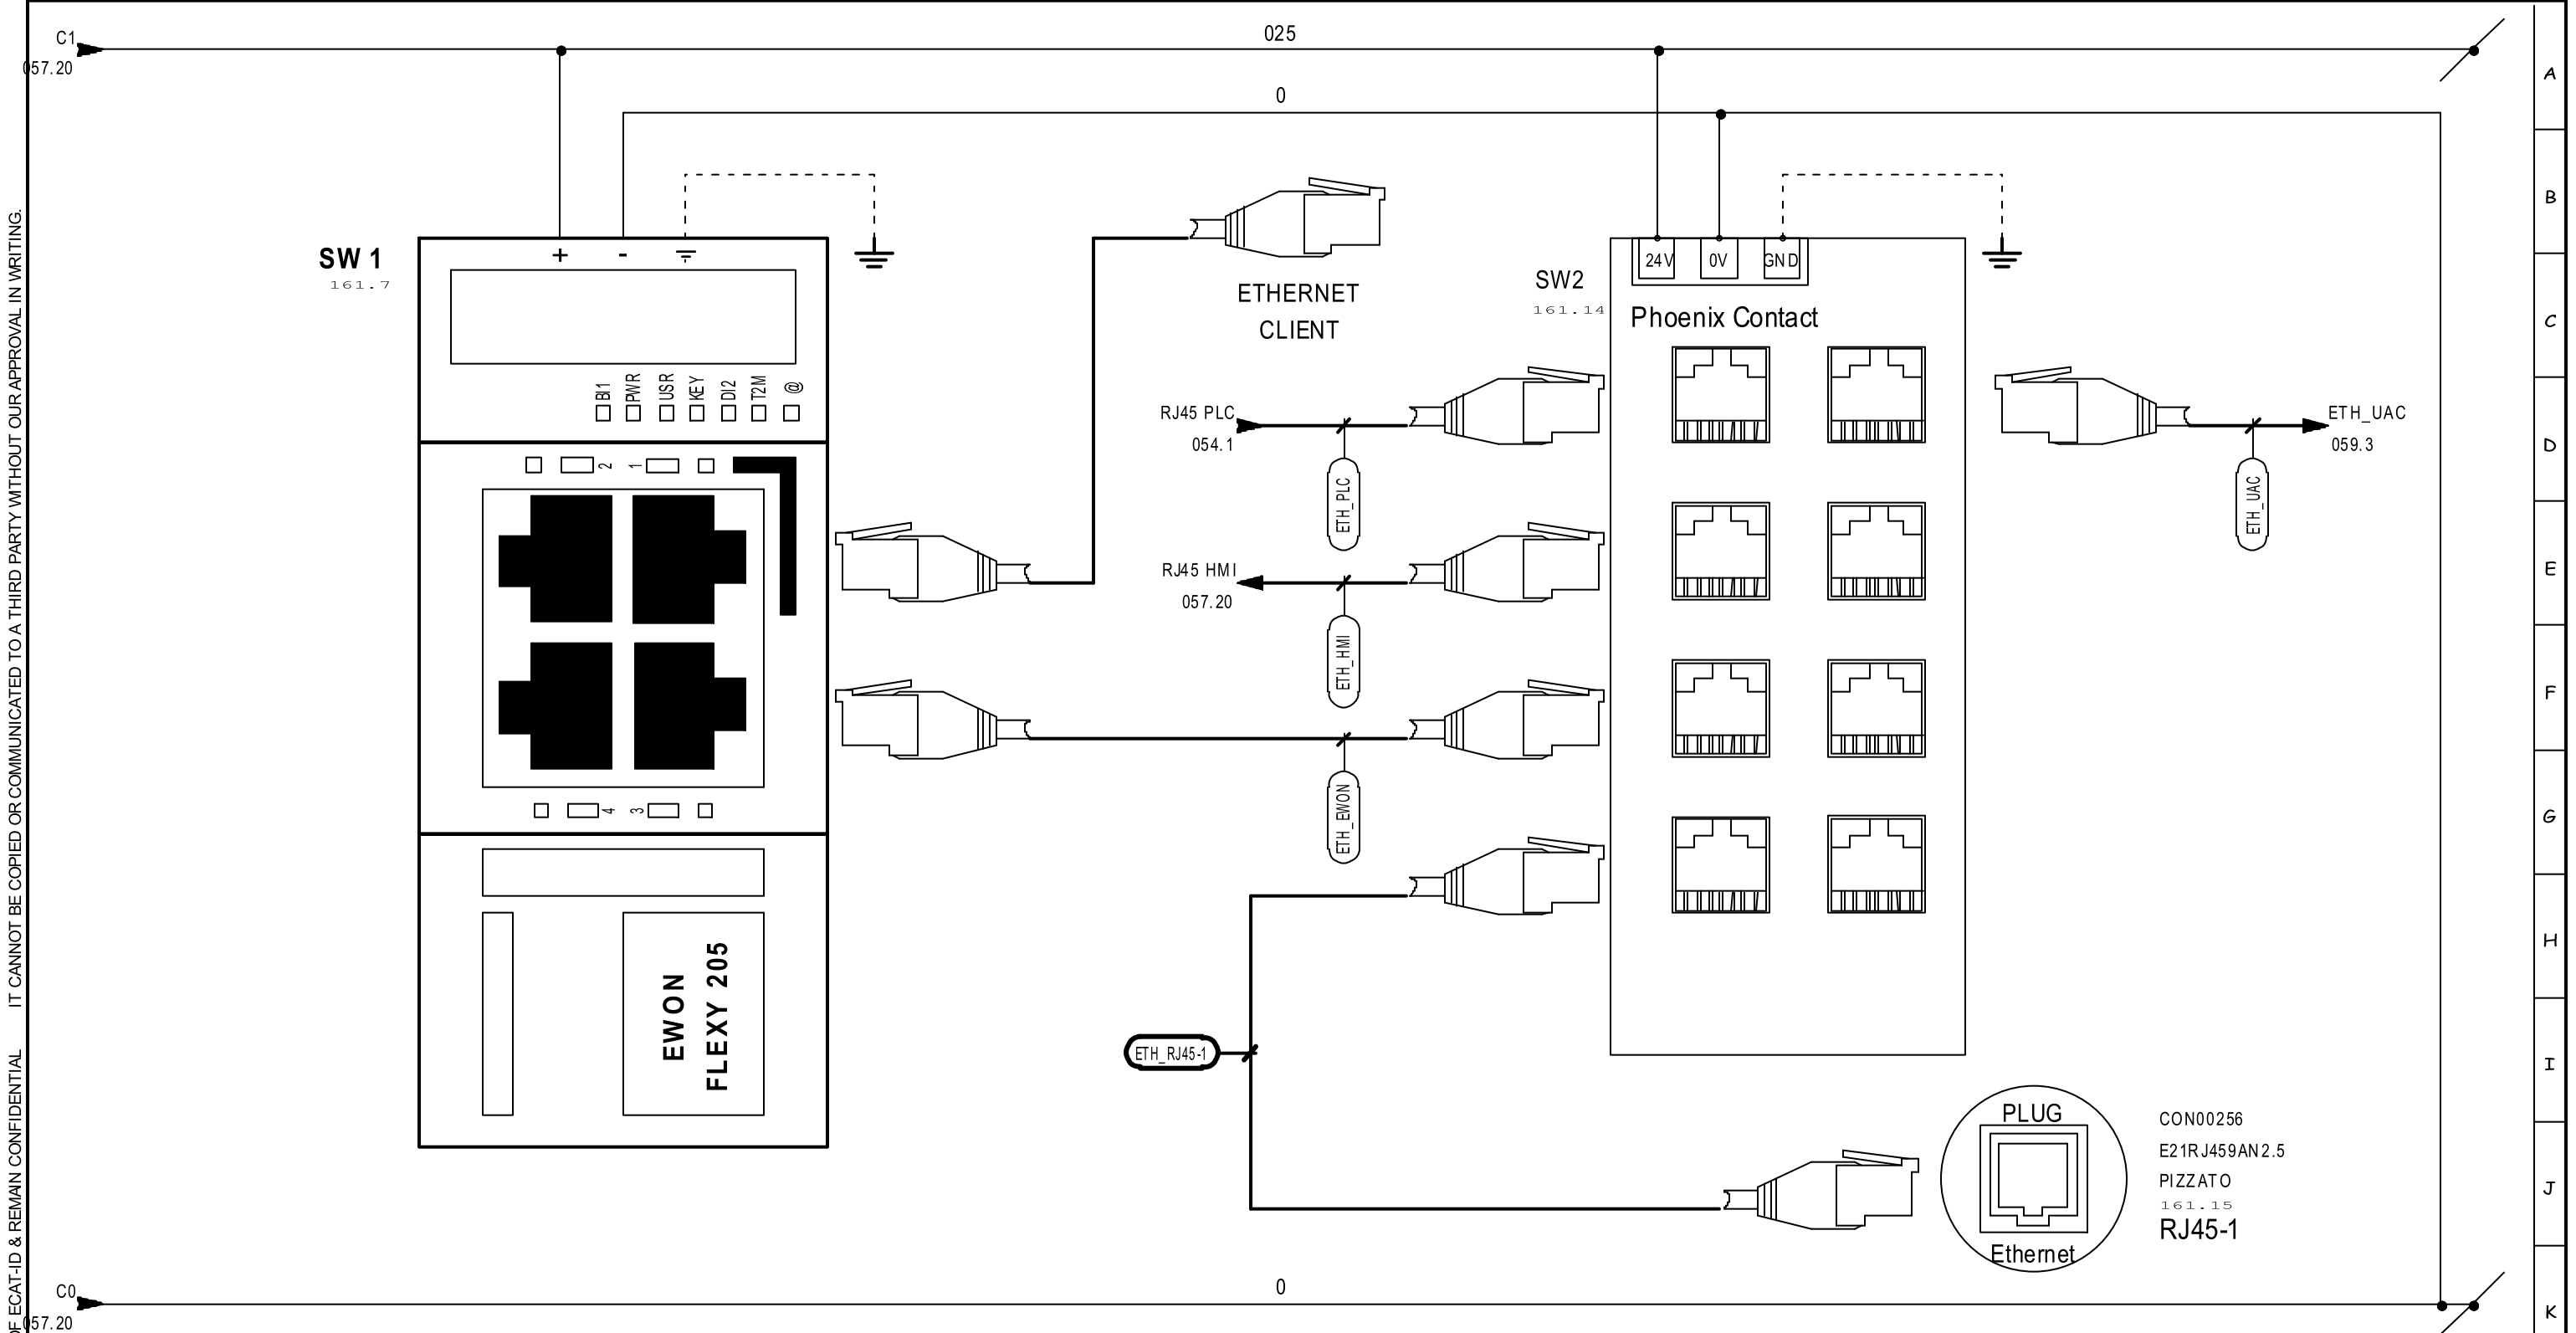

IMPLANTATION RESEAU NETWORK LAY OUT

ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		IMPLANTATION RESEAU				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		NETWORK LAY OUT								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail : ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020										FOLIO : 058/163			

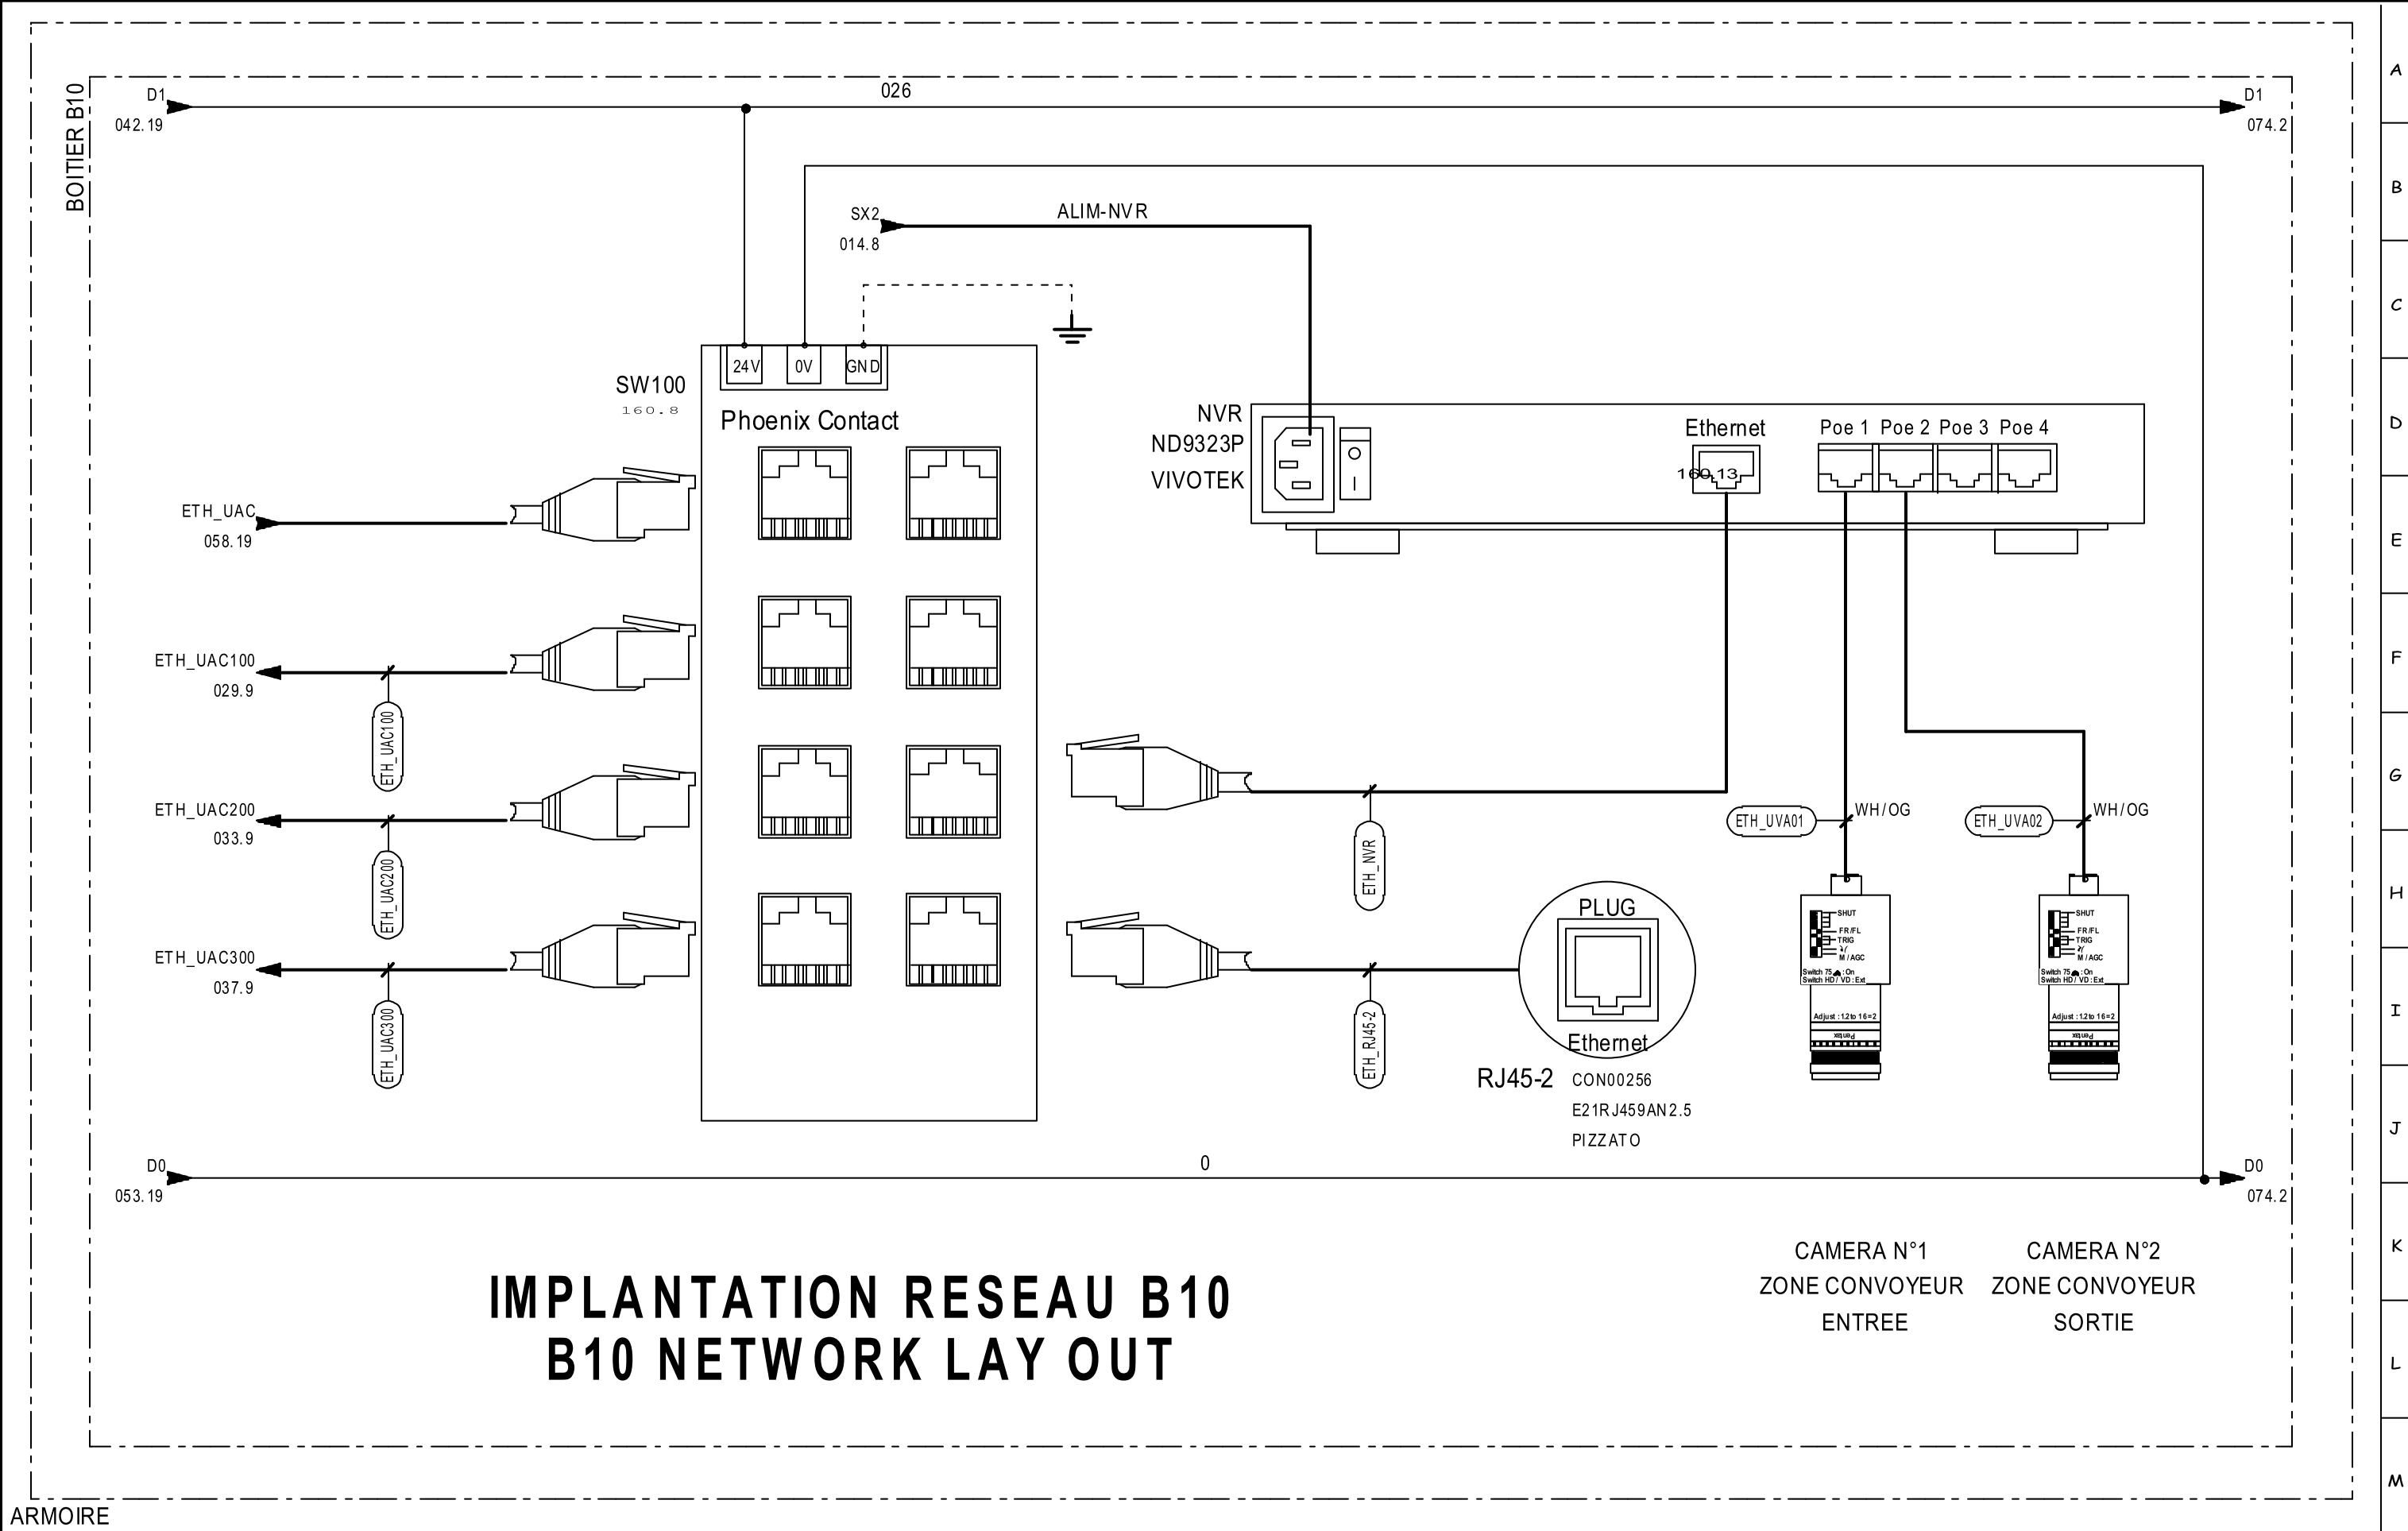

ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -		Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecaticid.service@ceva.com		Date of creation : Designed by : DB		IMPLANTATION RESEAU B10 B10 NETWORK LAY OUT ENVIRONNEMENT : Version 4.49.F - 23/09/2020		 Ecat-iD Campus		CONTRACT : C01422 ARTICLE : SMXA-C014221		CUSTOMER : COOP LAR		COUNTRY : BRESIL INDEX : V11 FOLIO : 059/163					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

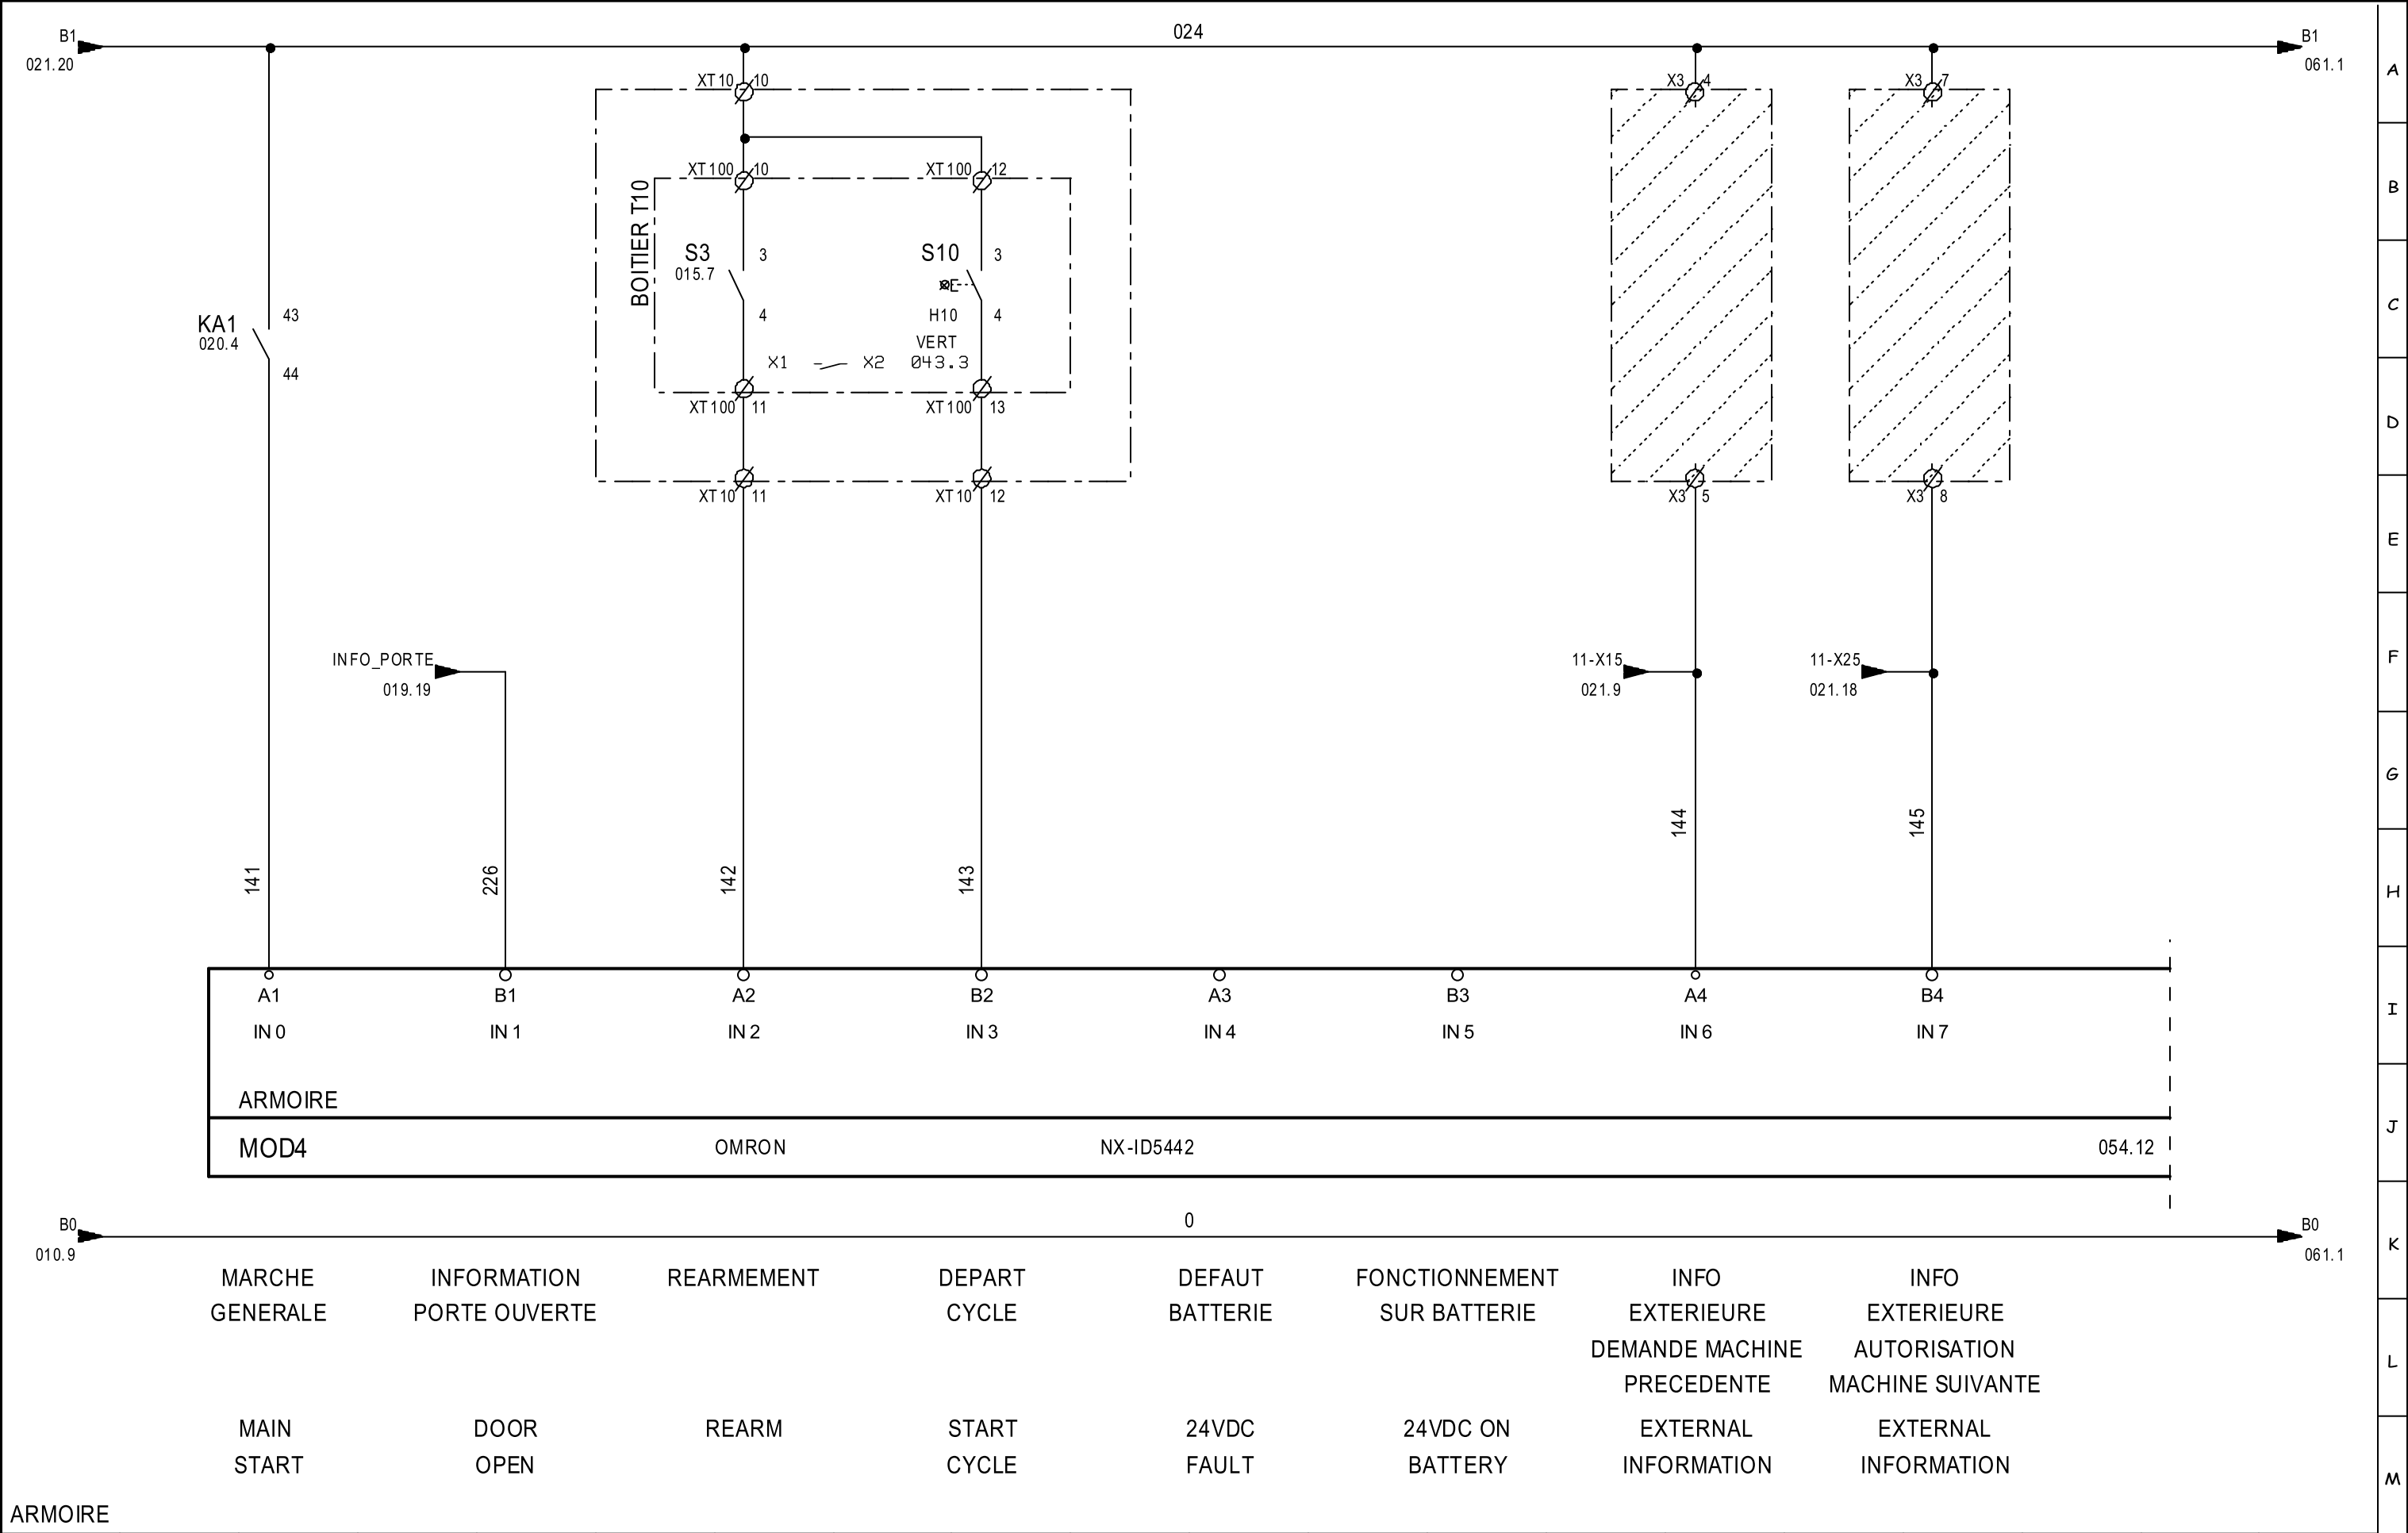


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél :(33).2.98.85.31.36		Date of creation :		ENTREES MOD4				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax :(33).2.98.85.31.38		Designed by : DB		INPUTS MOD4								ARTICLE :		SMXA-C014221		INDEX : V11	
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								FOLIO : 060/163					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

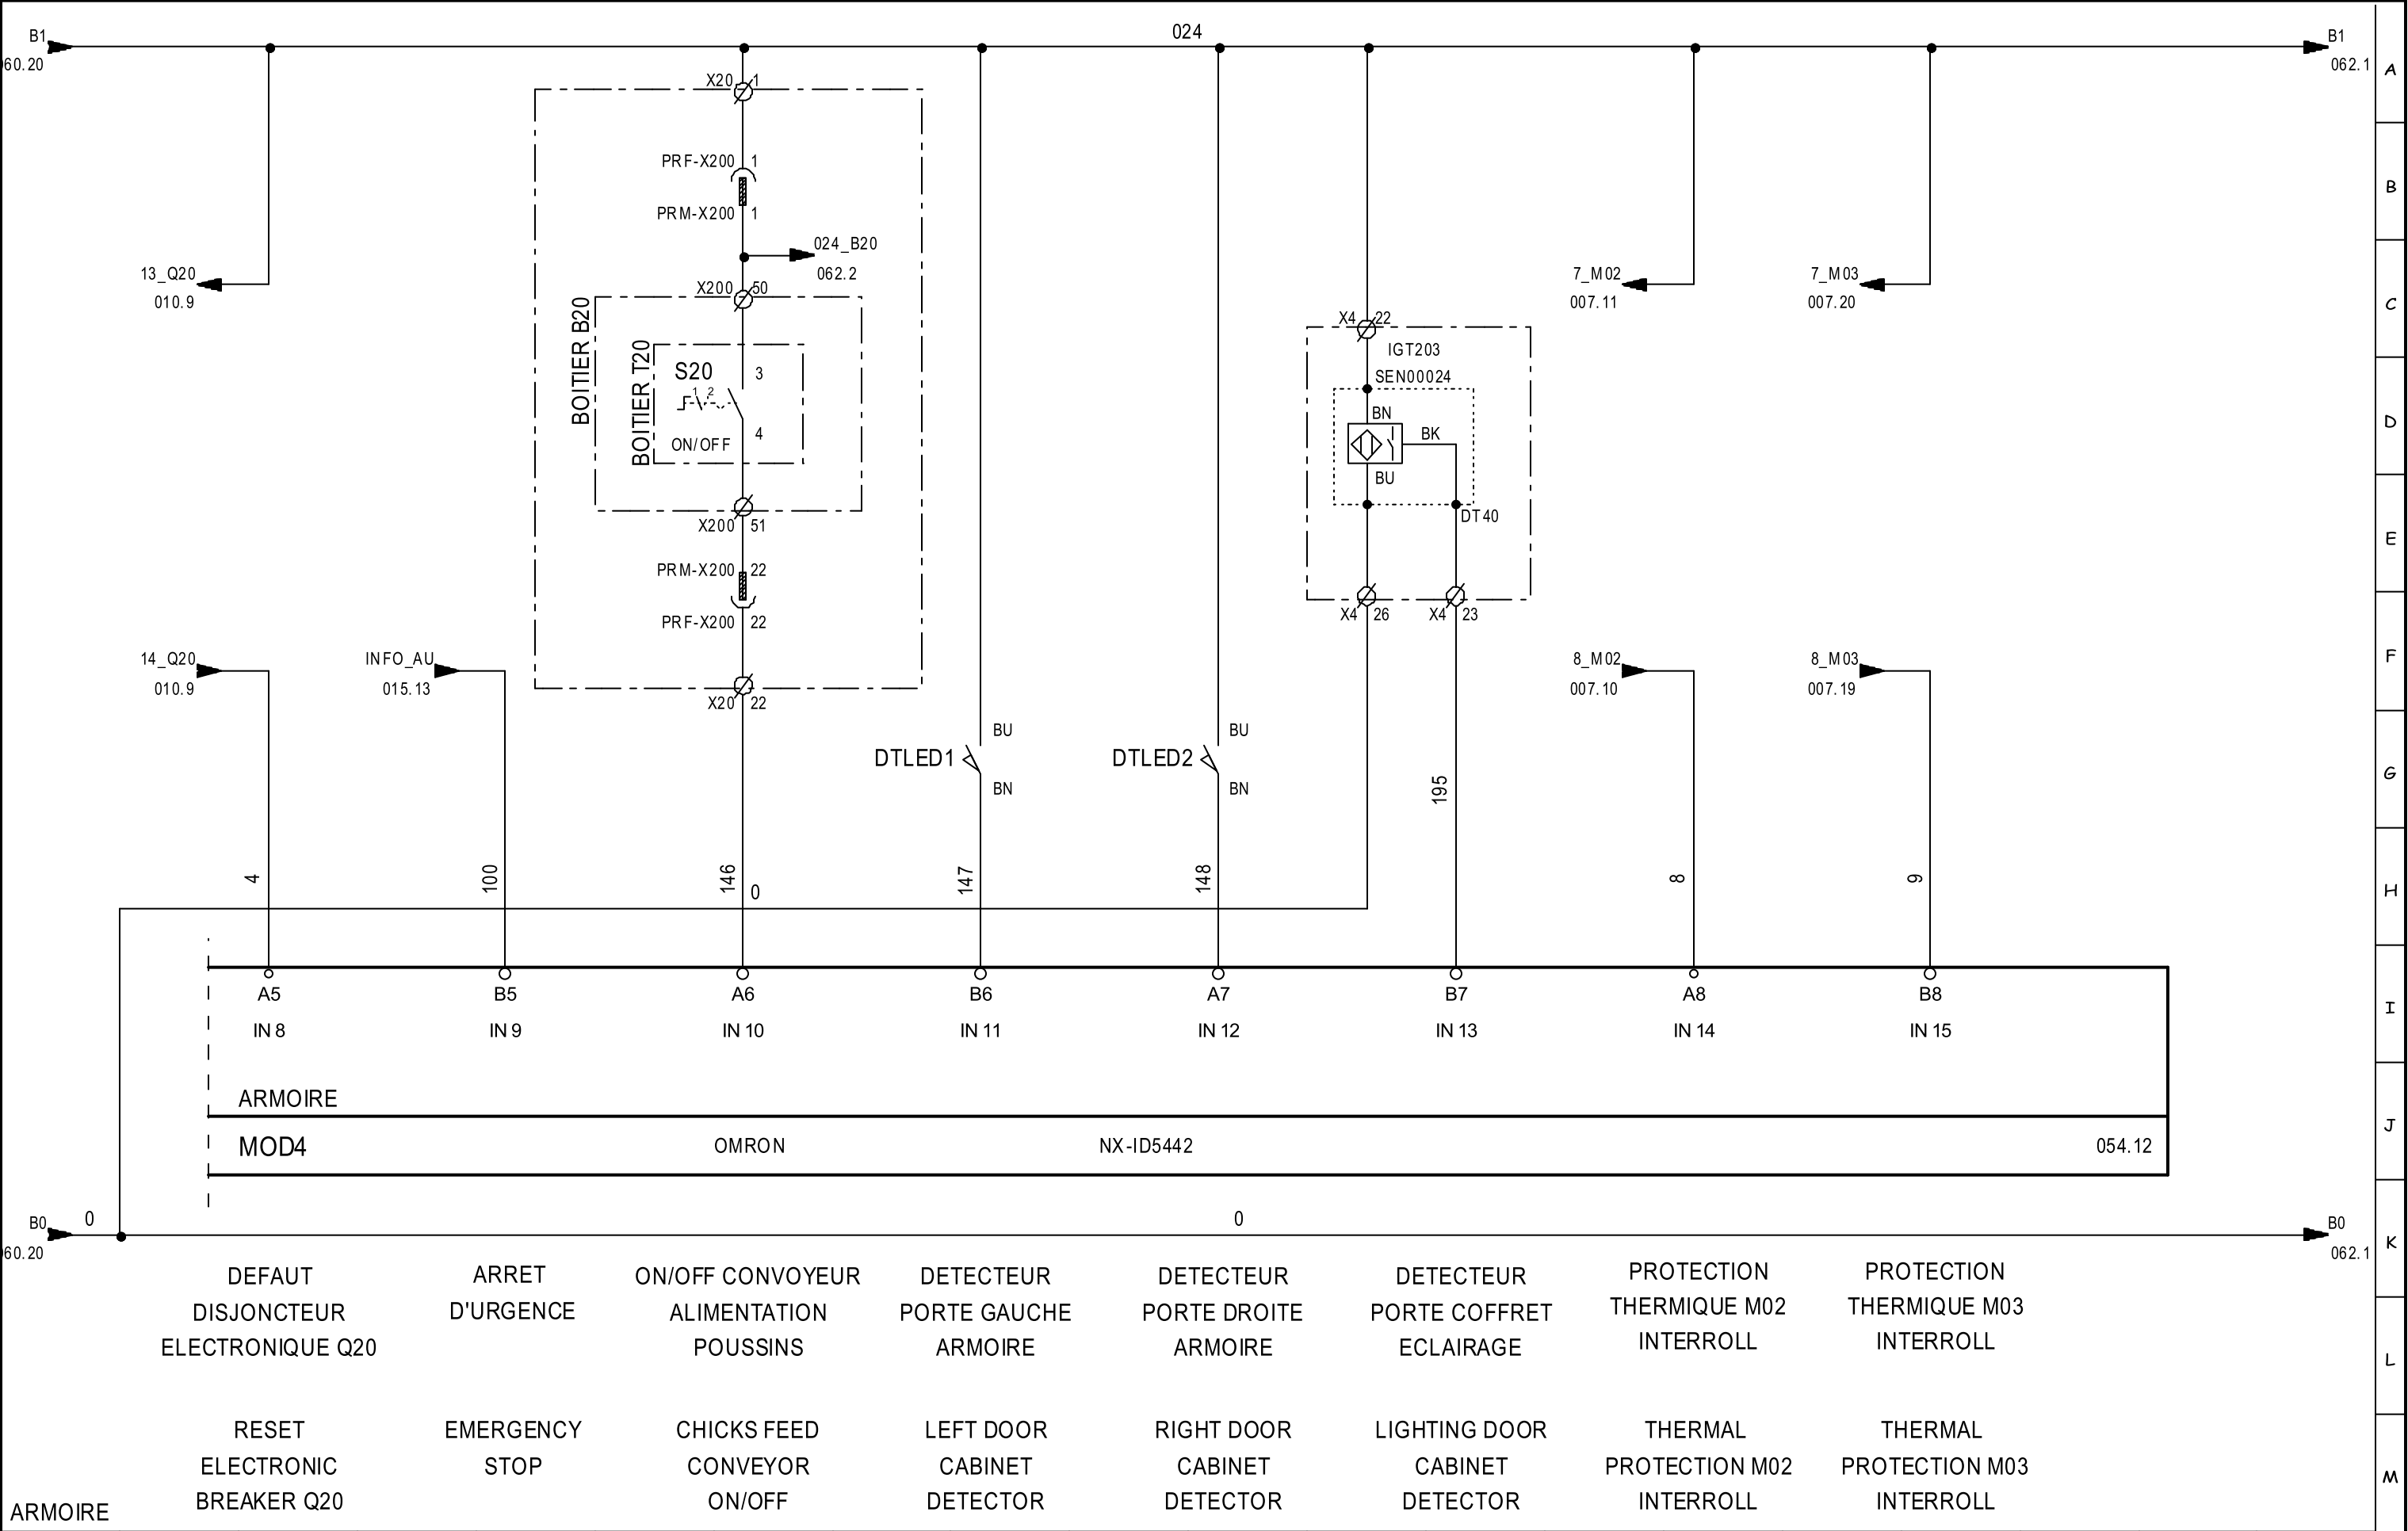

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél :(33).2.98.85.31.36		Date of creation :		ENTREES MOD4				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax :(33).2.98.85.31.38		Designed by : DB		INPUTS MOD4								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 061/163			


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

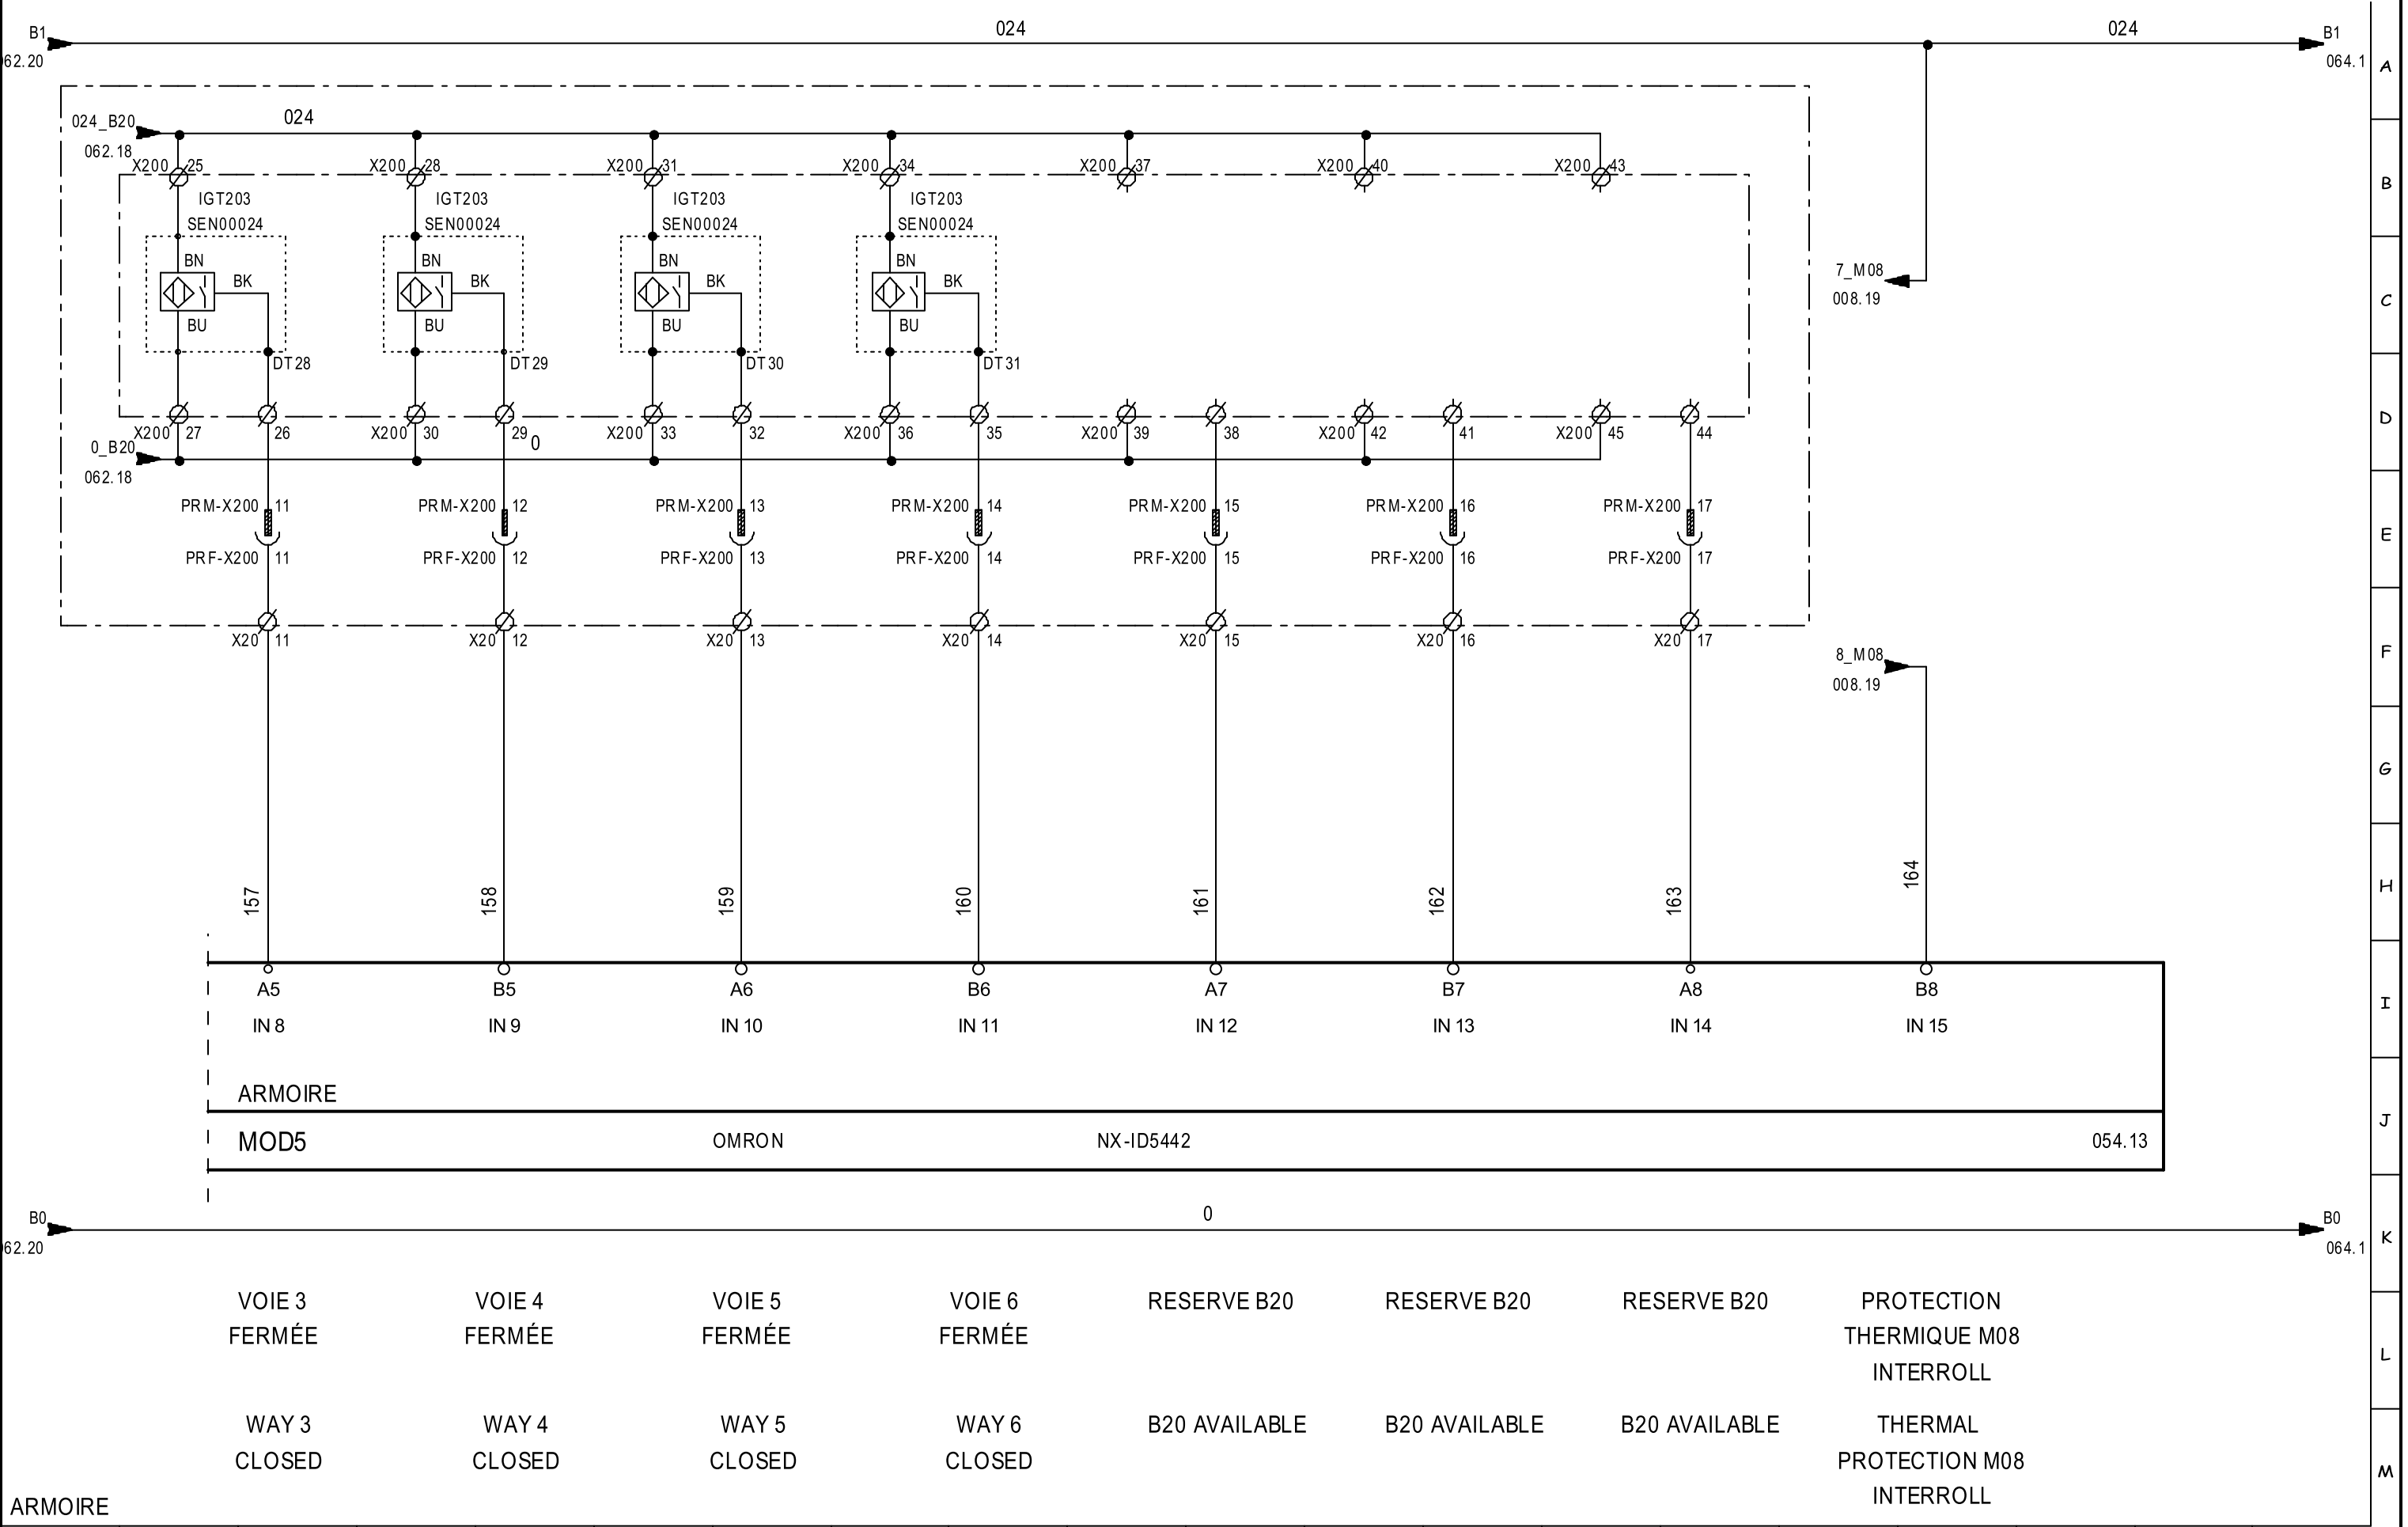


ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		ENTREES MOD5				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INPUTS MOD5								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020										FOLIO : 063/163			


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

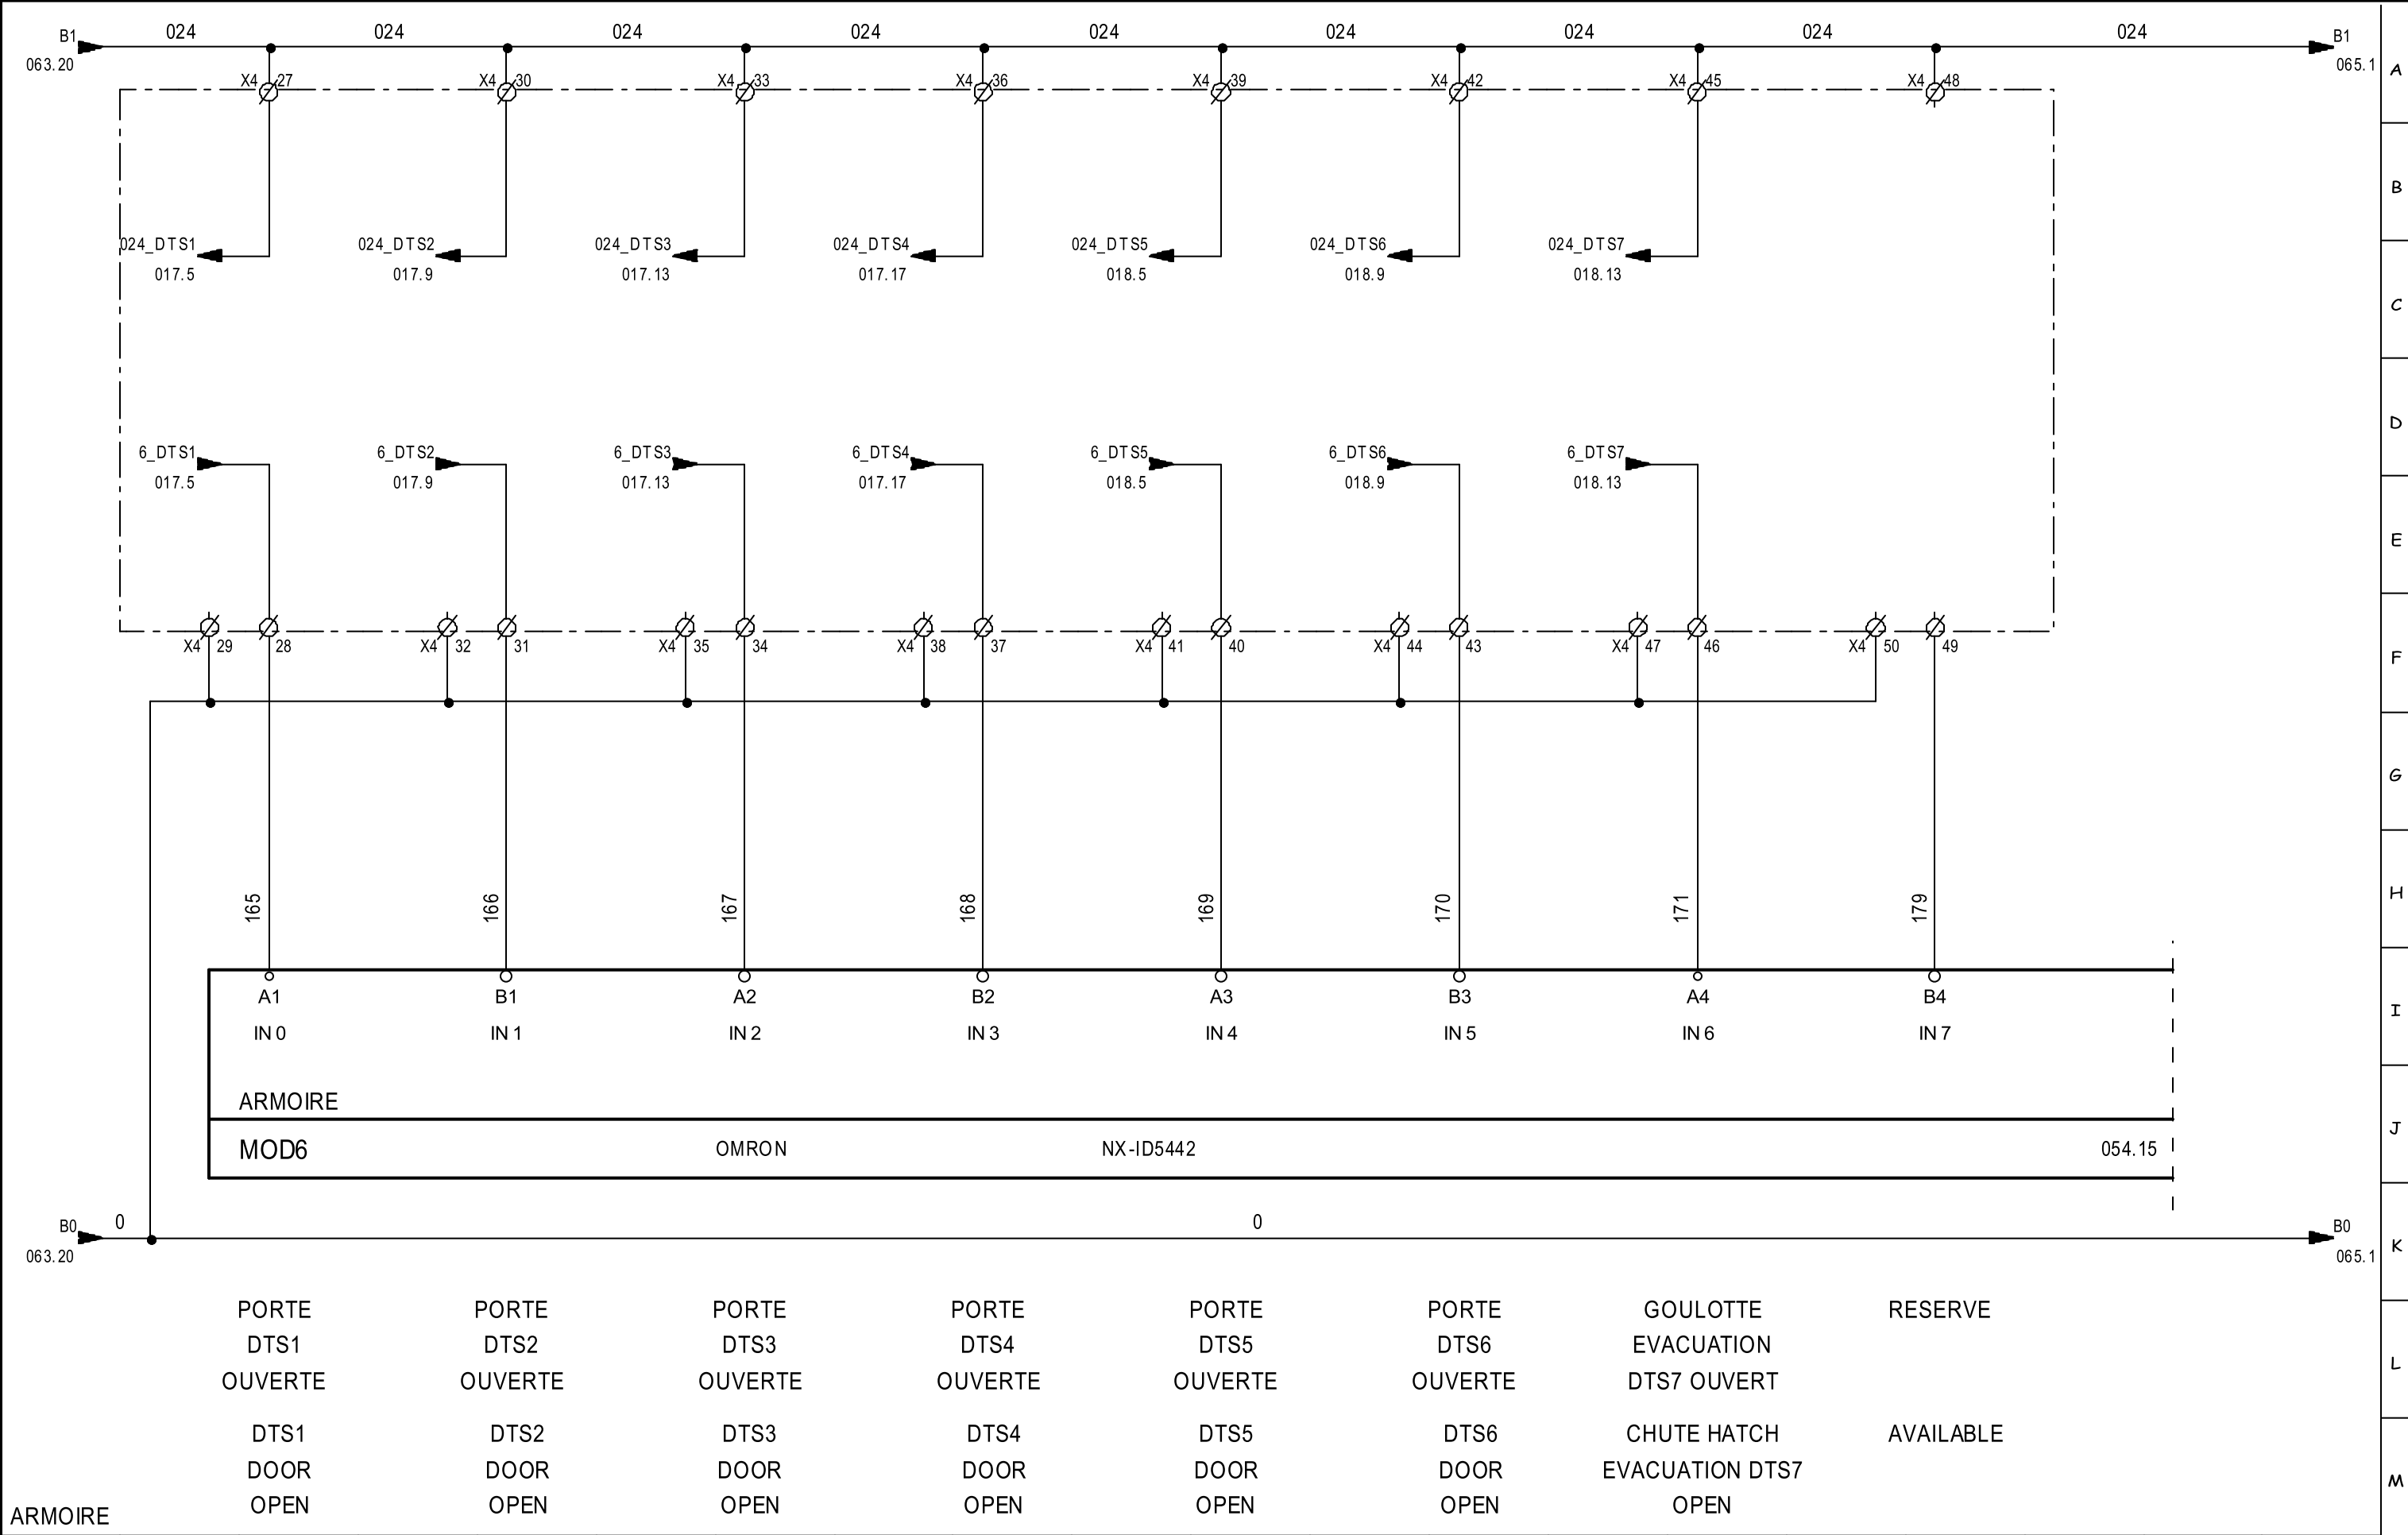

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

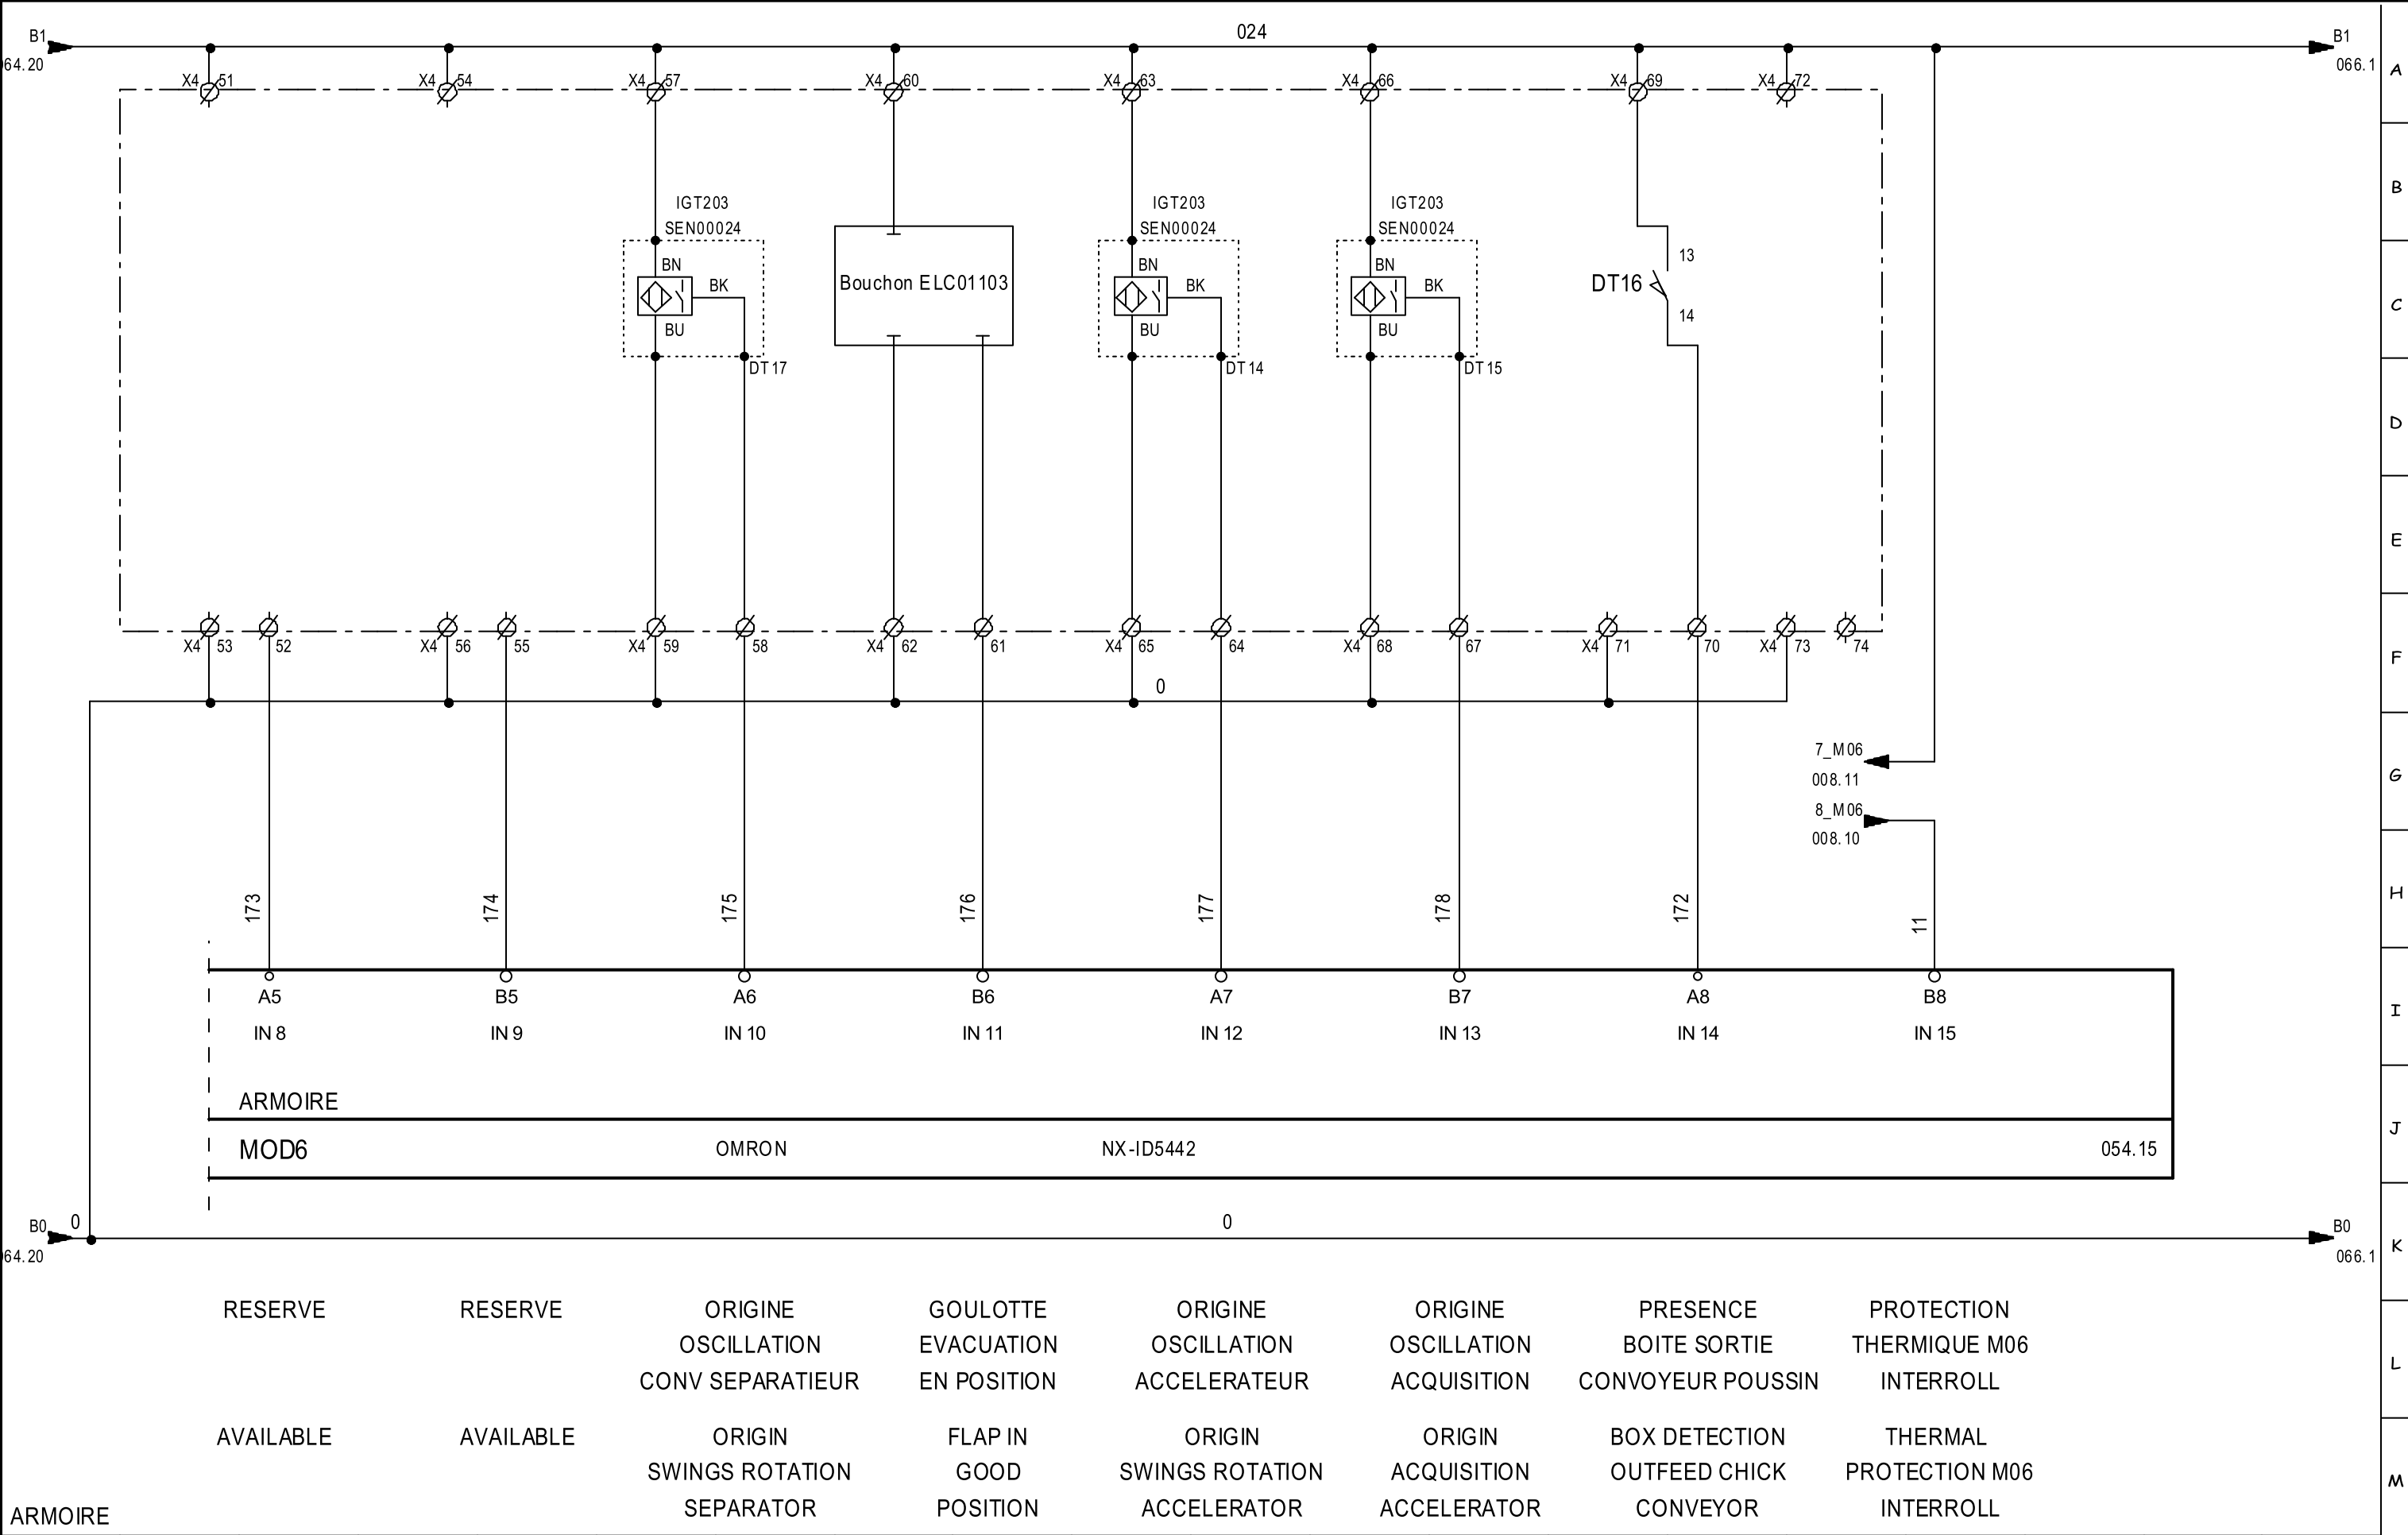


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

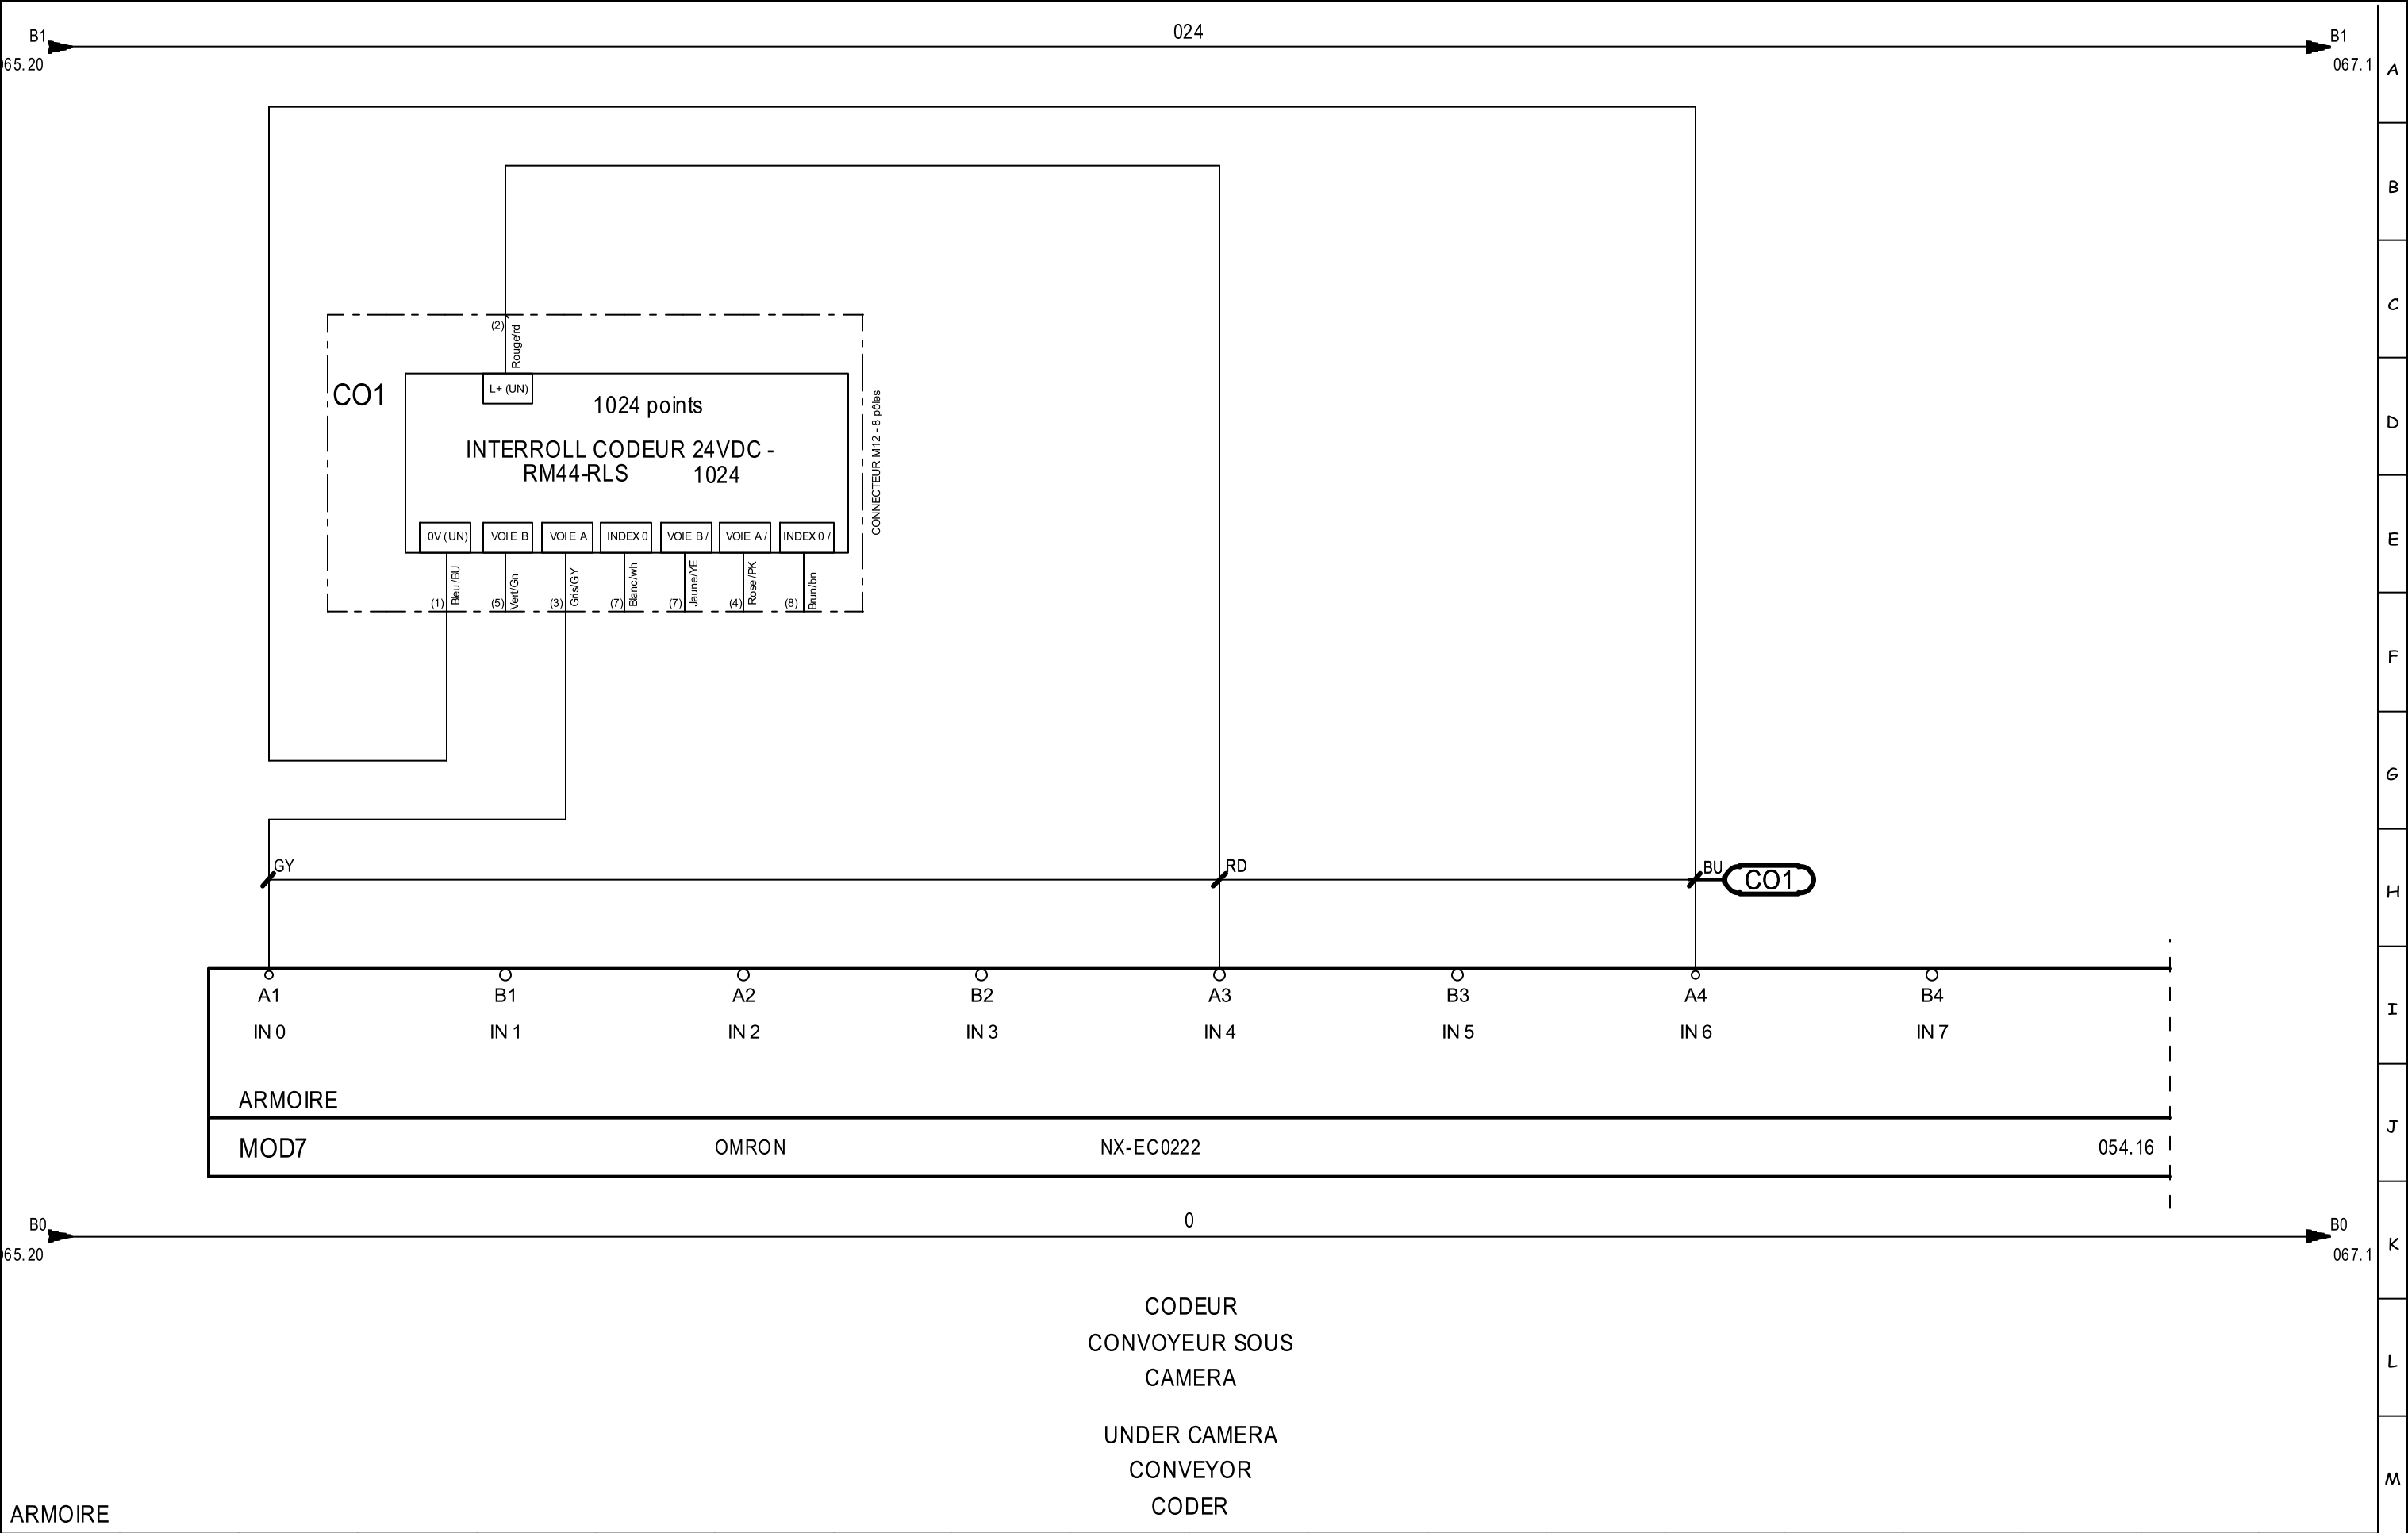

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		ENTREES MOD7				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INPUTS MOD7								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020										FOLIO : 066/163			


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

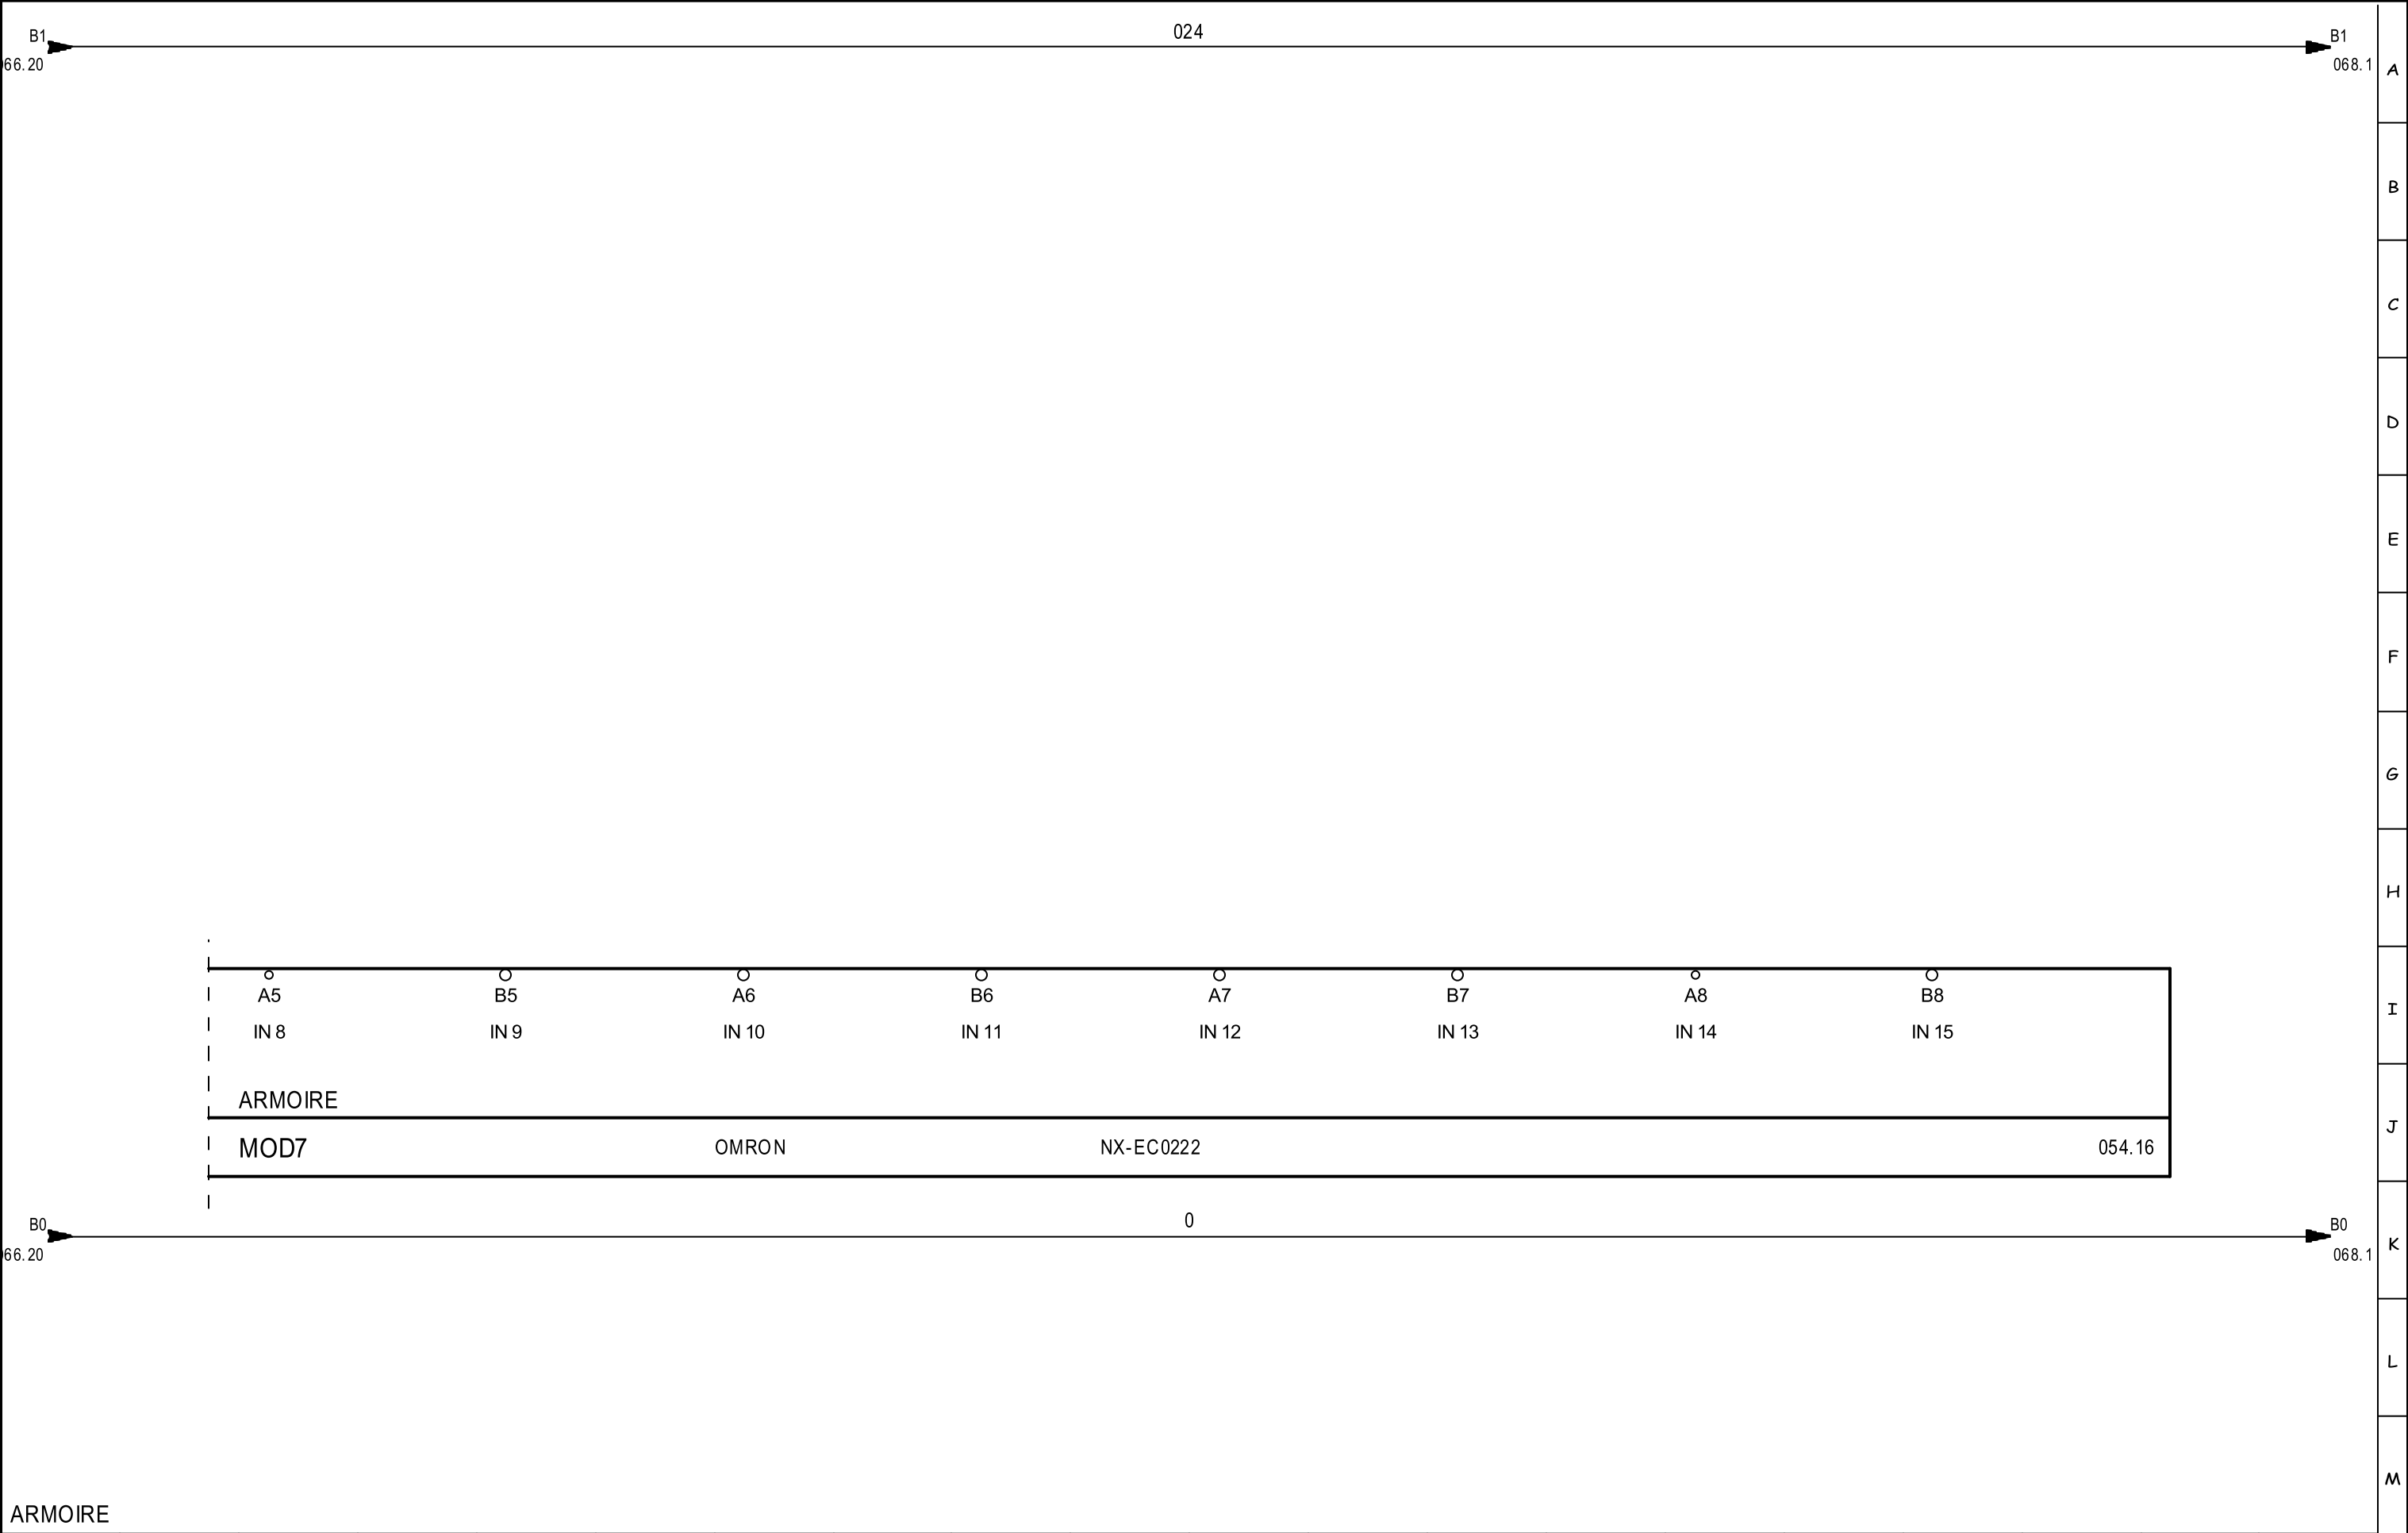


ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél :(33).2.98.85.31.36		Date of creation :		ENTREES MOD7				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax :(33).2.98.85.31.38		Designed by : DB		INPUTS MOD7								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								FOLIO : 067/163					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

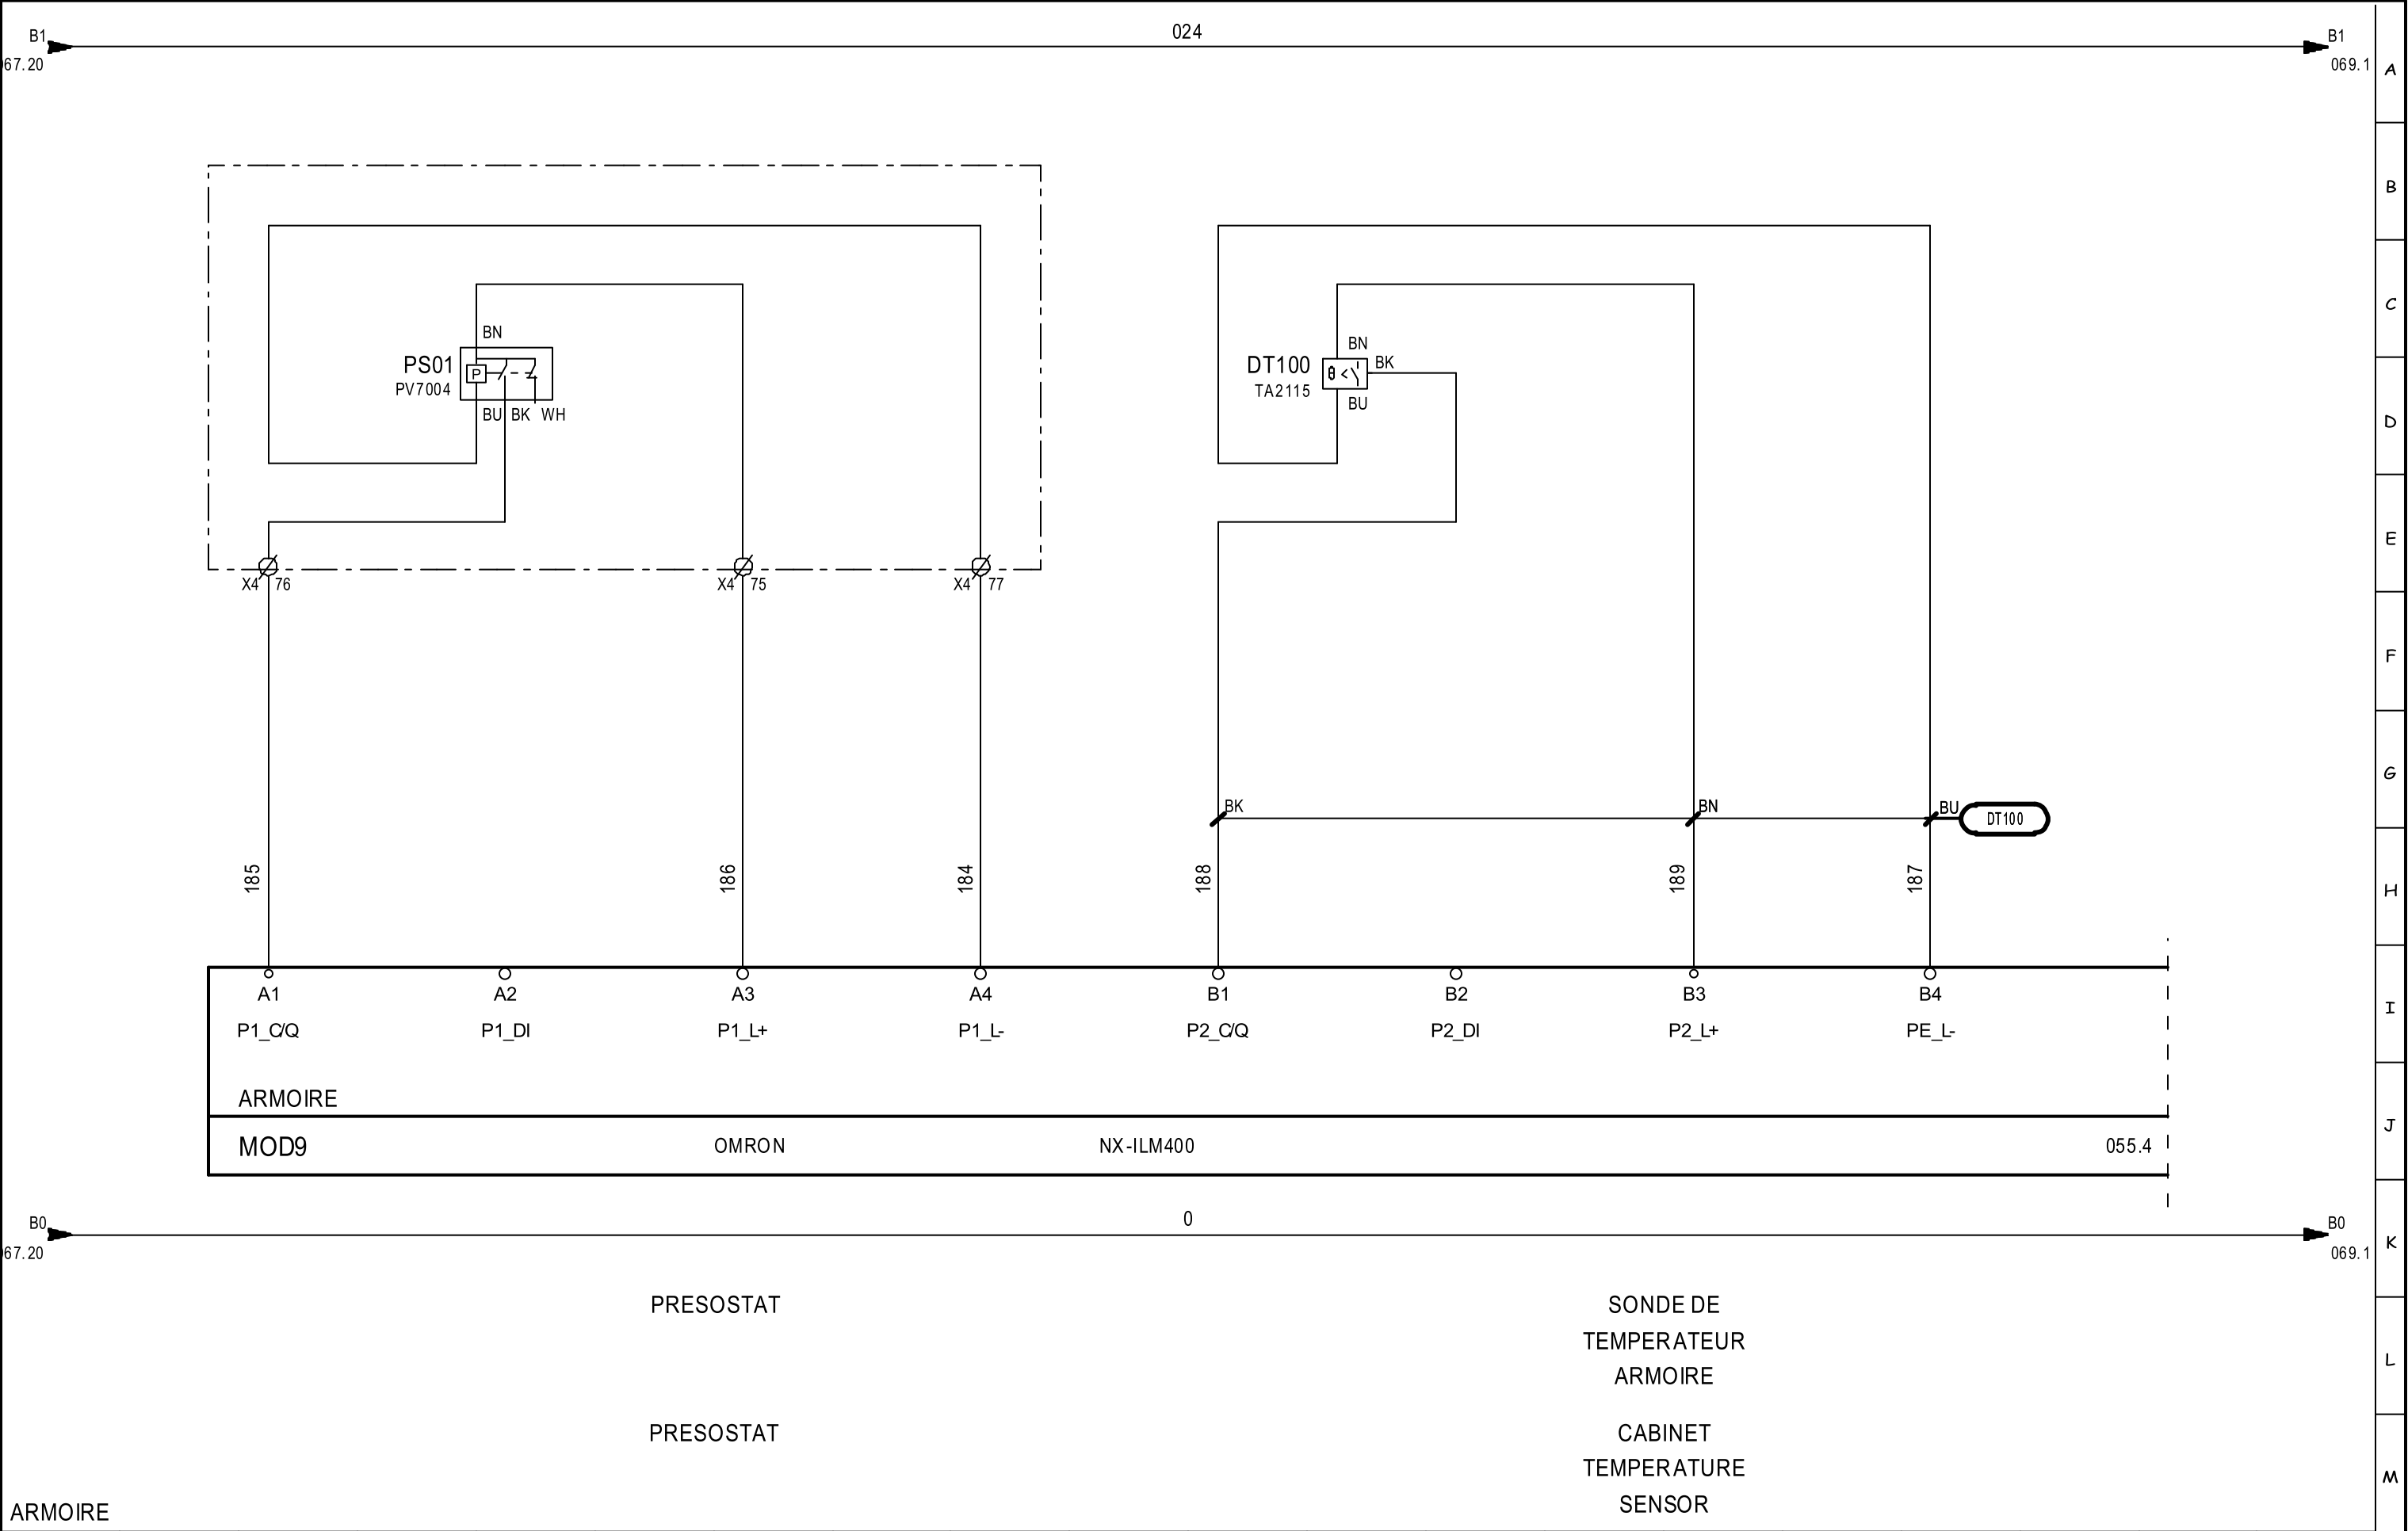


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		I/O LINK MOD8				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		I/O LINK MOD8								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								068/163					

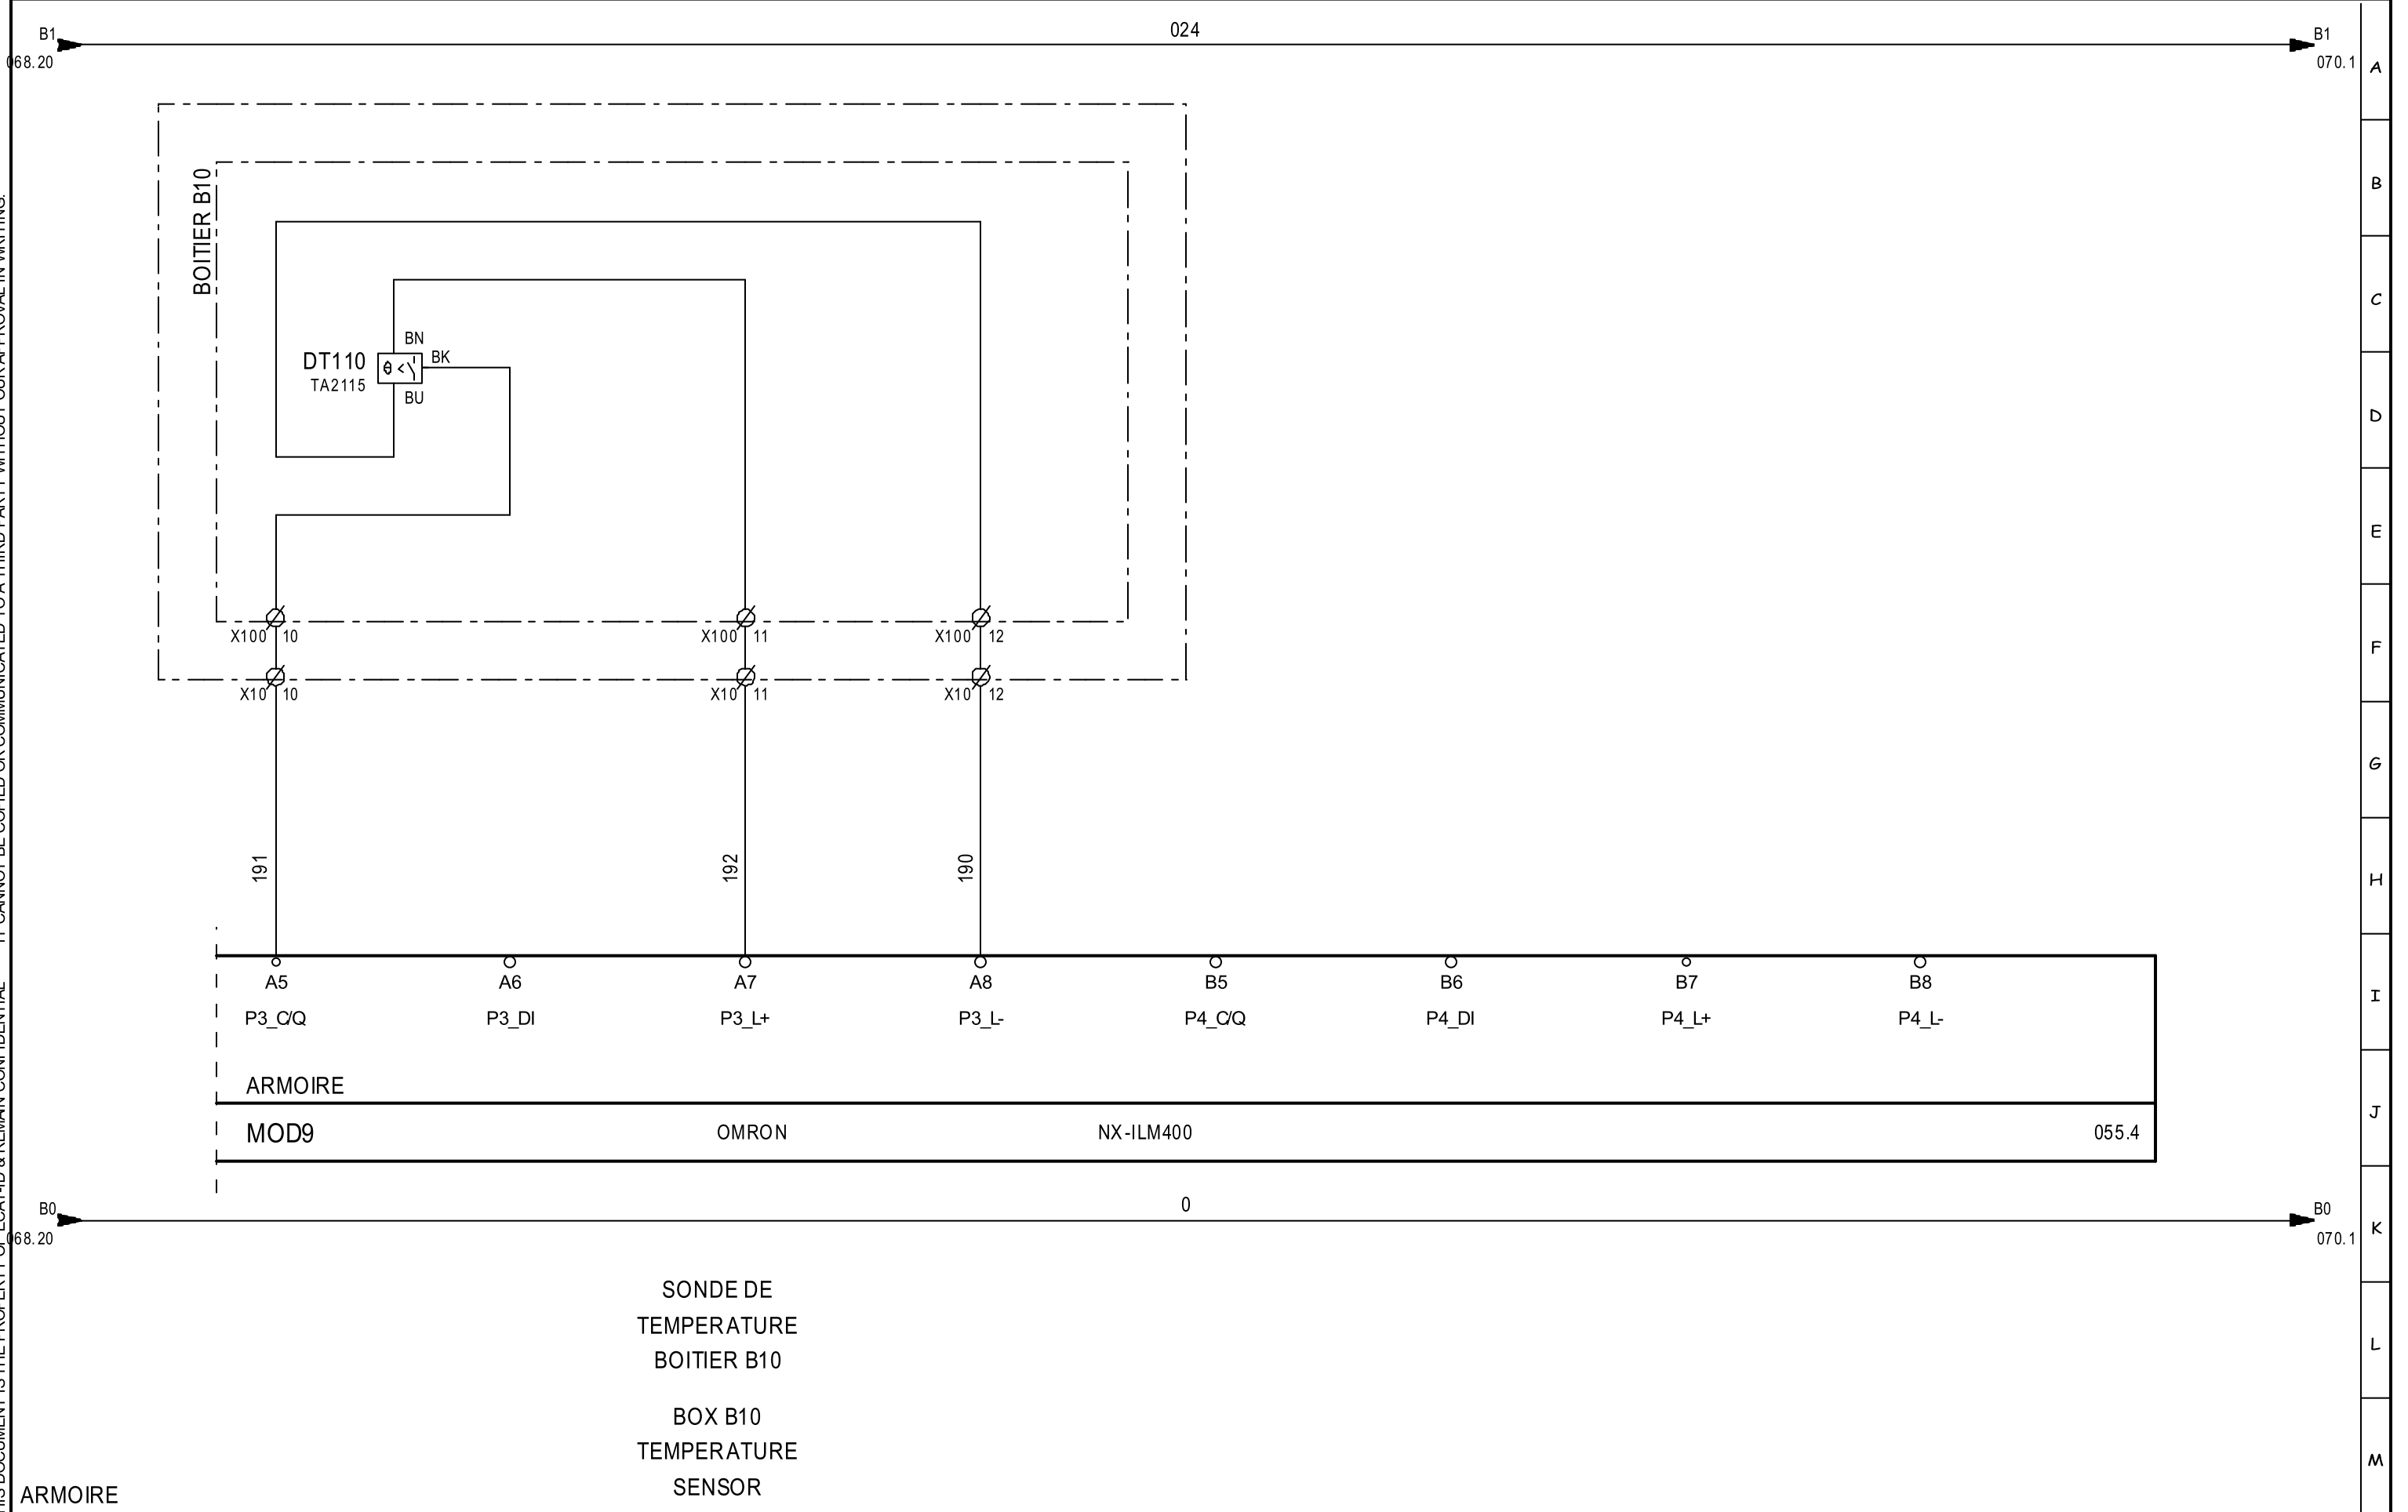


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation :		I/O LINK MOD8				 Ecata-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		I/O LINK MOD8								ARTICLE : SMXA-C014221				INDEX : V11	
			E-mail : ecataid.service@ceva.com		ENVIRONNEMENT : Version 4.49.F - 23/09/2020				069/163											

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

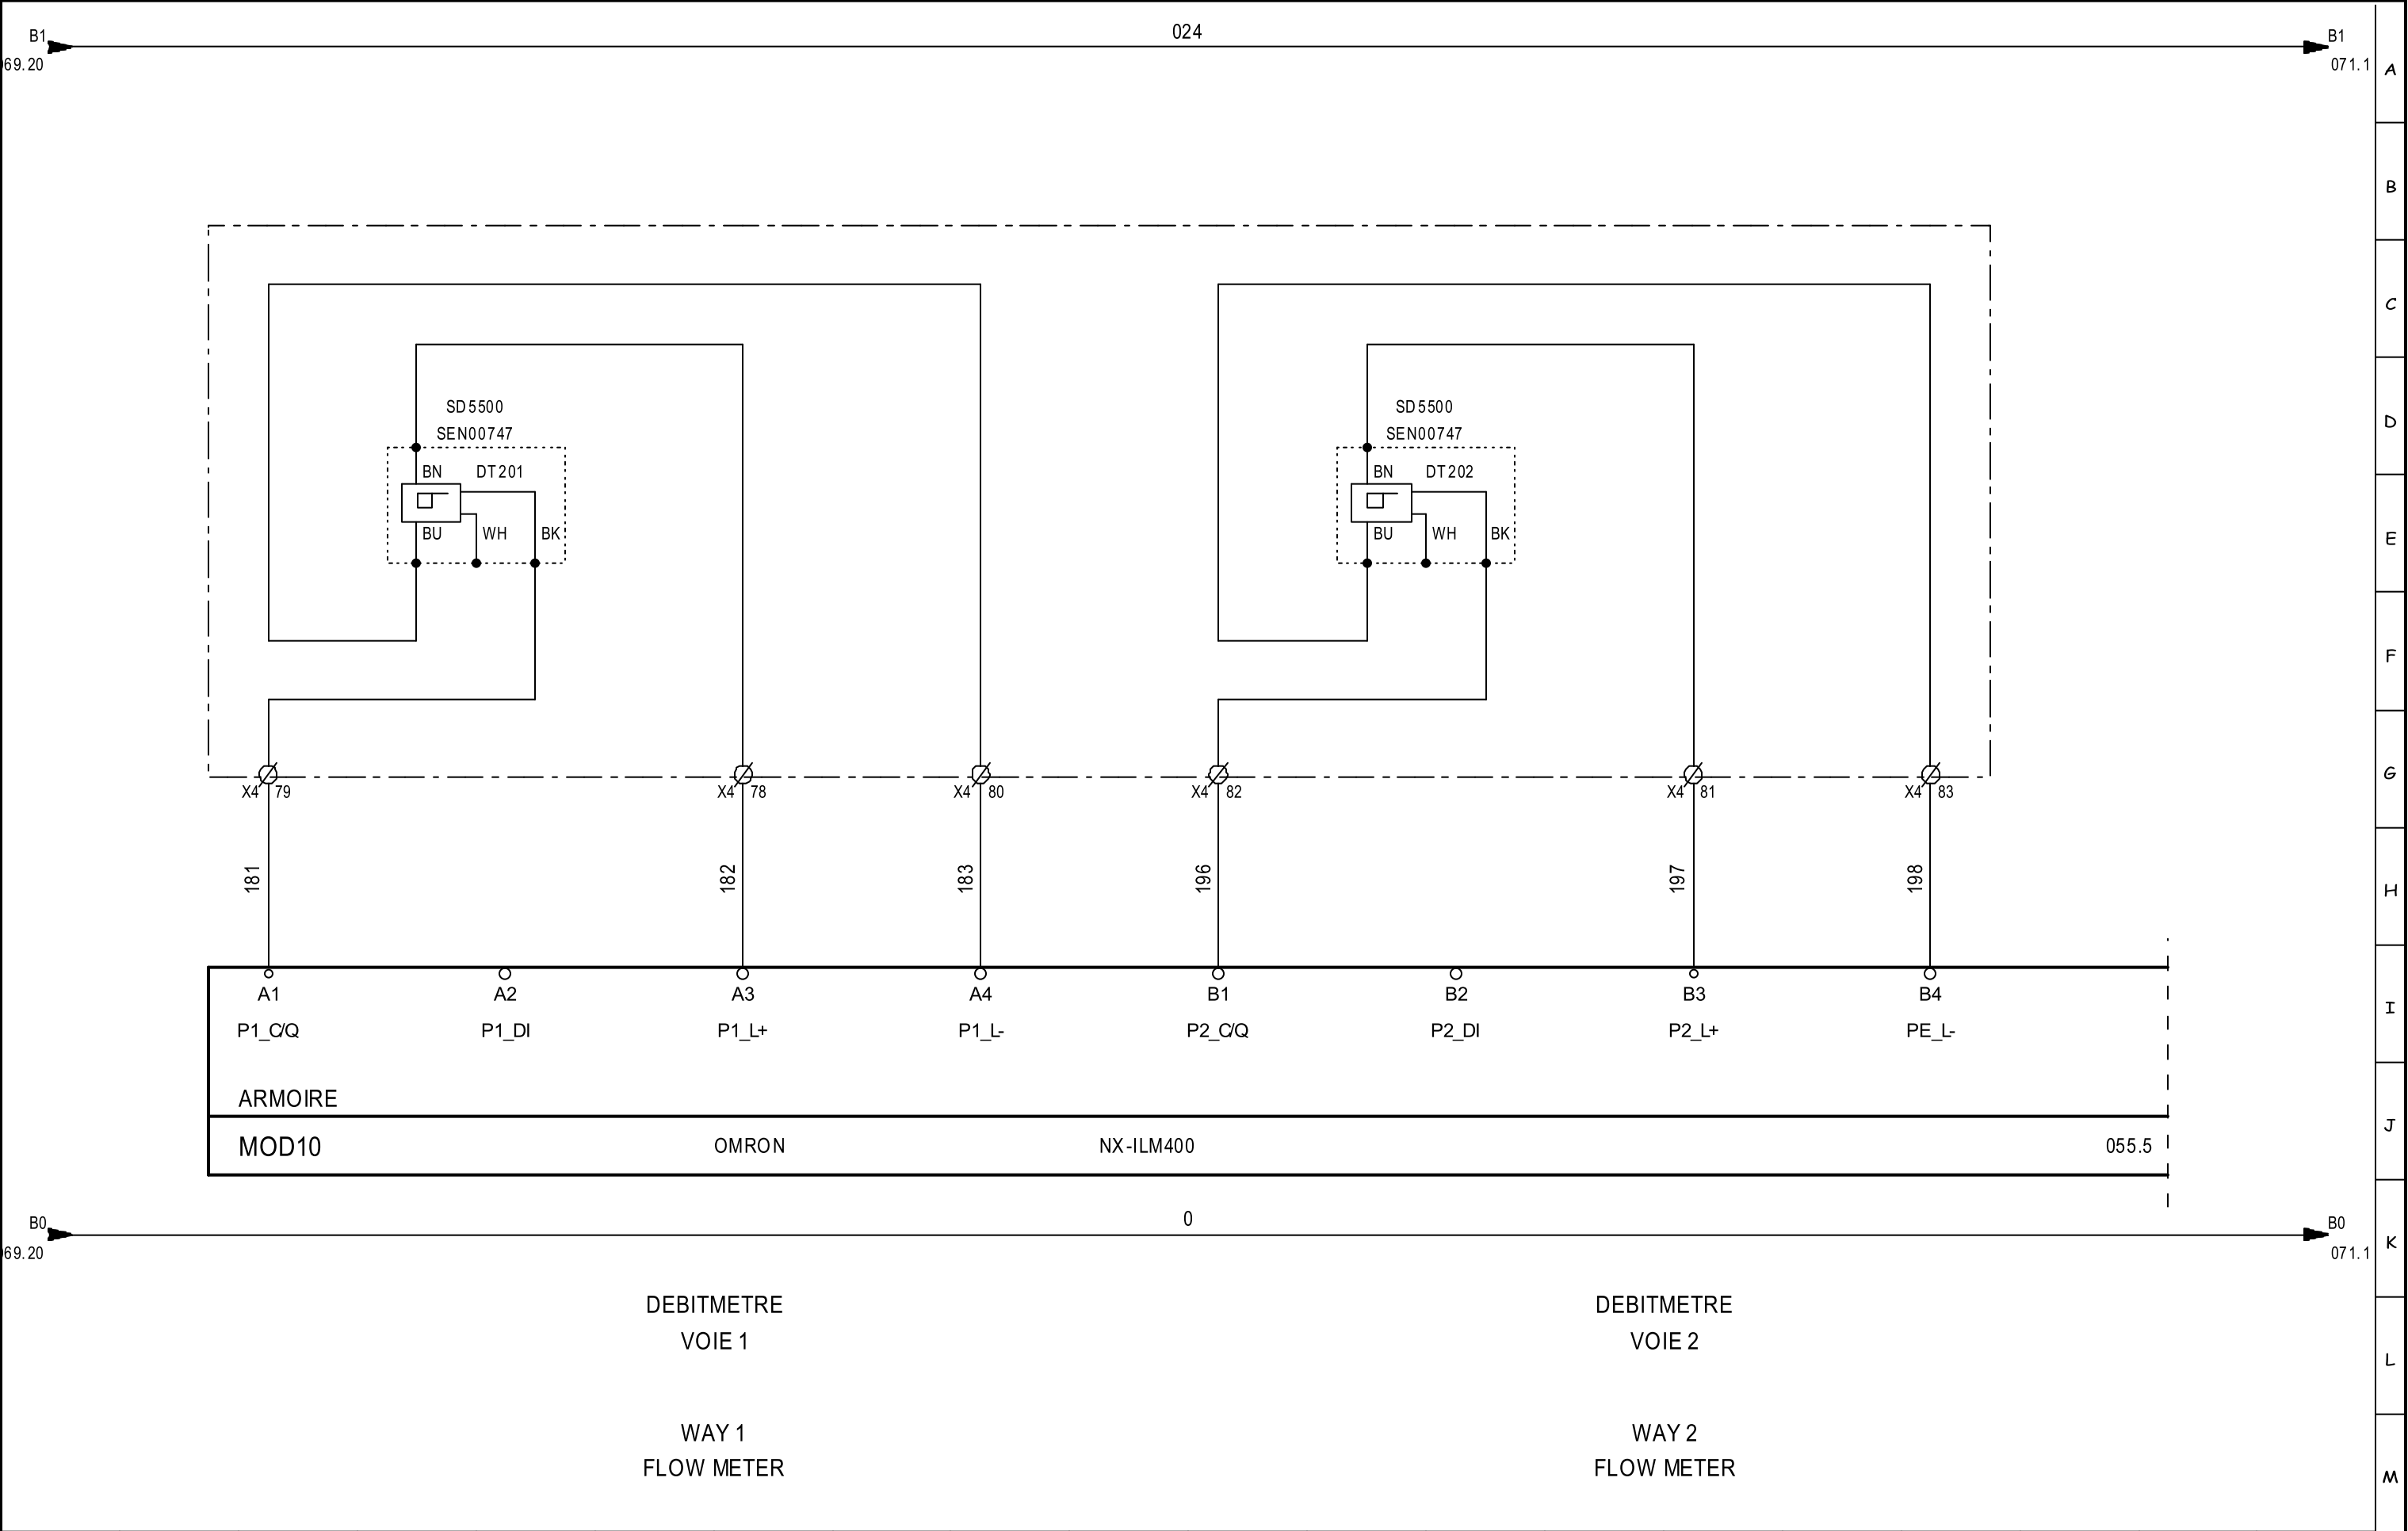


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 02/04/2024		I/O LINK MOD9				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR			COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		I/O LINK MOD9								ARTICLE : SMXA-C014221		INDEX : V11				
			E-mail :ecatid.service@ceva.com		ENVIRONNEMENT :Version 4.49.F - 23/09/2020				FOLIO : 070/163												

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

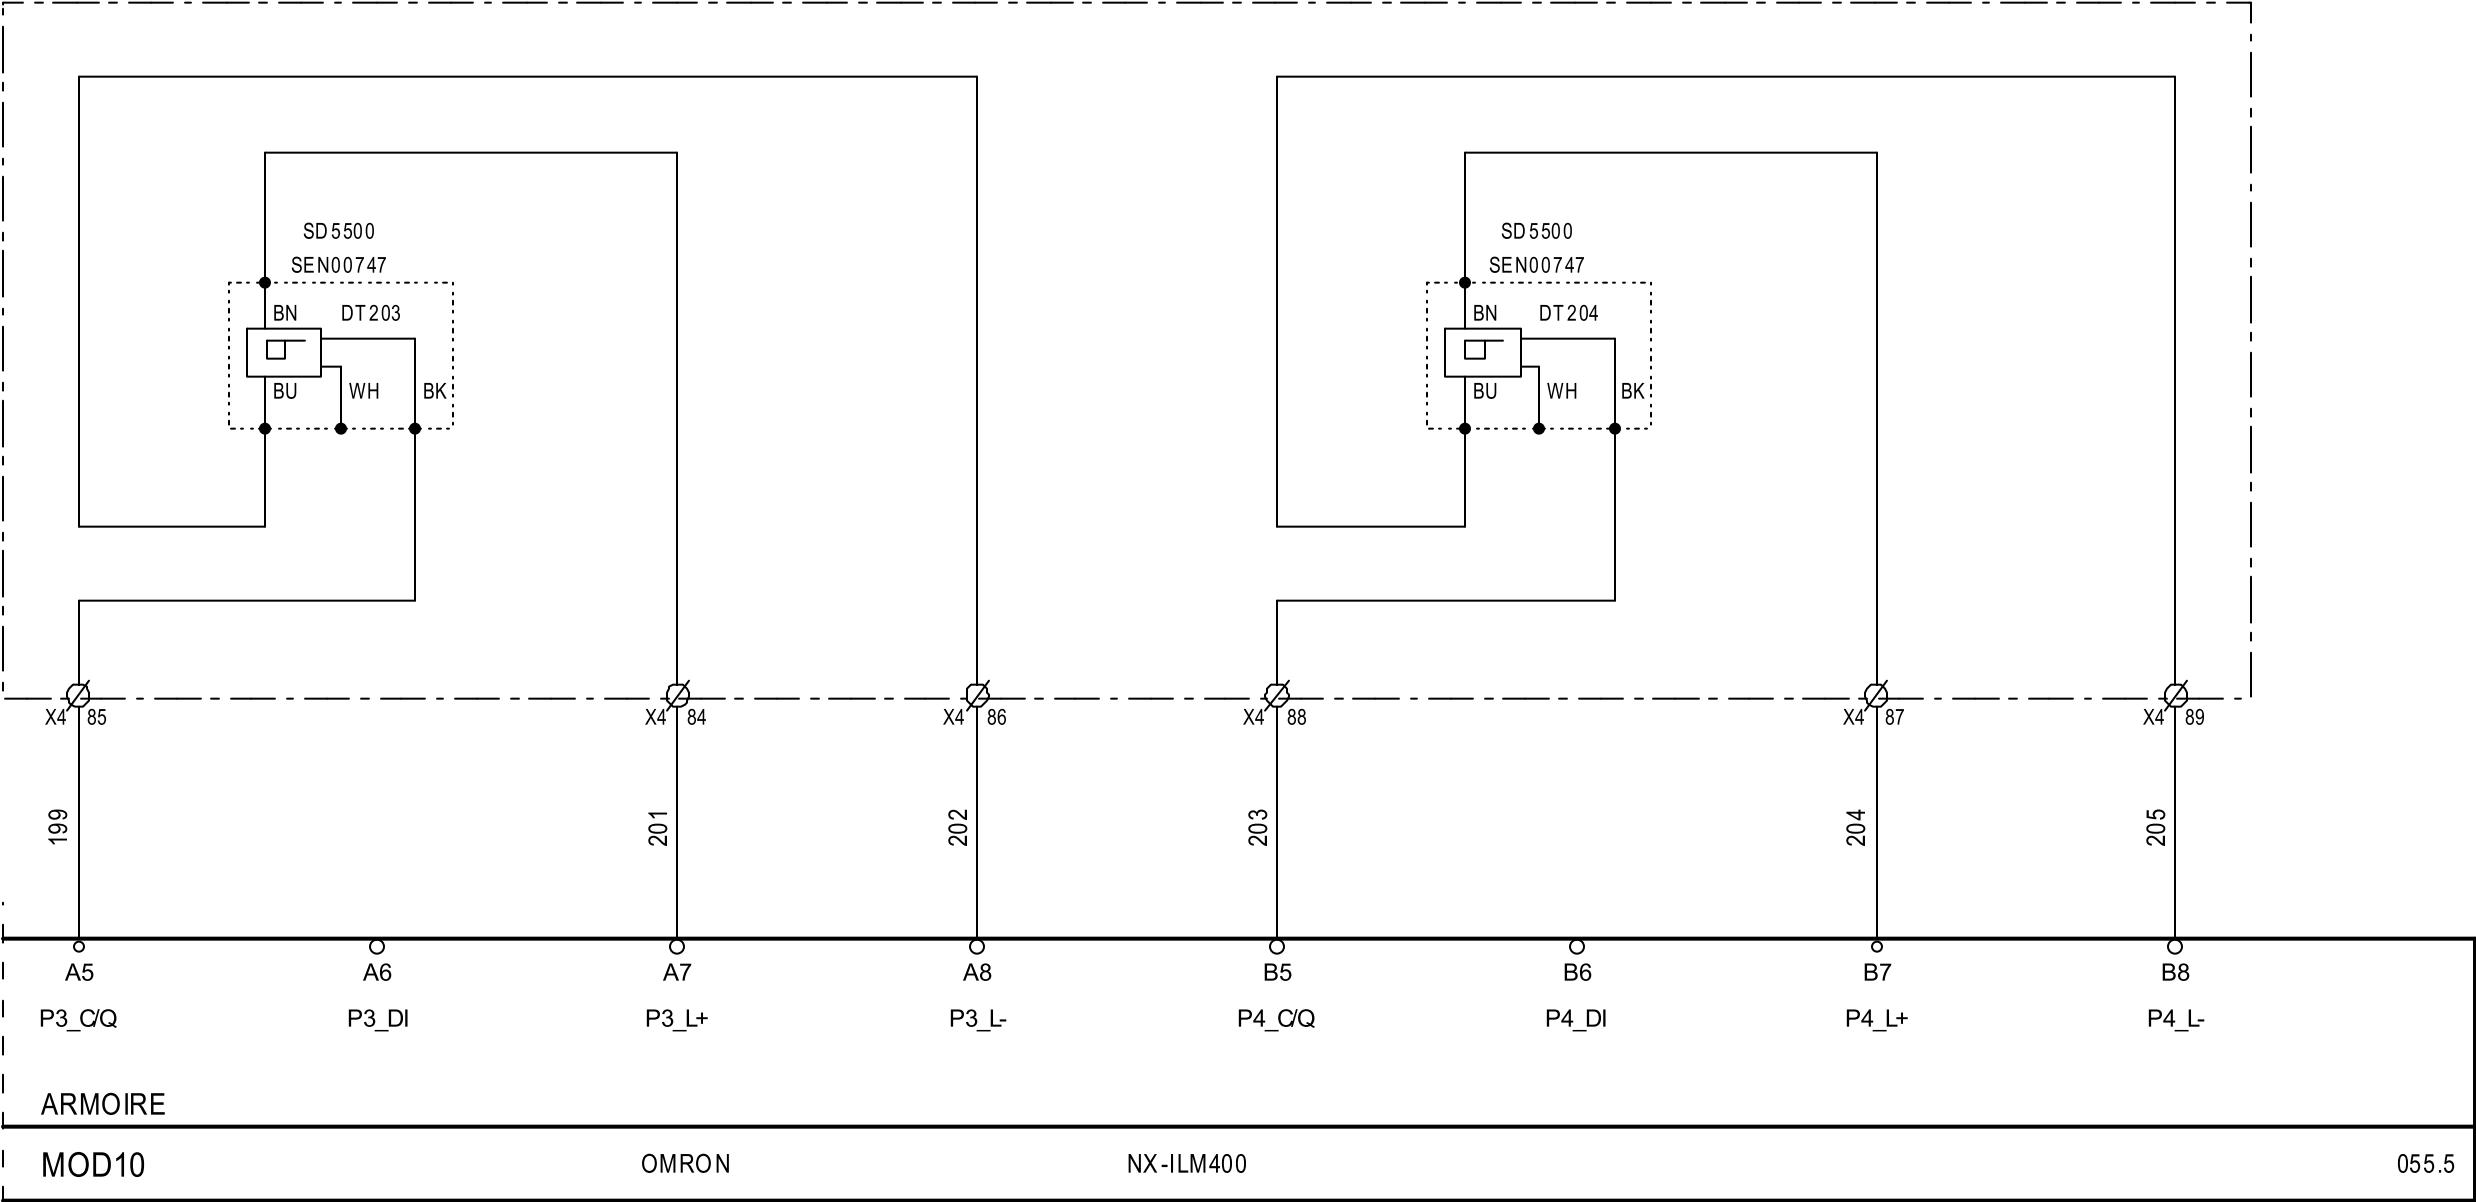

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 02/04/2024		I/O LINK MOD9			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		I/O LINK MOD9							ARTICLE : SMXA-C014221				INDEX : V11	
			E-mail :ecatid.service@ceva.com					ENVIRONNEMENT:Version 4.49.F - 23/09/2020						071/163					

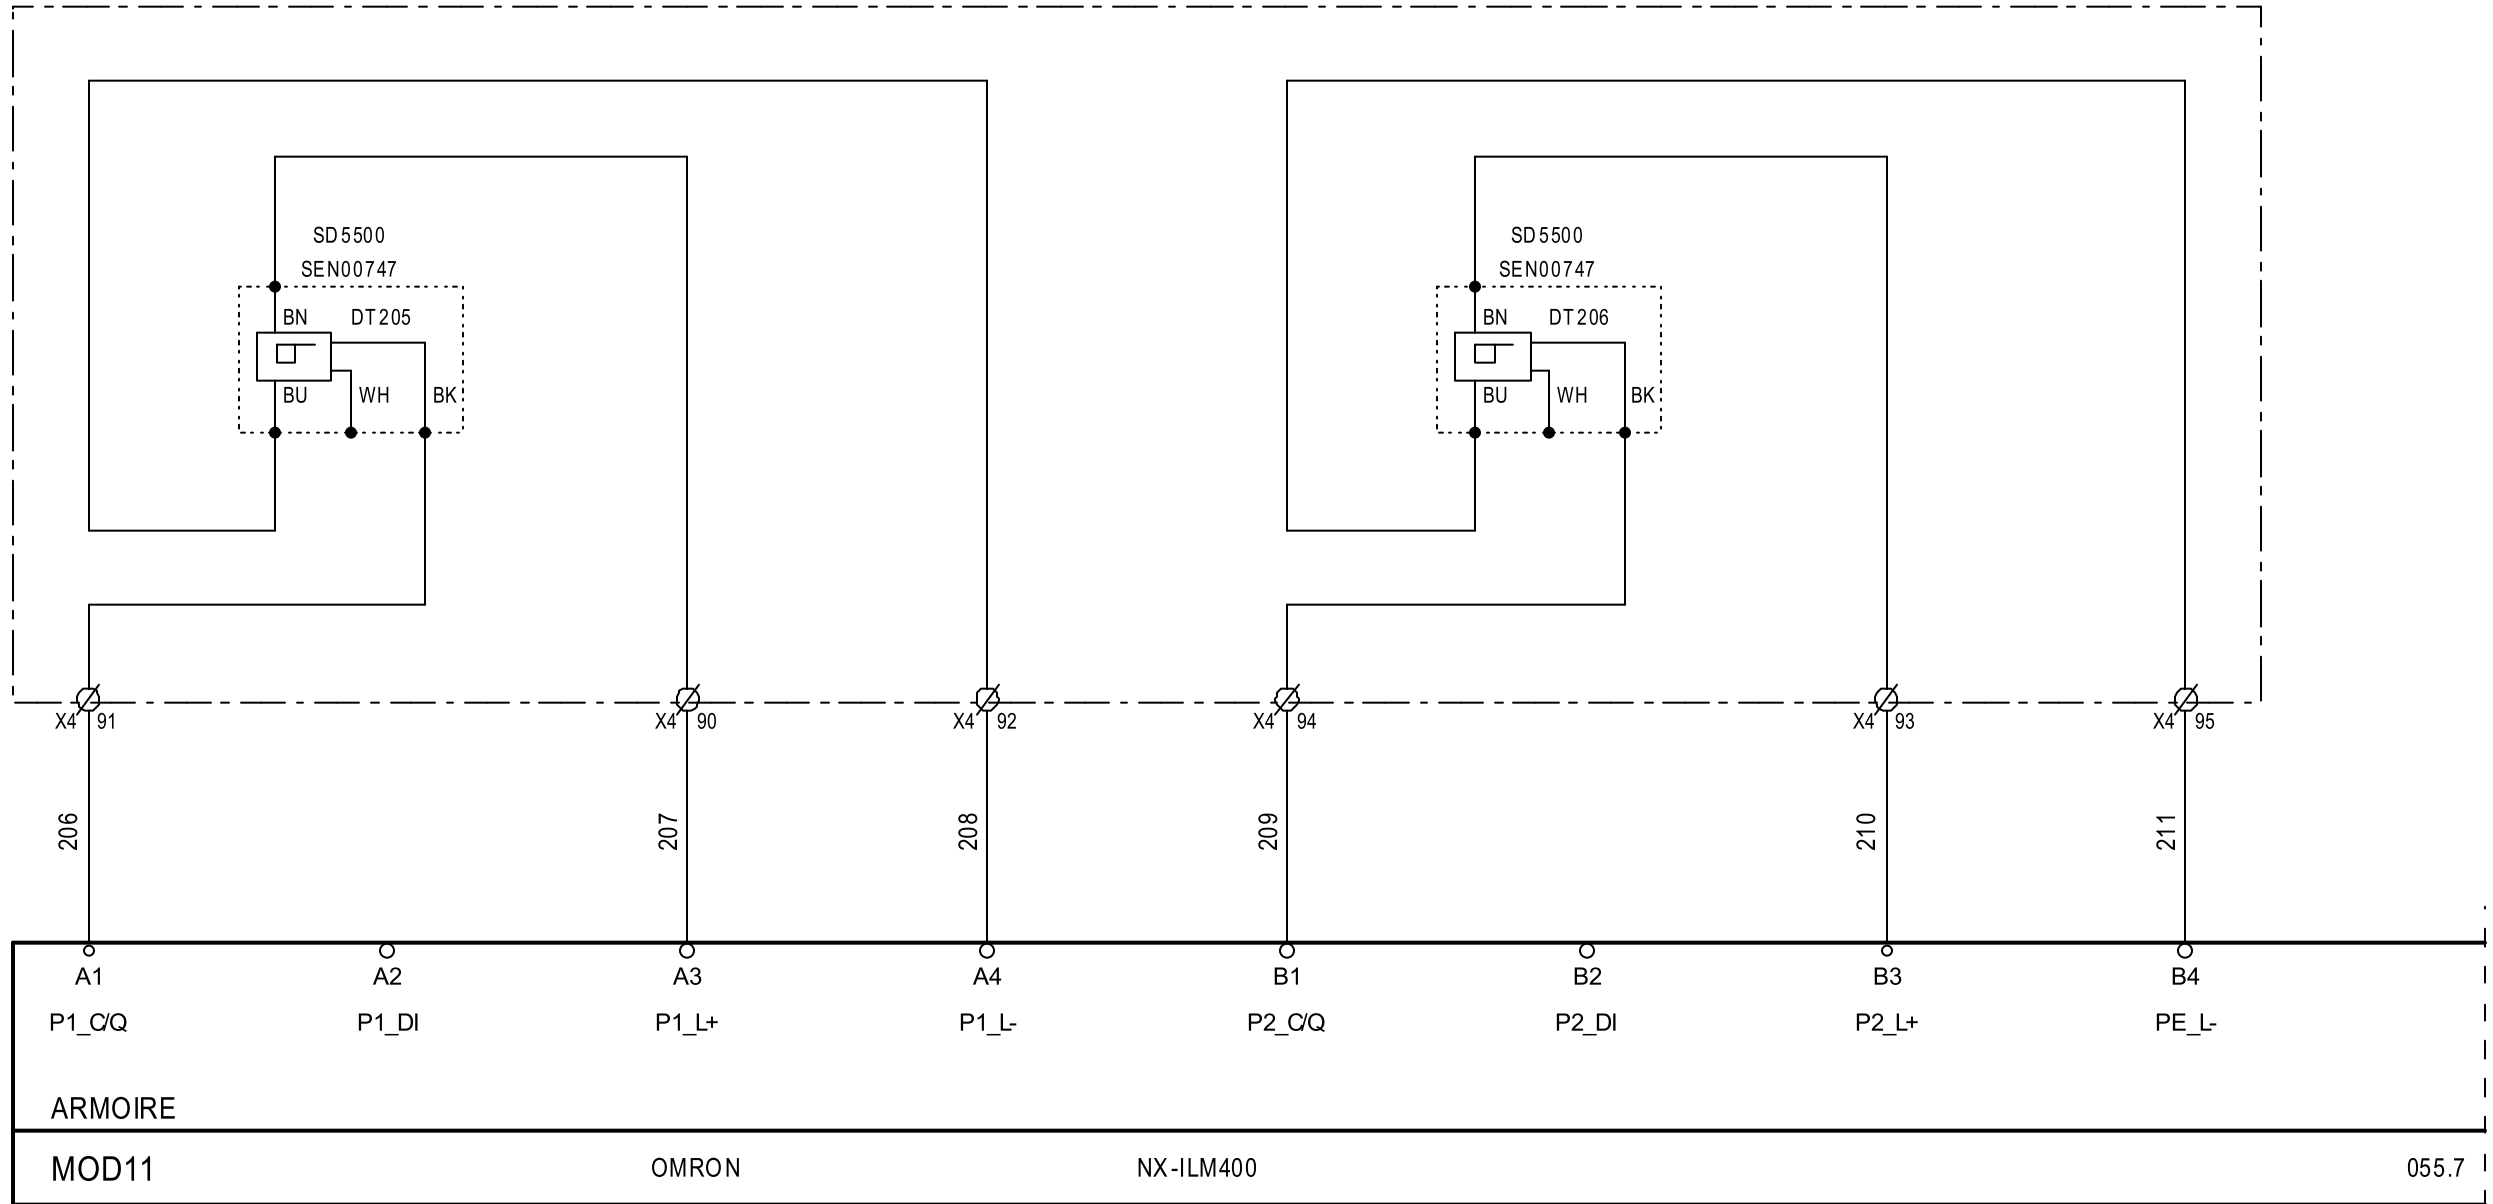
DEBITMETRE
VOIE 5

WAY 5
FLOW METER

DEBITMETRE
VOIE 6


WAY 6
FLOW METER

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

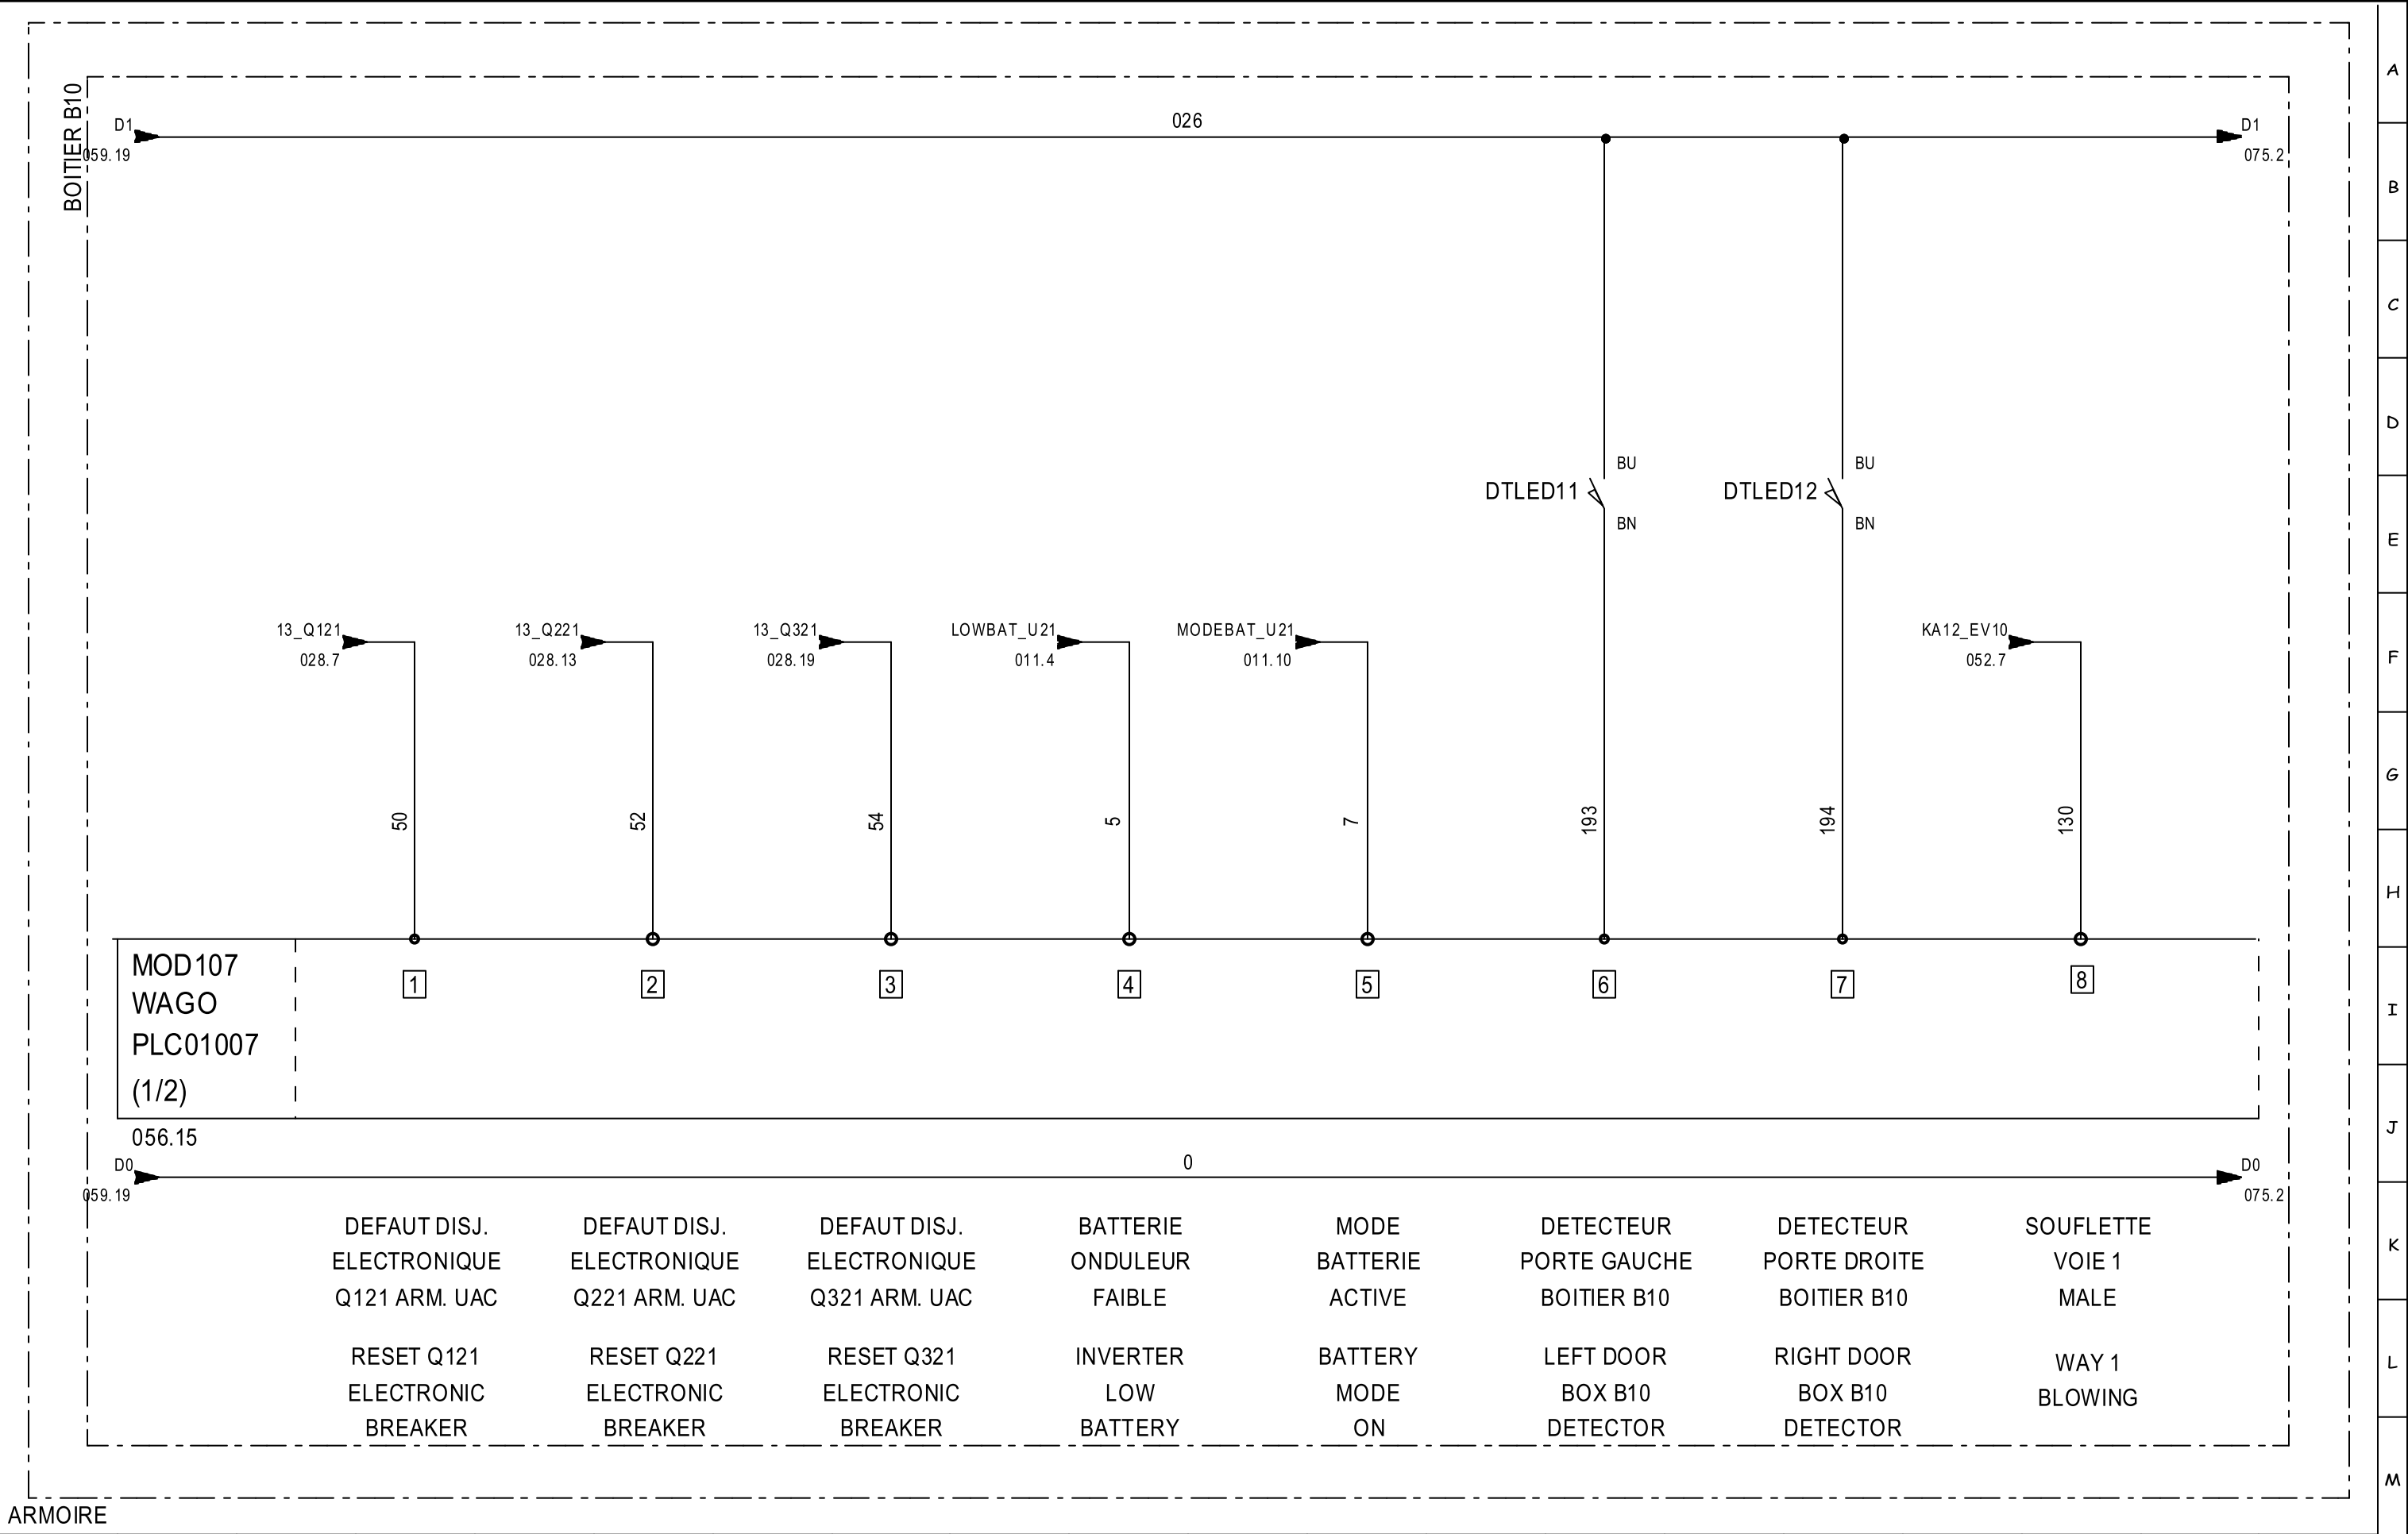


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -			Tél : (33).2.98.85.31.36		Date of creation :		ENTREES MOD107				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INPUTS MOD107								ARTICLE :		SMXA-C014221		INDEX : V11	
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								074/163					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

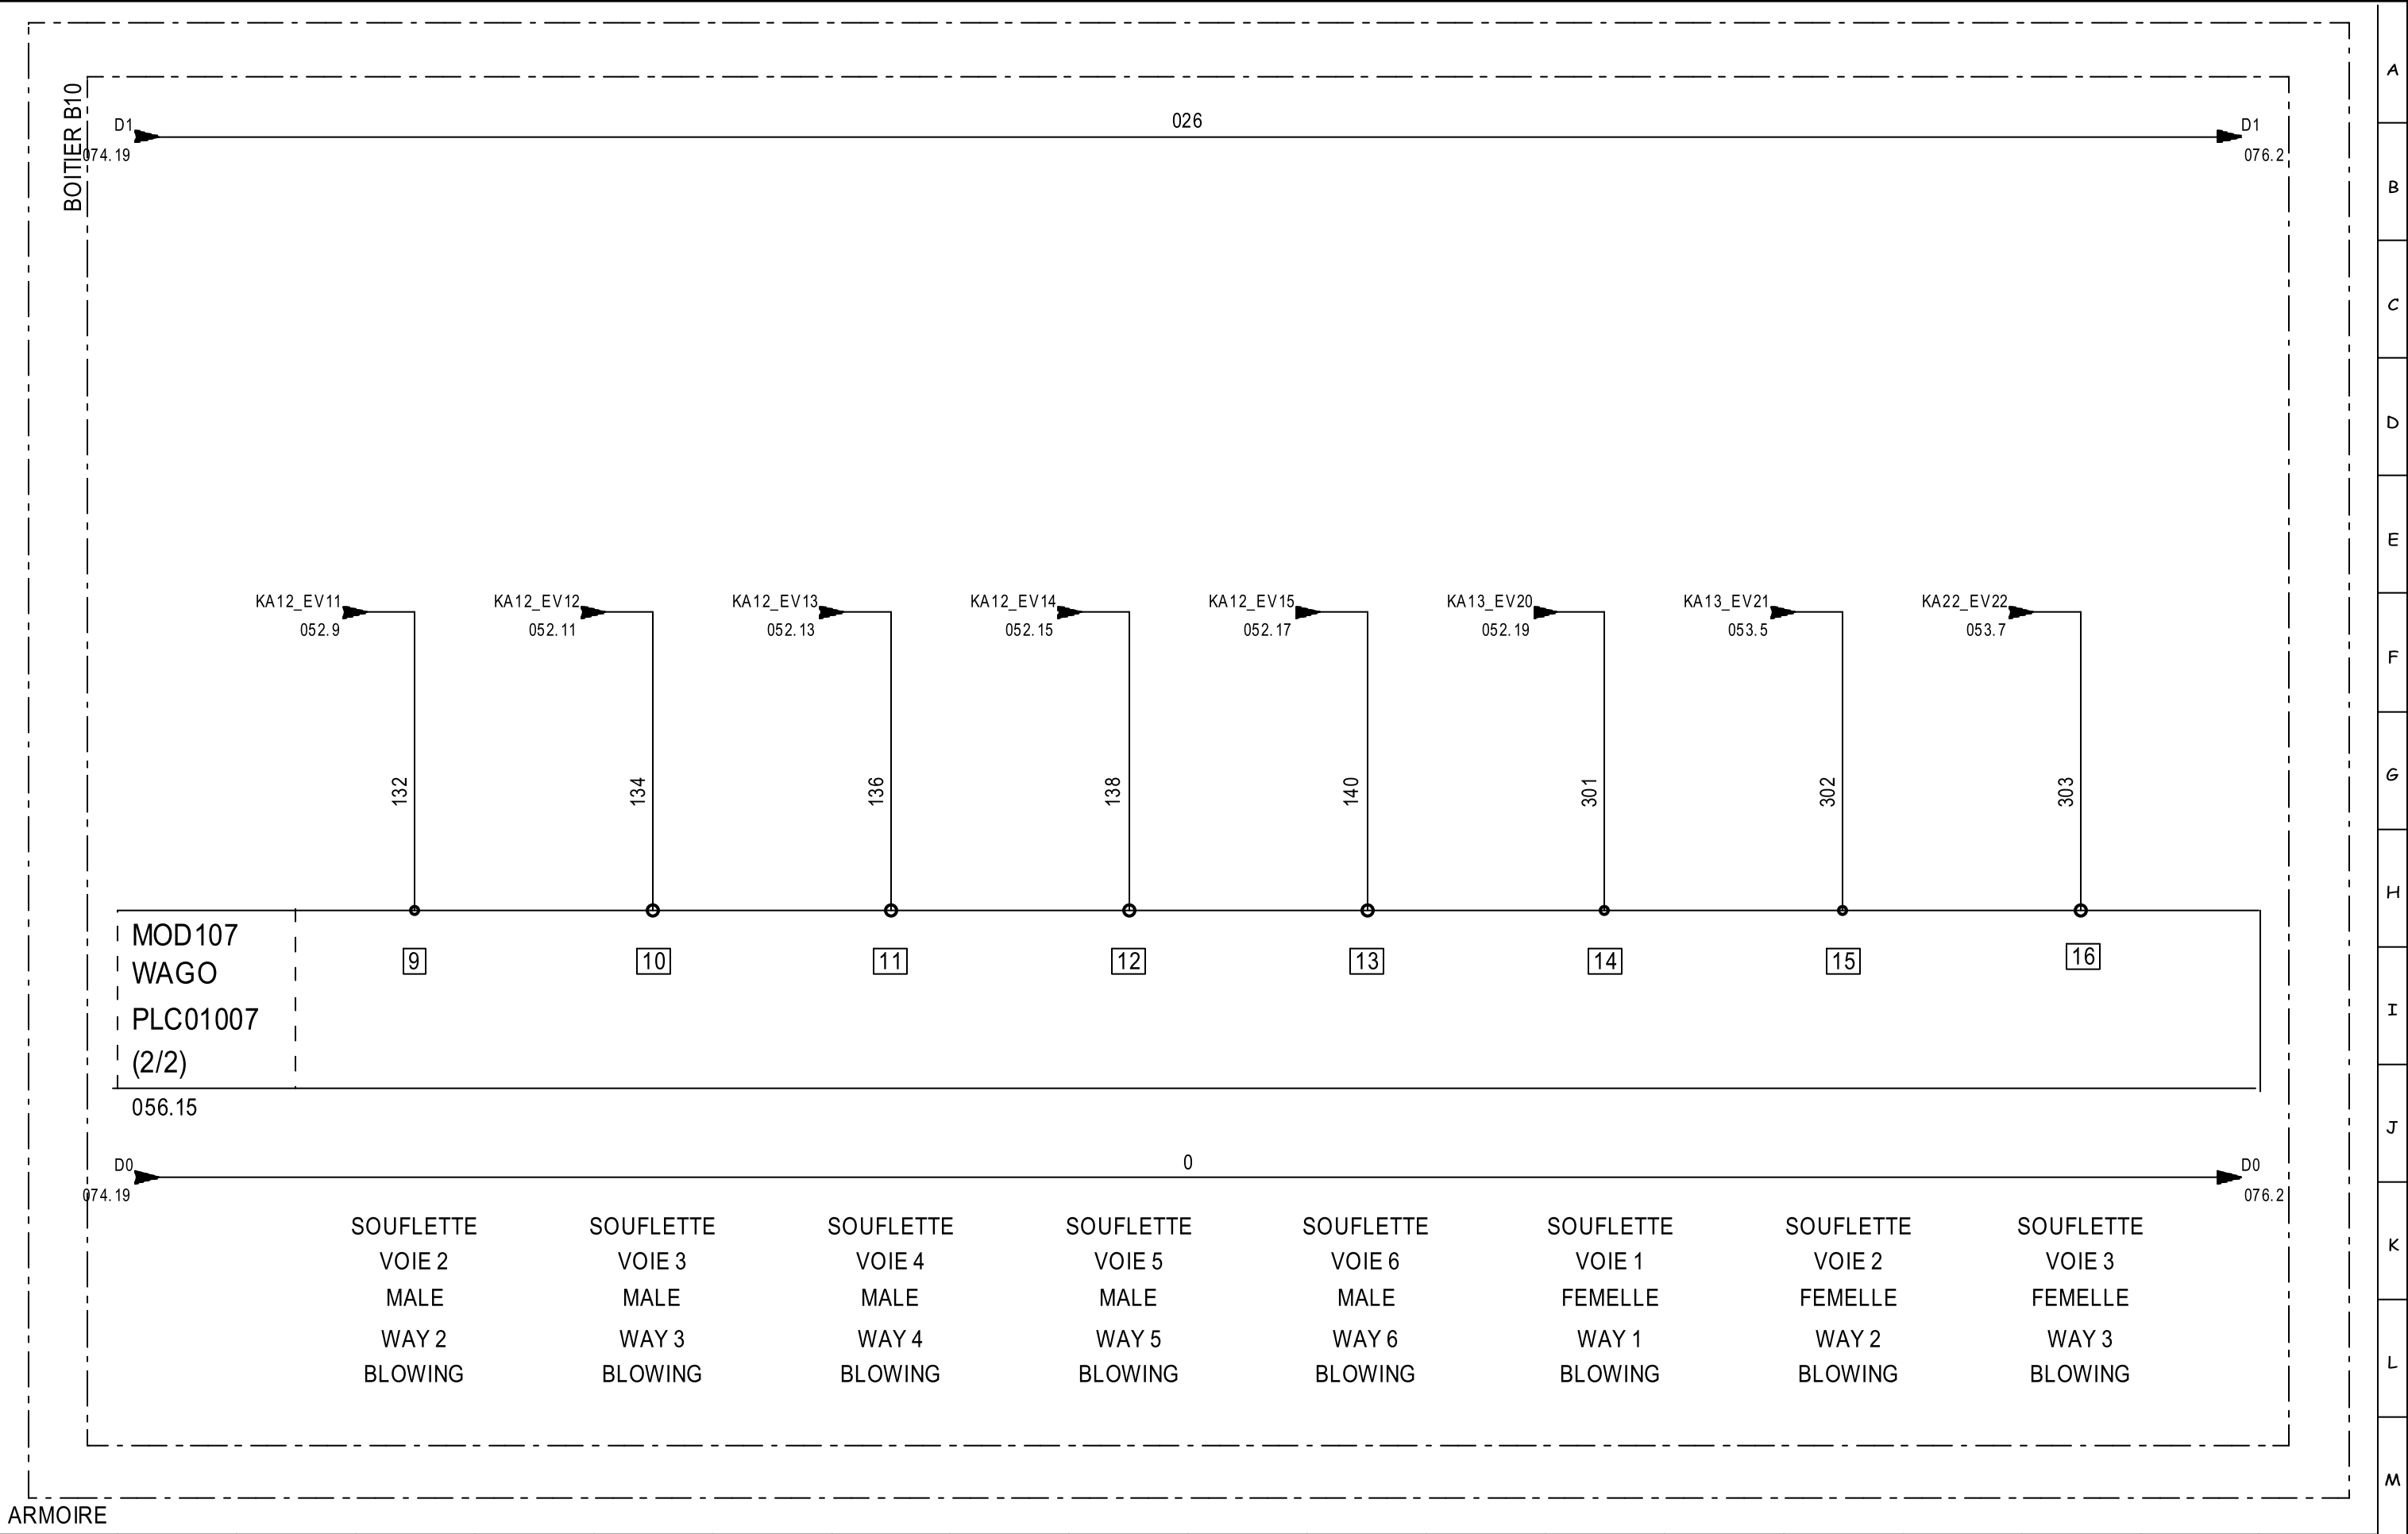


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -			Tél : (33).2.98.85.31.36		Date of creation :		ENTREES MOD107				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INPUTS MOD107								ARTICLE : SMXA-C014221		INDEX : V12			
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 075/163			

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

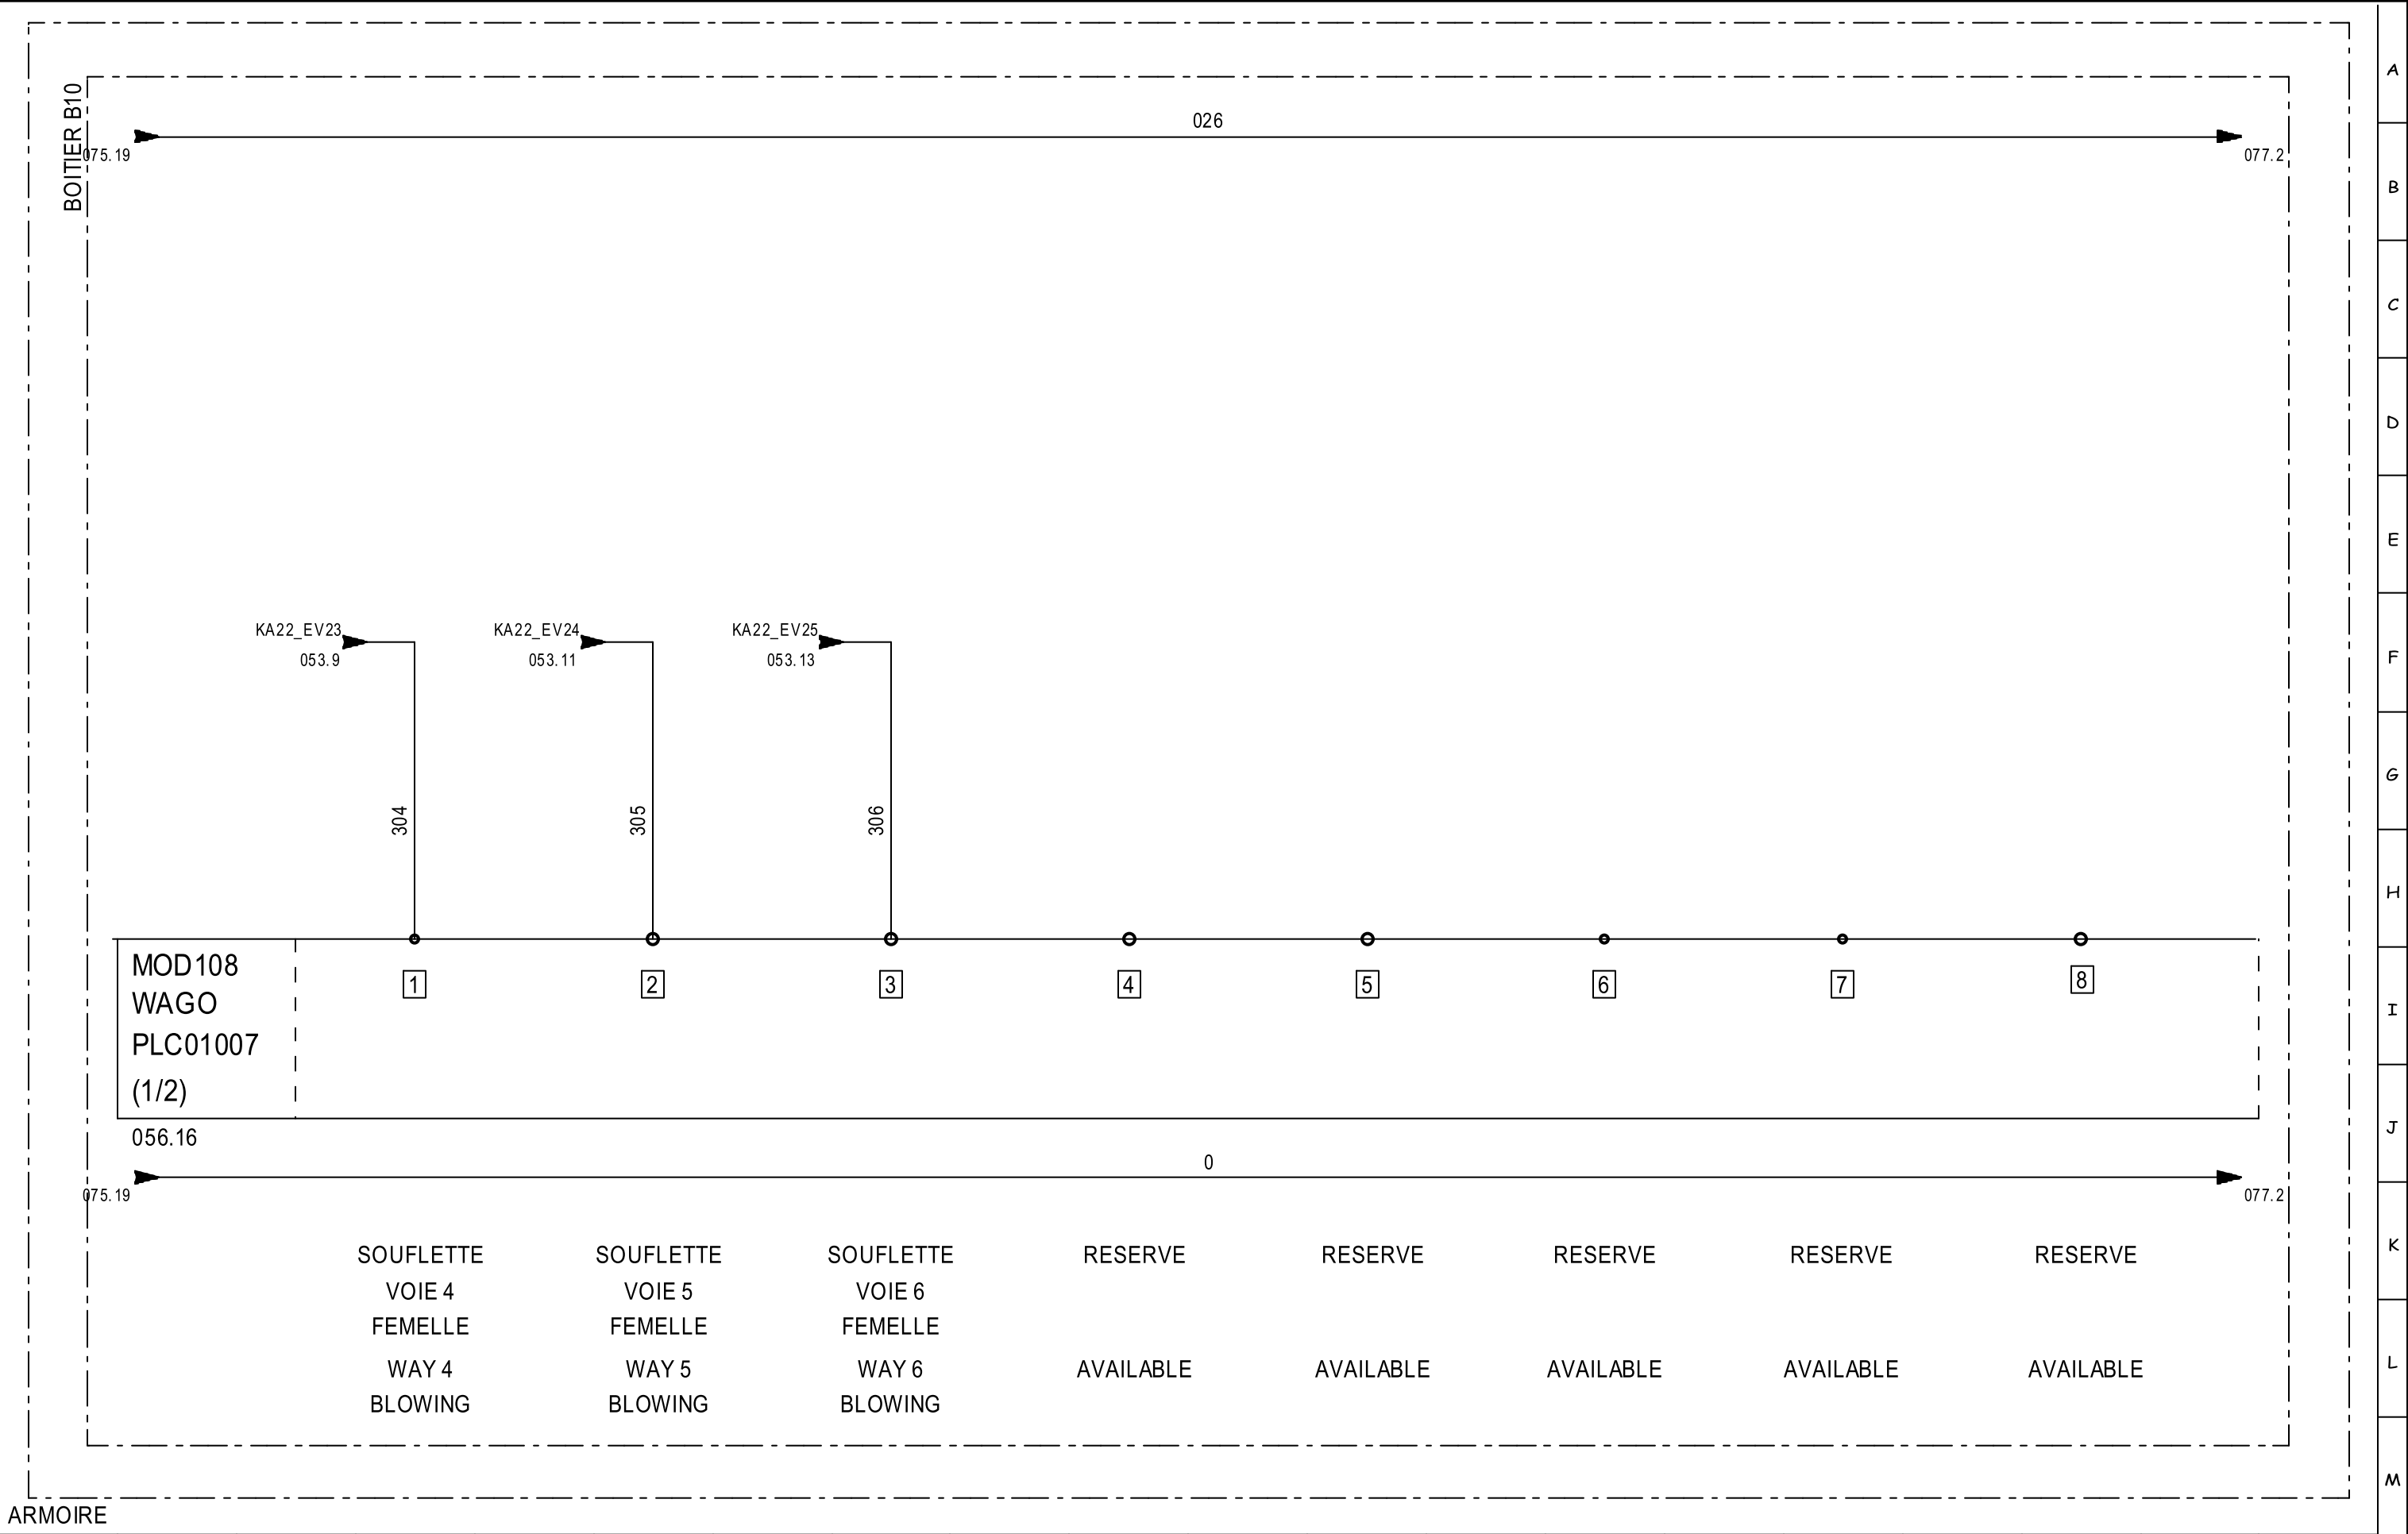


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

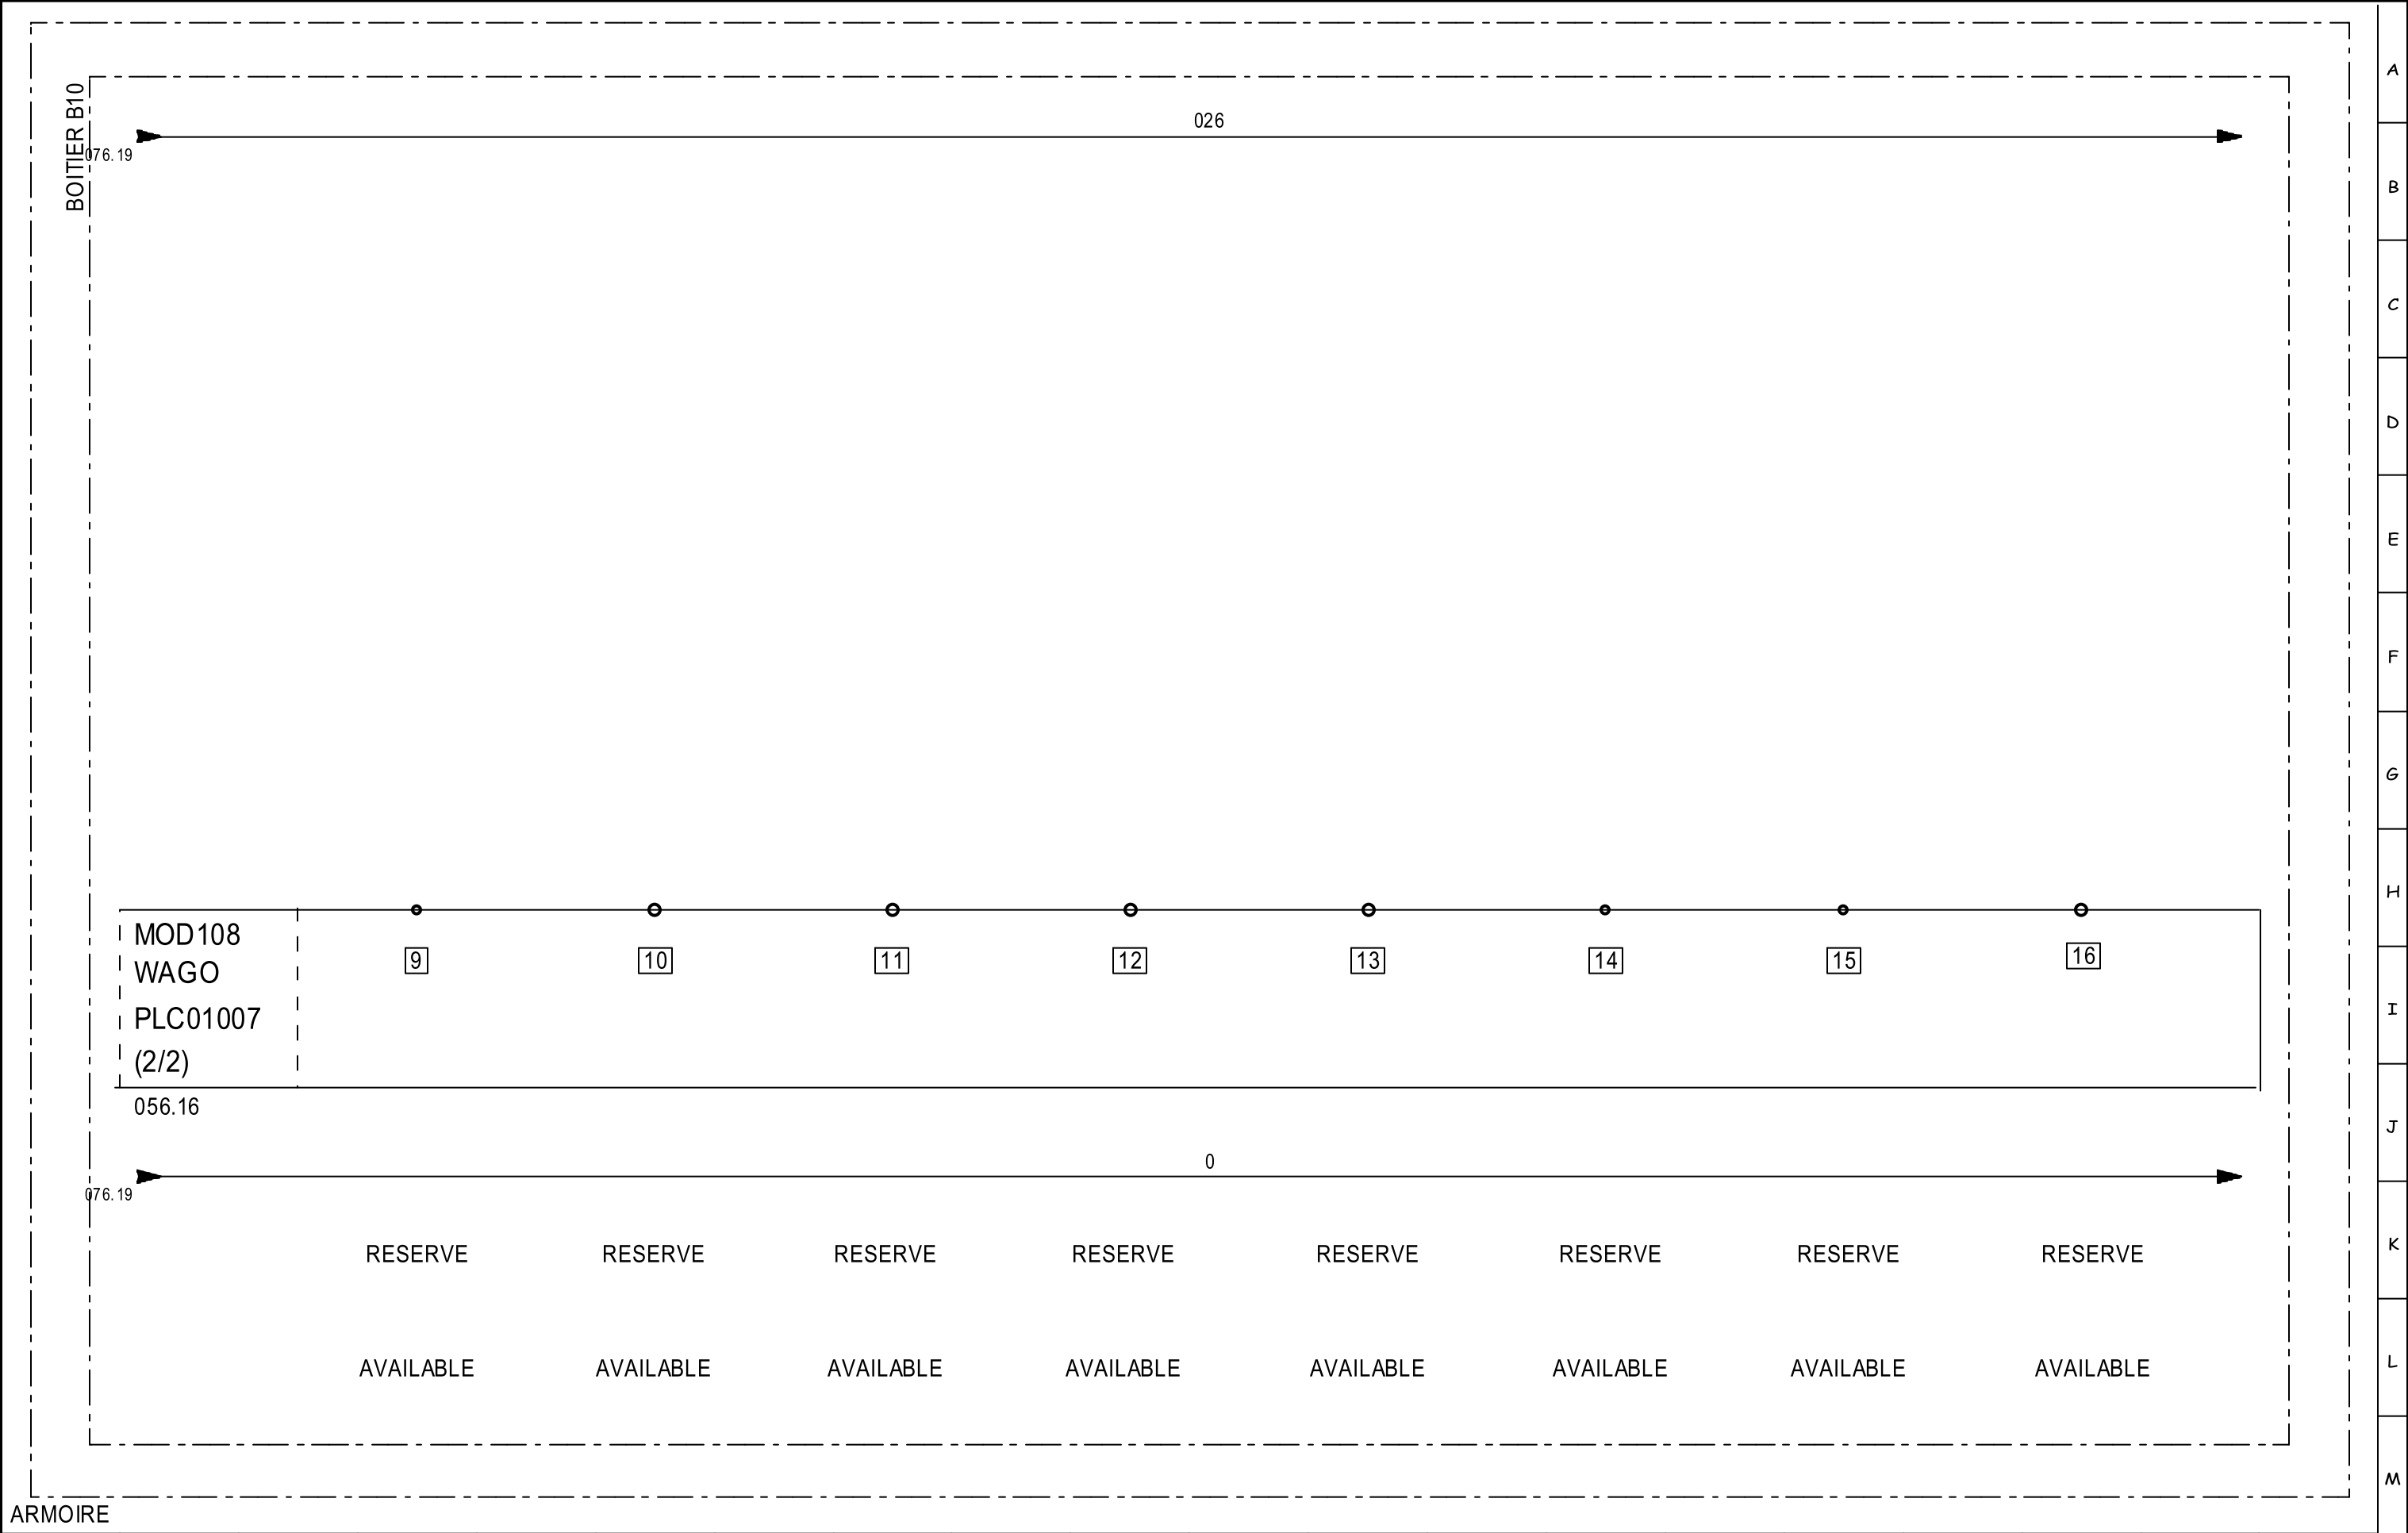


A
B
C
D
E
F
G
H
I
J
K
L
M

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 31/07/2024		ENTREES MOD108				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : AV		INPUTS MOD108								ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020								077/163					

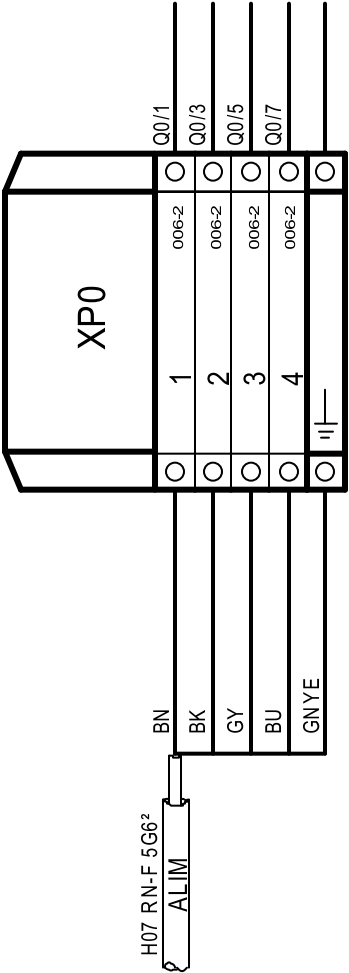

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : XP0			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : XP0							ARTICLE : SMXA-C014221				INDEX : V11	
			E-mail : ecatic.service@ceva.com					ENVIRONNEMENT : Version 4.49.F - 23/09/2020										FOLIO : 078/163	

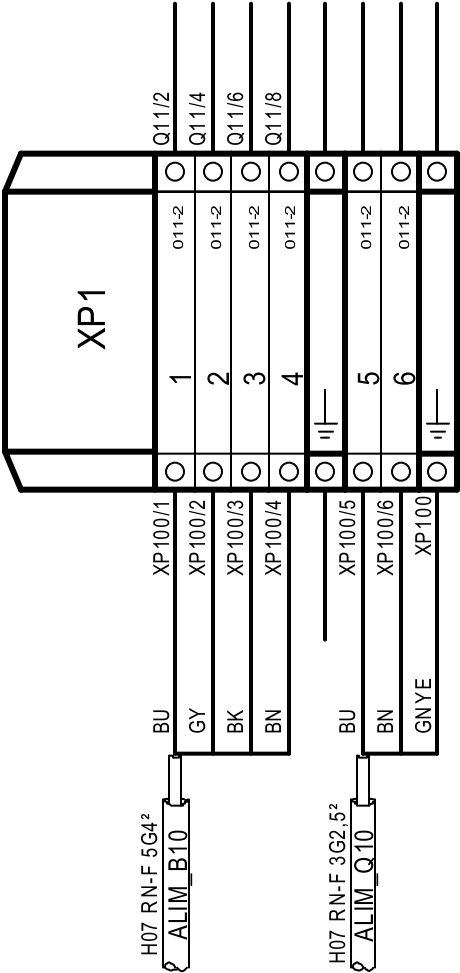


ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 13/08/2024		Bornier : XP1				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : XP1								ARTICLE : SMXA-C014221				INDEX : V11	
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020								079/163					

ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : X2			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : X2							ARTICLE : SMXA-C014221				INDEX : V16	
			E-mail : ecatid.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020							080/163					

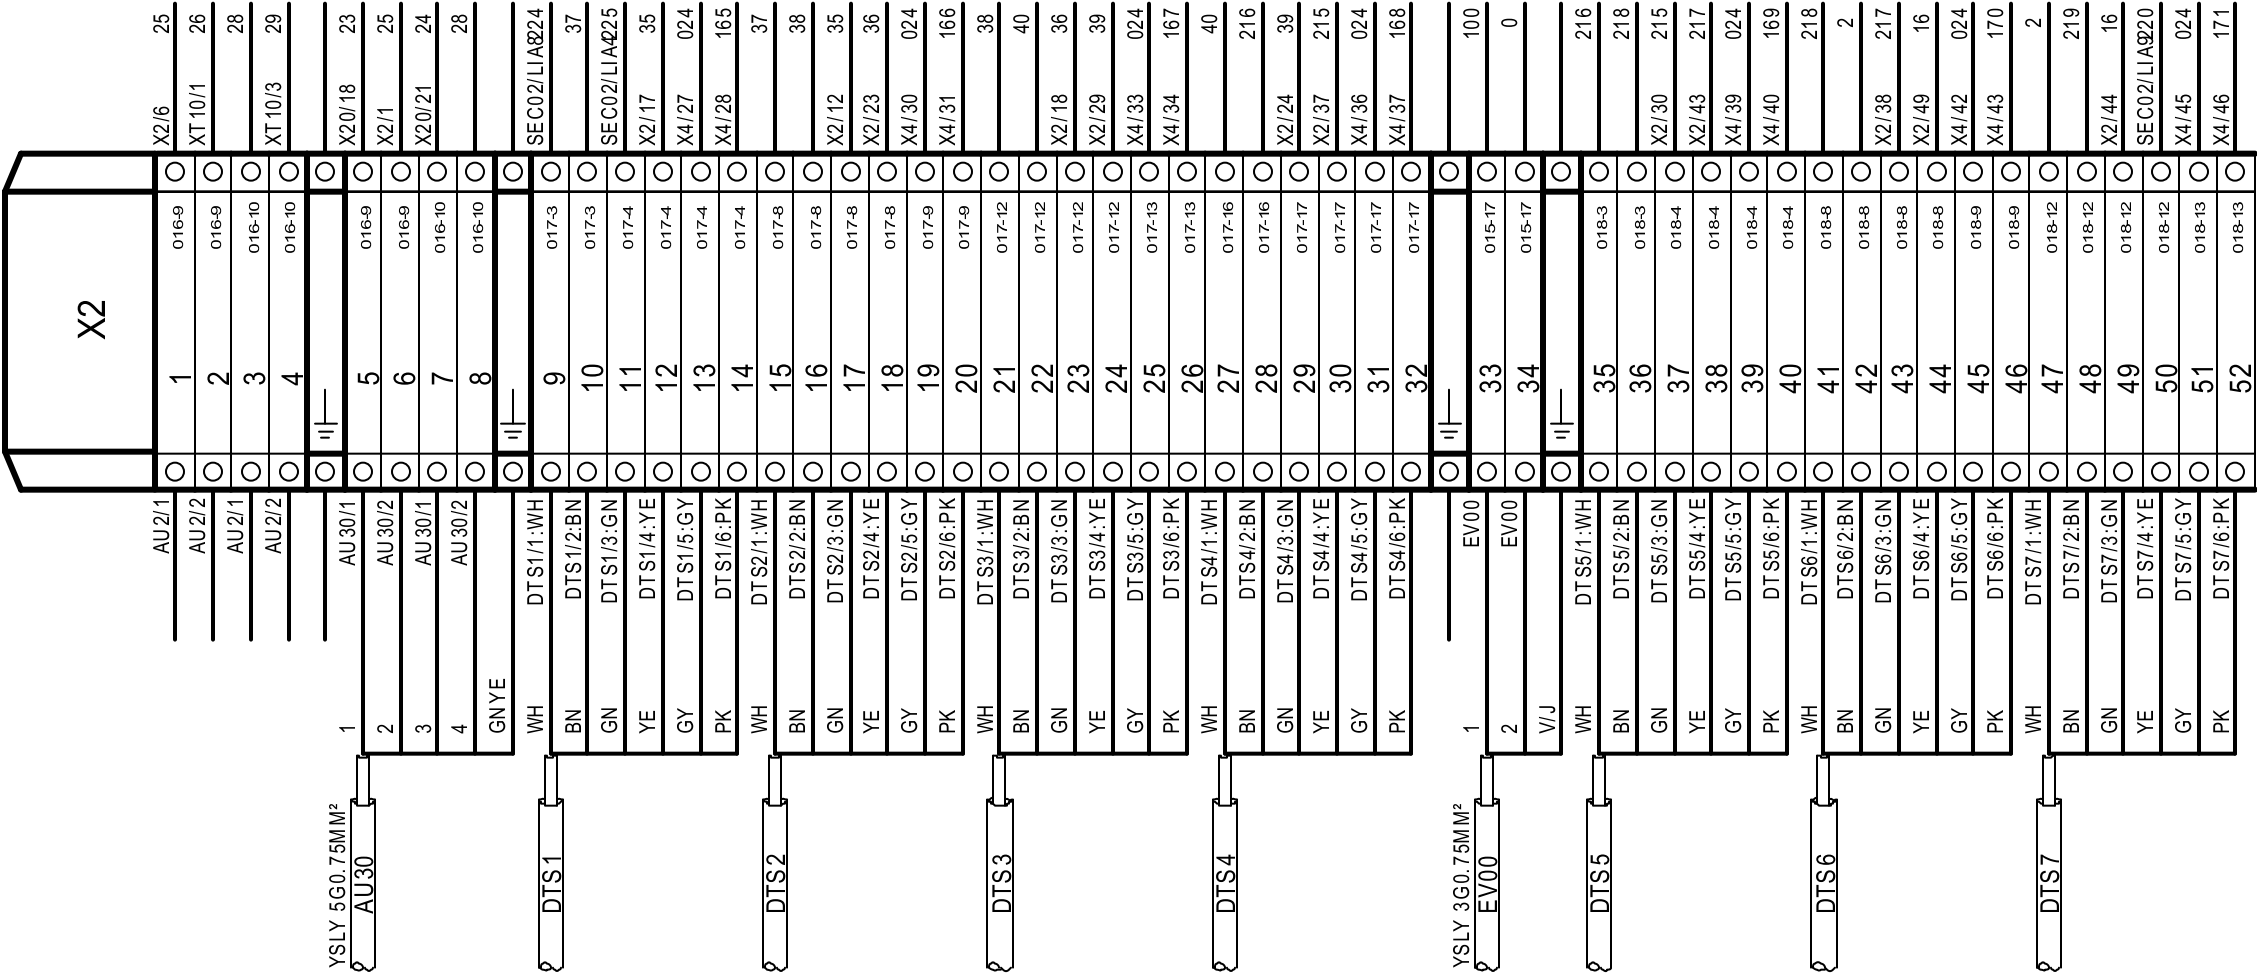

A B C D E F G H I J K L M

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -			Tél : (33).2.98.85.31.36			Date of creation : 12/07/2024		Bornier : X4				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38			Designed by : DB		Bornier : X4								ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecatid.service@ceva.com						ENVIRONNEMENT : Version 4.49.F - 23/09/2020										FOLIO : 082/163		

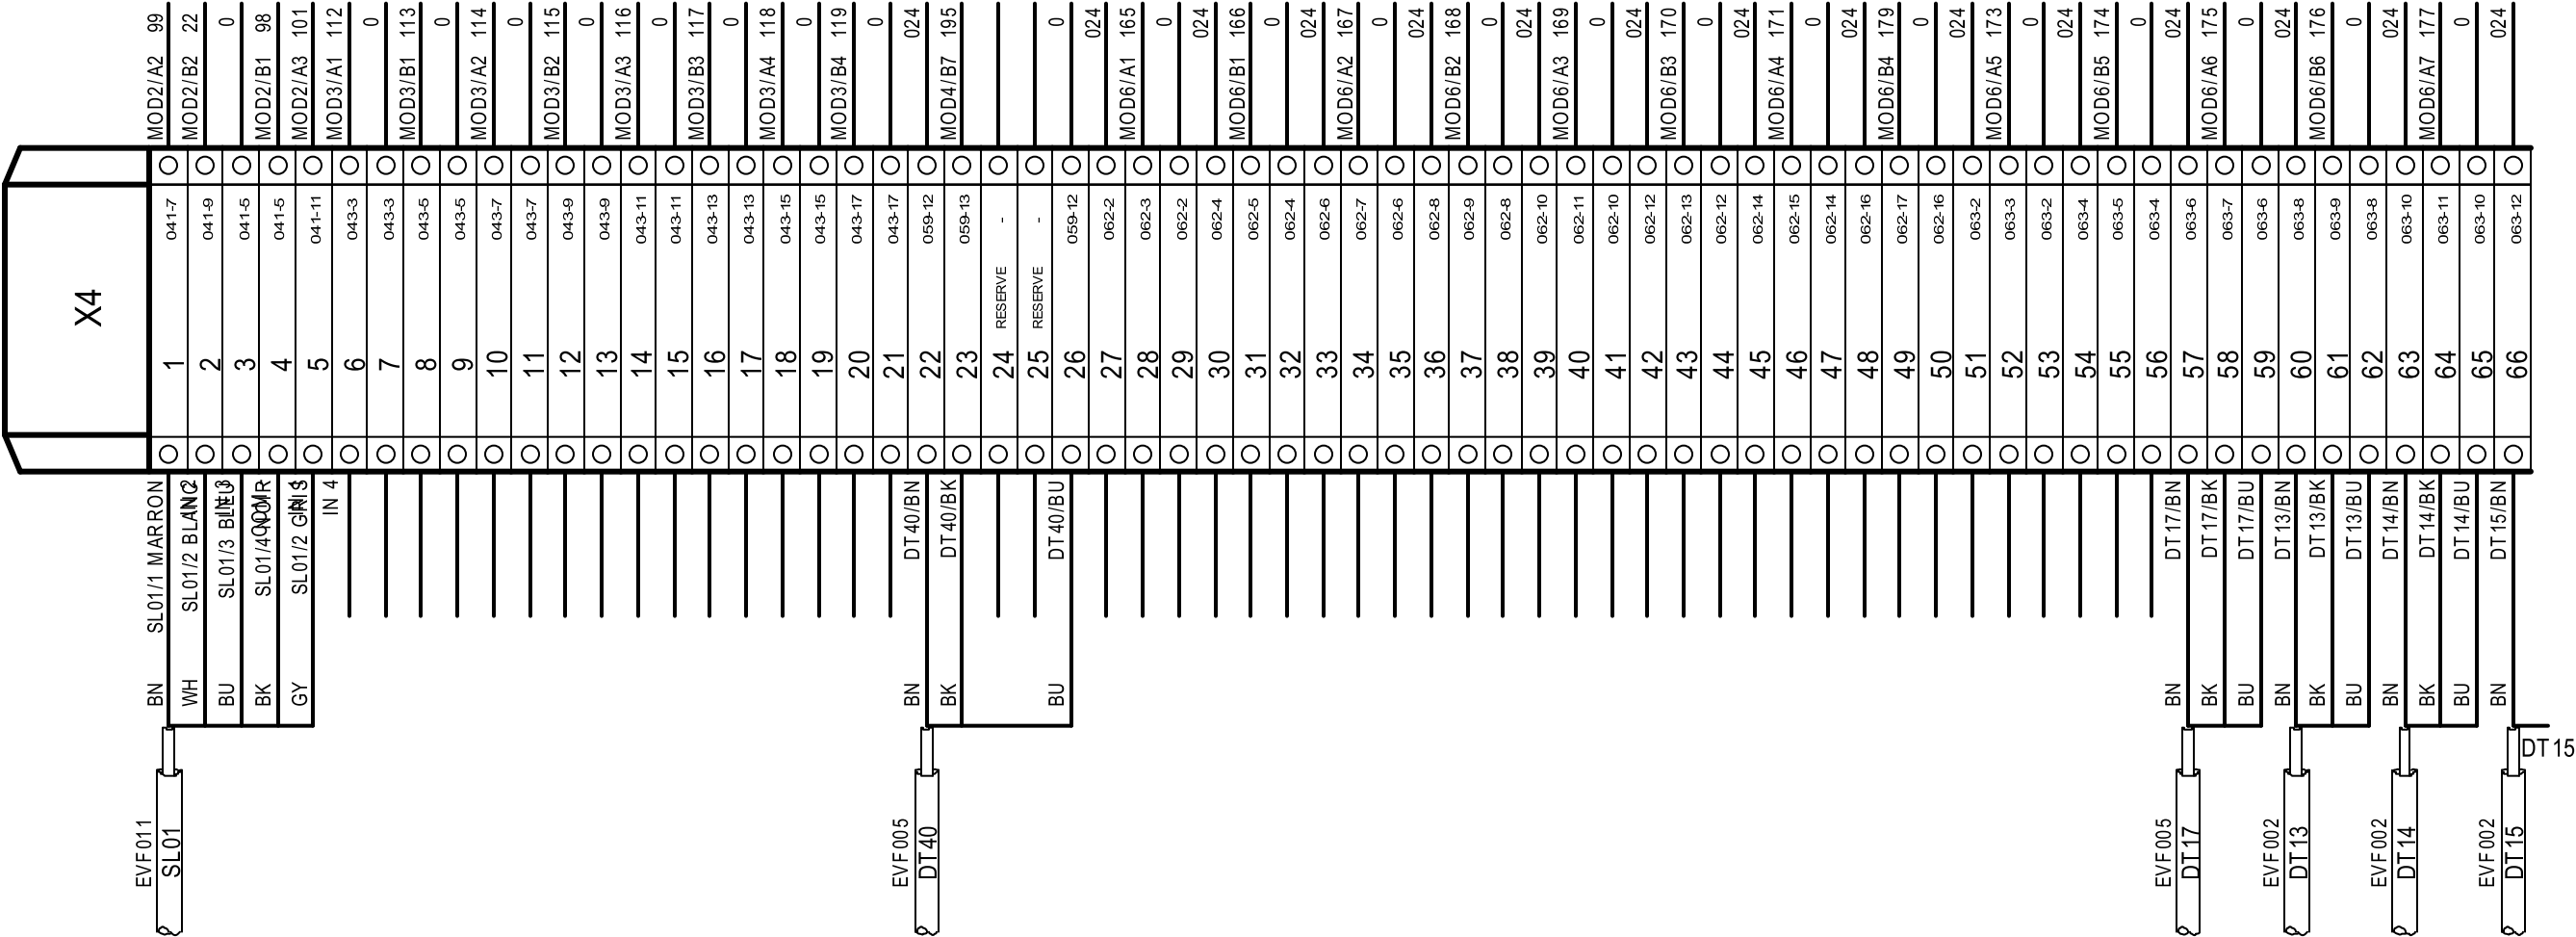

1

041-7

MOD2/A2 99

2

041-9

MOD2/B2 22

3

041-5

0

4

041-5

MOD2/B1 98

5

041-11

MOD2/A3 101

6

043-3

MOD3/A1 112

7

043-3

0

8

043-5

MOD3/B1 113

9

043-5

0

10

043-7

MOD3/A2 114

11

043-7

0

12

043-9

MOD3/B2 115

13

043-9

0

14

043-11

MOD3/A3 116

15

043-11

0

16

043-13

MOD3/B3 117

17

043-13

0

18

043-15

MOD3/A4 118

19

043-15

0

20

043-17

MOD3/B4 119

21

043-17

0

22

059-12

024

23

059-13

MOD4/B7 195

24

RESERVE -

25

RESERVE -

26

059-12

0

27

062-2

024

28

062-3

MOD6/A1 165

29

062-2

0

30

062-4

024

31

062-5

MOD6/B1 166

32

062-4

0

33

062-6

024

34

062-7

MOD6/A2 167

35

062-6

0

36

062-8

024

37

062-9

MOD6/B2 168

38

062-8

0

39

062-10

024

40

062-11

MOD6/A3 169

41

062-10

0

42

062-12

024

43

062-13

MOD6/B3 170

44

062-12

0

45

062-14

024

46

062-15

MOD6/A4 171

47

062-14

0

48

062-16

024

49

062-17

MOD6/B4 179

50

062-16

0

51

063-2

024

52

063-3

MOD6/A5 173

53

063-2

0

54

063-4

024

55

063-5

MOD6/B5 174

56

063-4

0

57

063-6

024

58

063-7

MOD6/A6 175

59

063-6

0

60

063-8

024

61

063-9

MOD6/B6 176

62

063-8

0

63

063-10

024

64

063-11

MOD6/A7 177

65

063-10

0

66

063-12

024

A B C D E F G H I J K L M

ARMOIRE

ECAT-ID
ZI de KERIEL
29800 PLOUEDERN
- FRANCE -

Tél : (33).2.98.85.31.36

Fax : (33).2.98.85.31.38

E-mail : ecatid.service@ceva.com

Date of creation :
12/07/2024

Designed by :
DB

Bornier : X4

Bornier : X4

ENVIRONNEMENT:Version 4.49.F - 23/09/2020



Ecat-iD Campus

CONTRACT :

C01422

CUSTOMER :

COOP LAR

ARTICLE :

SMXA-C014221

COUNTRY :

BRESIL

INDEX :

V12

FOLIO :

083/163

A

B

C

D

E

F

G

H

I

I


K

1

AA

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36			Date of creation : 11/07/2024		Bornier : X10				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38			Designed by : DB		Bornier : X10								ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecatic.service@ceva.com					ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 084/163					

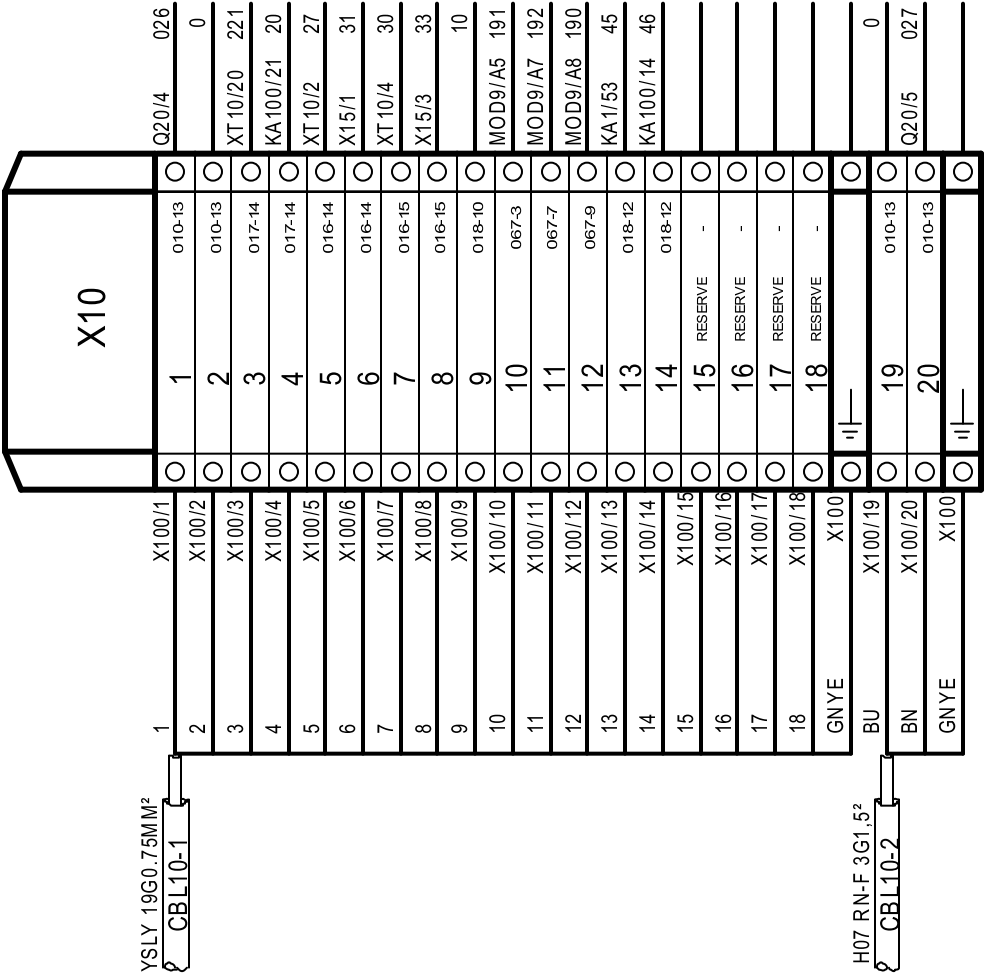

A
B
C
D
E
F
G
H
I
J
K
L
M


X15	○	1	019-4	○	AU0/2	32
	○	2	019-4	○	X25/1	229
	○	3	019-4	○	AU0/2	34
	○	4	019-4	○	X25/3	230
	○	5	019-5	○		10
	○	6	019-6	○		024
	○	7	019-6	○		0
	○	8	019-7	○		300
	○	9	019-7	○		200
	○	10	019-8	○		105
	○	11	019-8	○		144
	○	—		○		
	SMXA-OPT1-C0/X15-1					
SMXA-OPT1-C0/X15-2						
SMXA-OPT1-C0/X15-3						
SMXA-OPT1-C0/X15-4						
SMXA-OPT1-C0/X15-5						
SMXA-OPT1-C0/X15-6						
SMXA-OPT1-C0/X15-7						
SMXA-OPT1-C0/X15-8						
SMXA-OPT1-C0/X15-9						
SMXA-OPT1-C0/X15-10						
SMXA-OPT1-C0/X15-11						

ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : X15				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : X15								ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecatic.service@ceva.com		ENVIRONNEMENT:Version 4.49.F - 23/09/2020				FOLIO : 085/163											

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36			Date of creation : 11/07/2024		Bornier : X20				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38			Designed by : DB		Bornier : X20								ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecaticid.service@ceva.com					ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 086/163					

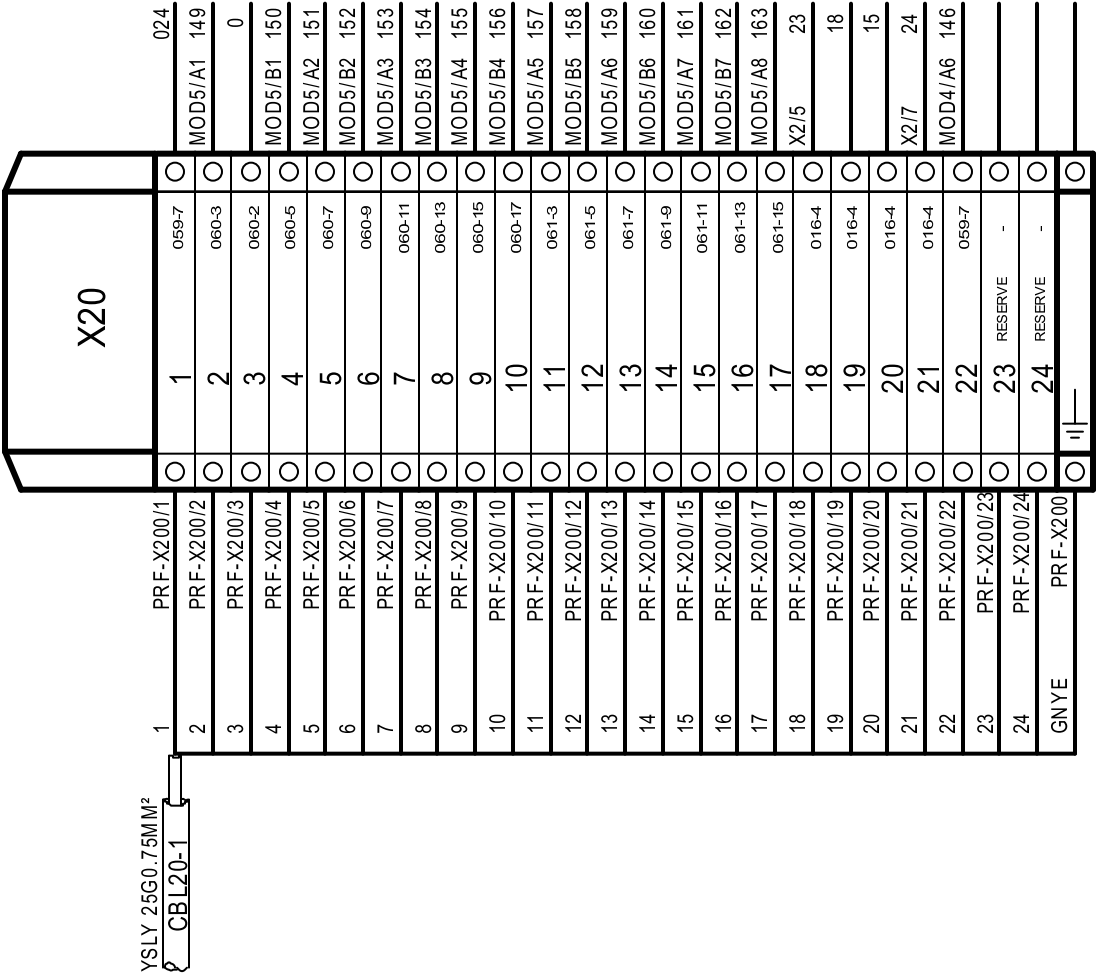

A
B
C
D
E
F
G
H
I
J
K
L
M

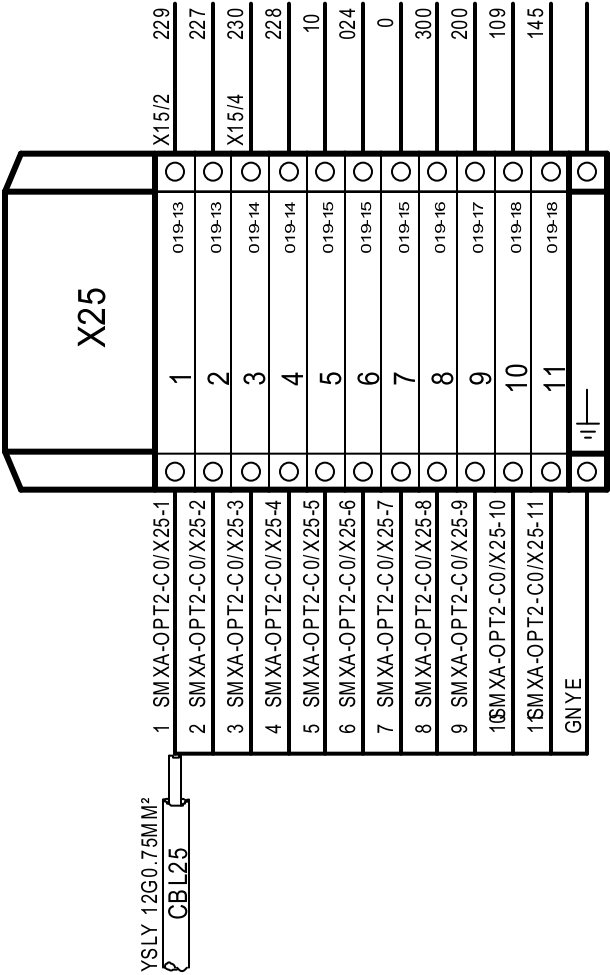


ARMOIRE


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : X25				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : X25								ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT: Version 4.49.F - 23/09/2020								FOLIO : 087/163					

ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36			Date of creation : 11/07/2024		Bornier : XT10			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38			Designed by : DB		Bornier : XT10							ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecaticid.service@ceva.com					ENVIRONNEMENT : Version 4.49.F - 23/09/2020							FOLIO : 088/163					

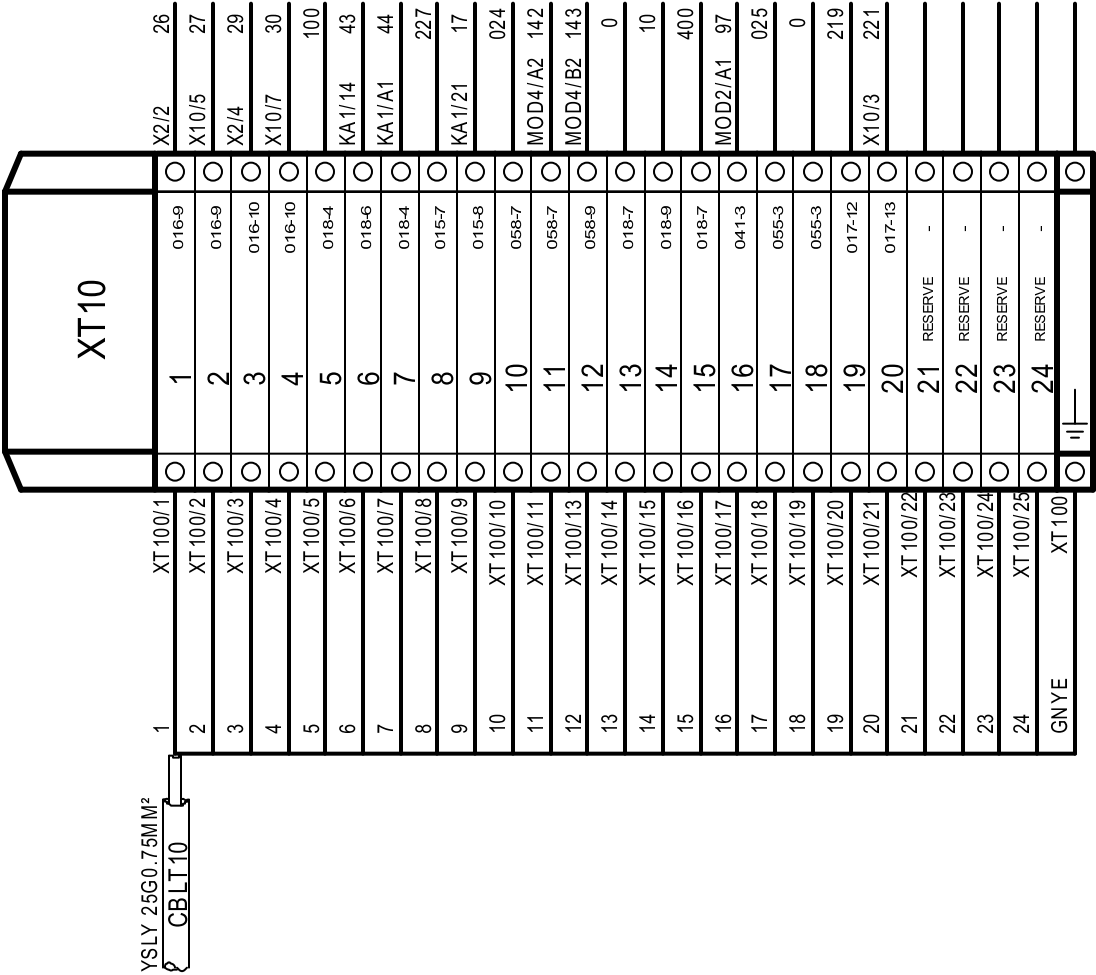


A
B
C
D
E
F
G
H
I
J
K
L
M

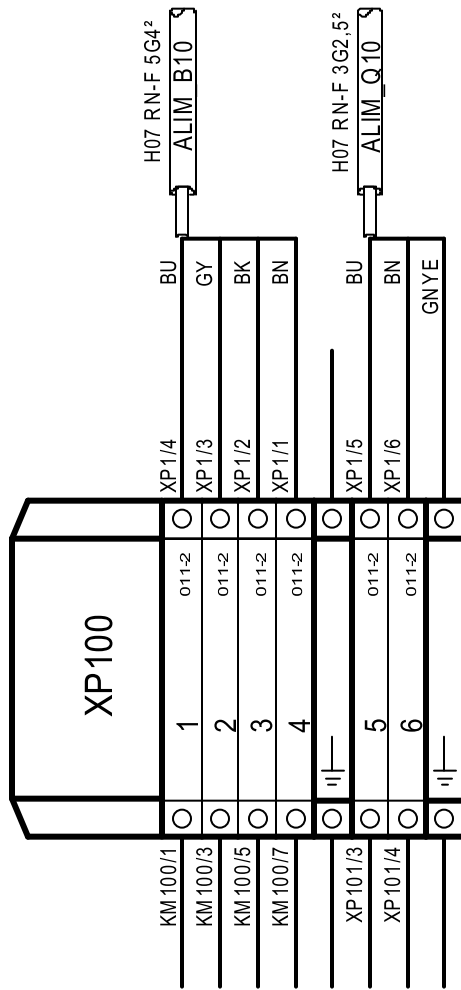

BOITIER B10

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : XP100			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL			
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : XP100							ARTICLE : SMXA-C014221						INDEX : V12	
			E-mail :ecatid.service@ceva.com					ENVIRONNEMENT:Version 4.49.F - 23/09/2020						089/163							

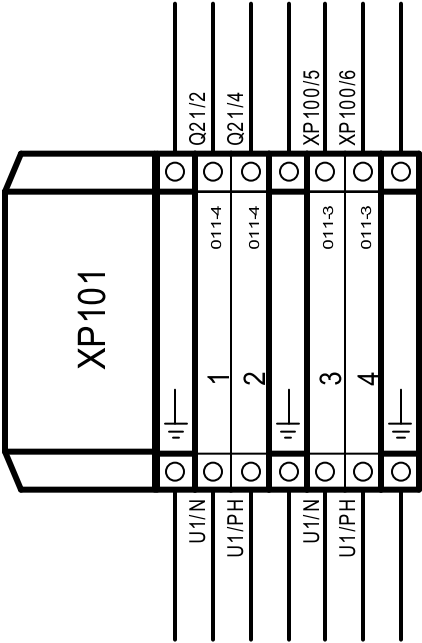



BOITIER B10

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36			Date of creation : 11/07/2024		Bornier : XP101				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38			Designed by : DB		Bornier : XP101								ARTICLE : SMXA-C014221				INDEX : V11	
			E-mail : ecaticid.service@ceva.com					ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 090/163					

BOITIER B10

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : X100			 Ecat-iD Campus					CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : X100								ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecatid.service@ceva.com					ENVIRONNEMENT : Version 4.49.F - 23/09/2020							FOLIO : 091/163					

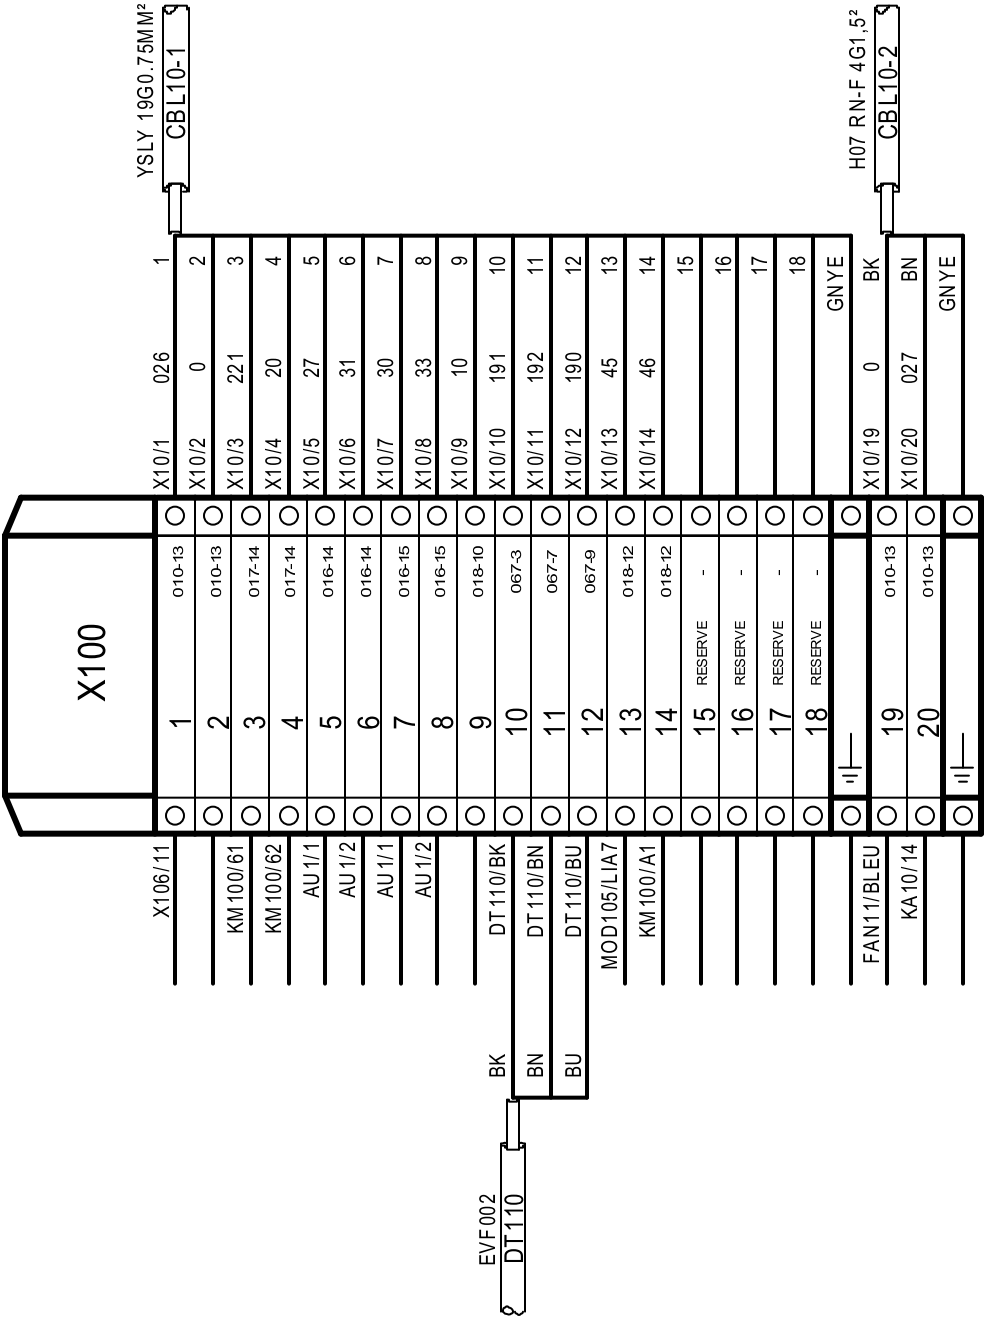

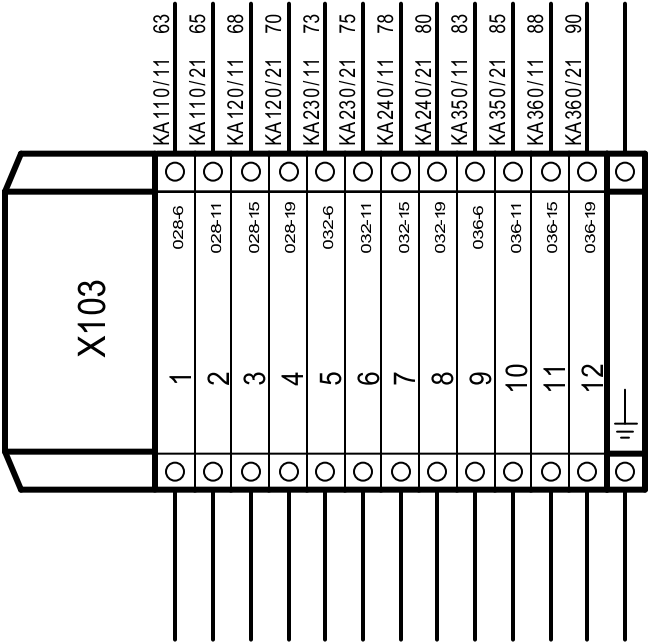


BOITIER B10

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36			Date of creation : 11/07/2024		Bornier : X103				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38			Designed by : DB		Bornier : X103								ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecaticid.service@ceva.com					ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 092/163					

A
B
C
D
E
F
G
H
I
J
K
L
M

BOITIER B10

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36			Date of creation : 01/08/2024		Bornier : X104				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38			Designed by : DB		Bornier : X104								ARTICLE : SMXA-C014221				INDEX : V11	
			E-mail : ecatic.service@ceva.com					ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 093/163					

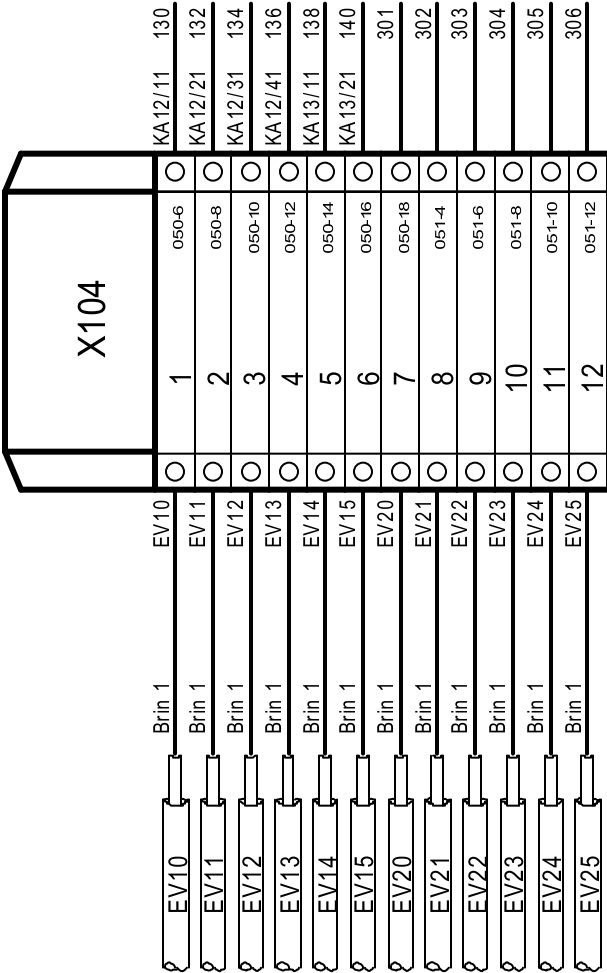

A
B
C
D
E
F
G
H
I
J
K
L
M


SUB-D	UAC300-2-A	A
SUB-D	UAC300-1-A	
SUB-D	UAC200-2-A	B
SUB-D	UAC200-1-A	
SUB-D	UAC100-2-A	
SUB-D	UAC100-1-A	

C

						
---	---	---	---	---	---	---

N° borne - B

FOLIO : 095/163

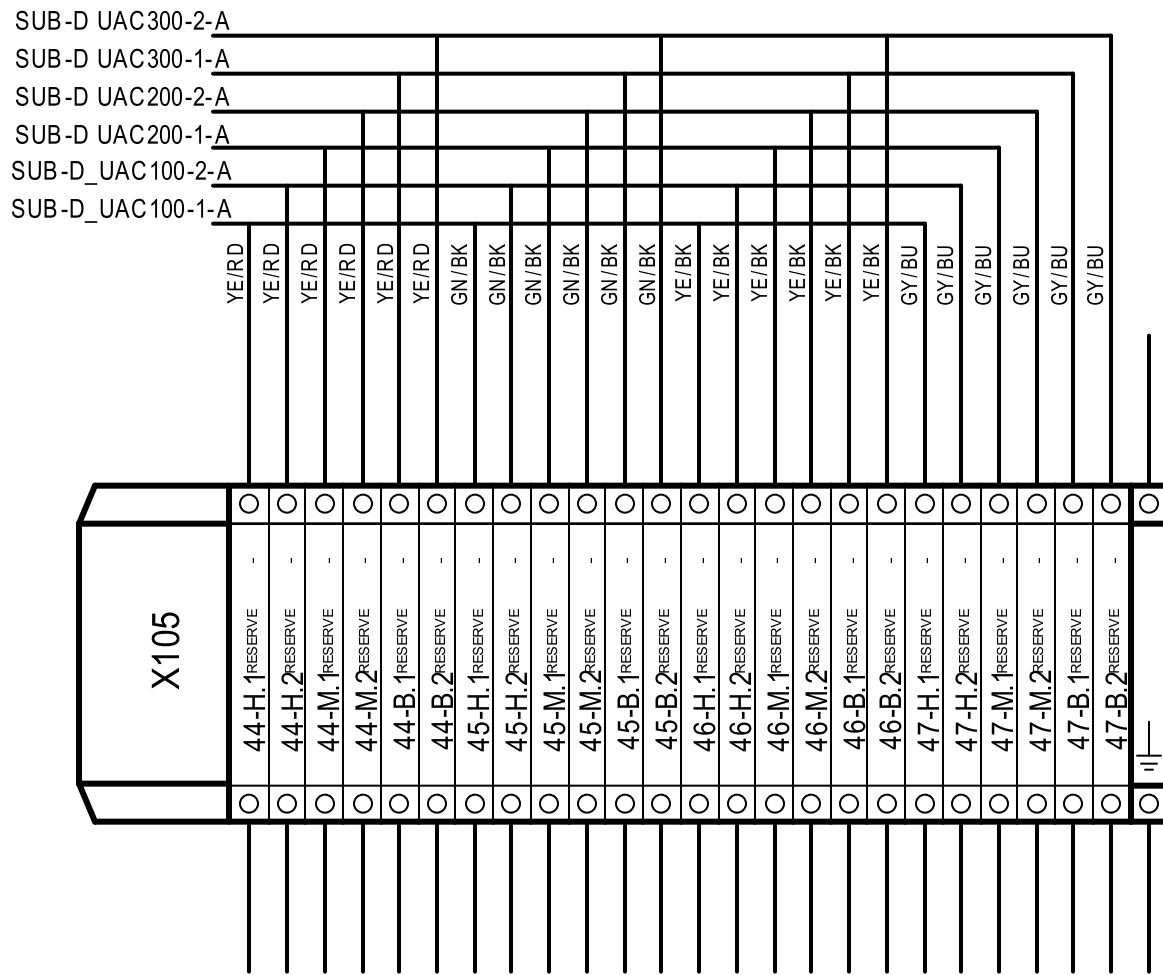

Borne triple étages
PT 1.5/S-3PV REF : 3213742

N° borne - H

N° borne - M

N° borne - B

BOITIER B10

ECAT-ID
ZI de KERIEL
29800 PLOUEDERN
– FRANCE –

Tél : (33).2.98.85.31.36

Fax : (33).2.98.85.31.38

E-mail : ecatid.service@ceva.com

Date of creation :
06/08/2024

Designed by :
DB

Bornier : X105

Bornier : X105

ENVIRONNEMENT:Version 4.49.F - 23/09/2020



Ecat-iD Campus

CONTRACT :	C01422
------------	--------

CUSTOMER :	
------------	--

COOP LAR

ARTICLE :


SMXA-C014221

COUNTRY :

BRESIL


INDEX :	V12
---------	-----

FOLIO : 097/163

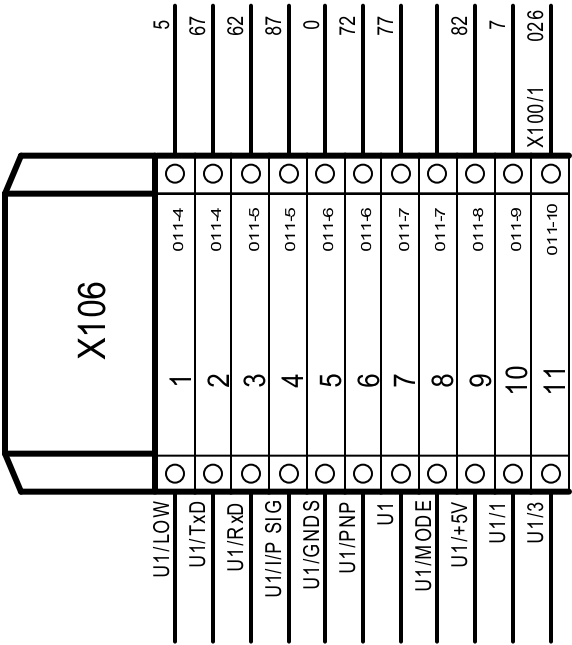


BOITIER B10

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36			Date of creation : 11/07/2024		Bornier : X106			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38			Designed by : DB		Bornier : X106							ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecaticid.service@ceva.com					ENVIRONNEMENT : Version 4.49.F - 23/09/2020							098/163					

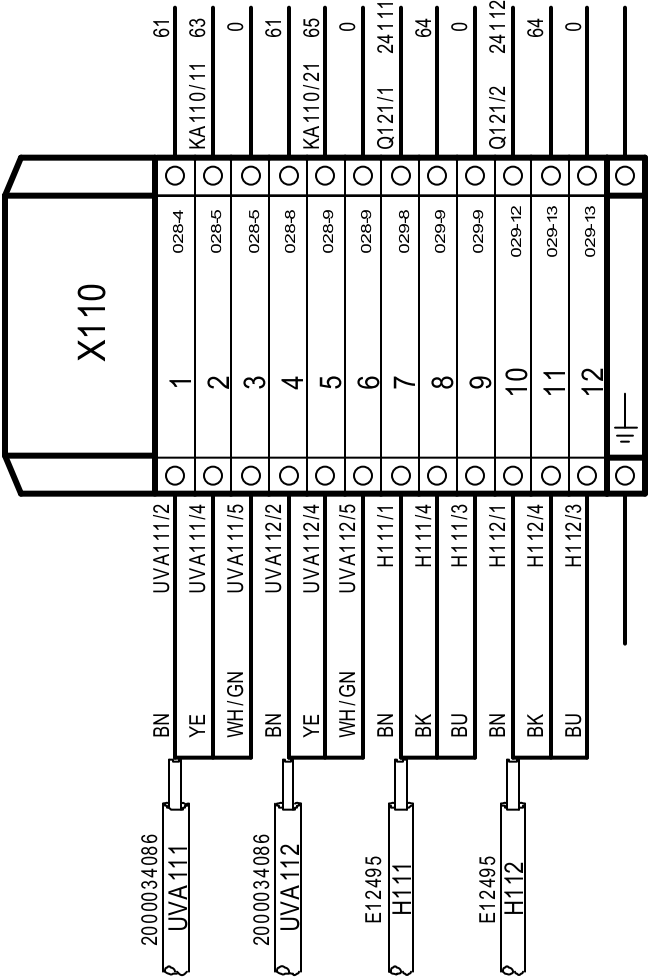


BOITIER B10

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : X110			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR			COUNTRY : BRESIL		
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : X110							ARTICLE : SMXA-C014221						INDEX : V14	
			E-mail : ecatic.service@ceva.com					ENVIRONNEMENT:Version 4.49.F - 23/09/2020												FOLIO : 099/163	

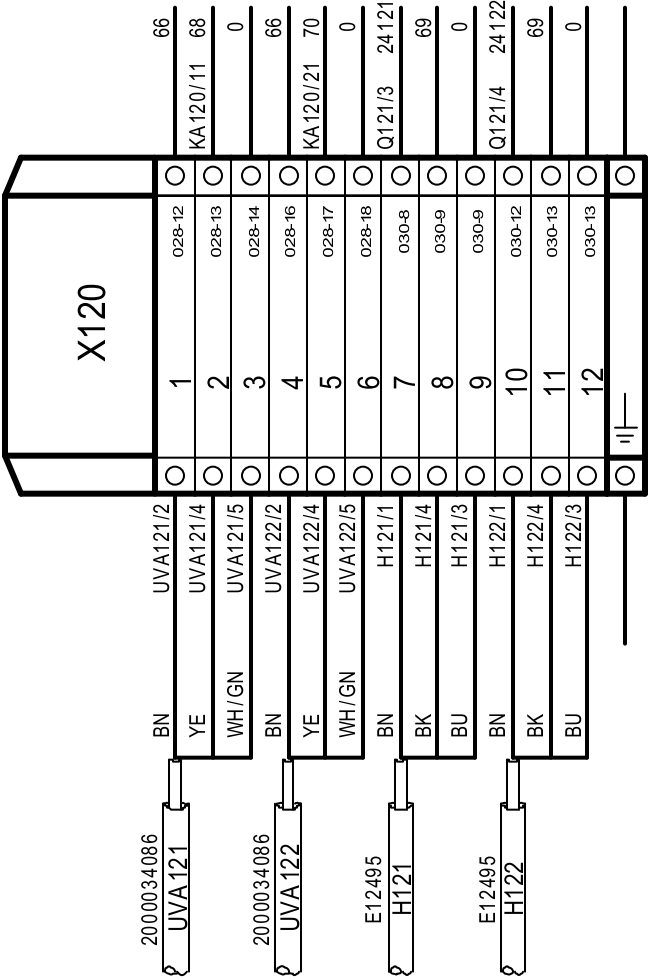


BOITIER B10

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : X120				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : X120								ARTICLE : SMXA-C014221				INDEX : V14	
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 100/163					

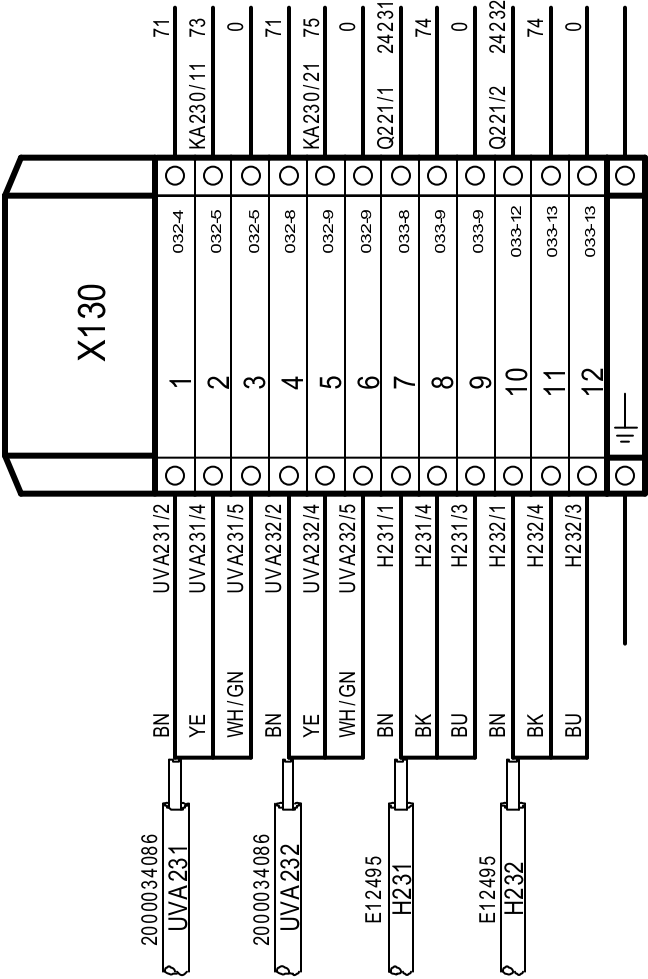

BOITIER B10


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : X130			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : X130							ARTICLE : SMXA-C014221				INDEX : V14	
			E-mail : ecatic.service@ceva.com		ENVIRONNEMENT : Version 4.49.F - 23/09/2020			FOLIO : 101/163											

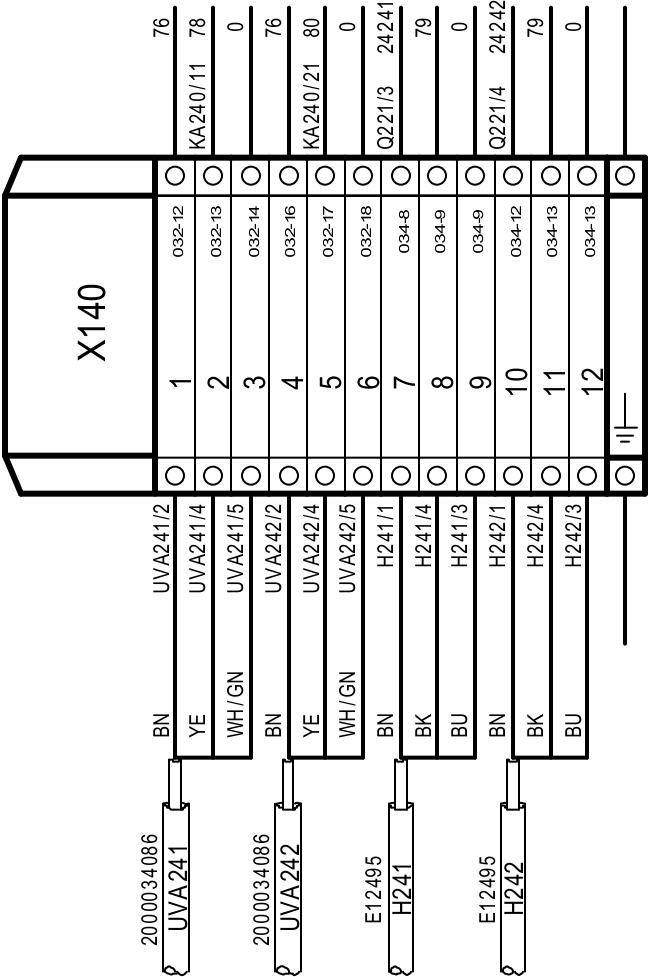

BOITIER B10


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : X140				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : X140								ARTICLE : SMXA-C014221				INDEX : V14	
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 102/163					

A
B
C
D
E
F
G
H
I
J
K
L
M

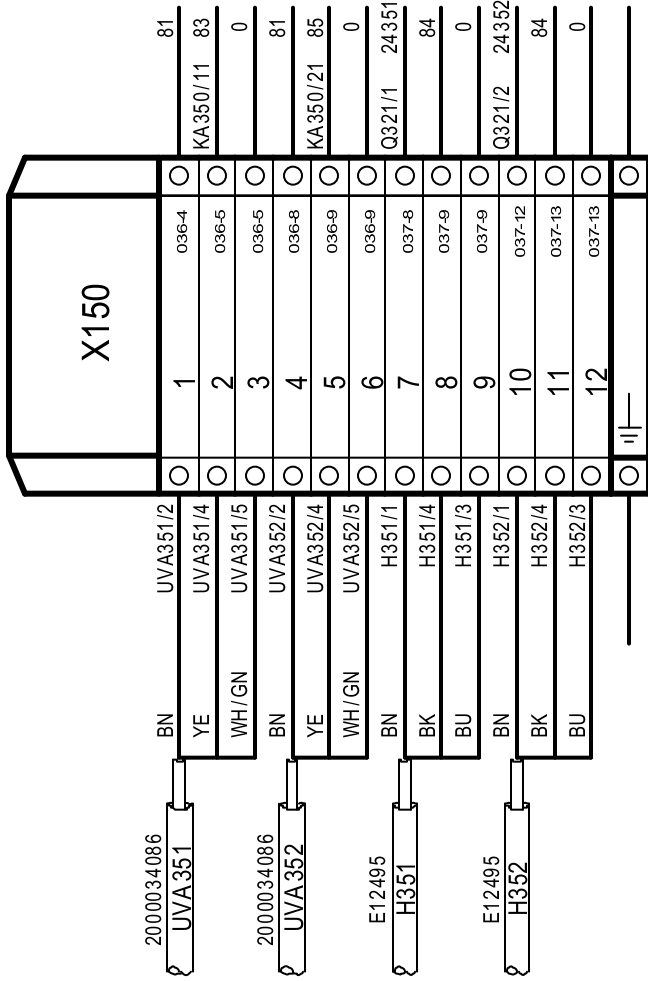


BOITIER B10

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : X150				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : X150								ARTICLE : SMXA-C014221				INDEX : V14	
			E-mail : ecatic.service@ceva.com		ENVIRONNEMENT:Version 4.49.F - 23/09/2020				FOLIO : 103/163											

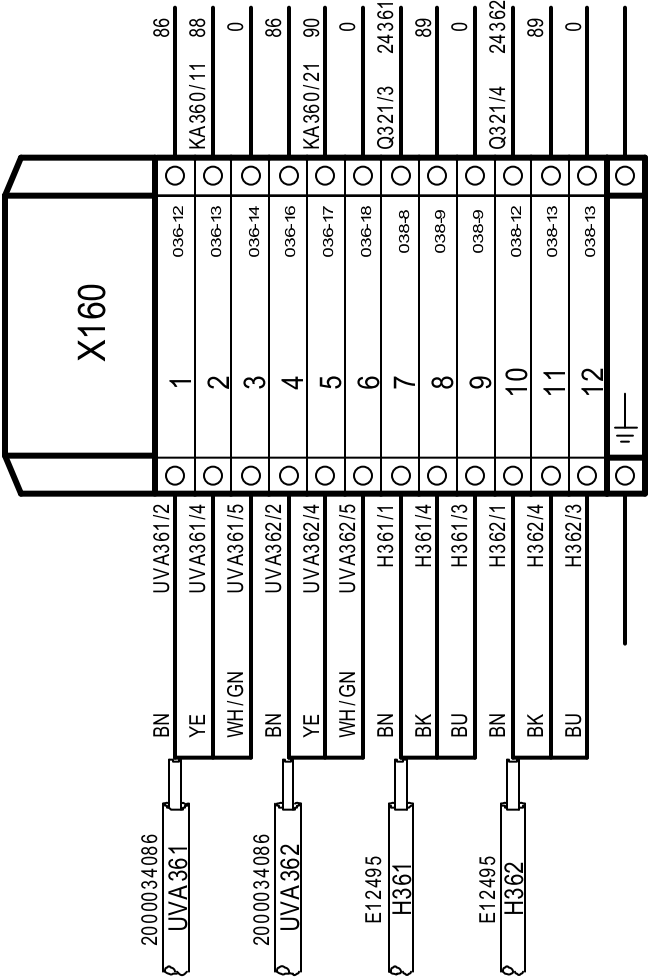

BOITIER B10

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 11/07/2024		Bornier : X160				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : X160								ARTICLE : SMXA-C014221				INDEX : V14	
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 104/163					

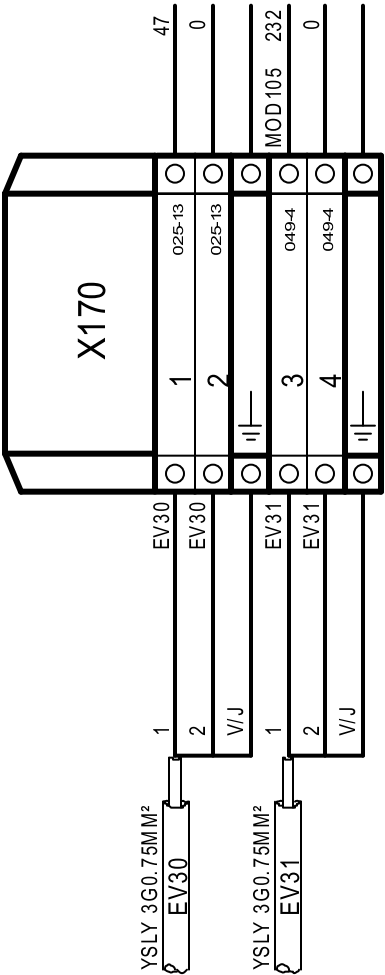


BOITIER B10




1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 04/10/2024		Bornier : X170				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		Bornier : X170								ARTICLE : SMXA-C014221				INDEX : V11	
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 105/163					

BOITIER T10

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36			Date of creation : 11/07/2024		Bornier : XT100				Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38			Designed by : DB		Bornier : XT100								ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail : ecatic.service@ceva.com					ENVIRONNEMENT : Version 4.49.F - 23/09/2020								FOLIO : 107/163					




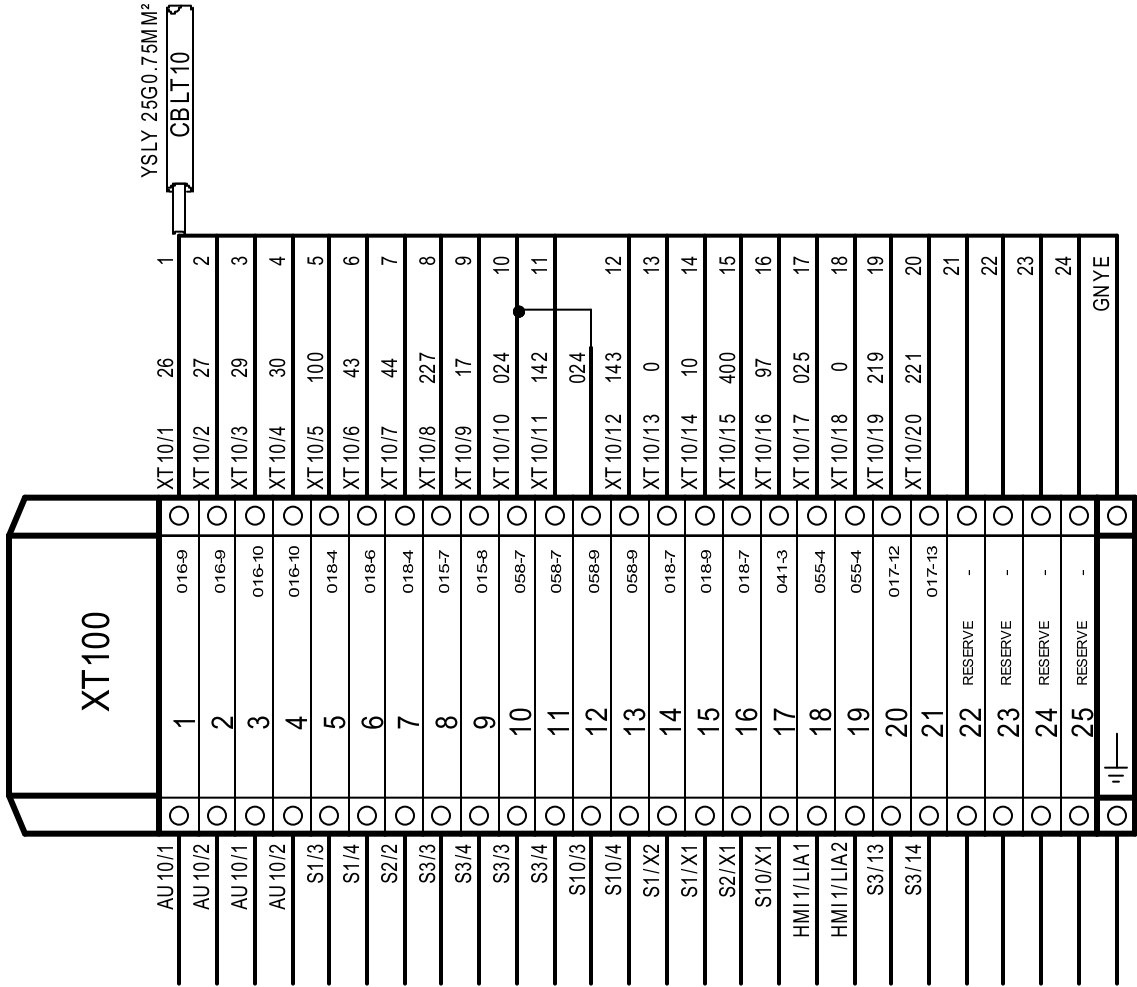


A
B
C
D
E
F
G
H
I
J
K
L
M

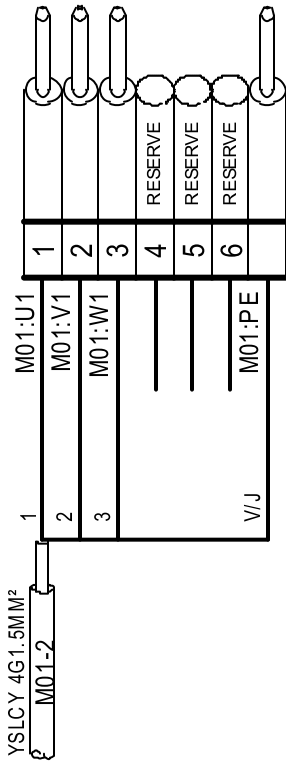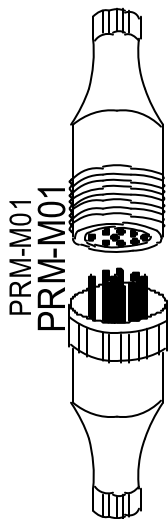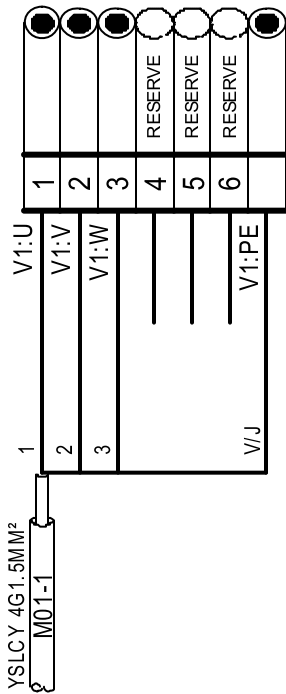





PRF-M01

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecatid.service@ceva.com		Date of creation : 11/07/2024		Connecteur: PRF-M01 & PRM-M01			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
					Designed by : DB														
														ENVIRONNEMENT:Version 4.49.F - 23/09/2020					

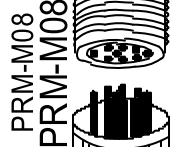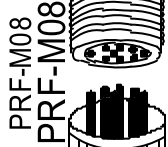





PRF-M08

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 29/08/2024		Connecteur: PRF-M08 & PRM-M08				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		PRF-M08 - 1/1								ARTICLE : SMXA-C014221				INDEX : V12	
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								FOLIO : 109/163					

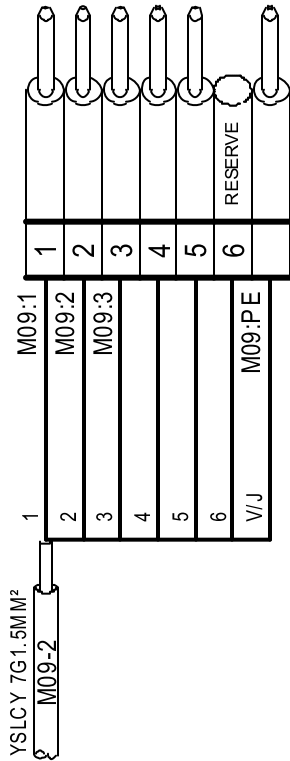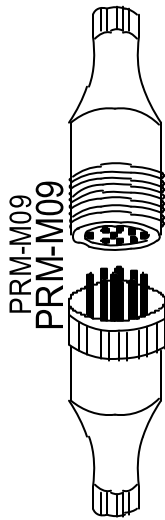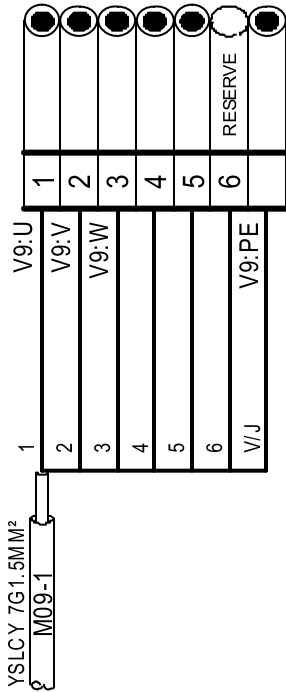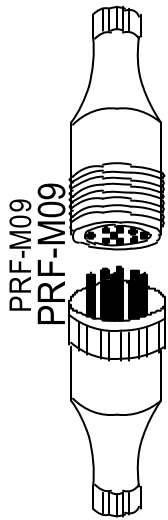

PRF-M09

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 29/08/2024		Connecteur: PRF-M09 & PRM-M09				 Ecat-iD Campus			CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		PRF-M09 - 1/1							ARTICLE : SMXA-C014221		INDEX : V12			
			E-mail :ecatid.service@ceva.com		ENVIRONNEMENT:Version 4.49.F - 23/09/2020				FOLIO : 110/163										

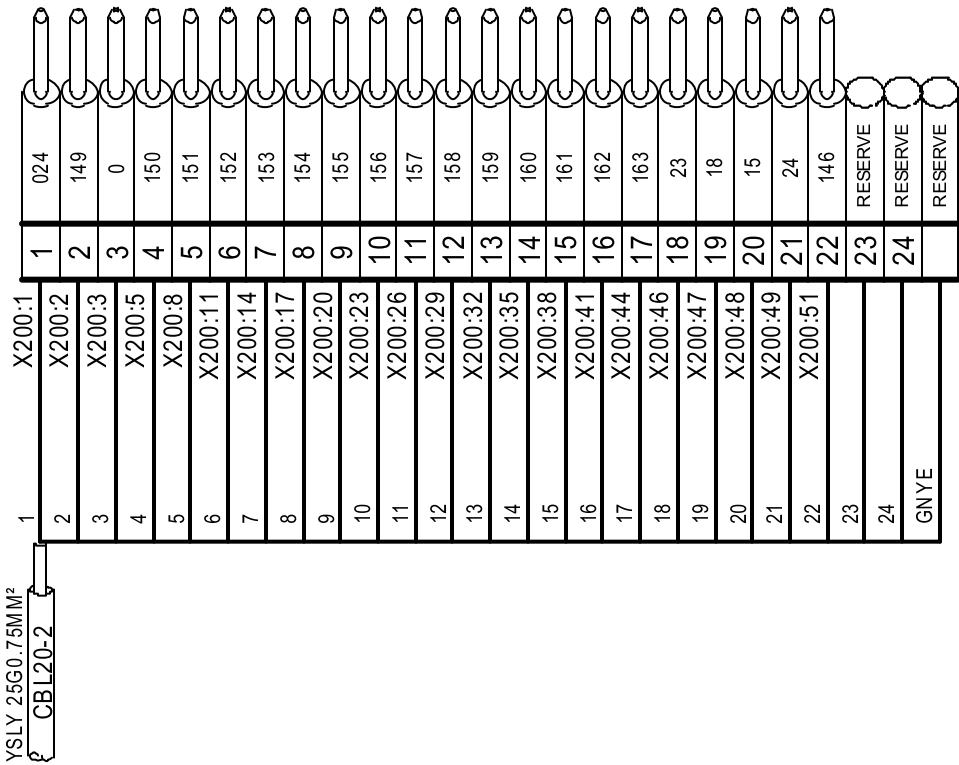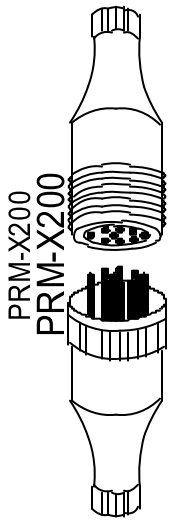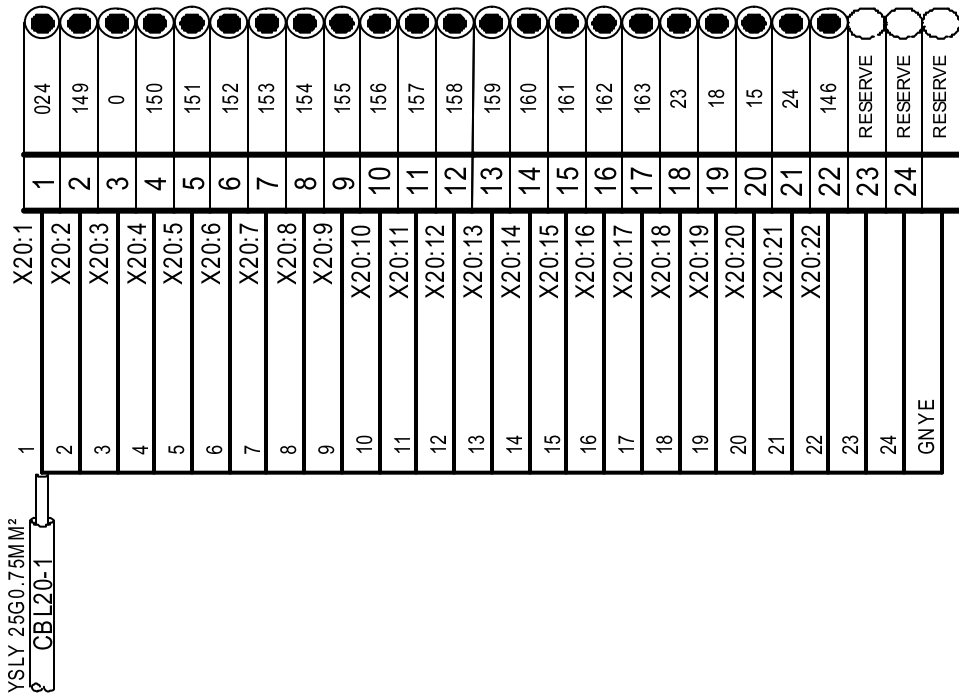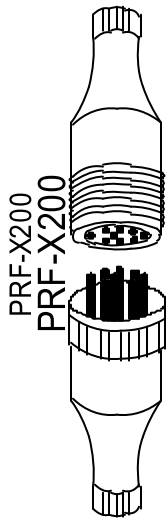


PRF-X200

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -			Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecatid.service@ceva.com		Date of creation : 11/07/2024 Designed by : DB		Connecteur: PRF-X200 & PRM-X200 ENVIRONNEMENT: Version 4.49.F - 23/09/2020				ceva Ecat-iD Campus			CONTRACT : C01422 ARTICLE : SMXA-C014221		CUSTOMER : COOP LAR		COUNTRY : BRESIL INDEX : V11 FOLIO : 111/163	

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

IMPLANTATION FACADE ARMOIRE

CABINET FRONT LAY OUT

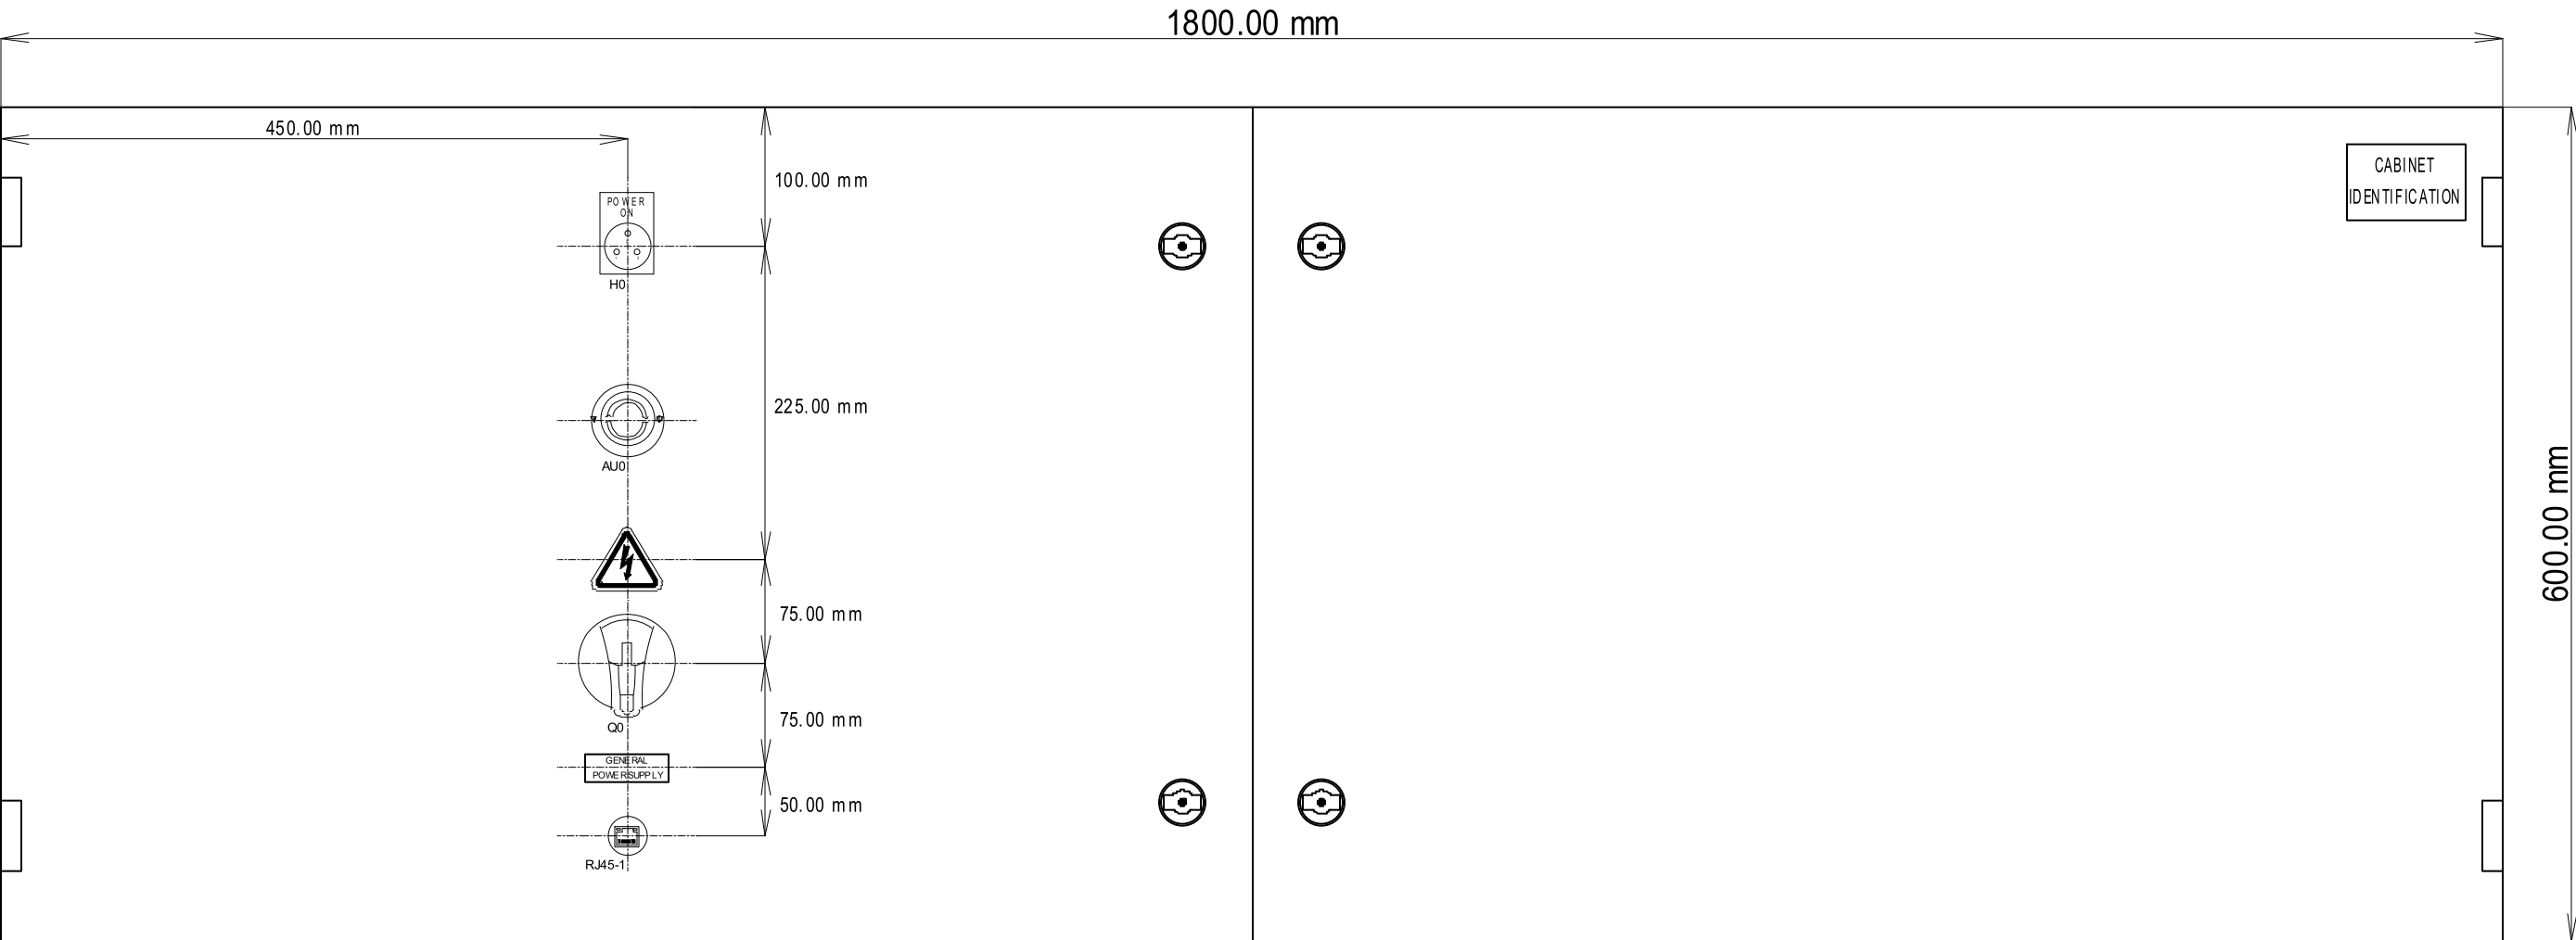


ARMOIRE

ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –	Tél : (33).2.98.85.31.36	Date of creation :	IMPLANTATION FACADE ARMOIRE	 Ecat-iD Campus	CONTRACT : C01422	CUSTOMER : COOP LAR	COUNTRY : BRESIL
	Fax : (33).2.98.85.31.38	Designed by : DB	CABINET FRONT LAY OUT		ARTICLE : SMXA-C014221		INDEX : V11
	E-mail :ecatid.service@ceva.com	ENVIRONNEMENT :Version 4.49.F - 23/09/2020			FOLIO : 112/163		

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

IMPLANTATION FACE ARRIERE BOITIER B10

BOX B10 REAR PANEL LAY OUT

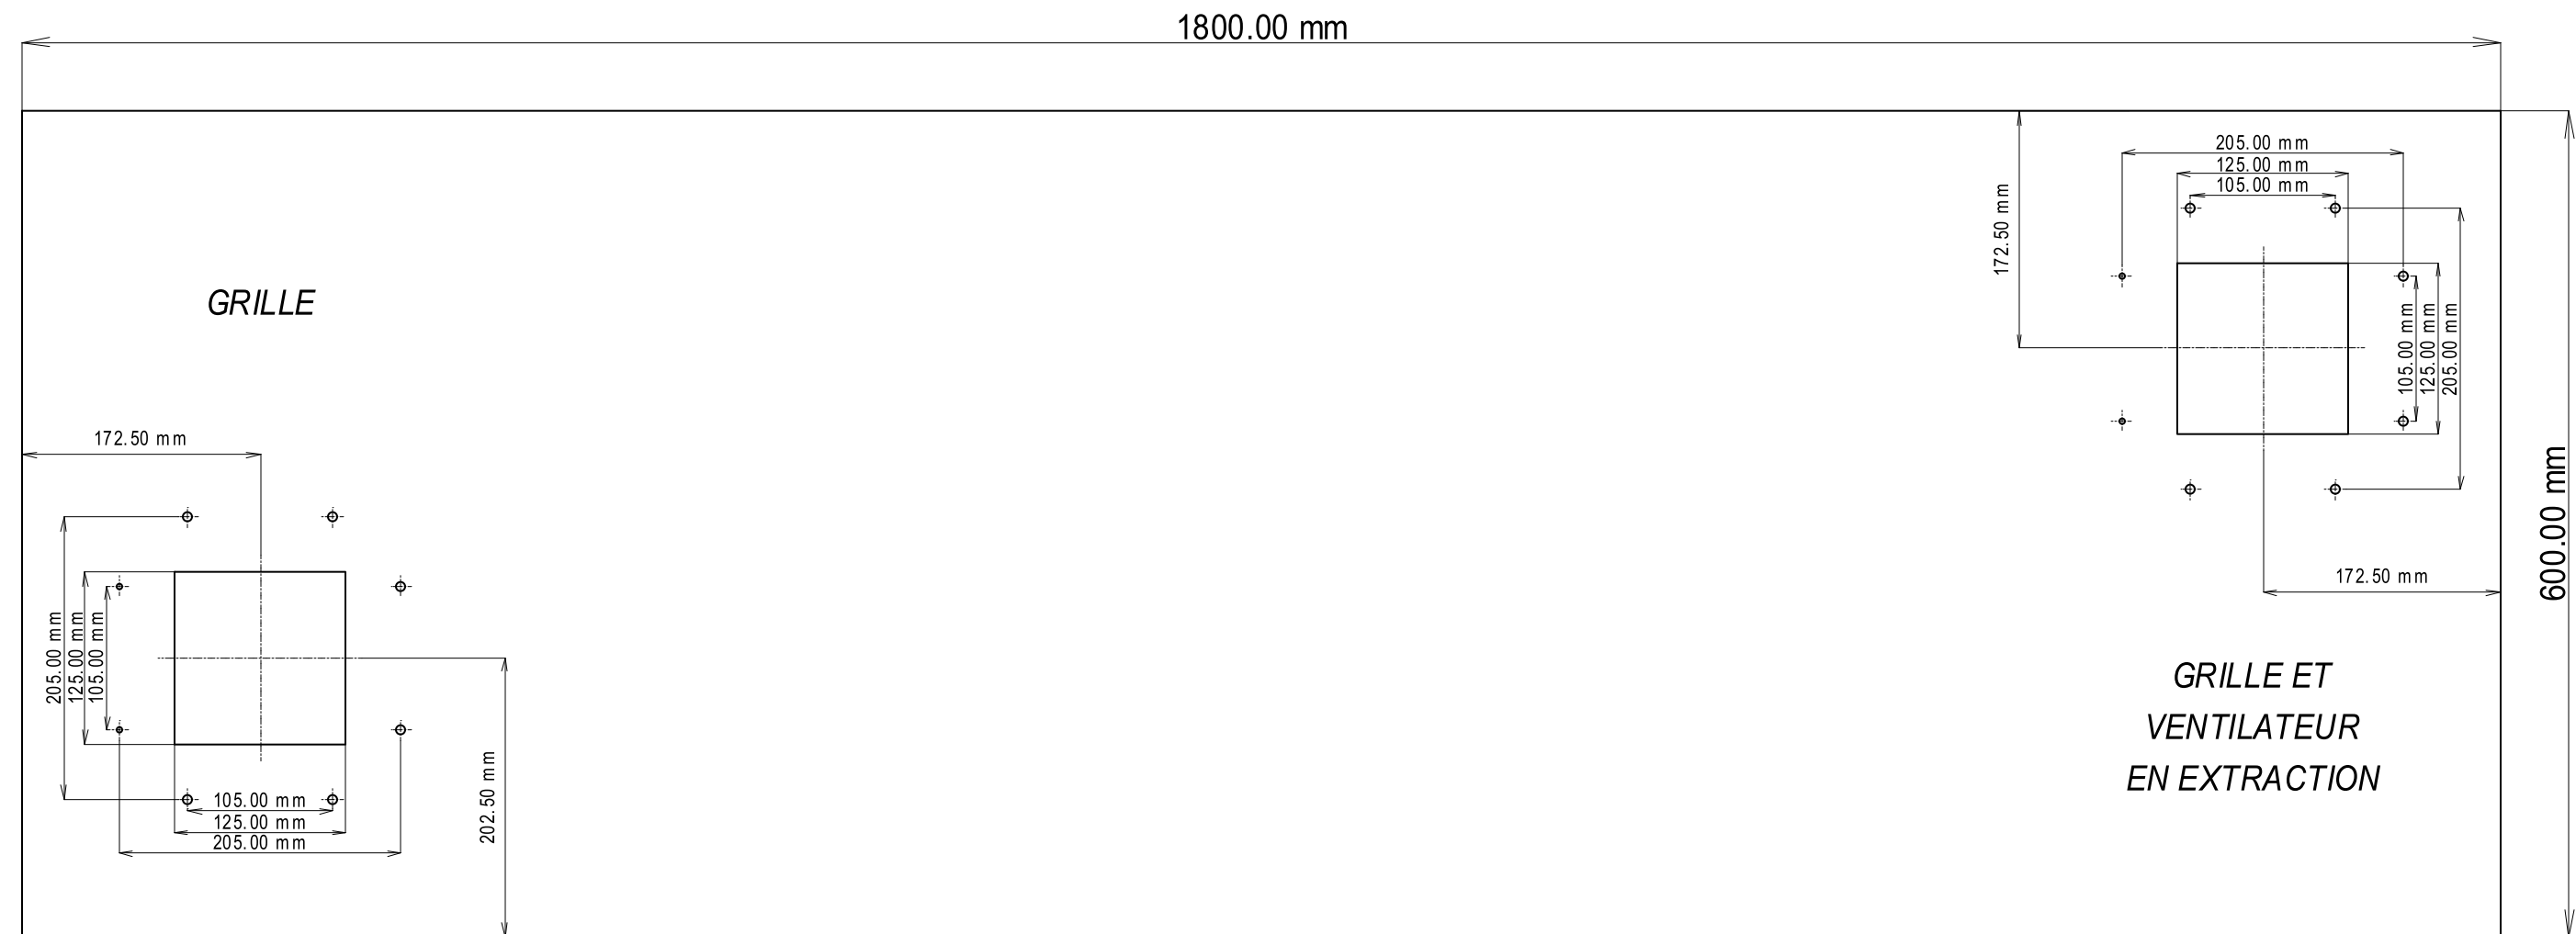

BOITIER B10

ECAT-ID
ZI de KERIEL
29800 PLOUEDERN
– FRANCE –

Tél : (33).2.98.85.31.36
Fax : (33).2.98.85.31.38
E-mail : ecatid.service@ceva.com

Date of creation :	IMPLANTATION ARRIERE ARMOIRE
Designed by : DB	CABINET REAR LAY OUT
ENVIRONNEMENT : Version 4.49.F - 23/09/2020	



Ecat-iD Campus

CONTRACT :
C01422

CUSTOMER :
COOP LAR


COUNTRY :
BRESIL

ARTICLE :
SMXA-C014221

INDEX : V11
FOLIO : 113/163

IMPLANTATION INTERIEUR ARMOIRE

CABINET INSIDE LAY OUT

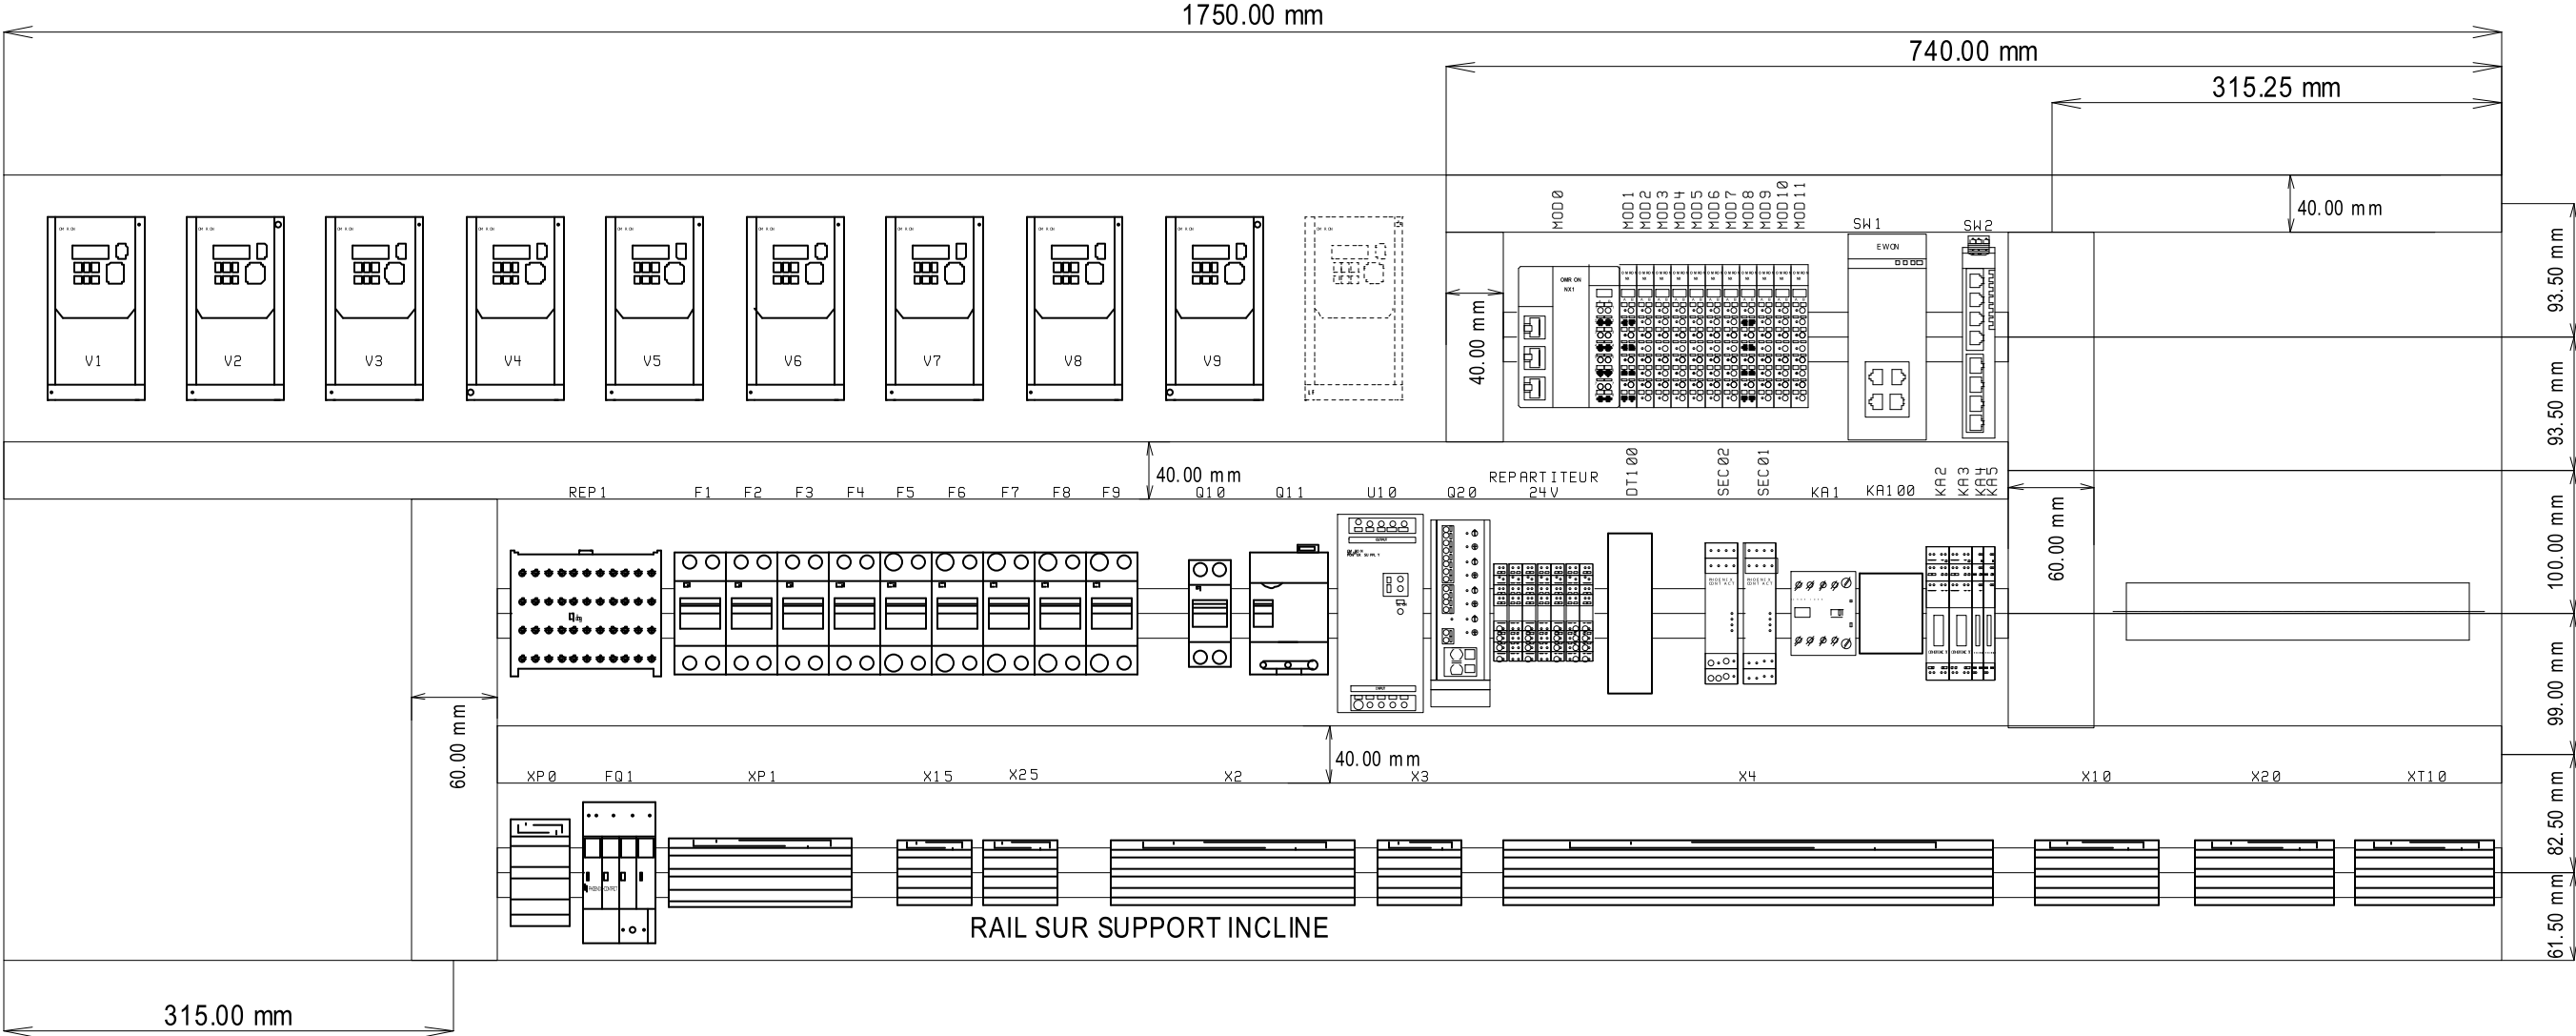


ARMOIRE

ECAT-ID ZI de KERIEL 29800 PLOUEDERN - FRANCE -	Tél : (33).2.98.85.31.36	Date of creation :	IMPLANTATION ARMOIRE	 Ecat-iD Campus	CONTRACT : C01422	CUSTOMER : COOP LAR	COUNTRY : BRESIL
	Fax : (33).2.98.85.31.38	Designed by : DB	LAY OUT		ARTICLE :		INDEX : V11
	E-mail : ecatid.service@ceva.com		ENVIRONNEMENT : Version 4.49.F - 23/09/2020		SMXA-C014221		FOLIO : 114/163

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

IMPLANTATION COTE ARMOIRE CABINET SIDE LAY OUT

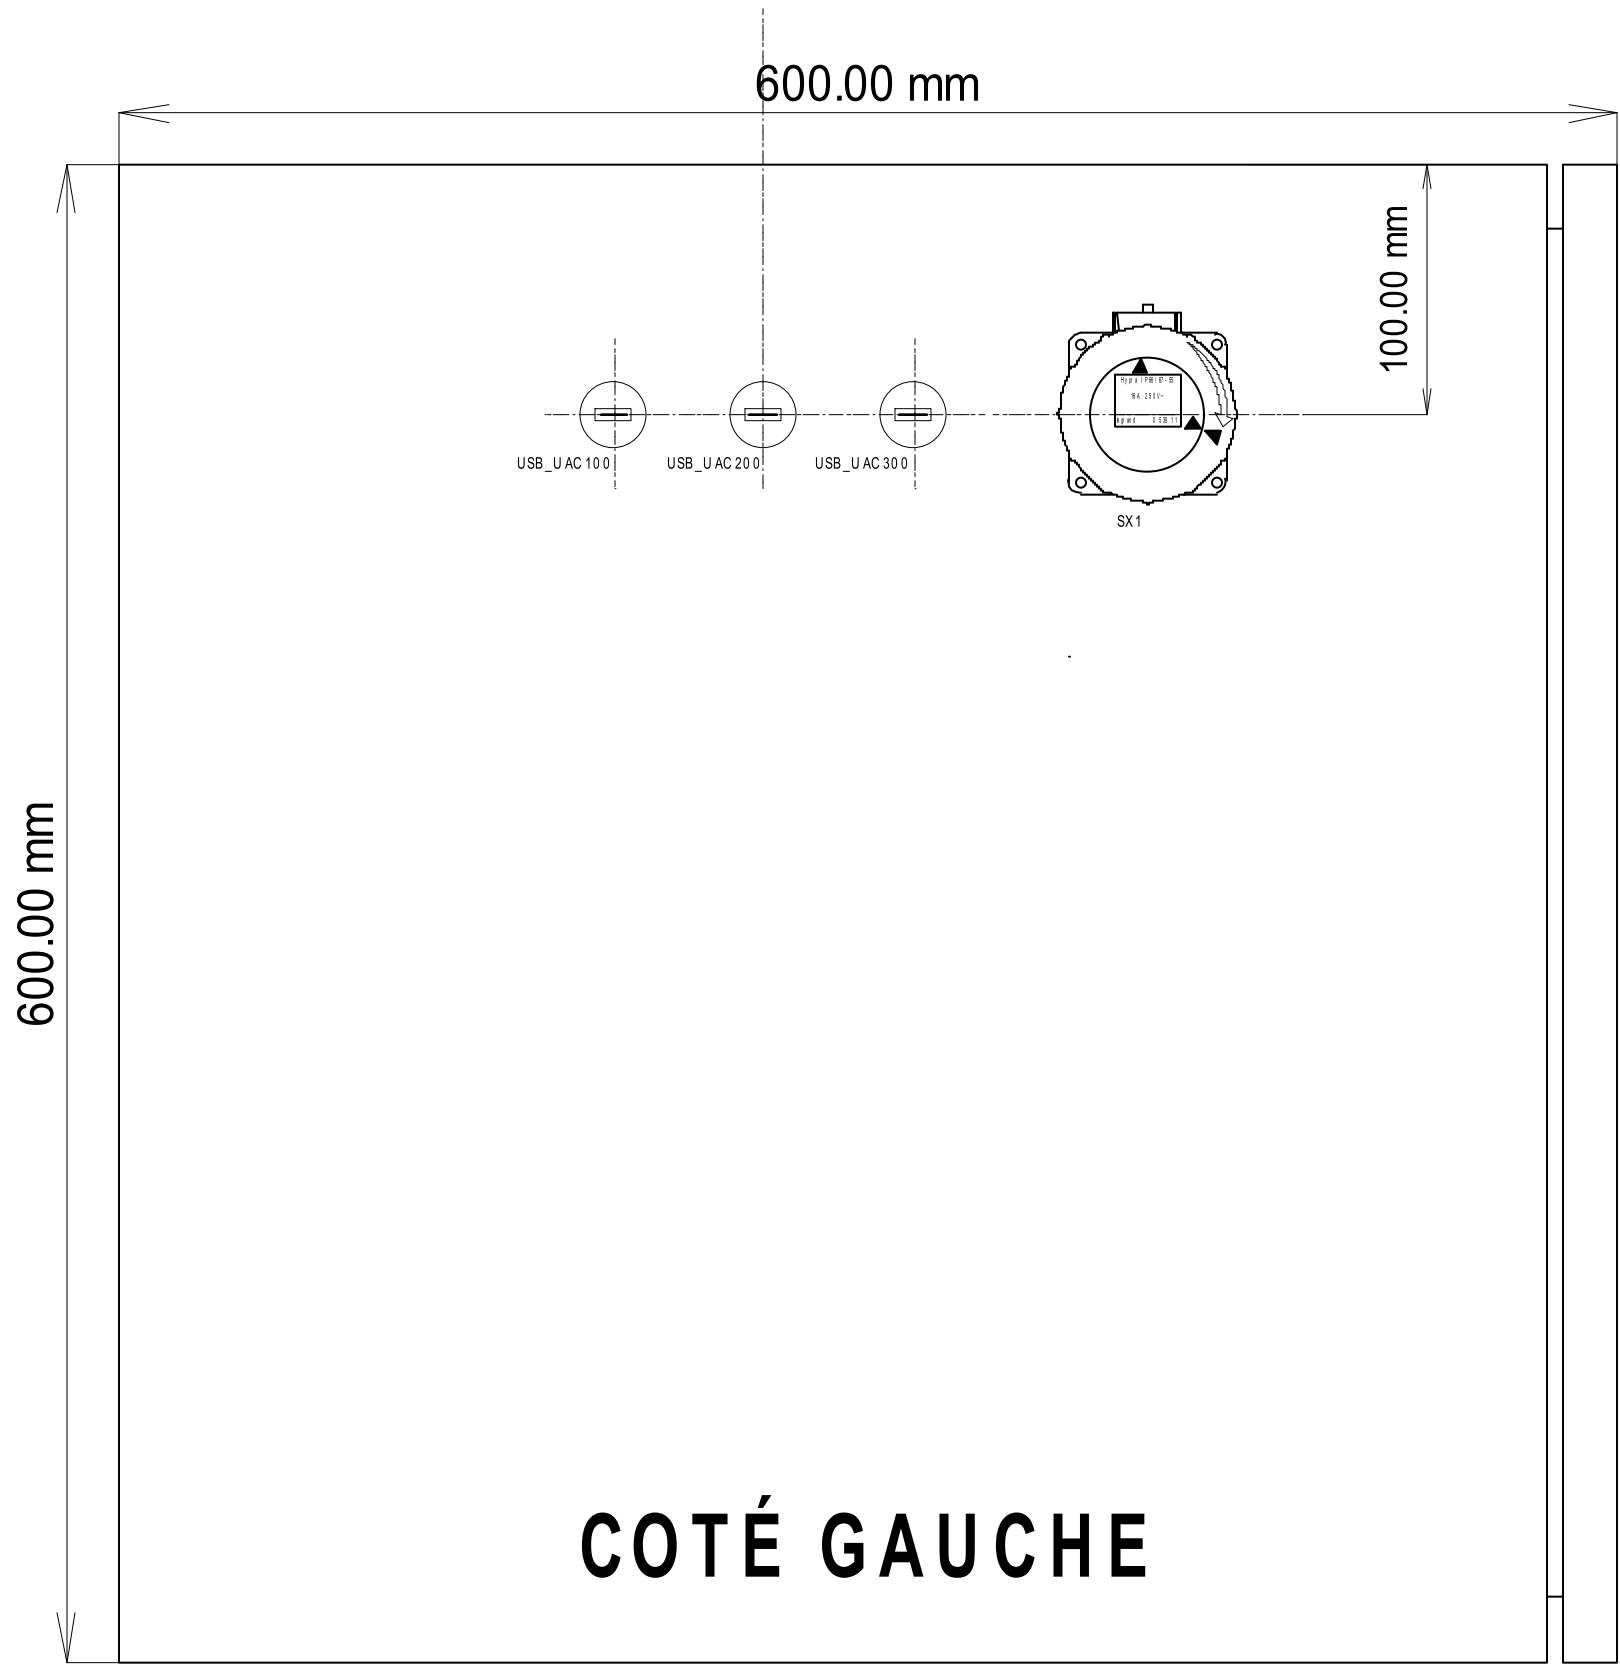


BOITIER B10

ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –	Tél : (33).2.98.85.31.36	Date of creation : 07/12/2023	IMPLANTATION COTE BOITIER B10	 Ecat-iD Campus	CONTRACT : C01422	CUSTOMER : COOP LAR	COUNTRY : BRESIL
	Fax : (33).2.98.85.31.38	Designed by : DB			ARTICLE :		INDEX : V11
	E-mail : ecatid.service@ceva.com		ENVIRONNEMENT : Version 4.49.F - 23/09/2020		SMXA-C014221		FOLIO : 115/163

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

IMPLANTATION FACADE BOITIER B10

BOX B10 FRONT LAY OUT

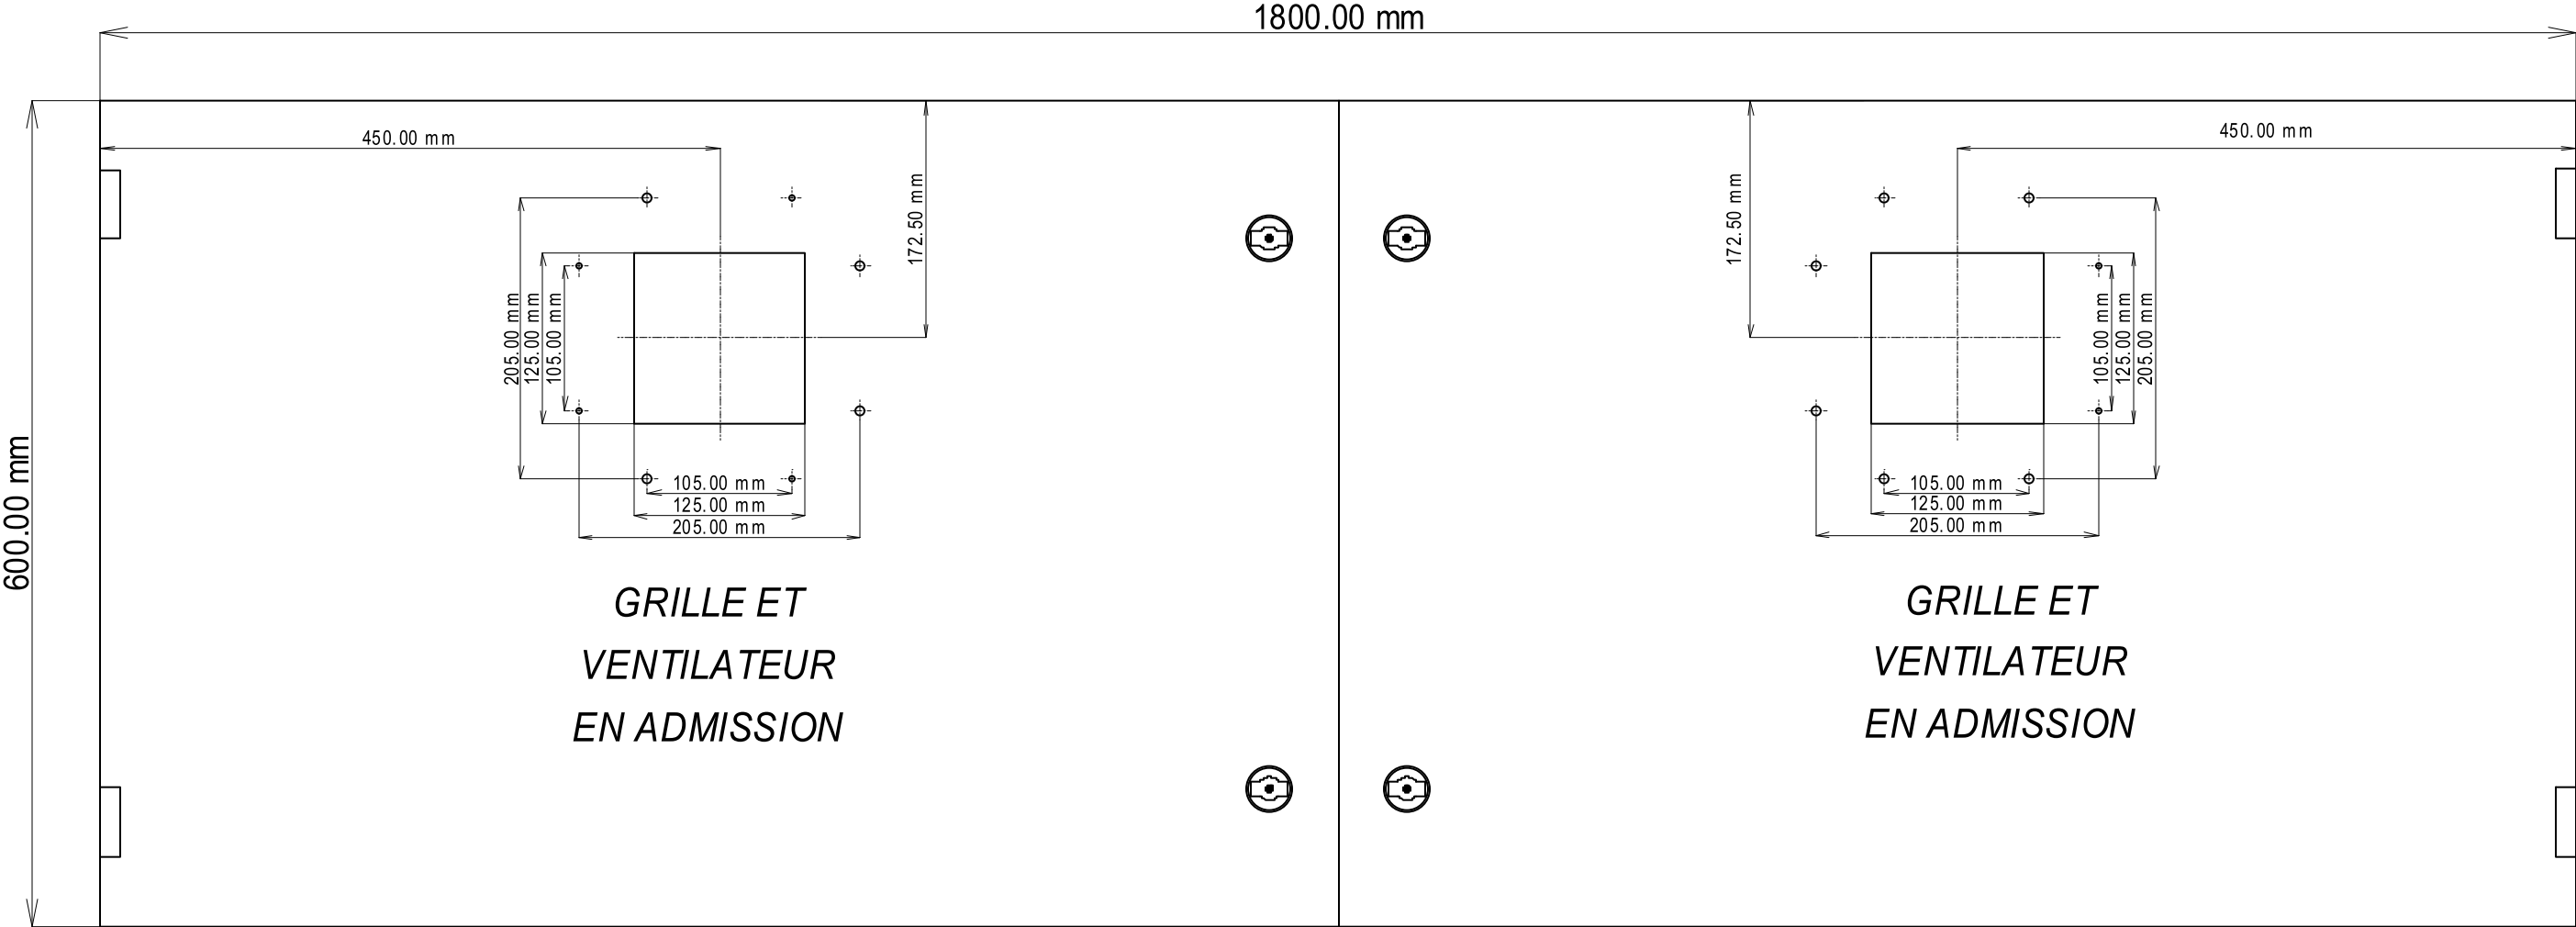


BOITIER B10

ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –	Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecatid.service@ceva.com	Date of creation :	IMPLANTATION FACADE BOITIER B10	 Ecat-iD Campus	CONTRACT : C01422	CUSTOMER : COOP LAR	COUNTRY : BRESIL
		Designed by : DB			ARTICLE :		INDEX : V11
			ENVIRONNEMENT : Version 4.49.F - 23/09/2020		SMXA-C014221		FOLIO : 116/163

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.


IMPLANTATION FACE ARRIERE BOITIER B10

BOX B10 REAR PANEL LAY OUT

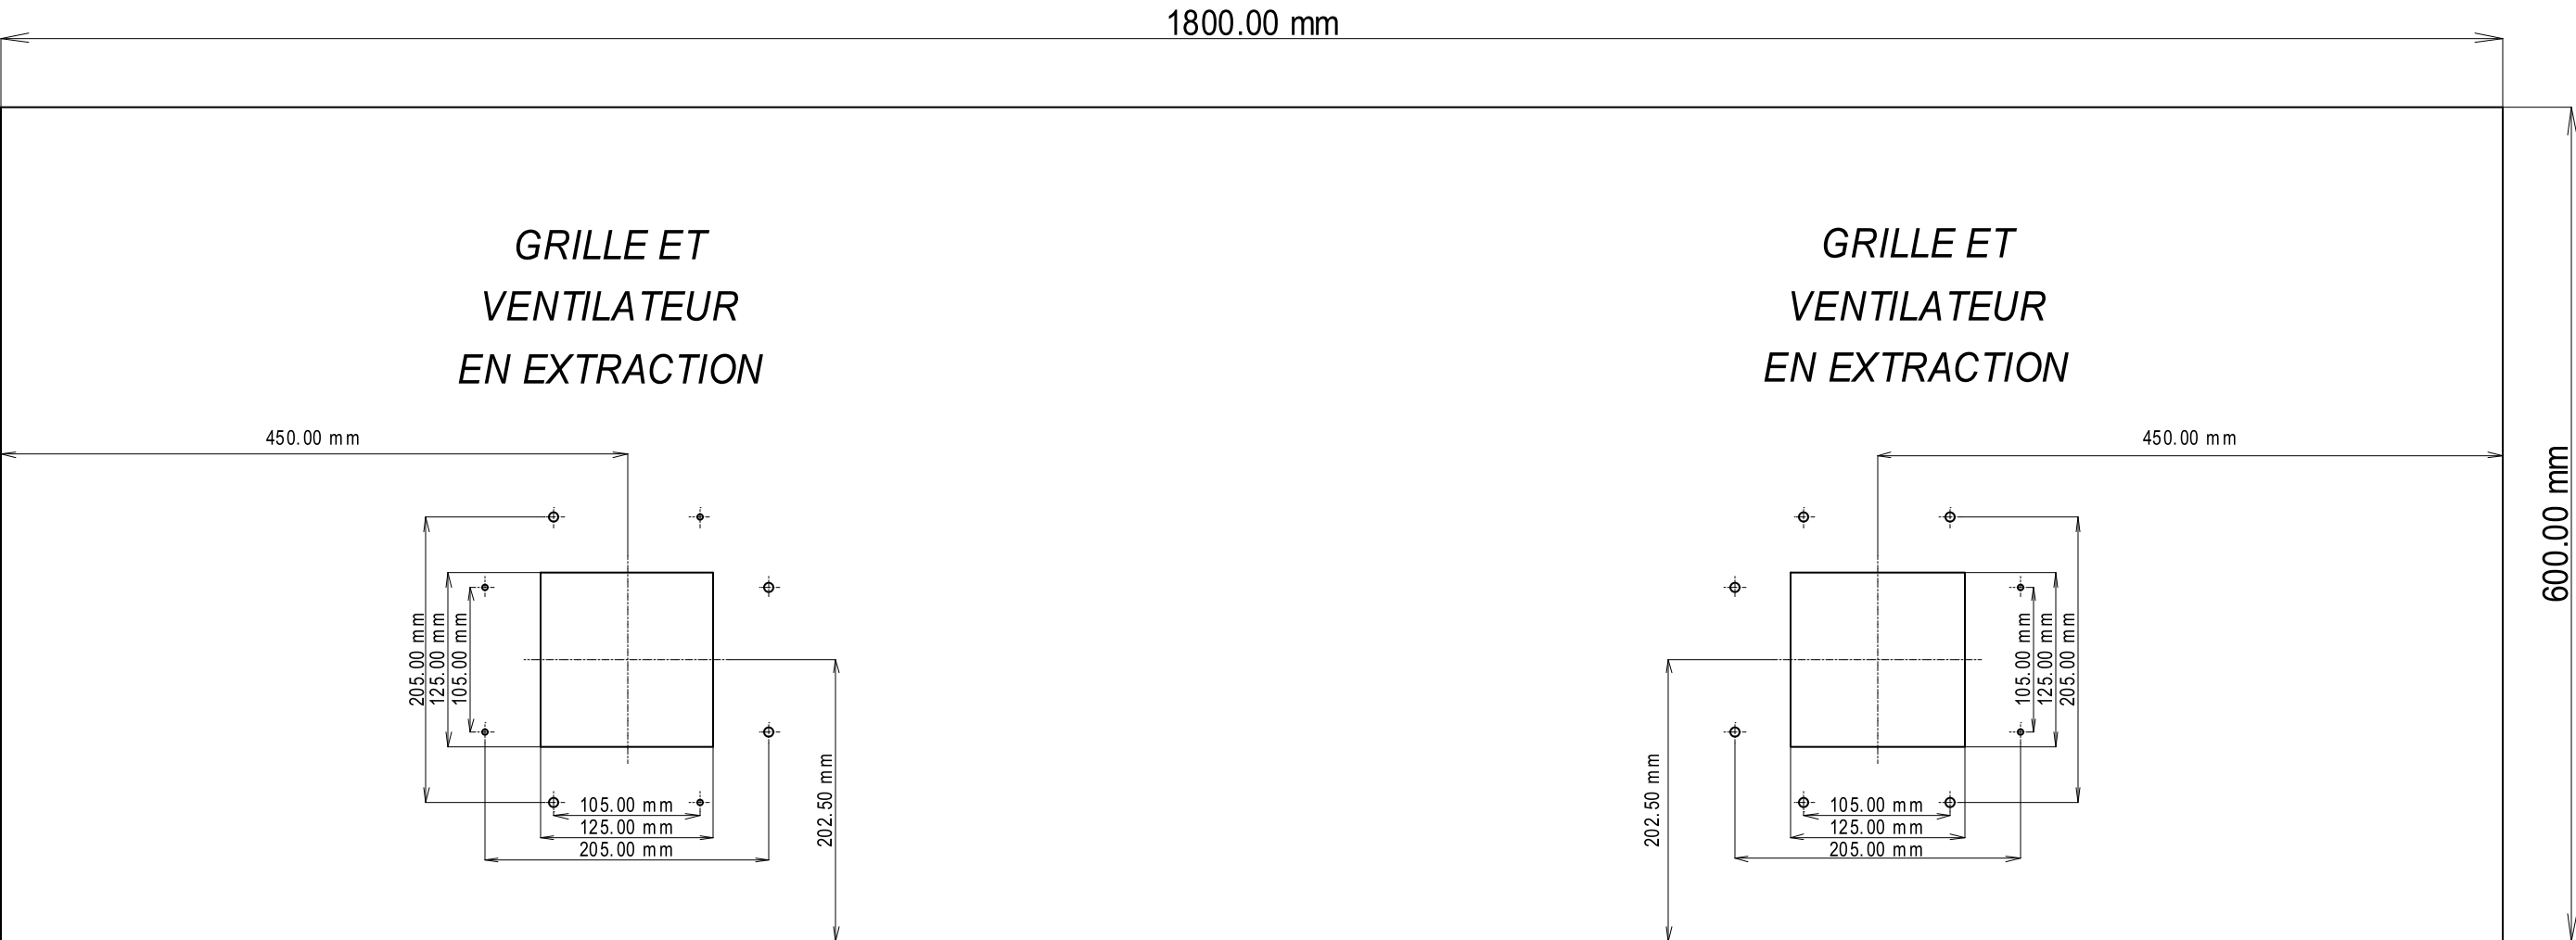

BOITIER B10

ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –	Tél : (33).2.98.85.31.36	Date of creation :	IMPLANTATION ARRIERE BOITIER B10	 Ecat-iD Campus	CONTRACT : C01422	CUSTOMER : COOP LAR	COUNTRY : BRESIL
	Fax : (33).2.98.85.31.38	Designed by : DB			ARTICLE :		INDEX : V11
	E-mail : ecatid.service@ceva.com		ENVIRONNEMENT : Version 4.49.F - 23/09/2020		SMXA-C014221		FOLIO : 117/163

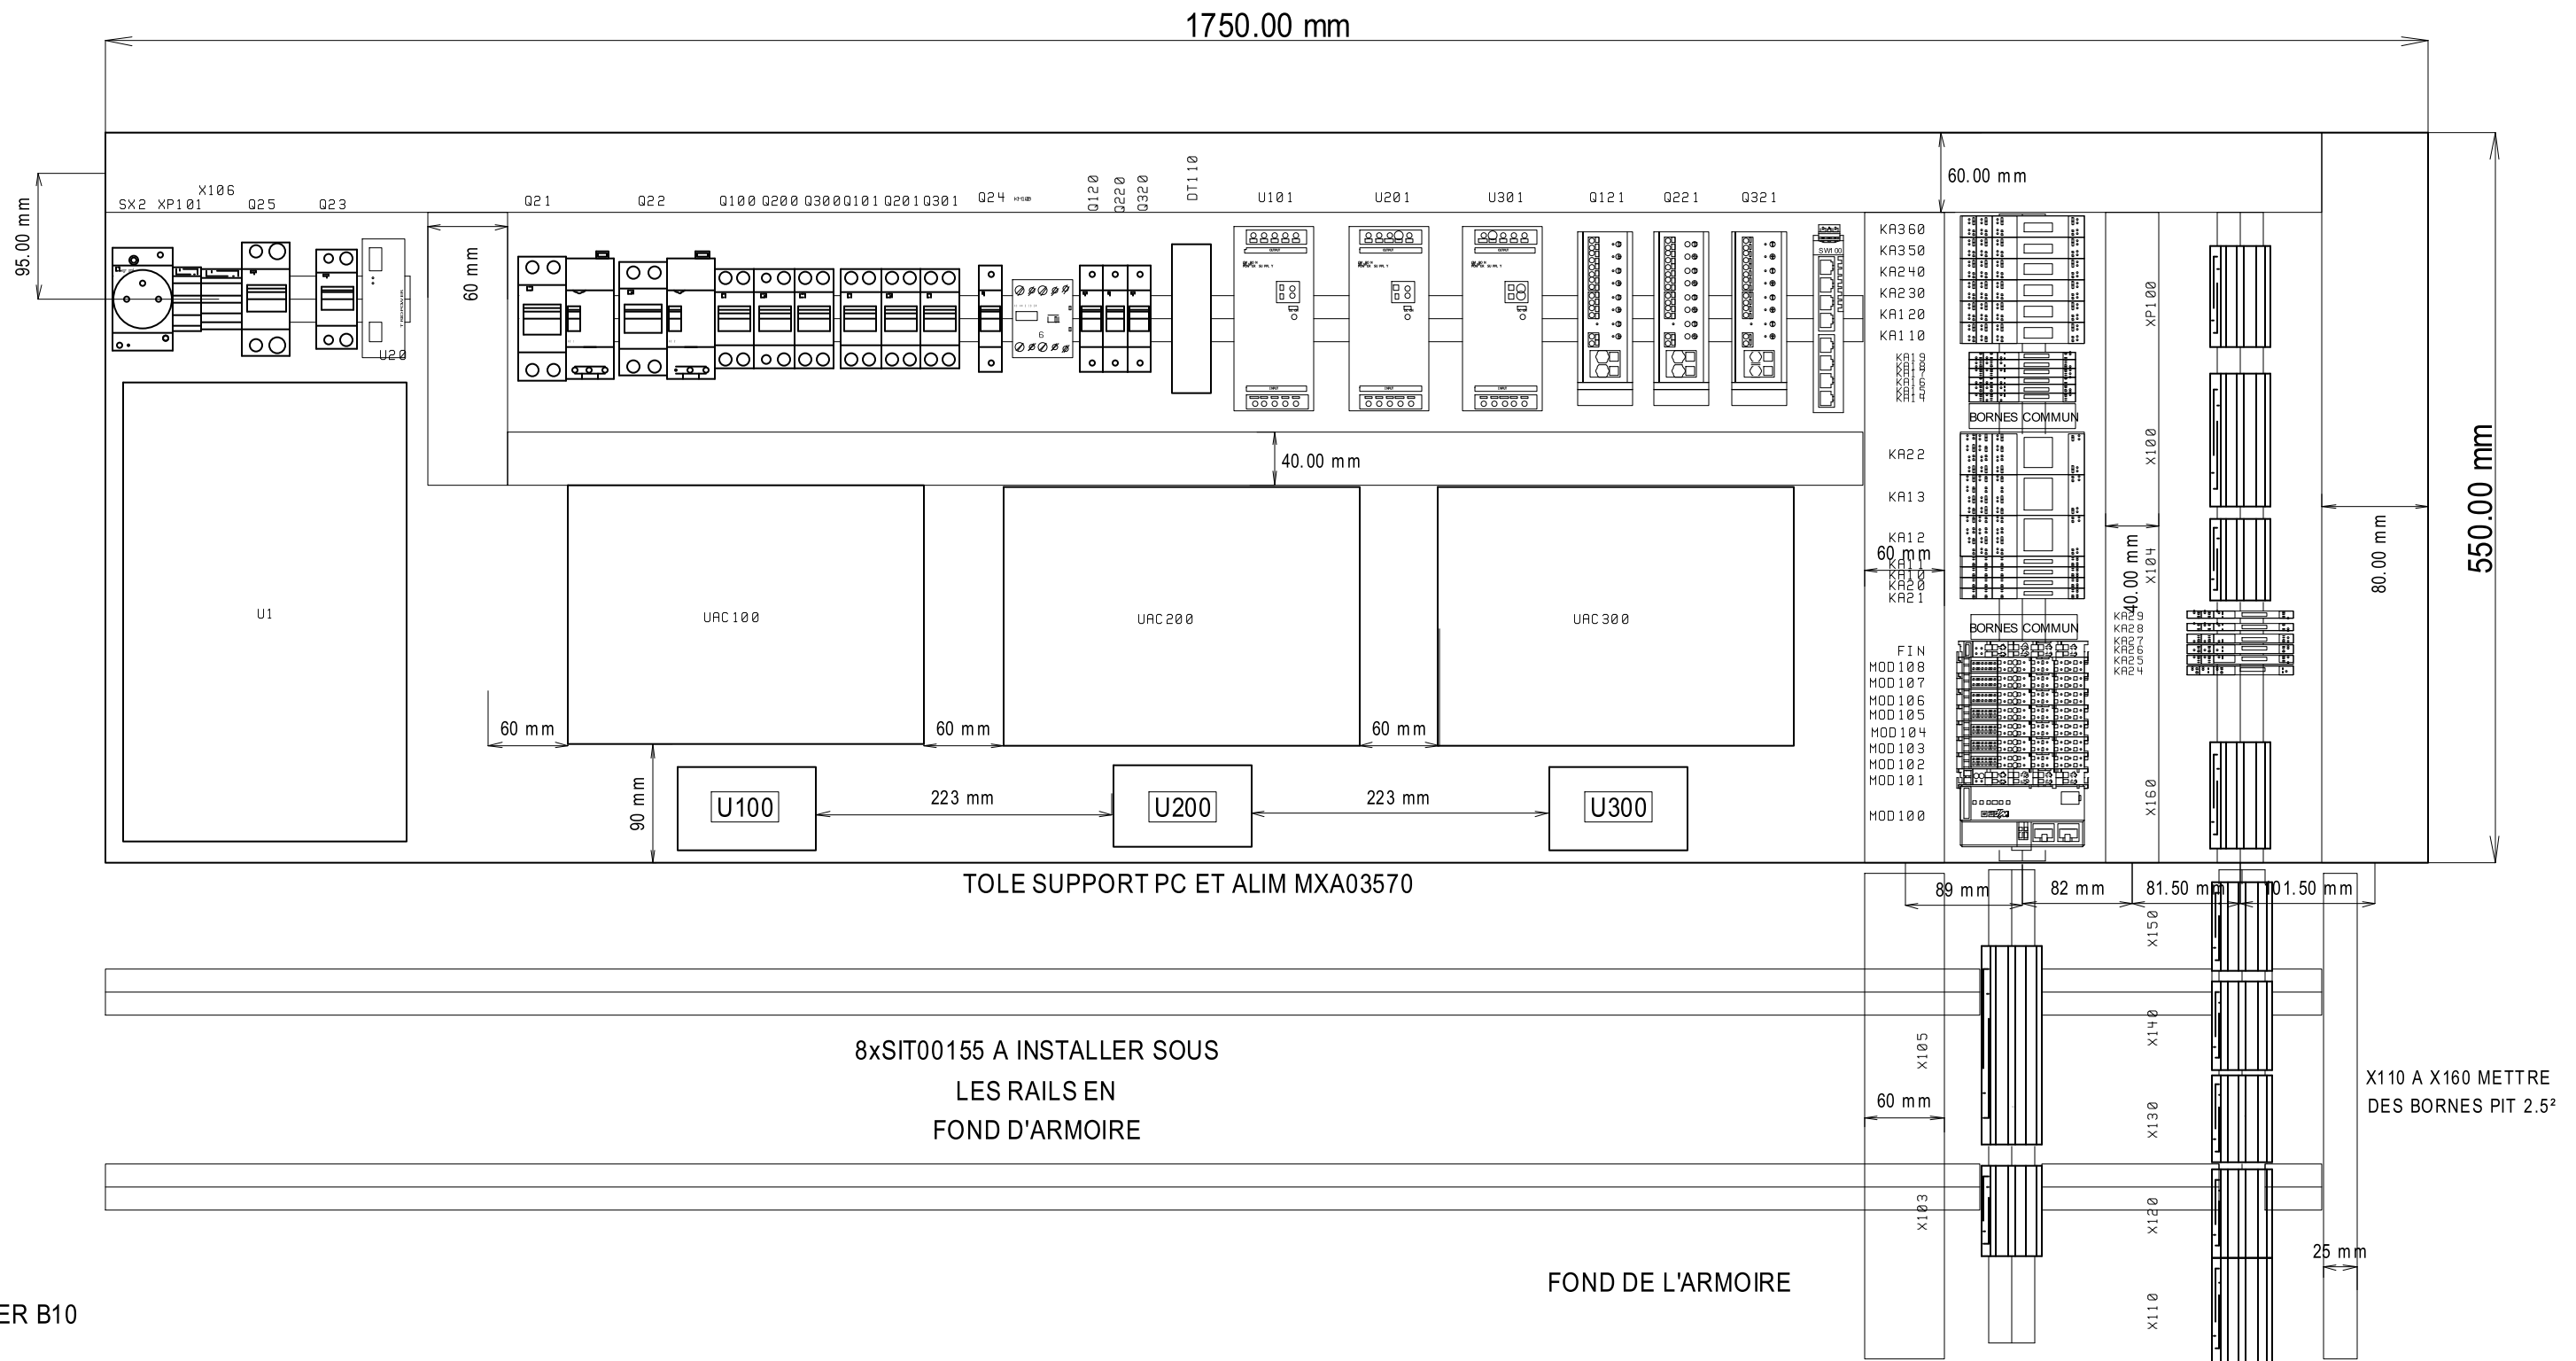

ECAT-ID
ZI de KERIEL
29800 PLOUEDERN
- FRANCE -

Tél : (33).2.98.85.31.36
Fax : (33).2.98.85.31.38
E-mail : ecatid.service@ceva.com

Date of creation :
Designed by : DB
IMPLANTATION INTERNE BOITIER B10
ARMOIRE UAC
ENVIRONNEMENT : Version 4.49.F - 23/09/2020




CONTRACT : C01422
CUSTOMER : COOP LAR
ARTICLE : **SMXA-C014221**

COUNTRY : BRESIL
INDEX : V11
FOLIO : 118/163

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

PLAN DE PERCAGE PUPITRE
CONTROL PANEL DRILLING

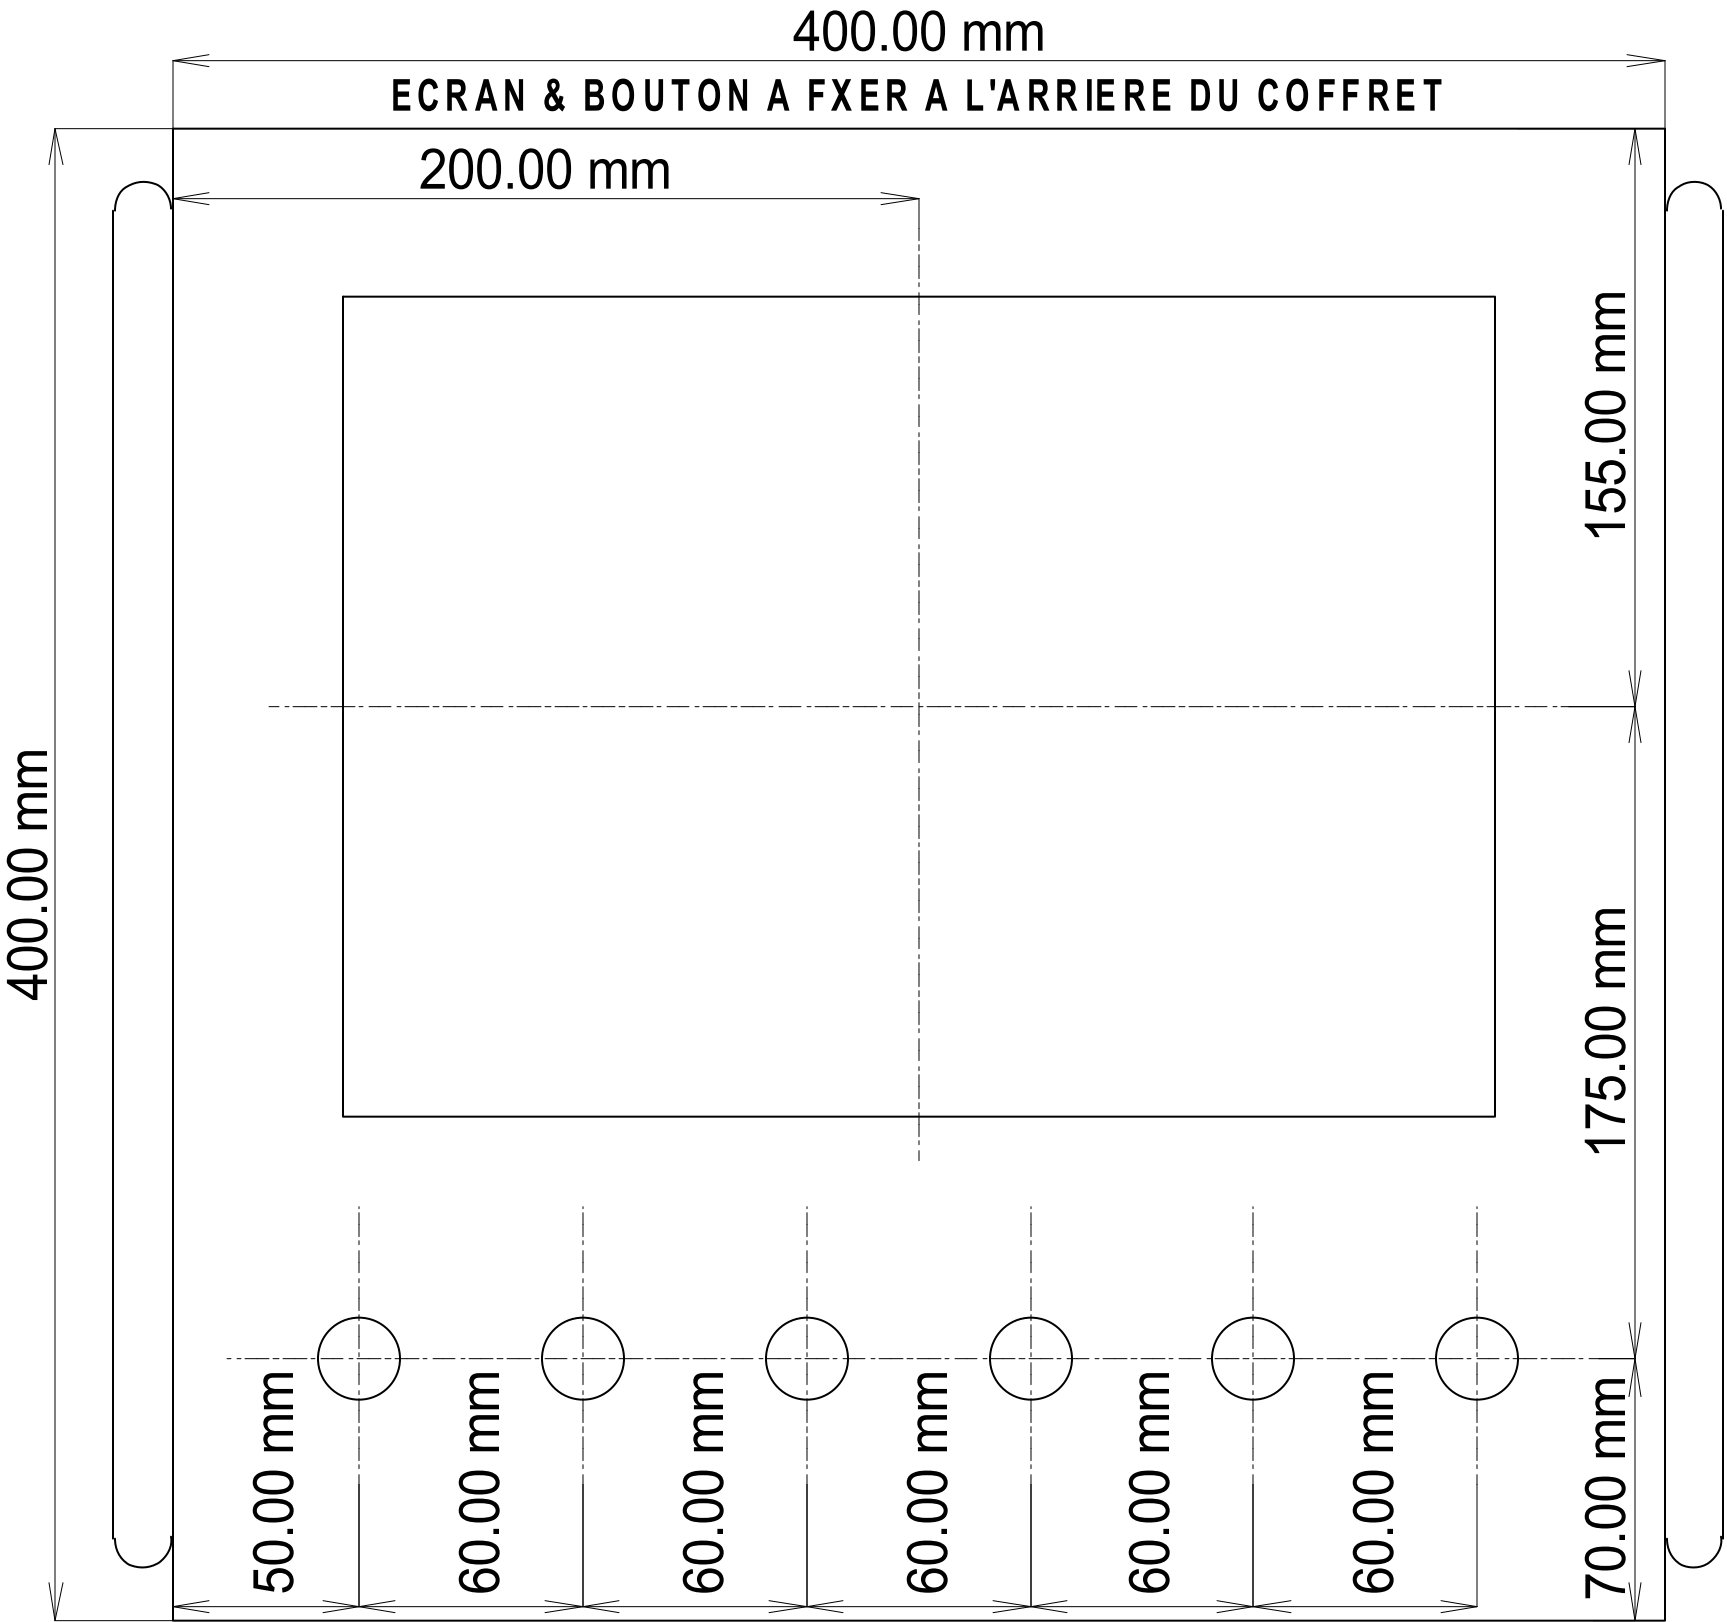

PUPITRE 400x400x180 INOX

REFERENCE COFFRET : SEB02903 IRINOX


BOUTON DU PUPITRE DEJA DECOUPE

BOITIER T10

ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –	Tél : (33).2.98.85.31.36	Date of creation : 05/10/2023	PLAN DE PERCAGE BOITIER T10	 Ecat-iD Campus	CONTRACT : C01422	CUSTOMER : COOP LAR	COUNTRY : BRESIL
	Fax : (33).2.98.85.31.38	Designed by : DB			ARTICLE : SMXA-C014221	INDEX : V11	
	E-mail :ecatid.service@ceva.com	ENVIRONNEMENT:Version 4.49.F - 23/09/2020			SMXA-C014221		FOLIO : 119/163

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

PLAN DE PERCAGE PUPITRE CONTROL PANEL DRILLING

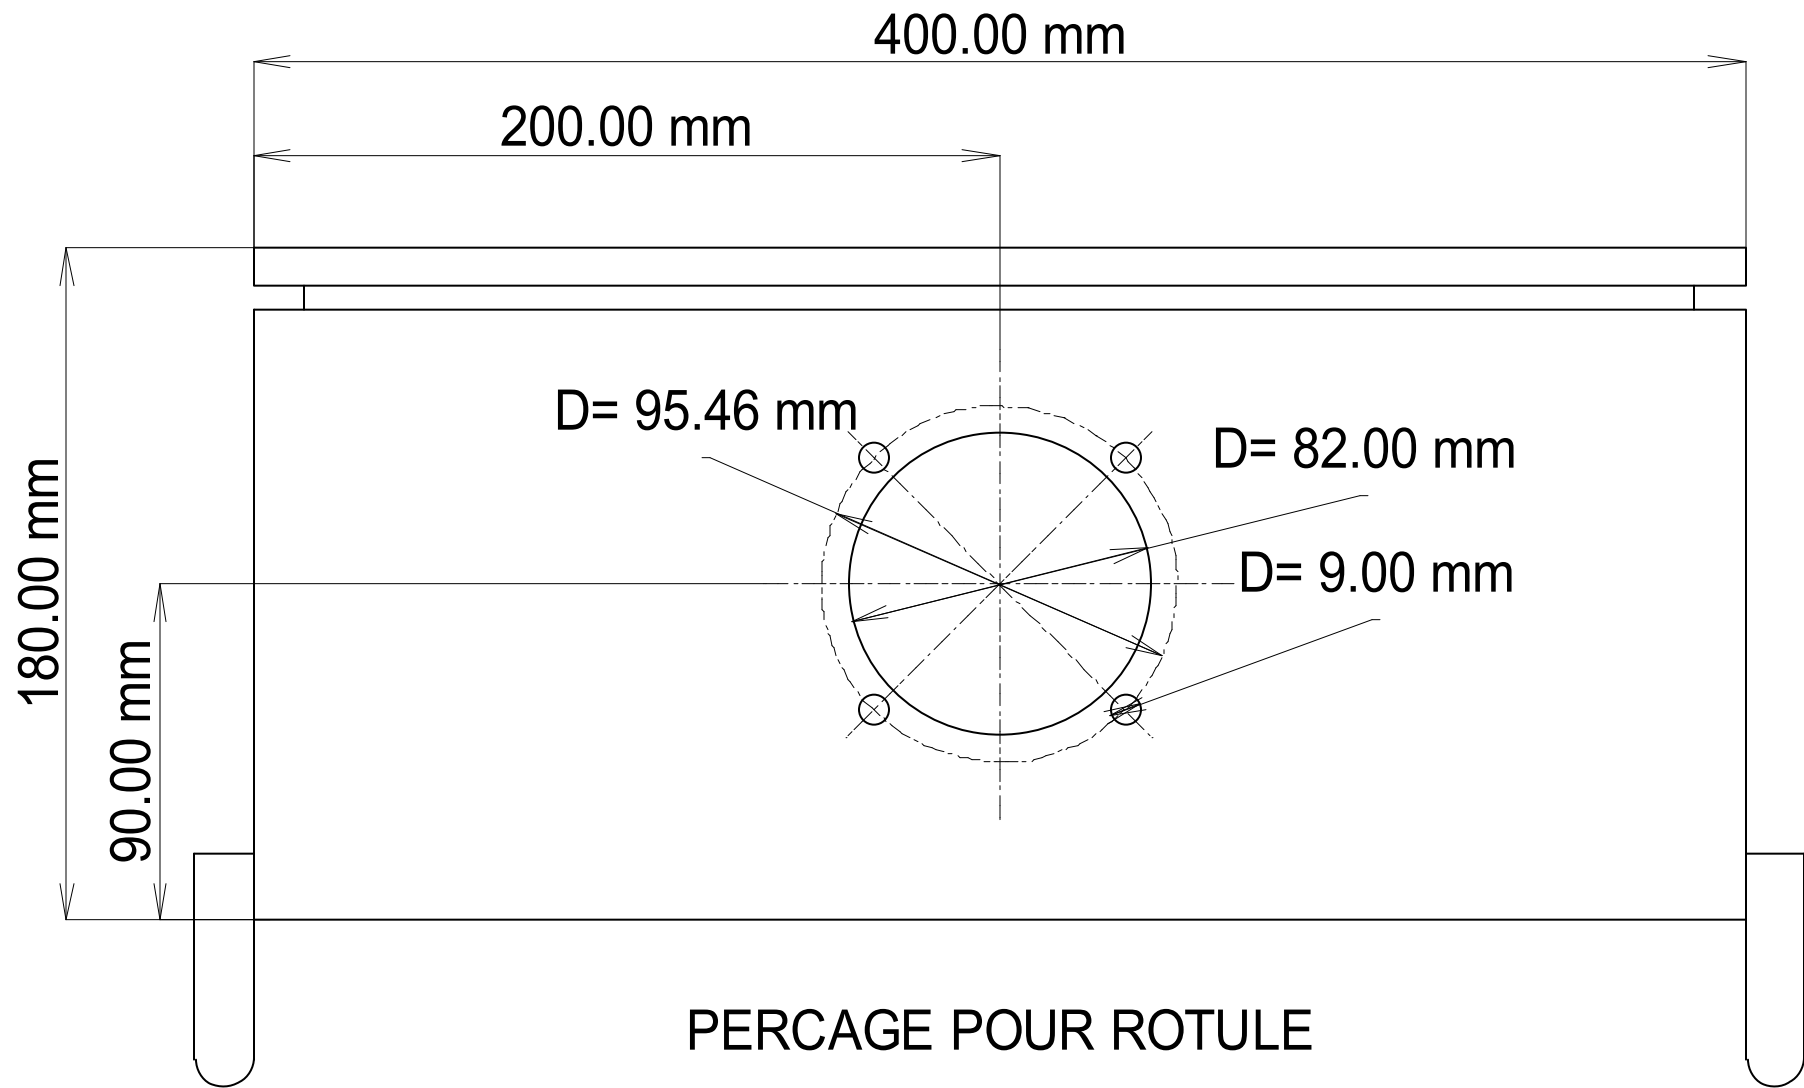


PUPITRE 400x400x180 INOX
REFERENCE COFFRET : SEB02903 IRINOX
ROTULE DEJA DECOUPE

BOITIER T10

ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –	Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecatid.service@ceva.com	Date of creation : 05/10/2023	PLAN DE PERCAGE BOITIER T10	 Ecat-iD Campus	CONTRACT : C01422	CUSTOMER : COOP LAR	COUNTRY : BRESIL
		Designed by : DB			ARTICLE : SMXA-C014221		INDEX : V11
			ENVIRONNEMENT: Version 4.49.F - 23/09/2020				FOLIO : 120/163

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

IMPLANTATION BOITIER T10 BOX T10 LAYOUT

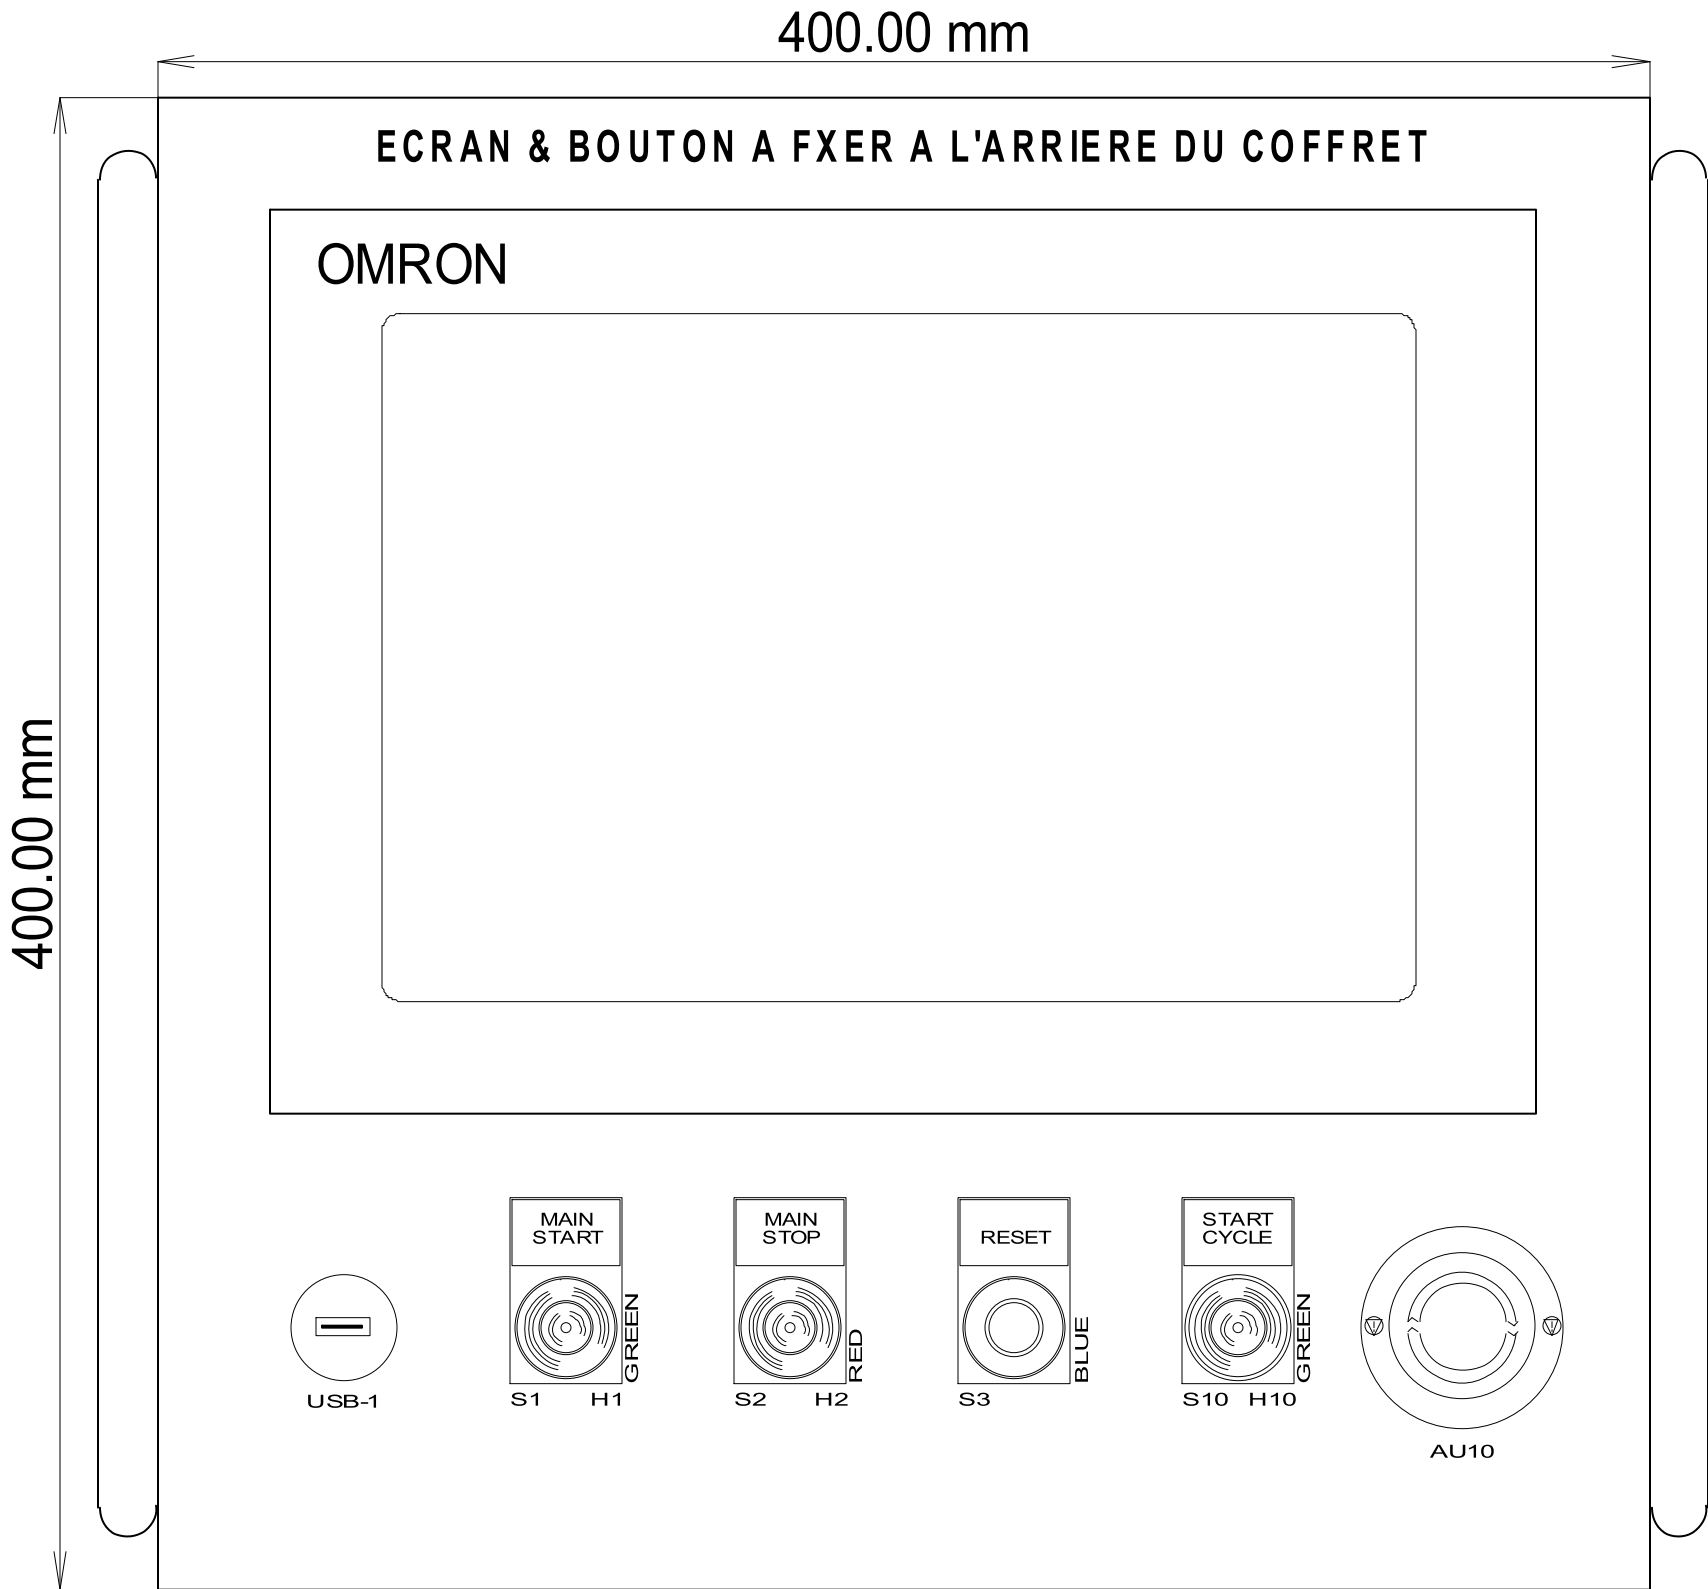

PUPITRE 400x400x180 INOX

REFERENCE COFFRET : SEB02903 IRINOX

BOUTON DU PUPITRE DEJA DECOUPE

BOITIER T10

ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –	Tél : (33).2.98.85.31.36	Date of creation : 05/10/2023	IMPLANTATION BOITIER T10	 Ecat-iD Campus	CONTRACT : C01422	CUSTOMER : COOP LAR	COUNTRY : BRESIL
	Fax : (33).2.98.85.31.38	Designed by : DB			ARTICLE :		INDEX : V11
	E-mail : ecatid.service@ceva.com		ENVIRONNEMENT : Version 4.49.F - 23/09/2020		SMXA-C014221		FOLIO : 121/163

BOITIER T20

ZI de KERIEL
29800 PLOUEDERN
- FRANCE -

Fax : (33).2.98.85.31.38

E-mail : ecatid.service@ceva.com

Date of creation :

Designed by :

DB

IMPLANTATION BOITIER T20

BOX T20 LAYOUT

ENVIRONNEMENT:Version 4.49.F - 23/09/2020



Ecat-ID Campus

CONTRACT :
C01422

CUSTOMER:
COOP LAR

SMXA-C014221

COUNTRY :

BRESIL


INDEX: V11

122/163


DIMENSION : 100x160x90

S20

CHICK FEED
CONVEYOR
OFF / ON

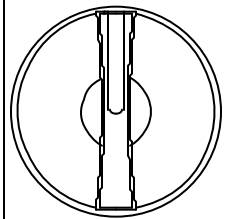

AU20

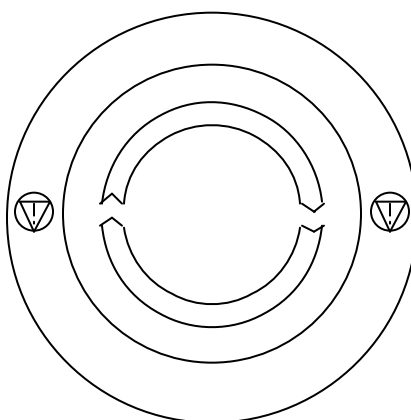

T20


VUE DESSOUS

50.00 mm

36.50 mm

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

IMPLANTATION BOITIER T30

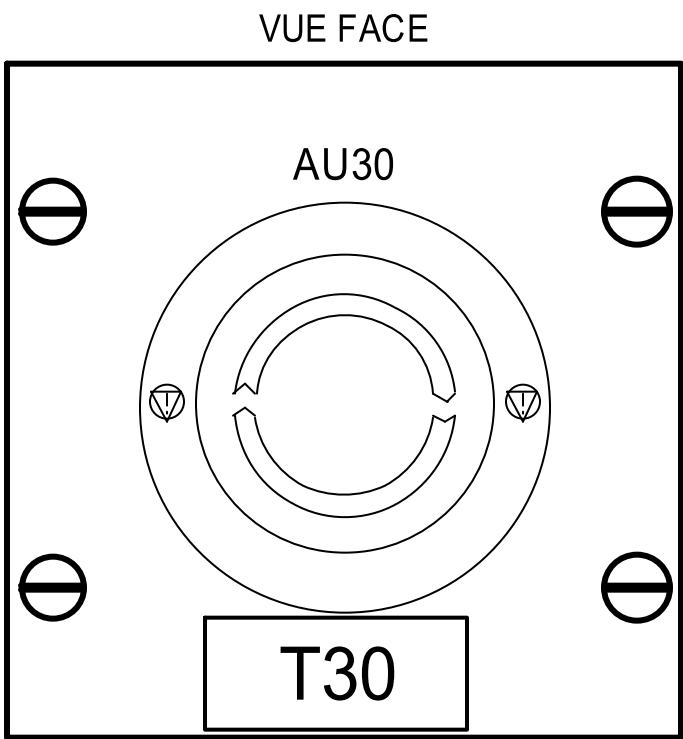

/!\ NE PAS PERCER POUR LE PE /!\

REFERENCE ECAT : BOX02013
REFERENCE : SPN997
DIMENSION : 90x90x70
BOITIER T30

ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –	Tél : (33).2.98.85.31.36	Date of creation :	IMPLANTATION BOITIER T30	 Ecat-iD Campus	CONTRACT : C01422	CUSTOMER : COOP LAR	COUNTRY : BRESIL
	Fax : (33).2.98.85.31.38	Designed by : DB	5		ARTICLE : SMXA-C014221	INDEX : V11	
	E-mail : ecatid.service@ceva.com	ENVIRONNEMENT:Version 4.49.F - 23/09/2020					FOLIO : 123/163

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

Repère	V1	007.3
Caractéristiques	3G3MX2-AB004-EV2	
Référence fournisseur	3G3MX2-AB004-EV2	
Code interne	VAR00701	

OMRON - Paramètres variateur
Sans frein / Sans potentiomètre

Paramètre	Valeur	Modif.	Paramètre	Valeur	Modif.
B031 - Code pour modification parametres	1		A023 - 4ème vitesse présélectionnée	65	
A001 - Source de Frequence	2		A024 - 5ème vitesse présélectionnée	80	
A002 - Source de commande Run	1		F002 - Accélération	0,2	
A004 - Fréquence maximale	80		F003 - Decélération	0,7	
A005 - Selection potentiometre	2		A092 2ème Accélération	0,8	
B012 - Courant Nominal	1,3		A093 2ème Déccélération	0,3	
C001 - Fonction Borne d'entrée n°1	0		A094 Autorisation 2ème Acc/Decc	1	
C002 - Fonction Borne d'entrée n°2	1		A095 Changement de rampe Accélération	20	
C003 - Fonction Borne d'entrée n°3	77		A096 Changement de rampe Déccélération	20	
C004 - Fonction Borne d'entrée n°4	78		A041 Sélection du boost de couple	1	
C005 - Fonction Borne d'entrée n°5	NC		A046 Gain de tension du boost auto	100	
C006 - Fonction Borne d'entrée n°6	2		A047 Gain de glissement du boost auto	100	
C007 - Fonction Borne d'entrée n°7	3				
C013 - Etat actif de la borne d'entrée n°3	1				
C014 - Etat actif de la borne d'entrée n°4	1				
A020 - Petite vitesse	20				
A021 - 2ème vitesse présélectionnée	60				
A022 - 3ème vitesse présélectionnée	50				

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 04/12/2023		PARAMETRE VARIATEUR V1				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INVERTER PARAMETER V1								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								124/163					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

Repère	V2	007.7
Caractéristiques	3G3MX2-AB004-EV2	
Référence fournisseur	3G3MX2-AB004-EV2	
Code interne	VAR00701	

OMRON - Paramètres variateur
Sans frein / Sans potentiomètre

Paramètre	Valeur	Modif.	Paramètre	Valeur	Modif.
B031 - Code pour modification parametres	1		A023 - 4ème vitesse présélectionnée	65	
A001 - Source de Frequence	2		A024 - 5ème vitesse présélectionnée	80	
A002 - Source de commande Run	1		F002 - Accélération	0,2	
A004 - Fréquence maximale	80		F003 - Decélération	0,7	
A005 - Selection potentiometre	2		A092 2ème Accélération	0,8	
B012 - Courant Nominal	1,3		A093 2ème Déccélération	0,3	
C001 - Fonction Borne d'entrée n°1	0		A094 Autorisation 2ème Acc/Decc	1	
C002 - Fonction Borne d'entrée n°2	1		A095 Changement de rampe Accélération	20	
C003 - Fonction Borne d'entrée n°3	77		A096 Changement de rampe Déccélération	20	
C004 - Fonction Borne d'entrée n°4	78		A041 Sélection du boost de couple	1	
C005 - Fonction Borne d'entrée n°5	NC		A046 Gain de tension du boost auto	100	
C006 - Fonction Borne d'entrée n°6	2		A047 Gain de glissement du boost auto	100	
C007 - Fonction Borne d'entrée n°7	3				
C013 - Etat actif de la borne d'entrée n°3	1				
C014 - Etat actif de la borne d'entrée n°4	1				
A020 - Petite vitesse	20				
A021 - 2ème vitesse présélectionnée	60				
A022 - 3ème vitesse présélectionnée	50				

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 04/12/2023		PARAMETRE VARIATEUR V2				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INVERTER PARAMETER V2								ARTICLE : SMXA-C014221		INDEX : V11 FOLIO : 125/163			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020													

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

Repère	V3	007.12	OMRON - Paramètres variateur Sans frein / Sans potentiomètre
Caractéristiques	3G3MX2-AB004-EV2		
Référence fournisseur	3G3MX2-AB004-EV2		
Code interne	VAR00701		

Paramètre	Valeur	Modif.	Paramètre	Valeur	Modif.
B031 - Code pour modification parametres	1		A023 - 4ème vitesse présélectionnée	65	
A001 - Source de Frequence	2		A024 - 5ème vitesse présélectionnée	80	
A002 - Source de commande Run	1		F002 - Accélération	0,2	
A004 - Fréquence maximale	80		F003 - Decélération	0,7	
A005 - Selection potentiometre	2		A092 2ème Accélération	0,8	
B012 - Courant Nominal	1,3		A093 2ème Déccélération	0,3	
C001 - Fonction Borne d'entrée n°1	0		A094 Autorisation 2ème Acc/Decc	1	
C002 - Fonction Borne d'entrée n°2	1		A095 Changement de rampe Accélération	20	
C003 - Fonction Borne d'entrée n°3	77		A096 Changement de rampe Déccélération	20	
C004 - Fonction Borne d'entrée n°4	78		A041 Sélection du boost de couple	1	
C005 - Fonction Borne d'entrée n°5	NC		A046 Gain de tension du boost auto	100	
C006 - Fonction Borne d'entrée n°6	2		A047 Gain de glissement du boost auto	100	
C007 - Fonction Borne d'entrée n°7	3				
C013 - Etat actif de la borne d'entrée n°3	1				
C014 - Etat actif de la borne d'entrée n°4	1				
A020 - Petite vitesse	20				
A021 - 2ème vitesse présélectionnée	60				
A022 - 3ème vitesse présélectionnée	50				

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 04/12/2023		PARAMETRE VARIATEUR V3				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INVERTER PARAMETER V3								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020								SMXA-C014221		FOLIO : 126/163			

Repère	V4	007.16	OMRON - Paramètres variateur Sans frein / Sans potentiomètre
Caractéristiques	3G3MX2-AB004-EV2		
Référence fournisseur	3G3MX2-AB004-EV2		
Code interne	VAR00701		

Paramètre	Valeur	Modif.	Paramètre	Valeur	Modif.
B031 - Code pour modification parametres	1		A023 - 4ème vitesse présélectionnée	65	
A001 - Source de Frequence	2		A024 - 5ème vitesse présélectionnée	80	
A002 - Source de commande Run	1		F002 - Accélération	0,2	
A004 - Fréquence maximale	80		F003 - Decélération	0,7	
A005 - Selection potentiometre	2		A092 2ème Accélération	0,8	
B012 - Courant Nominal	1,3		A093 2ème Déccélération	0,3	
C001 - Fonction Borne d'entrée n°1	0		A094 Autorisation 2ème Acc/Decc	1	
C002 - Fonction Borne d'entrée n°2	1		A095 Changement de rampe Accélération	20	
C003 - Fonction Borne d'entrée n°3	77		A096 Changement de rampe Déccélération	20	
C004 - Fonction Borne d'entrée n°4	78		A041 Sélection du boost de couple	1	
C005 - Fonction Borne d'entrée n°5	NC		A046 Gain de tension du boost auto	100	
C006 - Fonction Borne d'entrée n°6	2		A047 Gain de glissement du boost auto	100	
C007 - Fonction Borne d'entrée n°7	3				
C013 - Etat actif de la borne d'entrée n°3	1				
C014 - Etat actif de la borne d'entrée n°4	1				
A020 - Petite vitesse	20				
A021 - 2ème vitesse présélectionnée	60				
A022 - 3ème vitesse présélectionnée	50				

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 04/12/2023		PARAMETRE VARIATEUR V4				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INVERTER PARAMETER V4								ARTICLE : SMXA-C014221		INDEX : V11 FOLIO : 127/163			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020													

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

Repère	V5	008.3
Caractéristiques	3G3MX2-AB004-EV2	
Référence fournisseur	3G3MX2-AB004-EV2	
Code interne	VAR00701	

OMRON - Paramètres variateur
Sans frein / Sans potentiomètre

Paramètre	Valeur	Modif.	Paramètre	Valeur	Modif.
B031 - Code pour modification parametres	1		A023 - 4ème vitesse présélectionnée	65	
A001 - Source de Frequence	2		A024 - 5ème vitesse présélectionnée	80	
A002 - Source de commande Run	1		F002 - Accélération	0,2	
A004 - Fréquence maximale	80		F003 - Decélération	0,7	
A005 - Selection potentiometre	2		A092 2ème Accélération	0,8	
B012 - Courant Nominal	1,3		A093 2ème Déccélération	0,3	
C001 - Fonction Borne d'entrée n°1	0		A094 Autorisation 2ème Acc/Decc	1	
C002 - Fonction Borne d'entrée n°2	1		A095 Changement de rampe Accélération	20	
C003 - Fonction Borne d'entrée n°3	77		A096 Changement de rampe Déccélération	20	
C004 - Fonction Borne d'entrée n°4	78		A041 Sélection du boost de couple	1	
C005 - Fonction Borne d'entrée n°5	NC		A046 Gain de tension du boost auto	100	
C006 - Fonction Borne d'entrée n°6	2		A047 Gain de glissement du boost auto	100	
C007 - Fonction Borne d'entrée n°7	3				
C013 - Etat actif de la borne d'entrée n°3	1				
C014 - Etat actif de la borne d'entrée n°4	1				
A020 - Petite vitesse	20				
A021 - 2ème vitesse présélectionnée	60				
A022 - 3ème vitesse présélectionnée	50				

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 04/12/2023		PARAMETRE VARIATEUR V5				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INVERTER PARAMETER V5								ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT: Version 4.49.F - 23/09/2020													
FOLIO : 128/163																				

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

Repère	V6	008.7	OMRON - Paramètres variateur Sans frein / Sans potentiomètre
Caractéristiques	3G3MX2-AB004-EV2		
Référence fournisseur	3G3MX2-AB004-EV2		
Code interne	VAR00701		

Paramètre	Valeur	Modif.	Paramètre	Valeur	Modif.
B031 - Code pour modification parametres	1		A023 - 4ème vitesse présélectionnée	65	
A001 - Source de Frequence	2		A024 - 5ème vitesse présélectionnée	80	
A002 - Source de commande Run	1		F002 - Accélération	0,2	
A004 - Fréquence maximale	80		F003 - Decélération	0,7	
A005 - Selection potentiometre	2		A092 2ème Accélération	0,8	
B012 - Courant Nominal	1,3		A093 2ème Déccélération	0,3	
C001 - Fonction Borne d'entrée n°1	0		A094 Autorisation 2ème Acc/Decc	1	
C002 - Fonction Borne d'entrée n°2	1		A095 Changement de rampe Accélération	20	
C003 - Fonction Borne d'entrée n°3	77		A096 Changement de rampe Déccélération	20	
C004 - Fonction Borne d'entrée n°4	78		A041 Sélection du boost de couple	1	
C005 - Fonction Borne d'entrée n°5	NC		A046 Gain de tension du boost auto	100	
C006 - Fonction Borne d'entrée n°6	2		A047 Gain de glissement du boost auto	100	
C007 - Fonction Borne d'entrée n°7	3				
C013 - Etat actif de la borne d'entrée n°3	1				
C014 - Etat actif de la borne d'entrée n°4	1				
A020 - Petite vitesse	20				
A021 - 2ème vitesse présélectionnée	60				
A022 - 3ème vitesse présélectionnée	50				

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 04/12/2023		PARAMETRE VARIATEUR V6			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INVERTER PARAMETER V6							ARTICLE : SMXA-C014221		INDEX : V11			
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020							129/163					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

Repère	V7	008.12
Caractéristiques	3G3MX2-AB004-EV2	
Référence fournisseur	3G3MX2-AB004-EV2	
Code interne	VAR00701	

OMRON - Paramètres variateur
Sans frein / Sans potentiomètre

Paramètre	Valeur	Modif.	Paramètre	Valeur	Modif.
B031 - Code pour modification parametres	1		A023 - 4ème vitesse présélectionnée	65	
A001 - Source de Frequence	2		A024 - 5ème vitesse présélectionnée	80	
A002 - Source de commande Run	1		F002 - Accélération	0,2	
A004 - Fréquence maximale	80		F003 - Decélération	0,7	
A005 - Selection potentiometre	2		A092 2ème Accélération	0,8	
B012 - Courant Nominal	1,3		A093 2ème Déccélération	0,3	
C001 - Fonction Borne d'entrée n°1	0		A094 Autorisation 2ème Acc/Decc	1	
C002 - Fonction Borne d'entrée n°2	1		A095 Changement de rampe Accélération	20	
C003 - Fonction Borne d'entrée n°3	77		A096 Changement de rampe Déccélération	20	
C004 - Fonction Borne d'entrée n°4	78		A041 Sélection du boost de couple	1	
C005 - Fonction Borne d'entrée n°5	NC		A046 Gain de tension du boost auto	100	
C006 - Fonction Borne d'entrée n°6	2		A047 Gain de glissement du boost auto	100	
C007 - Fonction Borne d'entrée n°7	3				
C013 - Etat actif de la borne d'entrée n°3	1				
C014 - Etat actif de la borne d'entrée n°4	1				
A020 - Petite vitesse	20				
A021 - 2ème vitesse présélectionnée	60				
A022 - 3ème vitesse présélectionnée	50				

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 04/12/2023		PARAMETRE VARIATEUR V7				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INVERTER PARAMETER V7								ARTICLE : SMXA-C014221		INDEX : V11 FOLIO : 130/163			
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020													

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

Repère	V8	008.16	OMRON - Paramètres variateur Sans frein / Sans potentiomètre
Caractéristiques	3G3MX2-AB004-EV2		
Référence fournisseur	3G3MX2-AB004-EV2		
Code interne	VAR00701		

Paramètre	Valeur	Modif.	Paramètre	Valeur	Modif.
B031 - Code pour modification parametres	1		A023 - 4ème vitesse présélectionnée	65	
A001 - Source de Frequence	2		A024 - 5ème vitesse présélectionnée	80	
A002 - Source de commande Run	1		F002 - Accélération	0,2	
A004 - Fréquence maximale	80		F003 - Decélération	0,7	
A005 - Selection potentiometre	2		A092 2ème Accélération	0,8	
B012 - Courant Nominal	1,3		A093 2ème Déccélération	0,3	
C001 - Fonction Borne d'entrée n°1	0		A094 Autorisation 2ème Acc/Decc	1	
C002 - Fonction Borne d'entrée n°2	1		A095 Changement de rampe Accélération	20	
C003 - Fonction Borne d'entrée n°3	77		A096 Changement de rampe Déccélération	20	
C004 - Fonction Borne d'entrée n°4	78		A041 Sélection du boost de couple	1	
C005 - Fonction Borne d'entrée n°5	NC		A046 Gain de tension du boost auto	100	
C006 - Fonction Borne d'entrée n°6	2		A047 Gain de glissement du boost auto	100	
C007 - Fonction Borne d'entrée n°7	3				
C013 - Etat actif de la borne d'entrée n°3	1				
C014 - Etat actif de la borne d'entrée n°4	1				
A020 - Petite vitesse	20				
A021 - 2ème vitesse présélectionnée	60				
A022 - 3ème vitesse présélectionnée	50				

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 04/03/2024		PARAMETRE VARIATEUR V8			 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		INVERTER PARAMETER V8							ARTICLE : SMXA-C014221				INDEX : V11	
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020							131/163					

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
REPERE	FOLIO	DESIGNATION								Qte	REFERENCE	CODE ECAT-ID	FABRICANT		Nomenclature				
ETH_PLC		CABLE RESEAU ETHERNET CAT6 RJ45 1M								1	411-227	CBL00140			ARMOIRE				
ETH_UAC100		CABLE RESEAU ETHERNET CAT6 RJ45 3M								1	ECORD6ASF03MSH	CBL00504			ARMOIRE				
ETH_UAC200		CABLE RESEAU ETHERNET CAT6 RJ45 3M								1	ECORD6ASF03MSH	CBL00504			ARMOIRE				
ETH_UAC300		CABLE RESEAU ETHERNET CAT6 RJ45 3M								1	ECORD6ASF03MSH	CBL00504			ARMOIRE				
ARMOIRE	001	COFFRET INOX + PLAQUE 1800x600x600 2 PORTE + VENTIL								1	MXA03297	MXA03297	IRINOX		ARMOIRE				
	001	COFFRET INOX + PLAQUE 1800x600x370 2 PORTE + VENTIL								1	MXA03300	MXA03300	IRINOX		ARMOIRE				
	001	BOITE DE DERIVATION 220x150x120, INOX AISI 304, IP69K								1	SDN152212	BOX02019	MP GAMMA		ARMOIRE				
	001	COFFRET 400x400x180, INOX AISI 304, IP66/IK10 ROTULE + BP								1	SEB02903	SEB02903	IRINOX		ARMOIRE				
	001	BOITE DE DERIVATION 100x220x90, INOX AISI 304, IP69K 3 BP								1	SPN10229	BOX02031	MP GAMMA		ARMOIRE				
FQ1	006	PARAFOUDRE ENFICHABLE TYPE 2 POUR RESEAUX MONOPHASES 5 FILS								1	2905340	DIS00135	PHOENIX CONTACT		ARMOIRE				
Q0	006	POIGNEE ROUGE/JAUNE IP65 POUR CDE EXTERIEURE FRONTALE								1	14741111	SEC00042	SOCOMEK		ARMOIRE				
	006	POLE ADDITIONNEL PRINCIPAL SIRCO M 32A								1	22001003	SEC00032	SOCOMEK		ARMOIRE				
	006	INTERRUPTEUR-SECTIONNEUR SIRCO M 3x32A NU								1	22003003	SEC00030	SOCOMEK		ARMOIRE				
	006	CACHE-BORNES POUR SIRCO M 1P 16...40A								1	22941005	SEC00070	SOCOMEK		ARMOIRE				
	006	CACHE-BORNES POUR SIRCO M 3P 16...40A								1	22943005	SEC00071	SOCOMEK		ARMOIRE				
	006	ACCOUPLEMENT PORTE								1	22993409	SEC00091	SOCOMEK		ARMOIRE				
F1	007	ACTI9, IC60N DISJONCTEUR 2P 6A COURBE D								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC		ARMOIRE				
F2	007	ACTI9, IC60N DISJONCTEUR 2P 6A COURBE D								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC		ARMOIRE				
F3	007	ACTI9, IC60N DISJONCTEUR 2P 6A COURBE D								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC		ARMOIRE				
F4	007	ACTI9, IC60N DISJONCTEUR 2P 6A COURBE D								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC		ARMOIRE				
V1	007	CARTE COMM ETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON		ARMOIRE				
	007	VARIATEUR DE VITESSE POUR MOTEUR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON		ARMOIRE				
	007	FILTRE CEM								1	AX-FIM1010-RE	VAR00277	OMRON		ARMOIRE				
V2	007	CARTE COMM ETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON		ARMOIRE				
	007	VARIATEUR DE VITESSE POUR MOTEUR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON		ARMOIRE				
	007	FILTRE CEM								1	AX-FIM1010-RE	VAR00277	OMRON		ARMOIRE				
V3	007	CARTE COMM ETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON		ARMOIRE				
	007	VARIATEUR DE VITESSE POUR MOTEUR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON		ARMOIRE				
	007	FILTRE CEM								1	AX-FIM1010-RE	VAR00277	OMRON		ARMOIRE				
V4	007	CARTE COMM ETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON		ARMOIRE				
	007	VARIATEUR DE VITESSE POUR MOTEUR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON		ARMOIRE				
	007	FILTRE CEM								1	AX-FIM1010-RE	VAR00277	OMRON		ARMOIRE				
F5	008	ACTI9, IC60N DISJONCTEUR 2P 6A COURBE D								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC		ARMOIRE				
(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com		DESSINE :										SMXA-C014221 Nomenclature Armoire				FOLIO 132/163			
		DB																	
		VERIFIE :						Dossier n° : COOP LAR											
		JT		V12	31/07/2024	MODIF SOUFFLAGE												AV	
		DATE D E CREATION :		V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25		DB											
		12/07/2024		INDICE	DATE	MODIFICATION		DES.											
see3000 version 4.80																			

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
REPERE	FOLIO	DESIGNATION								Qte	REFERENCE	CODE ECAT-ID	FABRICANT		Nomenclature				
F6	008	ACTI9, IC60N DISJONCTEUR 2P 6A COURBE D								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC		ARMOIRE				
F7	008	ACTI9, IC60N DISJONCTEUR 2P 6A COURBE D								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC		ARMOIRE				
F8	008	ACTI9, IC60N DISJONCTEUR 2P 6A COURBE D								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC		ARMOIRE				
V5	008	CARTE COMM ETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON		ARMOIRE				
	008	VARIATEUR DE VITESSE POUR MOTEUR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON		ARMOIRE				
	008	FILTRE CEM								1	AX-FIM1010-RE	VAR00277	OMRON		ARMOIRE				
V6	008	CARTE COMM ETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON		ARMOIRE				
	008	VARIATEUR DE VITESSE POUR MOTEUR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON		ARMOIRE				
	008	FILTRE CEM								1	AX-FIM1010-RE	VAR00277	OMRON		ARMOIRE				
V7	008	CARTE COMM ETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON		ARMOIRE				
	008	VARIATEUR DE VITESSE POUR MOTEUR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON		ARMOIRE				
	008	FILTRE CEM								1	AX-FIM1010-RE	VAR00277	OMRON		ARMOIRE				
V8	008	CARTE COMM ETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON		ARMOIRE				
	008	VARIATEUR DE VITESSE POUR MOTEUR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON		ARMOIRE				
	008	FILTRE CEM								1	AX-FIM1010-RE	VAR00277	OMRON		ARMOIRE				
F9	009	ACTI9, IC60N DISJONCTEUR 2P 6A COURBE D								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC		ARMOIRE				
Q11	009	Acti9 iDT40T - DISJONCTEUR 3P+N 20A COURBE D - 6KA								1	A9P32720	DIS00271	SCHNEIDER ELECTRIC		ARMOIRE				
V9	009	CARTE COMM ETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON		ARMOIRE				
	009	VARIATEUR DE VITESSE POUR MOTEUR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON		ARMOIRE				
	009	FILTRE CEM								1	AX-FIM1010-RE	VAR00277	OMRON		ARMOIRE				
Q10	010	DISJONCTEUR POUR CIRCUIT DE CONTROLE - GB2-DB - 6A - 2P - 2D								1	GB2DB12	DIS00144	SCHNEIDER ELECTRIC		ARMOIRE				
Q20	010	DISJONCTEUR ELECTRONIQUE 8x24VDC/0.5-10A								1	2905744	DIS00250	PHOENIX CONTACT		ARMOIRE				
U10	010	ALIMENTATION A DECOUPAGE 100-240VAC, SORTIE 24V, 20A								1	S8VK-S48024	ALM00218	OMRON		ARMOIRE				
Q21	011	ACTI9, IC60N DISJONCTEUR 2P 16A COURBE C								1	A9F77216	DIS00147	SCHNEIDER ELECTRIC		ARMOIRE				
	011	ACTI9 VIGI IC60 - BLOC DIFFERENTIEL 2P 6KA 25A 30MA								1	A9Q11225	DIS00342	SCHNEIDER ELECTRIC		ARMOIRE				
U1	011	ONDULEUR ONLINE 3000VA 230V								1	EON9SX3000I	ALM00247	EATON		ARMOIRE				
Q100	012	DISJONCTEUR POUR CIRCUIT DE CONTROLE - GB2-DB - 10A - 2P - 2D								1	GB2DB16	DIS00159	SCHNEIDER ELECTRIC		ARMOIRE				
Q120	012	DISJONCTEUR-SECTIONNEUR COURANT CONTINU 40A 1P, 250VDC, C								1	A9N61517	DIS00346	SCHNEIDER ELECTRIC		ARMOIRE				
Q200	012	DISJONCTEUR POUR CIRCUIT DE CONTROLE - GB2-DB - 10A - 2P - 2D								1	GB2DB16	DIS00159	SCHNEIDER ELECTRIC		ARMOIRE				
Q220	012	DISJONCTEUR-SECTIONNEUR COURANT CONTINU 40A 1P, 250VDC, C								1	A9N61517	DIS00346	SCHNEIDER ELECTRIC		ARMOIRE				
Q300	012	DISJONCTEUR POUR CIRCUIT DE CONTROLE - GB2-DB - 10A - 2P - 2D								1	GB2DB16	DIS00159	SCHNEIDER ELECTRIC		ARMOIRE				
Q320	012	DISJONCTEUR-SECTIONNEUR COURANT CONTINU 40A 1P, 250VDC, C								1	A9N61517	DIS00346	SCHNEIDER ELECTRIC		ARMOIRE				
U100	012	ALIMENTATION 230VAC/24VDC 40A 1000W								1	HRPG-1000-24	ALM00246	MEAN WELL		ARMOIRE				
(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com		DESSINE : DB							Dossier n° : COOP LAR				SMXA-C014221 Nomenclature Armoire				FOLIO 133/163		
		VERIFIE : JT		V12	31/07/2024	MODIF SOUFFLAGE		AV											
		DATE D E CREATION : 12/07/2024		V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25		DB											
				INDICE	DATE	MODIFICATION		DES.	see3000 version 4.80										

REPERE	FOLIO	DESIGNATION	Qty	REFERENCE	CODE ECAT-ID	FABRICANT	Nomenclature
UAC100	027	ORDINATEUR INDUSTRIEL NEOUSYS NUVO	1	NUVO-10208GC	INF01052	NEOUSYS	ARMOIRE
USB_UAC100	027	CABLE DEPORT DE PORT USB 3.0	1	E2 1USB9AN3	CON00401	PIZZATO	ARMOIRE
UAC200	031	ORDINATEUR INDUSTRIEL NEOUSYS NUVO	1	NUVO-10208GC	INF01052	NEOUSYS	ARMOIRE
USB_UAC200	031	CABLE DEPORT DE PORT USB 3.0	1	E2 1USB9AN3	CON00401	PIZZATO	ARMOIRE
UAC300	035	ORDINATEUR INDUSTRIEL NEOUSYS NUVO	1	NUVO-10208GC	INF01052	NEOUSYS	ARMOIRE
USB_UAC300	035	CABLE DEPORT DE PORT USB 3.0	1	E2 1USB9AN3	CON00401	PIZZATO	ARMOIRE
KA14	039	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA15	039	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA16	039	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA17	039	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA18	039	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA19	039	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA24	040	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA25	040	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA26	040	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA27	040	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA28	040	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA29	040	MODULE RELAIS A SEMIE-CONDUCTEURS	1	2900378	REL00088	PHOENIX CONTACT	ARMOIRE
KA2	041	RELAIS PUSH-IN, 2 Contacts	1	2903334	REL00082	PHOENIX CONTACT	ARMOIRE
KA3	041	RELAIS PUSH-IN, 2 Contacts	1	2903334	REL00082	PHOENIX CONTACT	ARMOIRE
KA4	042	RELAIS PUSH-IN, 1 Contact	1	2903370	REL00085	PHOENIX CONTACT	ARMOIRE
KA5	042	RELAIS PUSH-IN, 1 Contact	1	2903370	REL00085	PHOENIX CONTACT	ARMOIRE
KA10	048	RELAIS PUSH-IN, 1 Contact	1	2903370	REL00085	PHOENIX CONTACT	ARMOIRE
KA11	048	RELAIS PUSH-IN, 1 Contact	1	2903370	REL00085	PHOENIX CONTACT	ARMOIRE
KA20	048	RELAIS PUSH-IN, 1 Contact	1	2903370	REL00085	PHOENIX CONTACT	ARMOIRE
KA21	048	RELAIS PUSH-IN, 1 Contact	1	2903370	REL00085	PHOENIX CONTACT	ARMOIRE
KM100	048	BLOC DE CONTACTS AUXILIAIRES 2NO 2NF POUR CA3KN	1	LA1KN22	REL00057	SCHNEIDER ELECTRIC	ARMOIRE
	048	CONTACTEUR TESYS LP1-K - 4P - AC-1 440V 20 A - BOBINE 24 V CC	1	LP1K09004BD	REL00288	SCHNEIDER ELECTRIC	ARMOIRE
KA110	049	RELAIS PUSH-IN, 2 Contacts	1	2903334	REL00082	PHOENIX CONTACT	ARMOIRE
KA120	049	RELAIS PUSH-IN, 2 Contacts	1	2903334	REL00082	PHOENIX CONTACT	ARMOIRE
KA230	049	RELAIS PUSH-IN, 2 Contacts	1	2903334	REL00082	PHOENIX CONTACT	ARMOIRE
KA240	049	RELAIS PUSH-IN, 2 Contacts	1	2903334	REL00082	PHOENIX CONTACT	ARMOIRE
KA350	049	RELAIS PUSH-IN, 2 Contacts	1	2903334	REL00082	PHOENIX CONTACT	ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
REPERE		FOLIO		DESIGNATION								Qte	REFERENCE		CODE ECAT-ID		FABRICANT		Nomenclature	
KA360		049		RELAIS PUSH-IN, 2 Contacts								1	2903334		REL00082		PHOENIX CONTACT		ARMOIRE	
KA12		050		RELAIS PUSH-IN, 4 Contats								1	2903308		REL00084		PHOENIX CONTACT		ARMOIRE	
KA13		050		RELAIS PUSH-IN, 4 Contats								1	2903308		REL00084		PHOENIX CONTACT		ARMOIRE	
KA22		050		RELAIS PUSH-IN, 4 Contats								1	2903308		REL00084		PHOENIX CONTACT		ARMOIRE	
MOD0		052		API, 24VDC OMRON								1	NX102-1000		PLC01600		OMRON		ARMOIRE	
MOD1		052		CARTE ALIMENTATION 24VDC								1	NX-PF0630		PLC01601		OMRON		ARMOIRE	
MOD2		052		MODULE DE SORTIES TOR, 16S TRANSISTOR, 24VDC								1	NX-OD5256		PLC01631		OMRON		ARMOIRE	
MOD3		052		MODULE DE SORTIES TOR, 16S TRANSISTOR, 24VDC								1	NX-OD5256		PLC01631		OMRON		ARMOIRE	
MOD4		052		MODULE D'ENTREES TOR, 16E 24VDC								1	NX-ID5442		PLC01611		OMRON		ARMOIRE	
MOD5		052		MODULE D'ENTREES TOR, 16E 24VDC								1	NX-ID5442		PLC01611		OMRON		ARMOIRE	
MOD6		052		MODULE D'ENTREES TOR, 16E 24VDC								1	NX-ID5442		PLC01611		OMRON		ARMOIRE	
MOD7		052		MODULE D'ENTREES POUR ENCODEUR INCREMENTAL, 2 VOIES								1	NX-EC0222		PLC01651		OMRON		ARMOIRE	
MOD10		053		MODULE D'ENTREES/SORTIES I/O LINK , 4 VOIES								1	NX-ILM400		PLC01659		OMRON		ARMOIRE	
MOD11		053		MODULE D'ENTREES/SORTIES I/O LINK , 4 VOIES								1	NX-ILM400		PLC01659		OMRON		ARMOIRE	
MOD8		053		CARTE ALIMENTATION 24VDC								1	NX-PD1000		PLC01608		OMRON		ARMOIRE	
MOD9		053		MODULE D'ENTREES/SORTIES I/O LINK , 4 VOIES								1	NX-ILM400		PLC01659		OMRON		ARMOIRE	
FIN		054		MODULE DE FINALE DE BUS								1	750-600		PLC01003		WAGO		ARMOIRE	
MOD100		054		MODULE DE COUPLEUR ETHERCAT WAGO								1	750-354		PLC01019		WAGO		ARMOIRE	
MOD101		054		MODULE D'ALIMENTATION 24VDC								1	750-602		PLC01005		WAGO		ARMOIRE	
MOD102		054		MODULE DE 4 SORTIES PULSE								1	750-677		PLC01020		WAGO		ARMOIRE	
MOD103		054		MODULE DE 4 SORTIES PULSE								1	750-677		PLC01020		WAGO		ARMOIRE	
MOD104		054		MODULE DE 4 SORTIES PULSE								1	750-677		PLC01020		WAGO		ARMOIRE	
MOD105		054		MODULE DE SORTIES TOR, 16S 24VDC 0.5A								1	750-1504		PLC01002		WAGO		ARMOIRE	
MOD106		054		MODULE DE SORTIES TOR, 16S 24VDC 0.5A								1	750-1504		PLC01002		WAGO		ARMOIRE	
MOD107		054		MODULE D'ENTREES TOR, 16E 24VDC 3ms								1	750-1405		PLC01007		WAGO		ARMOIRE	
MOD108		054		MODULE D'ENTREES TOR, 16E 24VDC 3ms								1	750-1405		PLC01007		WAGO		ARMOIRE	
HMI1		055		ECRAN LCD TFT DE 12.1 POUCES DE LARGE, 16 770 000 COULEURS								1	NA512W101B		IHM00222		OMRON		ARMOIRE	
USB_1		055		CABLE DEPORT DE PORT USB								1	E21USB9CN1.8		CON00298		PIZZATO		ARMOIRE	
RJ45-1		056		CABLE DEPORT DE PORT ETHERNET								1	E21RJ459AN2.5		CON00256		PIZZATO		ARMOIRE	
SW1		056		Routeur VPN industriel + 4 PORTS LAN								1	FLEXY-205-EID		PLC00417		EWON CD		ARMOIRE	
SW2		056		SWITCH ETHERNET 8 ports RJ45 10/100/1000 MBPS								1	1085243		PLC00424		PHOENIX CONTACT		ARMOIRE	
RJ45-2		057		CABLE DEPORT DE PORT ETHERNET								1	E21RJ459AN2.5		CON00256		PIZZATO		ARMOIRE	
SW100		057		SWITCH ETHERNET 8 ports RJ45 10/100/1000 MBPS								1	1085243		PLC00424		PHOENIX CONTACT		ARMOIRE	
(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com				DESSINE :								Dossier n° : COOP LAR		SMXA-C014221 Nomenclature Armoire					FOLIO 136/163	
				DB																
				VERIFIE :		V12	31/07/2024	MODIF SOUFFLAGE		AV										
						V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25		DB										
				DATE D E CREATION :		12/07/2024		INDICE	DATE	MODIFICATION		DES.	see3000 version 4.80							

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
MARK	FOLIO	DESCRIPTION								Qty	REFERENCE	CODE ECAT-ID	MANUFACTURER	LISTING							
F6	008	ACTI 9 iC60N - MINITURE CIRCUIT BREAKER - 2P - 6A - D CURVE								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC	ARMOIRE							
F7	008	ACTI 9 iC60N - MINITURE CIRCUIT BREAKER - 2P - 6A - D CURVE								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC	ARMOIRE							
F8	008	ACTI 9 iC60N - MINITURE CIRCUIT BREAKER - 2P - 6A - D CURVE								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC	ARMOIRE							
V5	008	COMM CARDETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE							
	008	VARIABLE SPEED DRIVE FOR MOTOR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON	ARMOIRE							
	008	OMRON EMI FILTER								1	AX-FIM1010-RE	VAR00277	OMRON	ARMOIRE							
V6	008	COMM CARDETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE							
	008	VARIABLE SPEED DRIVE FOR MOTOR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON	ARMOIRE							
	008	OMRON EMI FILTER								1	AX-FIM1010-RE	VAR00277	OMRON	ARMOIRE							
V7	008	COMM CARDETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE							
	008	VARIABLE SPEED DRIVE FOR MOTOR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON	ARMOIRE							
	008	OMRON EMI FILTER								1	AX-FIM1010-RE	VAR00277	OMRON	ARMOIRE							
V8	008	COMM CARDETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE							
	008	VARIABLE SPEED DRIVE FOR MOTOR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON	ARMOIRE							
	008	OMRON EMI FILTER								1	AX-FIM1010-RE	VAR00277	OMRON	ARMOIRE							
F9	009	ACTI 9 iC60N - MINITURE CIRCUIT BREAKER - 2P - 6A - D CURVE								1	A9F75206	DIS00163	SCHNEIDER ELECTRIC	ARMOIRE							
Q11	009	Acti9 iDT40T - CIRCUIT BREAKER 3P+N 20A D CURVE - 6KA								1	A9P32720	DIS00271	SCHNEIDER ELECTRIC	ARMOIRE							
V9	009	COMM CARDETHERCAT								1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE							
	009	VARIABLE SPEED DRIVE FOR MOTOR 0.40kW, 200-240VAC MONO								1	3G3MX2-AB004-EV2	VAR00701	OMRON	ARMOIRE							
	009	OMRON EMI FILTER								1	AX-FIM1010-RE	VAR00277	OMRON	ARMOIRE							
Q10	010	CIRCUIT BREAKER FOR CONTROL CIRCUIT - GB2-DB - 6 A - 2P - 2D								1	GB2DB12	DIS00144	SCHNEIDER ELECTRIC	ARMOIRE							
Q20	010	CIRCUIT BREAKER CBM E8 8x24VDC/0.5-10A								1	2905744	DIS00250	PHOENIX CONTACT	ARMOIRE							
U10	010	POWER SUPPLY 100-240VAC, OUTPUT 24VDC, 20A								1	S8VK-S48024	ALM00218	OMRON	ARMOIRE							
Q21	011	ACTI 9 iC60N - MINITURE CIRCUIT BREAKER - 2P - 16A - C CURVE								1	A9F77216	DIS00147	SCHNEIDER ELECTRIC	ARMOIRE							
	011	ACTI9 VIGI IC60 - DIFFERENTIAL CIRCUIT BREAKER 2P 6KA 25A 30MA								1	A9Q11225	DIS00342	SCHNEIDER ELECTRIC	ARMOIRE							
U1	011	UPS 3000VA 230VAC								1	EON9SX3000I	ALM00247	EATON	ARMOIRE							
Q100	012	CIRCUIT BREAKER FOR CONTROL CIRCUIT - GB2-DB - 10 A - 2P - 2D								1	GB2DB16	DIS00159	SCHNEIDER ELECTRIC	ARMOIRE							
Q120	012	MINITURE CIRCUIT BREAKER - C60H - 1 POLE - 40 A - C CURVE								1	A9N61517	DIS00346	SCHNEIDER ELECTRIC	ARMOIRE							
Q200	012	CIRCUIT BREAKER FOR CONTROL CIRCUIT - GB2-DB - 10 A - 2P - 2D								1	GB2DB16	DIS00159	SCHNEIDER ELECTRIC	ARMOIRE							
Q220	012	MINITURE CIRCUIT BREAKER - C60H - 1 POLE - 40 A - C CURVE								1	A9N61517	DIS00346	SCHNEIDER ELECTRIC	ARMOIRE							
Q300	012	CIRCUIT BREAKER FOR CONTROL CIRCUIT - GB2-DB - 10 A - 2P - 2D								1	GB2DB16	DIS00159	SCHNEIDER ELECTRIC	ARMOIRE							
Q320	012	MINITURE CIRCUIT BREAKER - C60H - 1 POLE - 40 A - C CURVE								1	A9N61517	DIS00346	SCHNEIDER ELECTRIC	ARMOIRE							
U100	012	POWER SUPPLY 230VAC/24VDC 40A 1000W								1	HRPG-1000-24	ALM00246	MEAN WELL	ARMOIRE							
(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com				DESSIN E : DB						Dossier n° : COOP LAR				SMXA-C014221 Components List					FOLIO		
				VERIFIE : JT		V12	31/07/2024	MODIF SOUFFLAGE											AV	138/163	
				DATE D E CREATION : 12/07/2024		V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25											DB		
				INDICE	DATE	MODIFICATION		DES.	see3000 version 4.80												

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
MARK	FOLIO	DESCRIPTION								Qty	REFERENCE	CODE ECAT-ID	MANUFACTURER		LISTING					
U200	012	POWER SUPPLY 230VAC/24VDC 40A 1000W								1	HRPG-1000-24	ALM00246	MEAN WELL		ARMOIRE					
U300	012	POWER SUPPLY 230VAC/24VDC 40A 1000W								1	HRPG-1000-24	ALM00246	MEAN WELL		ARMOIRE					
Q23	013	CIRCUIT BREAKER FOR CONTROL CIRCUIT - GB2-DB - 2 A - 2P - 2D								1	GB2DB07	DIS00113	SCHNEIDER ELECTRIC		ARMOIRE					
Q24	013	MINITURE CIRCUIT BREAKER - C60H - 1 POLE - 3 A - C CURVE								1	A9N61503	DIS00226	SCHNEIDER ELECTRIC		ARMOIRE					
U20	013	POWER SUPPLY 100-240VAC, OUTPUT 24VDC, 2.5A								1	S8VK-S06024	ALM00229	OMRON		ARMOIRE					
Q101	014	CIRCUIT BREAKER FOR CONTROL CIRCUIT - GB2-DB - 6 A - 2P - 2D								1	GB2DB12	DIS00144	SCHNEIDER ELECTRIC		ARMOIRE					
Q201	014	CIRCUIT BREAKER FOR CONTROL CIRCUIT - GB2-DB - 6 A - 2P - 2D								1	GB2DB12	DIS00144	SCHNEIDER ELECTRIC		ARMOIRE					
Q22	014	ACTI 9 iC60N - MINITURE CIRCUIT BREAKER - 2P - 10A - C CURVE								1	A9F77210	DIS00142	SCHNEIDER ELECTRIC		ARMOIRE					
	014	ACTI9 VIGI IC60 - DIFFERENTIAL CIRCUIT BREAKER 2P 6KA 25A 30MA								1	A9Q11225	DIS00342	SCHNEIDER ELECTRIC		ARMOIRE					
Q301	014	CIRCUIT BREAKER FOR CONTROL CIRCUIT - GB2-DB - 6 A - 2P - 2D								1	GB2DB12	DIS00144	SCHNEIDER ELECTRIC		ARMOIRE					
SX2	014	EUROPEAN SOCKET 2P+GND 16A 250VAC								1	R9PCS616	PRI00219	SCHNEIDER ELECTRIC		ARMOIRE					
U101	014	POWER SUPPLY 100-240VAC, OUTPUT 24VDC, 20A								1	S8VK-S48024	ALM00218	OMRON		ARMOIRE					
U201	014	POWER SUPPLY 100-240VAC, OUTPUT 24VDC, 20A								1	S8VK-S48024	ALM00218	OMRON		ARMOIRE					
U301	014	POWER SUPPLY 100-240VAC, OUTPUT 24VDC, 20A								1	S8VK-S48024	ALM00218	OMRON		ARMOIRE					
SEC01	015	SAFETY RELAY								1	2900509	REL00033	PHOENIX		ARMOIRE					
KA100	017	TESYS K CONTROL RELAY 3NO+1NF 24VDC								1	CA3KN31BD	REL00051	SCHNEIDER ELECTRIC		ARMOIRE					
SEC02	017	SAFETY RELAY								1	2900509	REL00033	PHOENIX		ARMOIRE					
FAN1	018	24VDC FAN 178m3/h + OUTLET GRILLE AND FILTER								1	COSD12B05HWBZ0	ELC00961	COSTECH		ARMOIRE					
H50	018	LED STRIP WHITE HOT 24VDC								1	VEL75167	ELC02012	MIIDEX		ARMOIRE					
KA1	018	TESYS K CONTROL RELAY 3NO+1NF 24VDC								1	CA3KN31BD	REL00051	SCHNEIDER ELECTRIC		ARMOIRE					
	018	TESYS D AUXILIARY CONTACT BLOCK 4NO								1	LA1KN40	REL00086	SCHNEIDER ELECTRIC		ARMOIRE					
FAN11	025	24VDC FAN 355m3/h								1	4114N/2H4	ELC02073	EBM-PAPST		ARMOIRE					
	025	120x120 GRILLE FOR FAN								1	COS120	ELC00722	COSTECH		ARMOIRE					
FAN12	025	24VDC FAN 355m3/h								1	4114N/2H4	ELC02073	EBM-PAPST		ARMOIRE					
	025	120x120 GRILLE FOR FAN								1	COS120	ELC00722	COSTECH		ARMOIRE					
FAN13	025	24VDC FAN 355m3/h								1	4114N/2H4	ELC02073	EBM-PAPST		ARMOIRE					
	025	120x120 GRILLE FOR FAN								1	COS120	ELC00722	COSTECH		ARMOIRE					
FAN14	025	24VDC FAN 355m3/h								1	4114N/2H4	ELC02073	EBM-PAPST		ARMOIRE					
	025	120x120 GRILLE FOR FAN								1	COS120	ELC00722	COSTECH		ARMOIRE					
H51	025	LED STRIP WHITE HOT 24VDC								1	VEL75167	ELC02012	MIIDEX		ARMOIRE					
Q121	026	CIRCUIT BREAKER CBM E8 8x24VDC/0.5-10A								1	2905744	DIS00250	PHOENIX CONTACT		ARMOIRE					
Q221	026	CIRCUIT BREAKER CBM E8 8x24VDC/0.5-10A								1	2905744	DIS00250	PHOENIX CONTACT		ARMOIRE					
Q321	026	CIRCUIT BREAKER CBM E8 8x24VDC/0.5-10A								1	2905744	DIS00250	PHOENIX CONTACT		ARMOIRE					
(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com				DESSINE : DB						Dossier n° : COOP LAR				SMXA-C014221 Components List				FOLIO		
				VERIFIE : JT		V12	31/07/2024	MODIF SOUFFLAGE										AV	139/163	
				DATE D E CREATION : 12/07/2024		V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25										DB		
				INDICE	DATE	MODIFICATION		DES.	see3000 version 4.80											

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
MARK		FOLIO	DESCRIPTION							Qty	REFERENCE	CODE ECAT-ID	MANUFACTURER			LISTING				
UAC100		027	INDUSTRIEL COMPUTER NEOUSYS NUVO							1	NUVO-10208GC	INF01052	NEOUSYS			ARMOIRE				
USB_UAC100		027	USB 3.0 PORT REMOTE CABLE							1	E2 1USB9AN3	CON00401	PIZZATO			ARMOIRE				
UAC200		031	INDUSTRIEL COMPUTER NEOUSYS NUVO							1	NUVO-10208GC	INF01052	NEOUSYS			ARMOIRE				
USB_UAC200		031	USB 3.0 PORT REMOTE CABLE							1	E2 1USB9AN3	CON00401	PIZZATO			ARMOIRE				
UAC300		035	INDUSTRIEL COMPUTER NEOUSYS NUVO							1	NUVO-10208GC	INF01052	NEOUSYS			ARMOIRE				
USB_UAC300		035	USB 3.0 PORT REMOTE CABLE							1	E2 1USB9AN3	CON00401	PIZZATO			ARMOIRE				
KA14		039	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA15		039	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA16		039	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA17		039	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA18		039	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA19		039	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA24		040	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA25		040	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA26		040	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA27		040	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA28		040	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA29		040	SEMICONDUCTOR RELAI MODULE							1	2900378	REL00088	PHOENIX CONTACT			ARMOIRE				
KA2		041	RELAY MODULE RIF-1-RPT-LDP-24DC/2X21							1	2903334	REL00082	PHOENIX CONTACT			ARMOIRE				
KA3		041	RELAY MODULE RIF-1-RPT-LDP-24DC/2X21							1	2903334	REL00082	PHOENIX CONTACT			ARMOIRE				
KA4		042	RELAY MODULE RIF-0-RPT-24DC/21							1	2903370	REL00085	PHOENIX CONTACT			ARMOIRE				
KA5		042	RELAY MODULE RIF-0-RPT-24DC/21							1	2903370	REL00085	PHOENIX CONTACT			ARMOIRE				
KA10		048	RELAY MODULE RIF-0-RPT-24DC/21							1	2903370	REL00085	PHOENIX CONTACT			ARMOIRE				
KA11		048	RELAY MODULE RIF-0-RPT-24DC/21							1	2903370	REL00085	PHOENIX CONTACT			ARMOIRE				
KA20		048	RELAY MODULE RIF-0-RPT-24DC/21							1	2903370	REL00085	PHOENIX CONTACT			ARMOIRE				
KA21		048	RELAY MODULE RIF-0-RPT-24DC/21							1	2903370	REL00085	PHOENIX CONTACT			ARMOIRE				
KM100		048	TESYS K AUXILIARY CONTACT BLOCK 2NO+2NC							1	LA1KN22	REL00057	SCHNEIDER ELECTRIC			ARMOIRE				
		048	TESYS K CONTACTOR - 4P - AC-1 <= 440 V 20 A - 24 V DC COIL							1	LP1K09004BD	REL00288	SCHNEIDER ELECTRIC			ARMOIRE				
KA110		049	RELAY MODULE RIF-1-RPT-LDP-24DC/2X21							1	2903334	REL00082	PHOENIX CONTACT			ARMOIRE				
KA120		049	RELAY MODULE RIF-1-RPT-LDP-24DC/2X21							1	2903334	REL00082	PHOENIX CONTACT			ARMOIRE				
KA230		049	RELAY MODULE RIF-1-RPT-LDP-24DC/2X21							1	2903334	REL00082	PHOENIX CONTACT			ARMOIRE				
KA240		049	RELAY MODULE RIF-1-RPT-LDP-24DC/2X21							1	2903334	REL00082	PHOENIX CONTACT			ARMOIRE				
KA350		049	RELAY MODULE RIF-1-RPT-LDP-24DC/2X21							1	2903334	REL00082	PHOENIX CONTACT			ARMOIRE				
(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com			DESSINE : DB										SMXA-C014221 Components List					FOLIO 140/163		
			VERIFIE : JT		V12	31/07/2024	MODIF SOUFFLAGE													AV
			DATE D E CREATION : 12/07/2024		V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25		DB	Dossier n° : COOP LAR									see3000 version 4.80	
			INDICE	DATE	MODIFICATION		DES.													

MARK	FOLIO	DESCRIPTION	Qty	REFERENCE	CODE ECAT-ID	MANUFACTURER	LISTING
KA360	049	RELAY MODULE RIF-1-RPT-LDP-24DC/2X21	1	2903334	REL00082	PHOENIX CONTACT	ARMOIRE
KA12	050	RELAY MODULE RIF-2-RPT-LDP-24DC/4X21	1	2903308	REL00084	PHOENIX CONTACT	ARMOIRE
KA13	050	RELAY MODULE RIF-2-RPT-LDP-24DC/4X21	1	2903308	REL00084	PHOENIX CONTACT	ARMOIRE
KA22	050	RELAY MODULE RIF-2-RPT-LDP-24DC/4X21	1	2903308	REL00084	PHOENIX CONTACT	ARMOIRE
MOD0	052	OMRON CPU 24VCC	1	NX102-1000	PLC01600	OMRON	ARMOIRE
MOD1	052	POWER SUPPLY MODULE 24VCC	1	NX-PF0630	PLC01601	OMRON	ARMOIRE
MOD2	052	16 CHANNEL DIGITAL OUTPUT, 24VDC, 0.5A	1	NX-OD5256	PLC01631	OMRON	ARMOIRE
MOD3	052	16 CHANNEL DIGITAL OUTPUT, 24VDC, 0.5A	1	NX-OD5256	PLC01631	OMRON	ARMOIRE
MOD4	052	16 CHANNEL DIGITAL INPUT, 24VDC	1	NX-ID5442	PLC01611	OMRON	ARMOIRE
MOD5	052	16 CHANNEL DIGITAL INPUT, 24VDC	1	NX-ID5442	PLC01611	OMRON	ARMOIRE
MOD6	052	16 CHANNEL DIGITAL INPUT, 24VDC	1	NX-ID5442	PLC01611	OMRON	ARMOIRE
MOD7	052	2 INCREMENTAL ENCODERS INPUT UNIT, 24VDC	1	NX-EC0222	PLC01651	OMRON	ARMOIRE
MOD10	053	4 CHANNEL I/O LINK	1	NX-ILM400	PLC01659	OMRON	ARMOIRE
MOD11	053	4 CHANNEL I/O LINK	1	NX-ILM400	PLC01659	OMRON	ARMOIRE
MOD8	053	ADDITIONAL UNIT POWER SUPPLY MODULE 24VCC	1	NX-PD1000	PLC01608	OMRON	ARMOIRE
MOD9	053	4 CHANNEL I/O LINK	1	NX-ILM400	PLC01659	OMRON	ARMOIRE
FIN	054	END MODULE	1	750-600	PLC01003	WAGO	ARMOIRE
MOD100	054	FIELDBUS COUPLER ETHERCAT WAGO	1	750-354	PLC01019	WAGO	ARMOIRE
MOD101	054	POWER SUPPLY MODULE 24VDC	1	750-602	PLC01005	WAGO	ARMOIRE
MOD102	054	4 Pulse Width Outputs 24 VDC 0,2A 20kHz Adjustable	1	750-677	PLC01020	WAGO	ARMOIRE
MOD103	054	4 Pulse Width Outputs 24 VDC 0,2A 20kHz Adjustable	1	750-677	PLC01020	WAGO	ARMOIRE
MOD104	054	4 Pulse Width Outputs 24 VDC 0,2A 20kHz Adjustable	1	750-677	PLC01020	WAGO	ARMOIRE
MOD105	054	16 CHANNEL DIGITAL OUTPUT, 24VDC, 0.5A	1	750-1504	PLC01002	WAGO	ARMOIRE
MOD106	054	16 CHANNEL DIGITAL OUTPUT, 24VDC, 0.5A	1	750-1504	PLC01002	WAGO	ARMOIRE
MOD107	054	16 CHANNEL DIGITAL INPUT, 24VDC, 3ms	1	750-1405	PLC01007	WAGO	ARMOIRE
MOD108	054	16 CHANNEL DIGITAL INPUT, 24VDC, 3ms	1	750-1405	PLC01007	WAGO	ARMOIRE
HMI1	055	GRAPHIC TERMINAL SCREEN TACTILE 12"	1	NA512W101B	IHM00222	OMRON	ARMOIRE
USB_1	055	USB PORT REMOTE CABLE	1	E21USB9CN1.8	CON00298	PIZZATO	ARMOIRE
RJ45-1	056	ETHERNET PORT REMOTE CABLE	1	E21RJ459AN2.5	CON00256	PIZZATO	ARMOIRE
SW1	056	INDUSTRIAL ROUTER + 4 PORTS LAN	1	FLEXY-205-EID	PLC00417	EWON CD	ARMOIRE
SW2	056	ETHERNET SWITCH 8 RJ45 PORTS 10/100/1000 MBPS	1	1085243	PLC00424	PHOENIX CONTACT	ARMOIRE
RJ45-2	057	ETHERNET PORT REMOTE CABLE	1	E21RJ459AN2.5	CON00256	PIZZATO	ARMOIRE
SW100	057	ETHERNET SWITCH 8 RJ45 PORTS 10/100/1000 MBPS	1	1085243	PLC00424	PHOENIX CONTACT	ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
REPERE		FOLIO	DESIGNATION							Qte	REFERENCE		CODE ECAT-ID		FABRICANT		Nomenclature		
ETH_HMI			CONNECTEUR RJ45 METAL A MONTER IP20 DROIT CAT.6A							2	J00026A5001		CON00035		TELEGARTNER		FI		
ETH_UAC			CONNECTEUR RJ45 METAL A MONTER IP20 DROIT CAT.6A							2	J00026A5001		CON00035		TELEGARTNER		FI		
SX1		014	PRISE DE COURANT HYPRA IP66 2P+T							1	53911		PRI00002		LEGRAND		FI		
EV00		015	FR + VANNE + MSP							1	AC30A-QAS111		FPF00057		SMC		FI		
DTS1		016	CAPTEUR SECURITE PORTE							1	1059511		SEN00569		SICK		FI		
		016	ENTRETOISE POUR CAPTEUR SECURITE PORTE							2	1060291		SEN00570		SICK		FI		
DTS2		016	CAPTEUR SECURITE PORTE							1	1059511		SEN00569		SICK		FI		
		016	ENTRETOISE POUR CAPTEUR SECURITE PORTE							2	1060291		SEN00570		SICK		FI		
DTS3		017	CAPTEUR SECURITE PORTE							1	1059511		SEN00569		SICK		FI		
		017	ENTRETOISE POUR CAPTEUR SECURITE PORTE							2	1060291		SEN00570		SICK		FI		
DTS4		017	CAPTEUR SECURITE PORTE							1	1059511		SEN00569		SICK		FI		
		017	ENTRETOISE POUR CAPTEUR SECURITE PORTE							2	1060291		SEN00570		SICK		FI		
DTS5		017	CAPTEUR SECURITE PORTE							1	1059511		SEN00569		SICK		FI		
		017	ENTRETOISE POUR CAPTEUR SECURITE PORTE							2	1060291		SEN00570		SICK		FI		
DTS6		017	CAPTEUR SECURITE PORTE							1	1059511		SEN00569		SICK		FI		
		017	ENTRETOISE POUR CAPTEUR SECURITE PORTE							2	1060291		SEN00570		SICK		FI		
EV30		025	CORDON: CABLE EV SERIE C 5M							1	1439528		CBL00003		PHOENIX CONTACT		FI		
		025	ELECTRODISTRIBUTEUR 5/2 24VDC							1	CPE18-M1H-5L-1/4		EVV00010		FESTO		FI		
SL01		041	VERRINE 7 COULEURS BANNER LED 24VDC 4P							1	DK-K50L2RGB7Q		PRI00166		BANNER		FI		
		041	PIED POUR VERRINE BANNER BLANC							1	SA-E12M30C		PRI00169		BANNER		FI		
		041	ADAPTATEUR VERRINE BANNER							1	SA-M30TE12C		PRI00167		BANNER		FI		
		041	TUBE 300mm SS VERRINE BANNER							1	SOP-E12-300SS		PRI00168		BANNER		FI		
EV31		049	CORDON: CABLE EV SERIE C 5M							1	1439528		CBL00003		PHOENIX CONTACT		FI		
		049	ELECTRODISTRIBUTEUR 5/2 24VDC							1	CPE18-M1H-5L-1/4		EVV00010		FESTO		FI		
H210		050	CABLE M12 4poles COUDE L=10m PP							1	EVF005		CBL00440		IFM		FI		
		050	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12							1	S18LGRYPQ		BPV00220		BANNER		FI		
H211		050	CABLE M12 4poles COUDE L=10m PP							1	EVF005		CBL00440		IFM		FI		
		050	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12							1	S18LGRYPQ		BPV00220		BANNER		FI		
H212		050	CABLE M12 4poles COUDE L=10m PP							1	EVF005		CBL00440		IFM		FI		
		050	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12							1	S18LGRYPQ		BPV00220		BANNER		FI		
H213		050	CABLE M12 4poles COUDE L=10m PP							1	EVF005		CBL00440		IFM		FI		
		050	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12							1	S18LGRYPQ		BPV00220		BANNER		FI		
H214		050	CABLE M12 4poles COUDE L=10m PP							1	EVF005		CBL00440		IFM		FI		
(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com			DESSINE : DB										SMXA-C014221 Nomenclature FI				FOLIO 142/163		
			VERIFIE : JT		V14	23/09/2024	MODIFICATION SYNOPTIQUE RESEAU	DB											
			DATE D E CREATION : 12/07/2024		V12	31/07/2024	MODIF SOUFFLAGE	AV	Dossier n° : COOP LAR										
			INDICE	DATE			MODIFICATION	DES.											
see3000 version 4.80																			

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
REPERE	FOLIO	DESIGNATION	Qty	REFERENCE	CODE ECAT-ID	FABRICANT	Nomenclature													
	050	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12	1	S18LGRYPQ	BPV00220	BANNER	FI													
H215	050	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI													
	050	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12	1	S18LGRYPQ	BPV00220	BANNER	FI													
H220	050	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI													
	050	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12	1	S18LGRYPQ	BPV00220	BANNER	FI													
H221	051	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI													
	051	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12	1	S18LGRYPQ	BPV00220	BANNER	FI													
H222	051	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI													
	051	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12	1	S18LGRYPQ	BPV00220	BANNER	FI													
H223	051	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI													
	051	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12	1	S18LGRYPQ	BPV00220	BANNER	FI													
H224	051	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI													
	051	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12	1	S18LGRYPQ	BPV00220	BANNER	FI													
H225	051	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI													
	051	EZ-LIGHT® S18L VERT/ROUGE/JAUNE 24VDC M18 M12	1	S18LGRYPQ	BPV00220	BANNER	FI													
DT40	059	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI													
	059	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI													
DTLED1	059	CAPTEUR MECANIQUE MINIATURE	1	XCMN2121L1	SEN00118	SCHNEIDER ELECTRIC	FI													
DTLED2	059	CAPTEUR MECANIQUE MINIATURE	1	XCMN2121L1	SEN00118	SCHNEIDER ELECTRIC	FI													
DT20	060	REFLECTEUR ROND Diam 35mm	1	E20954	SEN00591	IFM	FI													
	060	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI													
	060	CAPTEUR REFLEX RECTANGULAIRE	1	O6P301	SEN00603	IFM	FI													
DT21	060	REFLECTEUR ROND Diam 35mm	1	E20954	SEN00591	IFM	FI													
	060	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI													
	060	CAPTEUR REFLEX RECTANGULAIRE	1	O6P301	SEN00603	IFM	FI													
DT22	060	REFLECTEUR ROND Diam 35mm	1	E20954	SEN00591	IFM	FI													
	060	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI													
	060	CAPTEUR REFLEX RECTANGULAIRE	1	O6P301	SEN00603	IFM	FI													
DT23	060	REFLECTEUR ROND Diam 35mm	1	E20954	SEN00591	IFM	FI													
	060	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI													
	060	CAPTEUR REFLEX RECTANGULAIRE	1	O6P301	SEN00603	IFM	FI													
DT24	060	REFLECTEUR ROND Diam 35mm	1	E20954	SEN00591	IFM	FI													
	060	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI													
(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com		DESSINE :	DB									SMXA-C014221 Nomenclature FI						FOLIO 143/163		
		VERIFIE :	JT	V14	23/09/2024	MODIFICATION SYNOPTIQUE RESEAU	DB													
				V12	31/07/2024	MODIF SOUFFLAGE	AV													
		DATE D E CREATION :		V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25	DB		Dossier n° : COOP LAR									see3000 version 4.80		
		12/07/2024		INDICE	DATE	MODIFICATION	DES.													

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20																																																																																																																																																																																																																																																																																
<table><tr><th>REPERE</th><th>FOLIO</th><th>DESIGNATION</th><th>Qte</th><th>REFERENCE</th><th>CODE ECAT-ID</th><th>FABRICANT</th><th>Nomenclature</th></tr><tr><td></td><td>060</td><td>CAPTEUR REFLEX RECTANGULAIRE</td><td>1</td><td>O6P301</td><td>SEN00603</td><td>IFM</td><td>FI</td></tr><tr><td>DT25</td><td>060</td><td>REFLECTEUR ROND Diam 35mm</td><td>1</td><td>E20954</td><td>SEN00591</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>060</td><td>CABLE M12 4poles DROIT L=10m PP</td><td>1</td><td>EVF002</td><td>CBL00464</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>060</td><td>CAPTEUR REFLEX RECTANGULAIRE</td><td>1</td><td>O6P301</td><td>SEN00603</td><td>IFM</td><td>FI</td></tr><tr><td>DT26</td><td>060</td><td>CABLE M12 4poles COUDE L=10m PP</td><td>1</td><td>EVF005</td><td>CBL00440</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>060</td><td>CAPTEUR INDUCTIF Diamètre 18 NO</td><td>1</td><td>IGT203</td><td>SEN00024</td><td>IFM</td><td>FI</td></tr><tr><td>DT27</td><td>060</td><td>CABLE M12 4poles COUDE L=10m PP</td><td>1</td><td>EVF005</td><td>CBL00440</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>060</td><td>CAPTEUR INDUCTIF Diamètre 18 NO</td><td>1</td><td>IGT203</td><td>SEN00024</td><td>IFM</td><td>FI</td></tr><tr><td>DT28</td><td>061</td><td>CABLE M12 4poles COUDE L=10m PP</td><td>1</td><td>EVF005</td><td>CBL00440</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>061</td><td>CAPTEUR INDUCTIF Diamètre 18 NO</td><td>1</td><td>IGT203</td><td>SEN00024</td><td>IFM</td><td>FI</td></tr><tr><td>DT29</td><td>061</td><td>CABLE M12 4poles COUDE L=10m PP</td><td>1</td><td>EVF005</td><td>CBL00440</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>061</td><td>CAPTEUR INDUCTIF Diamètre 18 NO</td><td>1</td><td>IGT203</td><td>SEN00024</td><td>IFM</td><td>FI</td></tr><tr><td>DT30</td><td>061</td><td>CABLE M12 4poles COUDE L=10m PP</td><td>1</td><td>EVF005</td><td>CBL00440</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>061</td><td>CAPTEUR INDUCTIF Diamètre 18 NO</td><td>1</td><td>IGT203</td><td>SEN00024</td><td>IFM</td><td>FI</td></tr><tr><td>DT31</td><td>061</td><td>CABLE M12 4poles COUDE L=10m PP</td><td>1</td><td>EVF005</td><td>CBL00440</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>061</td><td>CAPTEUR INDUCTIF Diamètre 18 NO</td><td>1</td><td>IGT203</td><td>SEN00024</td><td>IFM</td><td>FI</td></tr><tr><td>DT13</td><td>063</td><td>CABLE M12 4poles DROIT L=10m PP</td><td>1</td><td>EVF002</td><td>CBL00464</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>063</td><td>CAPTEUR INDUCTIF Diamètre 18 NO</td><td>1</td><td>IGT203</td><td>SEN00024</td><td>IFM</td><td>FI</td></tr><tr><td>DT14</td><td>063</td><td>CABLE M12 4poles DROIT L=10m PP</td><td>1</td><td>EVF002</td><td>CBL00464</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>063</td><td>CAPTEUR INDUCTIF Diamètre 18 NO</td><td>1</td><td>IGT203</td><td>SEN00024</td><td>IFM</td><td>FI</td></tr><tr><td>DT15</td><td>063</td><td>CABLE M12 4poles DROIT L=10m PP</td><td>1</td><td>EVF002</td><td>CBL00464</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>063</td><td>CAPTEUR INDUCTIF Diamètre 18 NO</td><td>1</td><td>IGT203</td><td>SEN00024</td><td>IFM</td><td>FI</td></tr><tr><td>DT16</td><td>063</td><td>CABLE M12 4poles DROIT L=10m PP</td><td>1</td><td>EVF002</td><td>CBL00464</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>063</td><td>CAPTEUR MECANIQUE A TIGE RONDE Ø6 AVEC CONNECTEUR M12</td><td>1</td><td>XCKJ10559D</td><td>SEN00690</td><td>SCHNEIDER ELECTRIC</td><td>FI</td></tr><tr><td>DT17</td><td>063</td><td>CABLE M12 4poles DROIT L=10m PP</td><td>1</td><td>EVF002</td><td>CBL00464</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>063</td><td>CAPTEUR INDUCTIF Diamètre 18 NO</td><td>1</td><td>IGT203</td><td>SEN00024</td><td>IFM</td><td>FI</td></tr><tr><td>DT100</td><td>066</td><td>SUPPORT SONDE TEMPERATURE IFM</td><td>1</td><td>E10076</td><td>SEN00677</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>066</td><td>CABLE M12 4poles DROIT L=10m PP</td><td>1</td><td>EVF002</td><td>CBL00464</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>066</td><td>CAPTEURS: Sonde de température INOX I/O LINK Pt1000</td><td>1</td><td>TA2115</td><td>SEN00554</td><td>IFM</td><td>FI</td></tr><tr><td>PS01</td><td>066</td><td>CABLE M12 4poles COUDE L=10m PP</td><td>1</td><td>EVF005</td><td>CBL00440</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>066</td><td>CAPTEUR DE PRESSION IOLINK -1-10b</td><td>1</td><td>PV7004</td><td>SEN00674</td><td>IFM</td><td>FI</td></tr><tr><td>DT110</td><td>067</td><td>SUPPORT SONDE TEMPERATURE IFM</td><td>1</td><td>E10076</td><td>SEN00677</td><td>IFM</td><td>FI</td></tr><tr><td></td><td>067</td><td>CABLE M12 4poles DROIT L=10m PP</td><td>1</td><td>EVF002</td><td>CBL00464</td><td>IFM</td><td>FI</td></tr></table>																				REPERE	FOLIO	DESIGNATION	Qte	REFERENCE	CODE ECAT-ID	FABRICANT	Nomenclature		060	CAPTEUR REFLEX RECTANGULAIRE	1	O6P301	SEN00603	IFM	FI	DT25	060	REFLECTEUR ROND Diam 35mm	1	E20954	SEN00591	IFM	FI		060	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI		060	CAPTEUR REFLEX RECTANGULAIRE	1	O6P301	SEN00603	IFM	FI	DT26	060	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI		060	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI	DT27	060	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI		060	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI	DT28	061	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI		061	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI	DT29	061	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI		061	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI	DT30	061	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI		061	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI	DT31	061	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI		061	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI	DT13	063	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI		063	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI	DT14	063	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI		063	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI	DT15	063	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI		063	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI	DT16	063	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI		063	CAPTEUR MECANIQUE A TIGE RONDE Ø6 AVEC CONNECTEUR M12	1	XCKJ10559D	SEN00690	SCHNEIDER ELECTRIC	FI	DT17	063	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI		063	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI	DT100	066	SUPPORT SONDE TEMPERATURE IFM	1	E10076	SEN00677	IFM	FI		066	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI		066	CAPTEURS: Sonde de température INOX I/O LINK Pt1000	1	TA2115	SEN00554	IFM	FI	PS01	066	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI		066	CAPTEUR DE PRESSION IOLINK -1-10b	1	PV7004	SEN00674	IFM	FI	DT110	067	SUPPORT SONDE TEMPERATURE IFM	1	E10076	SEN00677	IFM	FI		067	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI
REPERE	FOLIO	DESIGNATION	Qte	REFERENCE	CODE ECAT-ID	FABRICANT	Nomenclature																																																																																																																																																																																																																																																																																												
	060	CAPTEUR REFLEX RECTANGULAIRE	1	O6P301	SEN00603	IFM	FI																																																																																																																																																																																																																																																																																												
DT25	060	REFLECTEUR ROND Diam 35mm	1	E20954	SEN00591	IFM	FI																																																																																																																																																																																																																																																																																												
	060	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI																																																																																																																																																																																																																																																																																												
	060	CAPTEUR REFLEX RECTANGULAIRE	1	O6P301	SEN00603	IFM	FI																																																																																																																																																																																																																																																																																												
DT26	060	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI																																																																																																																																																																																																																																																																																												
	060	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI																																																																																																																																																																																																																																																																																												
DT27	060	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI																																																																																																																																																																																																																																																																																												
	060	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI																																																																																																																																																																																																																																																																																												
DT28	061	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI																																																																																																																																																																																																																																																																																												
	061	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI																																																																																																																																																																																																																																																																																												
DT29	061	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI																																																																																																																																																																																																																																																																																												
	061	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI																																																																																																																																																																																																																																																																																												
DT30	061	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI																																																																																																																																																																																																																																																																																												
	061	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI																																																																																																																																																																																																																																																																																												
DT31	061	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI																																																																																																																																																																																																																																																																																												
	061	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI																																																																																																																																																																																																																																																																																												
DT13	063	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI																																																																																																																																																																																																																																																																																												
	063	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI																																																																																																																																																																																																																																																																																												
DT14	063	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI																																																																																																																																																																																																																																																																																												
	063	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI																																																																																																																																																																																																																																																																																												
DT15	063	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI																																																																																																																																																																																																																																																																																												
	063	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI																																																																																																																																																																																																																																																																																												
DT16	063	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI																																																																																																																																																																																																																																																																																												
	063	CAPTEUR MECANIQUE A TIGE RONDE Ø6 AVEC CONNECTEUR M12	1	XCKJ10559D	SEN00690	SCHNEIDER ELECTRIC	FI																																																																																																																																																																																																																																																																																												
DT17	063	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI																																																																																																																																																																																																																																																																																												
	063	CAPTEUR INDUCTIF Diamètre 18 NO	1	IGT203	SEN00024	IFM	FI																																																																																																																																																																																																																																																																																												
DT100	066	SUPPORT SONDE TEMPERATURE IFM	1	E10076	SEN00677	IFM	FI																																																																																																																																																																																																																																																																																												
	066	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI																																																																																																																																																																																																																																																																																												
	066	CAPTEURS: Sonde de température INOX I/O LINK Pt1000	1	TA2115	SEN00554	IFM	FI																																																																																																																																																																																																																																																																																												
PS01	066	CABLE M12 4poles COUDE L=10m PP	1	EVF005	CBL00440	IFM	FI																																																																																																																																																																																																																																																																																												
	066	CAPTEUR DE PRESSION IOLINK -1-10b	1	PV7004	SEN00674	IFM	FI																																																																																																																																																																																																																																																																																												
DT110	067	SUPPORT SONDE TEMPERATURE IFM	1	E10076	SEN00677	IFM	FI																																																																																																																																																																																																																																																																																												
	067	CABLE M12 4poles DROIT L=10m PP	1	EVF002	CBL00464	IFM	FI																																																																																																																																																																																																																																																																																												
(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com		<table><tr><td>DESSIN E :</td><td>DB</td><td>V14</td><td>23/09/2024</td><td>MODIFICATION SYNOPTIQUE RESEAU</td><td>DB</td></tr><tr><td>VERIFIE :</td><td>JT</td><td>V12</td><td>31/07/2024</td><td>MODIF SOUFFLAGE</td><td>AV</td></tr><tr><td>DATE D E CREATION :</td><td>12/07/2024</td><td>V11</td><td>11/07/2024</td><td>AJOUT ALIM B10 & BORNIER X15-X25</td><td>DB</td></tr><tr><td></td><td></td><td>INDICE</td><td>DATE</td><td>MODIFICATION</td><td>DES.</td></tr></table>	DESSIN E :	DB	V14	23/09/2024	MODIFICATION SYNOPTIQUE RESEAU	DB	VERIFIE :	JT	V12	31/07/2024	MODIF SOUFFLAGE	AV	DATE D E CREATION :	12/07/2024	V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25	DB			INDICE	DATE	MODIFICATION	DES.	Dossier n° : COOP LAR	SMXA-C014221 Nomenclature FI	FOLIO 144/163 see3000 version 4.00																																																																																																																																																																																																																																																																						
DESSIN E :	DB	V14	23/09/2024	MODIFICATION SYNOPTIQUE RESEAU	DB																																																																																																																																																																																																																																																																																														
VERIFIE :	JT	V12	31/07/2024	MODIF SOUFFLAGE	AV																																																																																																																																																																																																																																																																																														
DATE D E CREATION :	12/07/2024	V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25	DB																																																																																																																																																																																																																																																																																														
		INDICE	DATE	MODIFICATION	DES.																																																																																																																																																																																																																																																																																														

MARK	FOLIO	DESCRIPTION	Qty	REFERENCE	CODE ECAT-ID	MANUFACTURER	LISTING
ETH_HMI		METALIC RJ45 CONNECTOR	2	J00026A5001	CON00035	TELEGARTNER	FI
ETH_UAC		METALIC RJ45 CONNECTOR	2	J00026A5001	CON00035	TELEGARTNER	FI
SX1	014	EUROPEAN SOCKET 2P+GND IP66	1	53911	PRI00002	LEGRAND	FI
EV00	015	PRESSURE ELECTROVALVE + FILTER	1	AC30A-QAS111	FPF00057	SMC	FI
DTS1	016	RE2 / MAGNETIC SAFETY SWITCH	1	1059511	SEN00569	SICK	FI
	016	RE2 / MAGNETIC SAFETY SWITCH MOUNTING	2	1060291	SEN00570	SICK	FI
DTS2	016	RE2 / MAGNETIC SAFETY SWITCH	1	1059511	SEN00569	SICK	FI
	016	RE2 / MAGNETIC SAFETY SWITCH MOUNTING	2	1060291	SEN00570	SICK	FI
DTS3	017	RE2 / MAGNETIC SAFETY SWITCH	1	1059511	SEN00569	SICK	FI
	017	RE2 / MAGNETIC SAFETY SWITCH MOUNTING	2	1060291	SEN00570	SICK	FI
DTS4	017	RE2 / MAGNETIC SAFETY SWITCH	1	1059511	SEN00569	SICK	FI
	017	RE2 / MAGNETIC SAFETY SWITCH MOUNTING	2	1060291	SEN00570	SICK	FI
DTS5	017	RE2 / MAGNETIC SAFETY SWITCH	1	1059511	SEN00569	SICK	FI
	017	RE2 / MAGNETIC SAFETY SWITCH MOUNTING	2	1060291	SEN00570	SICK	FI
DTS6	017	RE2 / MAGNETIC SAFETY SWITCH	1	1059511	SEN00569	SICK	FI
	017	RE2 / MAGNETIC SAFETY SWITCH MOUNTING	2	1060291	SEN00570	SICK	FI
EV30	025	SENSOR CABLES / ACTUATOR CABLES SAC-3P- 5 0-PVC/ C-1L-Z	1	1439528	CBL00003	PHOENIX CONTACT	FI
	025	5/2 SOLENOID VALVE	1	CPE18-M1H-5L-1/4	EVV00010	FESTO	FI
SL01	041	7-COLORS RGB General Purpose Indicator	1	DK-K50L2RGB7Q	PRI00166	BANNER	FI
	041	MOUNTING BASE FOR 7-COLORS INDICATOR	1	SA-E12M30C	PRI00169	BANNER	FI
	041	ADAPTER FOR 7-COLORS INDICATOR	1	SA-M30TE12C	PRI00167	BANNER	FI
	041	SS PIPE 300mm FOR 7-COLORS INDICATOR	1	SOP-E12-300SS	PRI00168	BANNER	FI
EV31	049	SENSOR CABLES / ACTUATOR CABLES SAC-3P- 5 0-PVC/ C-1L-Z	1	1439528	CBL00003	PHOENIX CONTACT	FI
	049	5/2 SOLENOID VALVE	1	CPE18-M1H-5L-1/4	EVV00010	FESTO	FI
H210	050	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	050	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LG RYPQ	BPV00220	BANNER	FI
H211	050	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	050	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LG RYPQ	BPV00220	BANNER	FI
H212	050	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	050	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LG RYPQ	BPV00220	BANNER	FI
H213	050	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	050	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LG RYPQ	BPV00220	BANNER	FI
H214	050	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI

(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com	DESSINE :	DB	V14	23/09/2024	MODIFICATION SYNOPTIQUE RESEAU	DB	Dossier n° : COOP LAR	SMXA-C014221 Components List	FOLIO 146/163
	VERIFIE :	JT	V12	31/07/2024	MODIF SOUFFLAGE	AV			
	DATE D E CREATION :	12/07/2024	V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25	DB			
			INDICE	DATE	MODIFICATION	DES.			
									see3000 version 4.80

MARK	FOLIO	DESCRIPTION	Qty	REFERENCE	CODE ECAT-ID	MANUFACTURER	LISTING
	050	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LGrypQ	BPV00220	BANNER	FI
H215	050	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	050	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LGrypQ	BPV00220	BANNER	FI
H220	050	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	050	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LGrypQ	BPV00220	BANNER	FI
H221	051	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	051	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LGrypQ	BPV00220	BANNER	FI
H222	051	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	051	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LGrypQ	BPV00220	BANNER	FI
H223	051	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	051	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LGrypQ	BPV00220	BANNER	FI
H224	051	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	051	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LGrypQ	BPV00220	BANNER	FI
H225	051	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	051	EZ-LIGHT® S18L General Purpose Indicators 24VDC	1	S18LGrypQ	BPV00220	BANNER	FI
DT40	059	CABLE M12 4poles ELBOW L=10m PP	1	EVF005	CBL00440	IFM	FI
	059	INDUCTIVE SENSOR Ø18 NO	1	IGT203	SEN00024	IFM	FI
DTLED1	059	LIMIT SWITCH XCMN - TH.PLASTIC ROLLER LEVER PLUNG. HOR - 1NC+1NO - SNAP - 1 M	1	XCMN2121L1	SEN00118	SCHNEIDER ELECTRIC	FI
DTLED2	059	LIMIT SWITCH XCMN - TH.PLASTIC ROLLER LEVER PLUNG. HOR - 1NC+1NO - SNAP - 1 M	1	XCMN2121L1	SEN00118	SCHNEIDER ELECTRIC	FI
DT20	060	PRISMATIC REFLECTOR; Ø 35 mm	1	E20954	SEN00591	IFM	FI
	060	CABLE M12 4poles STRAIGHT L=10m	1	EVF002	CBL00464	IFM	FI
	060	RETRO-REFLECTIVE SENSOR; PNP; CABLE WITH CONNECTOR	1	O6P301	SEN00603	IFM	FI
DT21	060	PRISMATIC REFLECTOR; Ø 35 mm	1	E20954	SEN00591	IFM	FI
	060	CABLE M12 4poles STRAIGHT L=10m	1	EVF002	CBL00464	IFM	FI
	060	RETRO-REFLECTIVE SENSOR; PNP; CABLE WITH CONNECTOR	1	O6P301	SEN00603	IFM	FI
DT22	060	PRISMATIC REFLECTOR; Ø 35 mm	1	E20954	SEN00591	IFM	FI
	060	CABLE M12 4poles STRAIGHT L=10m	1	EVF002	CBL00464	IFM	FI
	060	RETRO-REFLECTIVE SENSOR; PNP; CABLE WITH CONNECTOR	1	O6P301	SEN00603	IFM	FI
DT23	060	PRISMATIC REFLECTOR; Ø 35 mm	1	E20954	SEN00591	IFM	FI
	060	CABLE M12 4poles STRAIGHT L=10m	1	EVF002	CBL00464	IFM	FI
	060	RETRO-REFLECTIVE SENSOR; PNP; CABLE WITH CONNECTOR	1	O6P301	SEN00603	IFM	FI
DT24	060	PRISMATIC REFLECTOR; Ø 35 mm	1	E20954	SEN00591	IFM	FI
	060	CABLE M12 4poles STRAIGHT L=10m	1	EVF002	CBL00464	IFM	FI

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20

(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com	DESSINE :	DB						SMXA-C014221	FOLIO
	VERIFIE :	JT							150/163
	DATE D E CREATION :	12/07/2024	V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25	DB	Dossier n° : COOP LAR		
			INDICE	DATE	MODIFICATION	DES.		se e3000 version 4.8	

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
REPERE		FOLIO	DESIGNATION							Qte	REFERENCE	CODE ECAT-ID	FABRICANT			Nomenclature				
M05			CABLE BLINDE PAR TRESSE							1	YSLCY 4G1.5MM²	CBL00027	CONTROLFLEX			CABLE				
M06			CABLE BLINDE PAR TRESSE							1	INTERROLL	CBL	INTERROLL			CABLE				
M07			CABLE BLINDE PAR TRESSE							1	YSLCY 4G1.5MM²	CBL00027	CONTROLFLEX			CABLE				
M08-1			CABLE BLINDE PAR TRESSE							1	YSLCY 7G1.5MM²		CONTROLFLEX							
M08-2			CABLE BLINDE PAR TRESSE							1	YSLCY 7G1.5MM²		CONTROLFLEX							
M09-1			CABLE BLINDE PAR TRESSE							1	YSLCY 7G1.5MM²		CONTROLFLEX							
M09-2			CABLE BLINDE PAR TRESSE							1	YSLCY 7G1.5MM²		CONTROLFLEX							
PS01			CABLE CAPTEUR COUDE M12							1	EVF005	CBL00440	IFM			CABLE				
SL01			CABLE CAPTEUR DROIT-M12-5P							1	EVF011	CBL00555	IFM			CABLE				
SUB-D UAC200-1-A			CABLE-D-37SUB/M/OE/0.25/S/3M							1	2926616	CON00400	PHOENIX CONTACT			CABLE				
SUB-D UAC200-2-A			CABLE-D-37SUB/M/OE/0.25/S/3M							1	2926616	CON00400	PHOENIX CONTACT			CABLE				
SUB-D UAC300-1-A			CABLE-D-37SUB/M/OE/0.25/S/3M							1	2926616	CON00400	PHOENIX CONTACT			CABLE				
SUB-D UAC300-2-A			CABLE-D-37SUB/M/OE/0.25/S/3M							1	2926616	CON00400	PHOENIX CONTACT			CABLE				
SUB-D_UAC100-1-A			CABLE-D-37SUB/M/OE/0.25/S/3M							1	2926616	CON00400	PHOENIX CONTACT			CABLE				
SUB-D_UAC100-2-A			CABLE-D-37SUB/M/OE/0.25/S/3M							1	2926616	CON00400	PHOENIX CONTACT			CABLE				
USB_UVA111			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
USB_UVA112			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
USB_UVA121			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
USB_UVA122			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
USB_UVA231			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
USB_UVA232			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
USB_UVA241			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
USB_UVA242			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
USB_UVA351			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
USB_UVA352			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
USB_UVA361			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
USB_UVA362			cable USB 3.0							1	2000033241	CBL00557	BASLER			CABLE				
UVA111			I/O power cables							1	2000034086	CBL00556	BASLER			CABLE				
UVA112			I/O power cables							1	2000034086	CBL00556	BASLER			CABLE				
UVA121			I/O power cables							1	2000034086	CBL00556	BASLER			CABLE				
UVA122			I/O power cables							1	2000034086	CBL00556	BASLER			CABLE				
UVA231			I/O power cables							1	2000034086	CBL00556	BASLER			CABLE				
UVA232			I/O power cables							1	2000034086	CBL00556	BASLER			CABLE				
(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com			DESSINE : DB						Dossier n° : COOP LAR				SMXA-C014221 Liste des câbles					FOLIO 155/163 see3000 version 4.00		
			VERIFIE : JT		V12	31/07/2024	MODIF SOUFFLAGE													AV
			DATE DE CREATION : 12/07/2024		V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25													DB
					INDICE	DATE	MODIFICATION		DES.											

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----

[illegible]

(33).2.98.85.31.36 (33).2.98.85.31.38 ecatid.service@ceva.com	DESSINE :	DB				SMXA-C014221	FOLIO	
	VERIFIE :							156/163
		V12	31/07/2024	MODIF SOUFFLAGE	AV			
		V11	11/07/2024	AJOUT ALIM B10 & BORNIER X15-X25	DB			
	DATE D'E CREATION :	12/07/2024	INDICE	DATE	MODIFICATION			


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

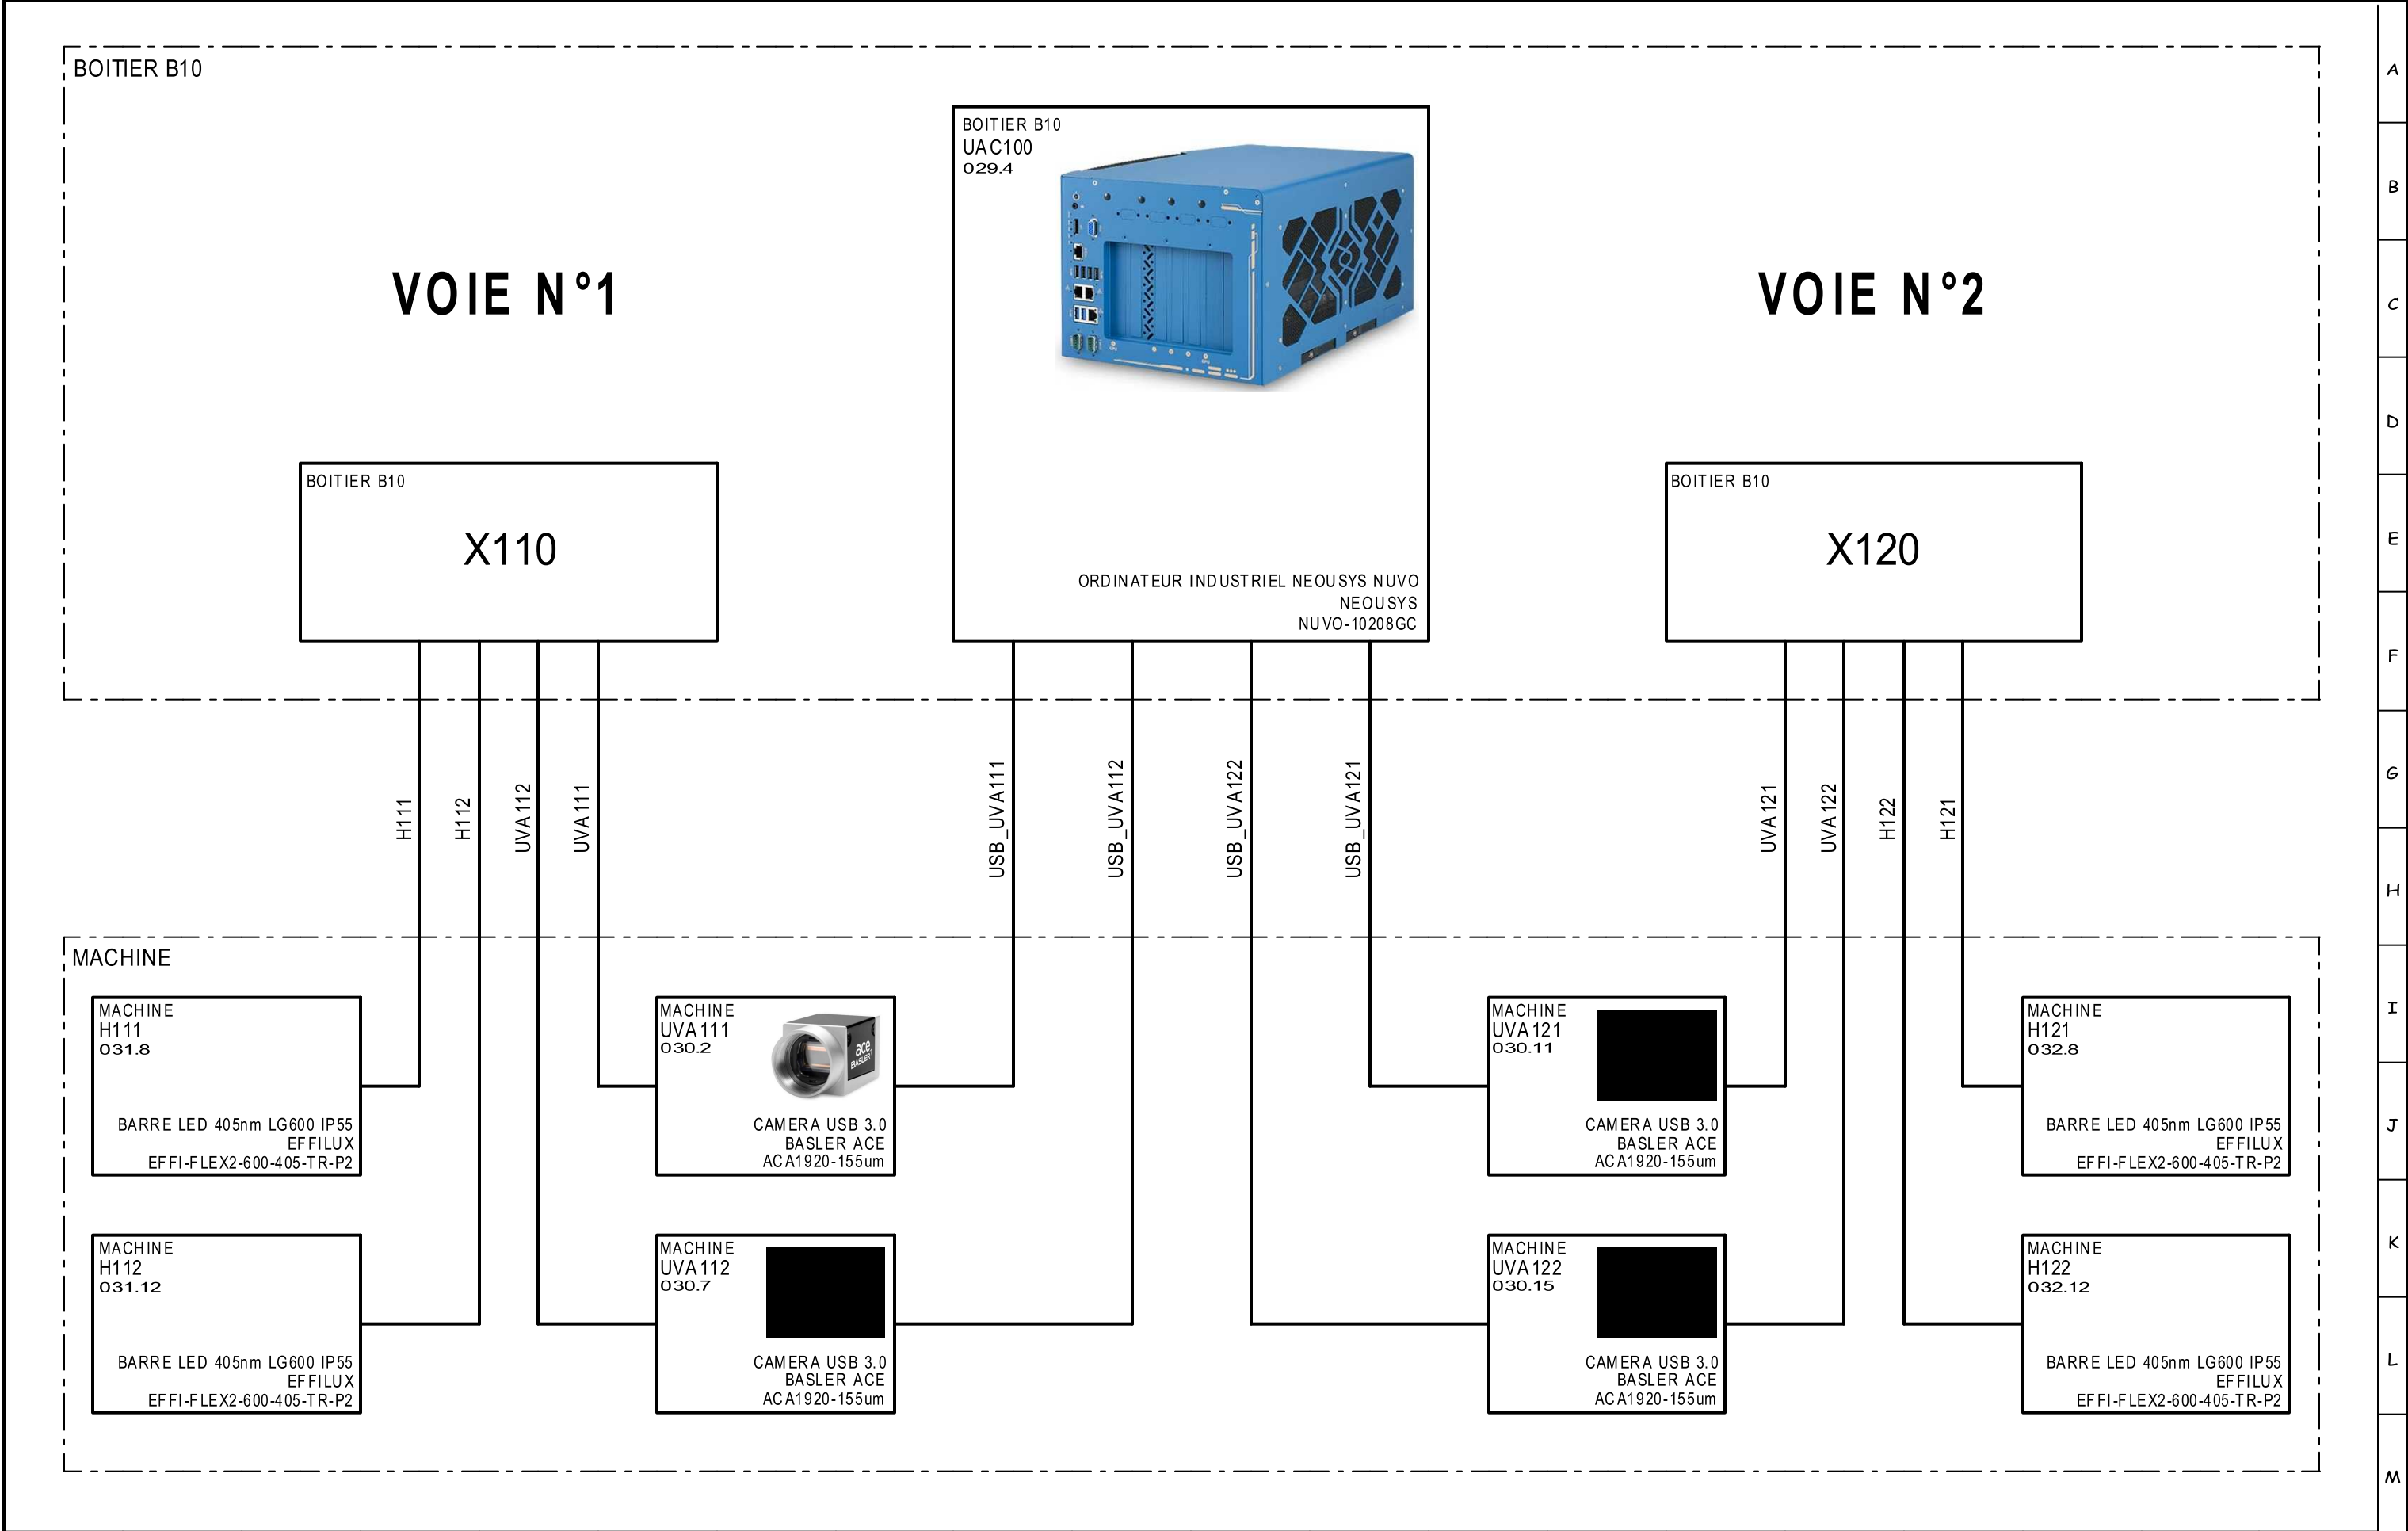


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 17/06/2024		Synoptique câblage UVA/UAC				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB										ARTICLE : SMXA-C014221				INDEX : V11	
			E-mail : ecatid.service@ceva.com				ENVIRONNEMENT: Version 4.49.F - 23/09/2020								FOLIO : 157/163					




THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

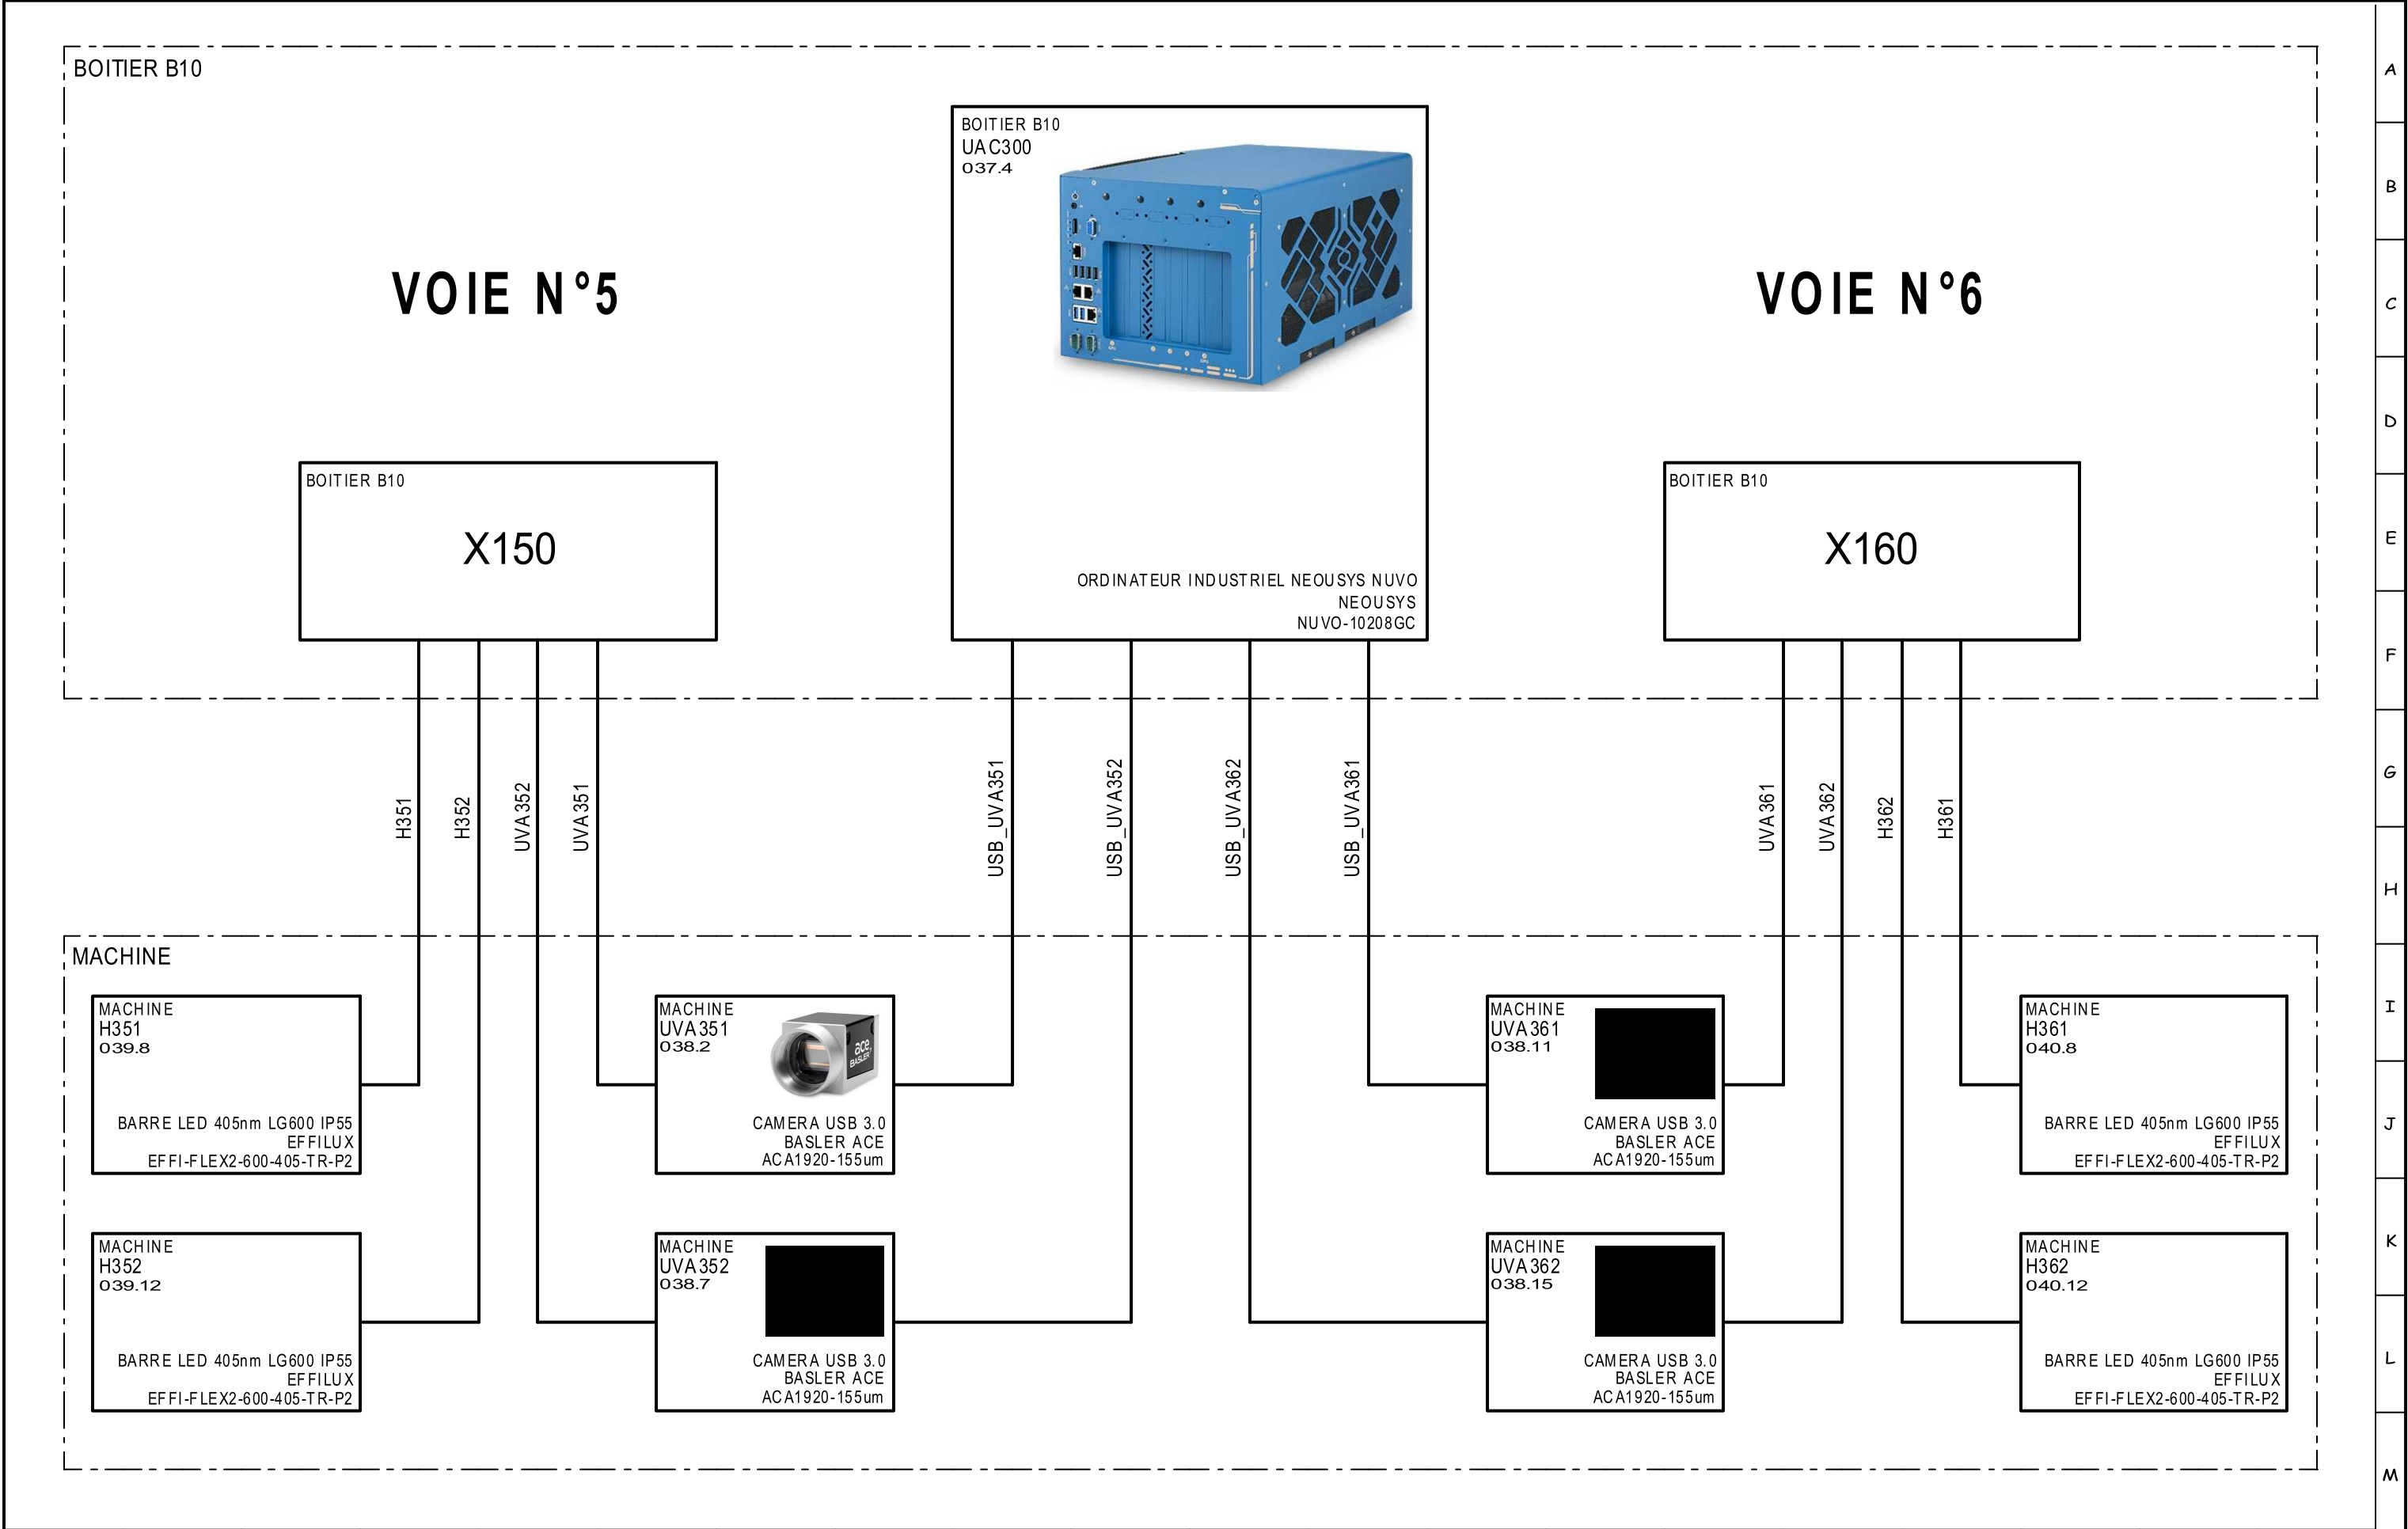


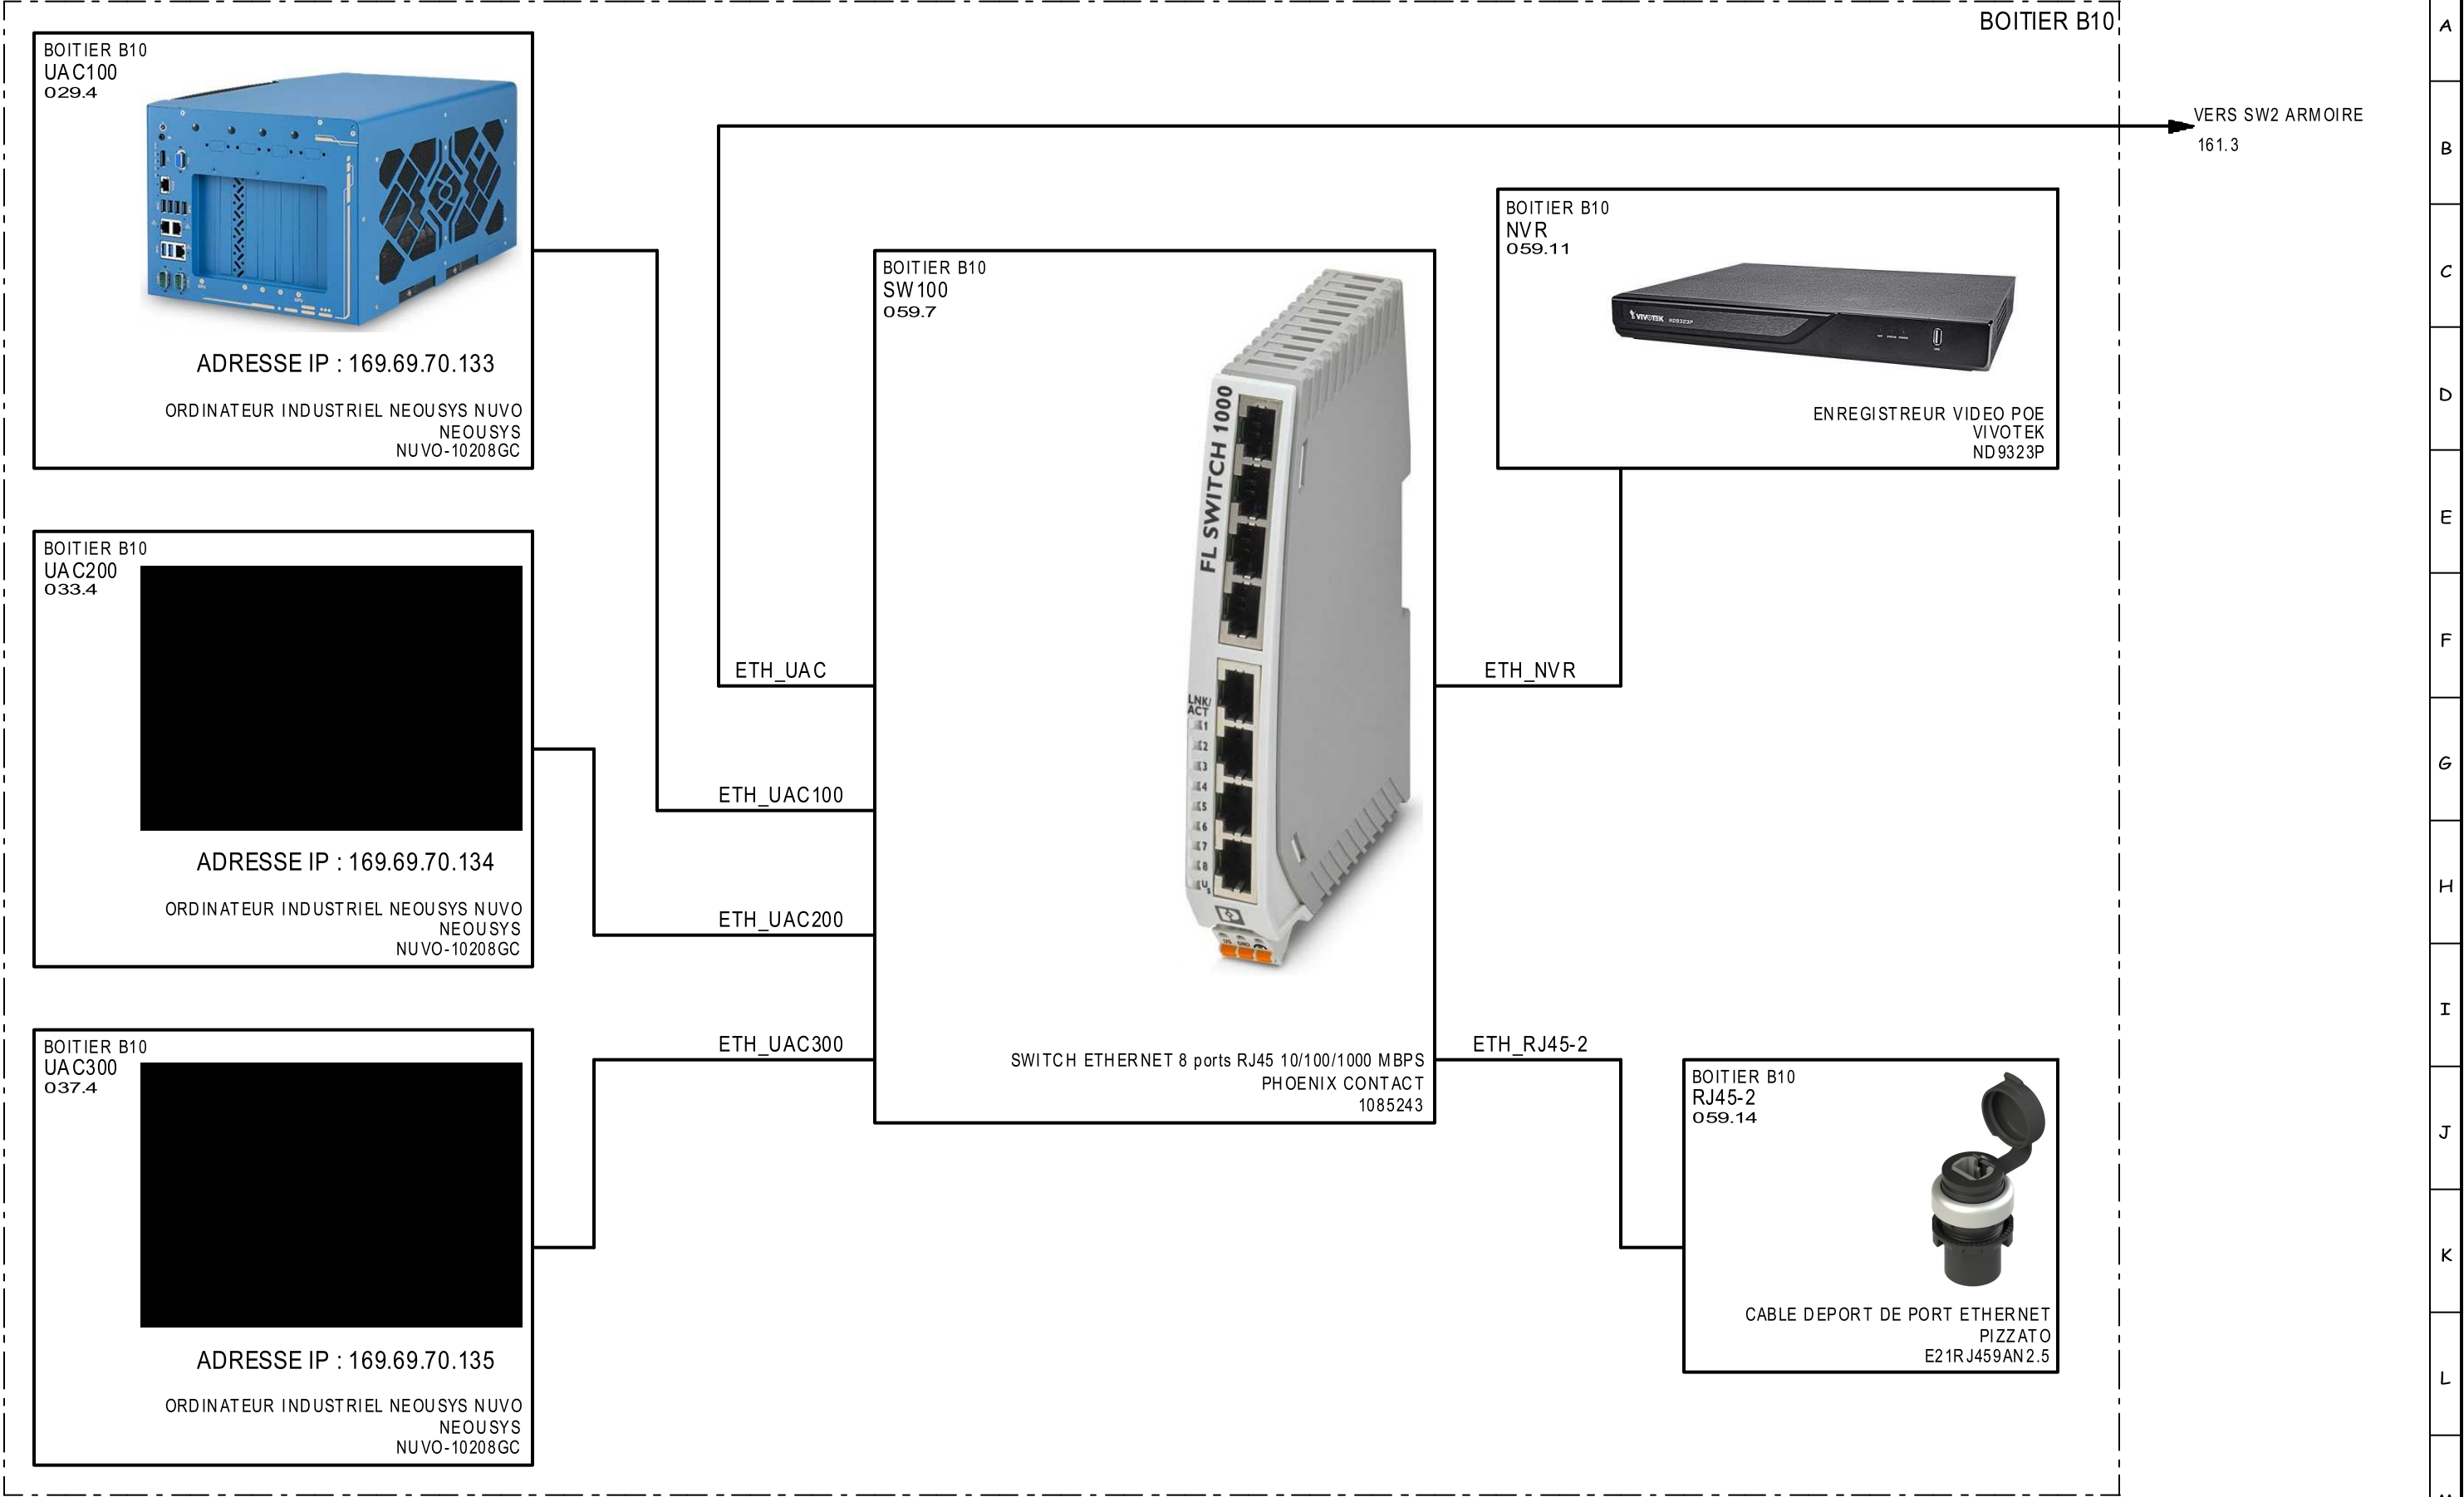

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 17/06/2024		Synoptique câblage réseau BOITIER B10				 Ecat-iD Campus			CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB		ARTICLE : SMXA-C014221								INDEX : V14				
			E-mail :ecatid.service@ceva.com				ENVIRONNEMENT:Version 4.49.F - 23/09/2020							FOLIO : 160/163					

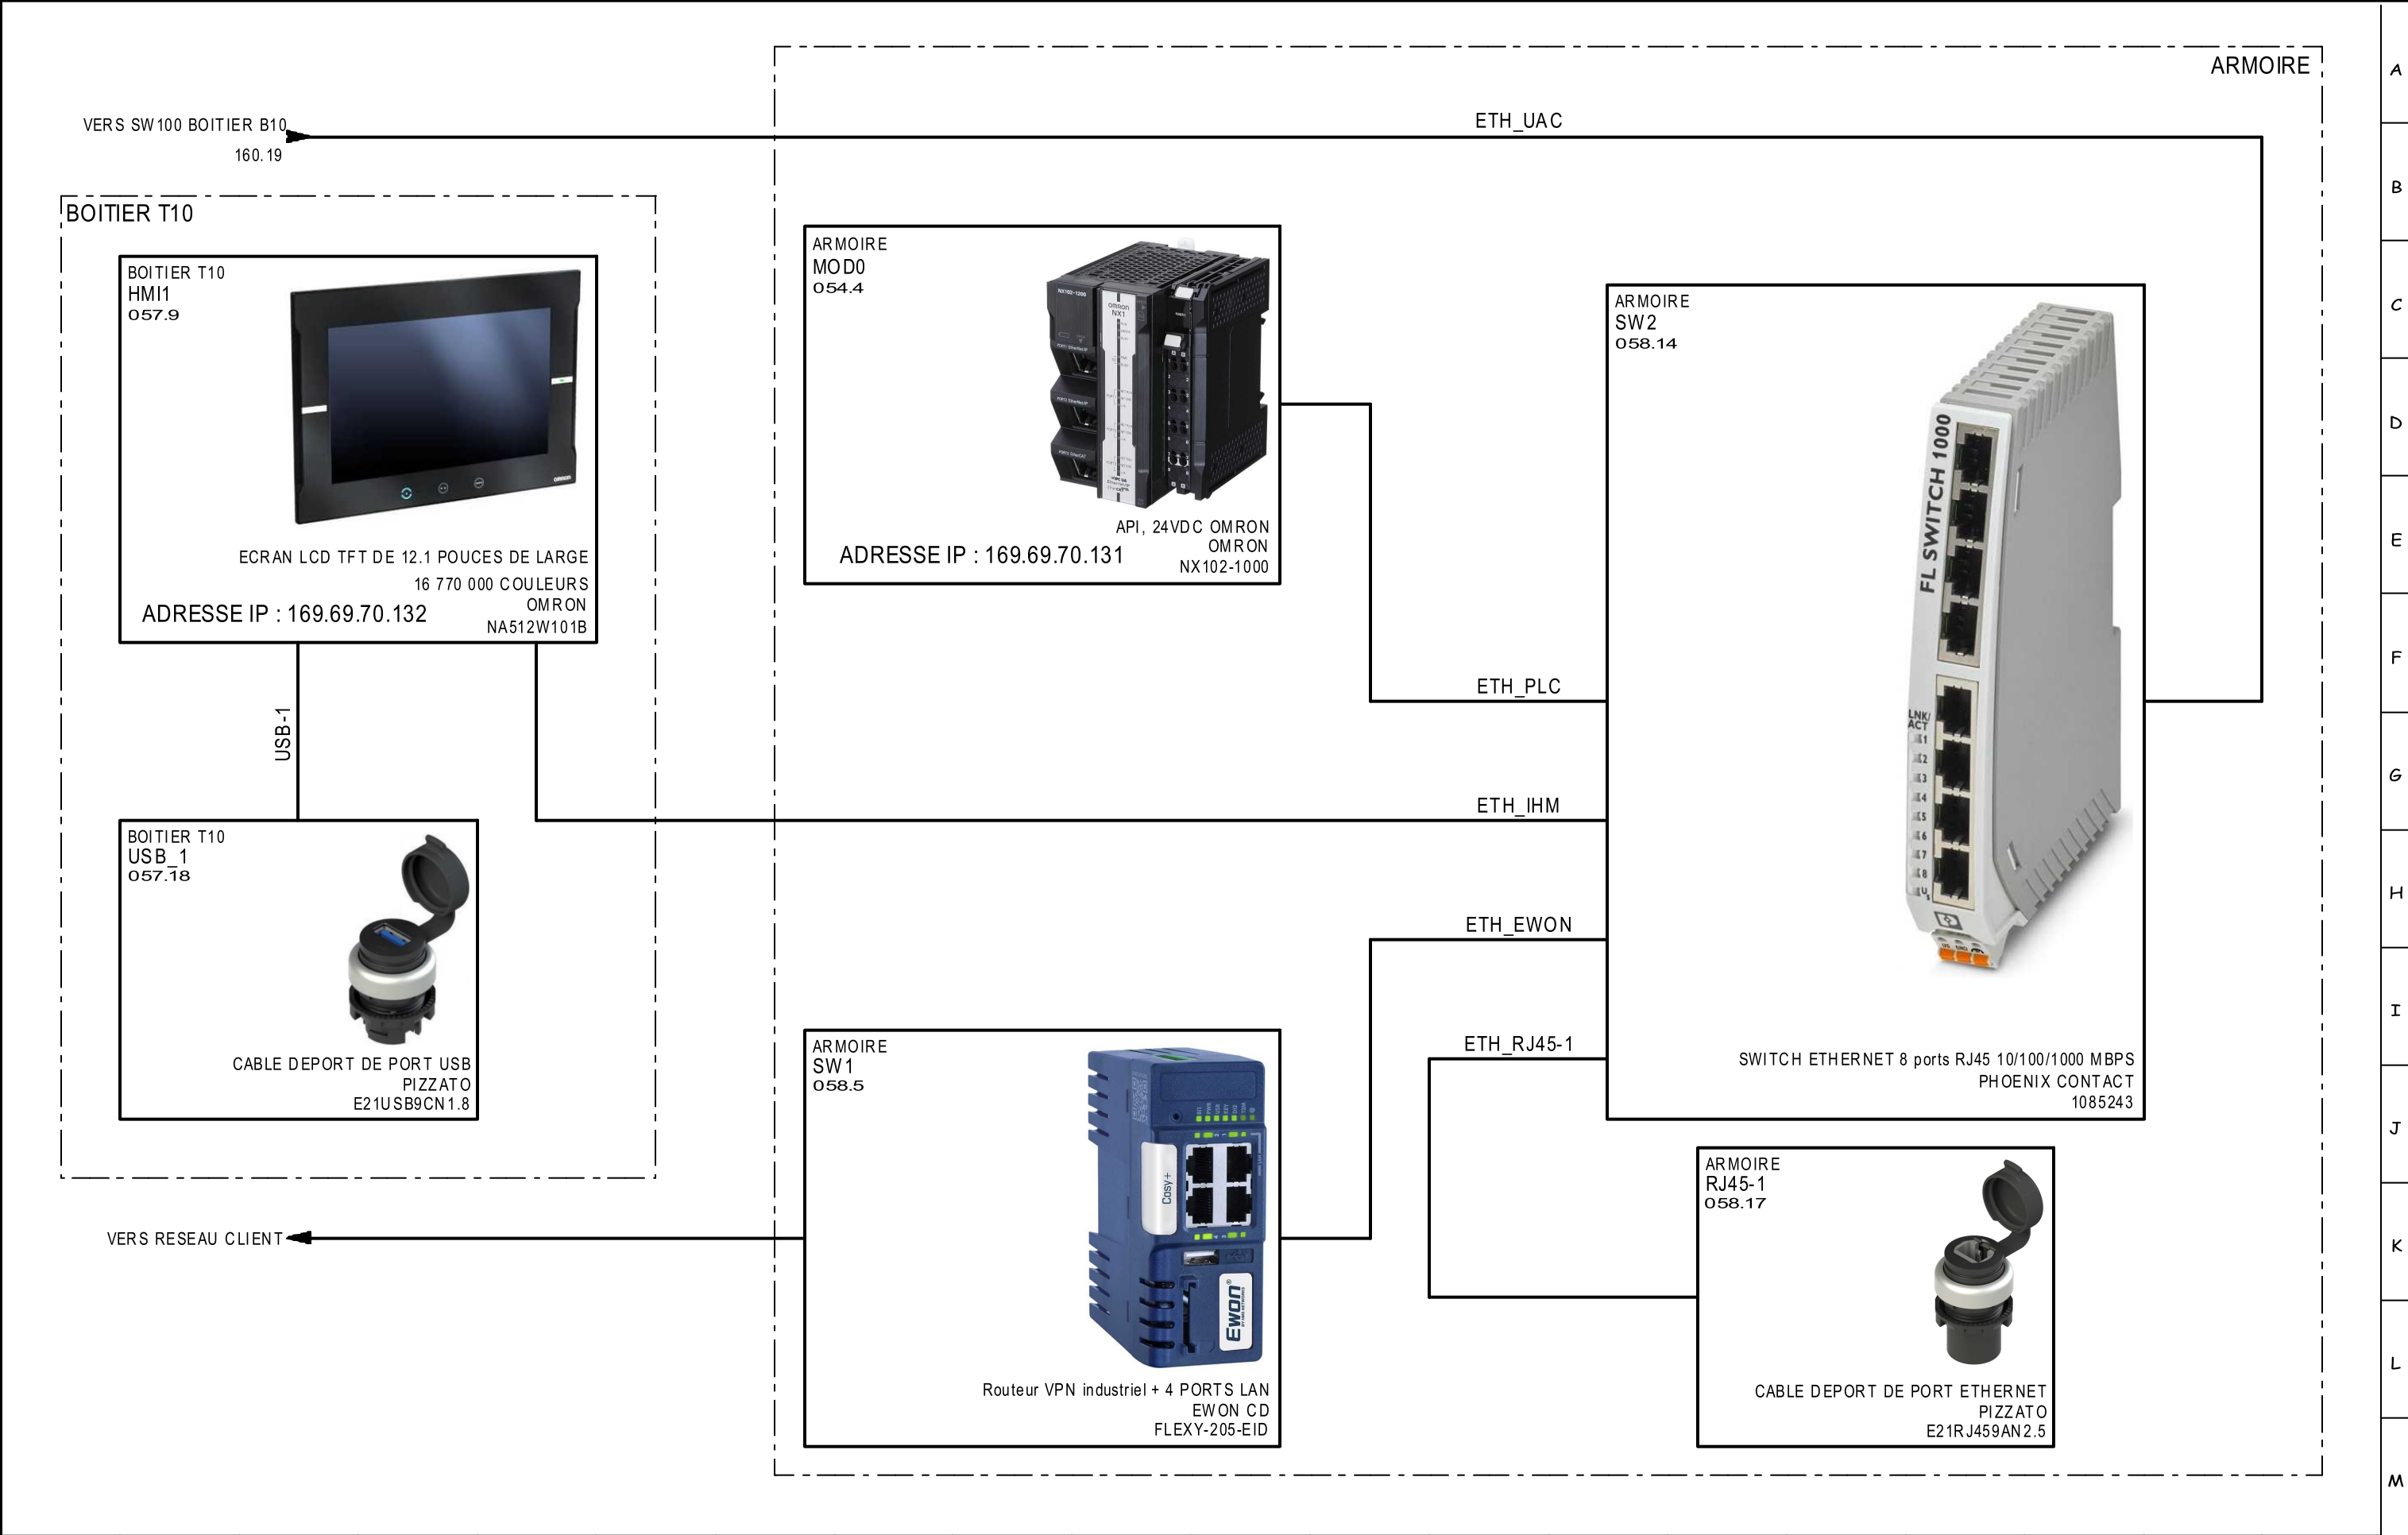


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 17/06/2024		Synoptique câblage réseau ARMOIRE et B				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB														INDEX : V14	
			E-mail :ecatid.service@ceva.com						ENVIRONNEMENT:Version 4.49.F - 23/09/2020						ARTICLE : SMXA-C014221				FOLIO : 161/163	

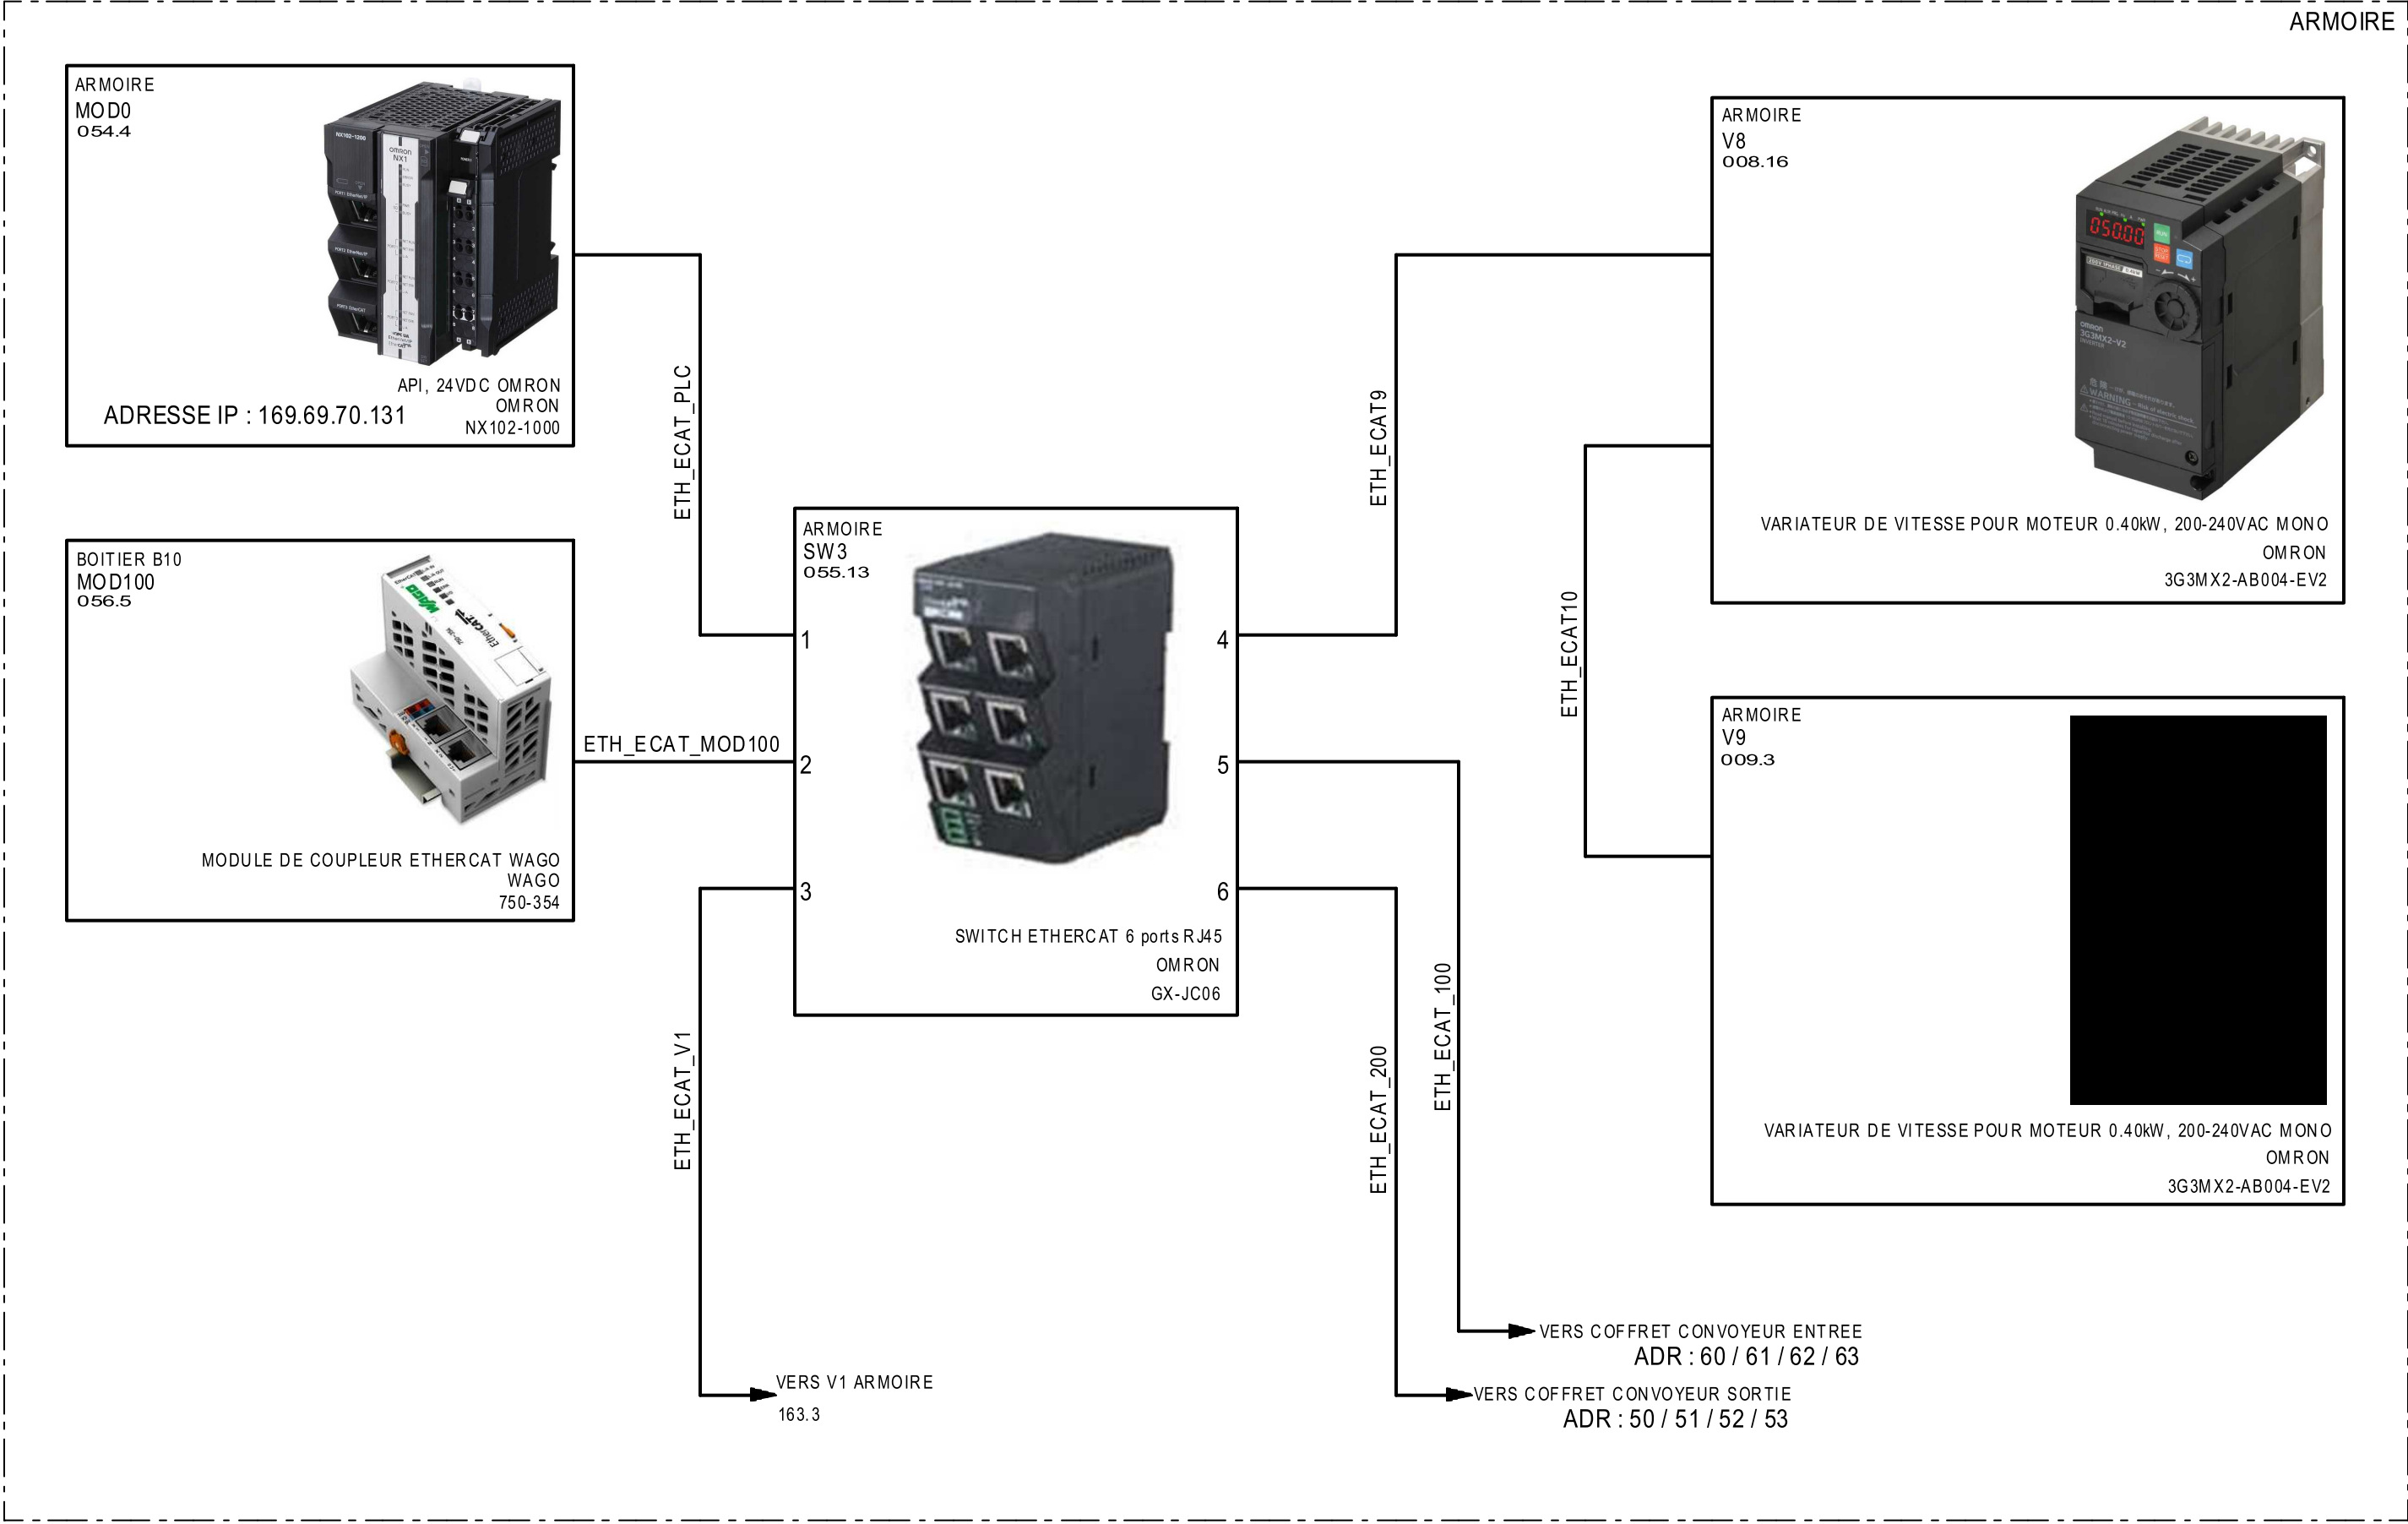

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 23/09/2024		Synoptique câblage réseau ETHERCAT 1/2					 Ecat-iD Campus			CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB										ARTICLE : SMXA-C014221		INDEX : V14			
			E-mail :ecatid.service@ceva.com		ENVIRONNEMENT:Version 4.49.F - 23/09/2020					FOLIO : 162/163										

SW3 ARMOIRE
162.7

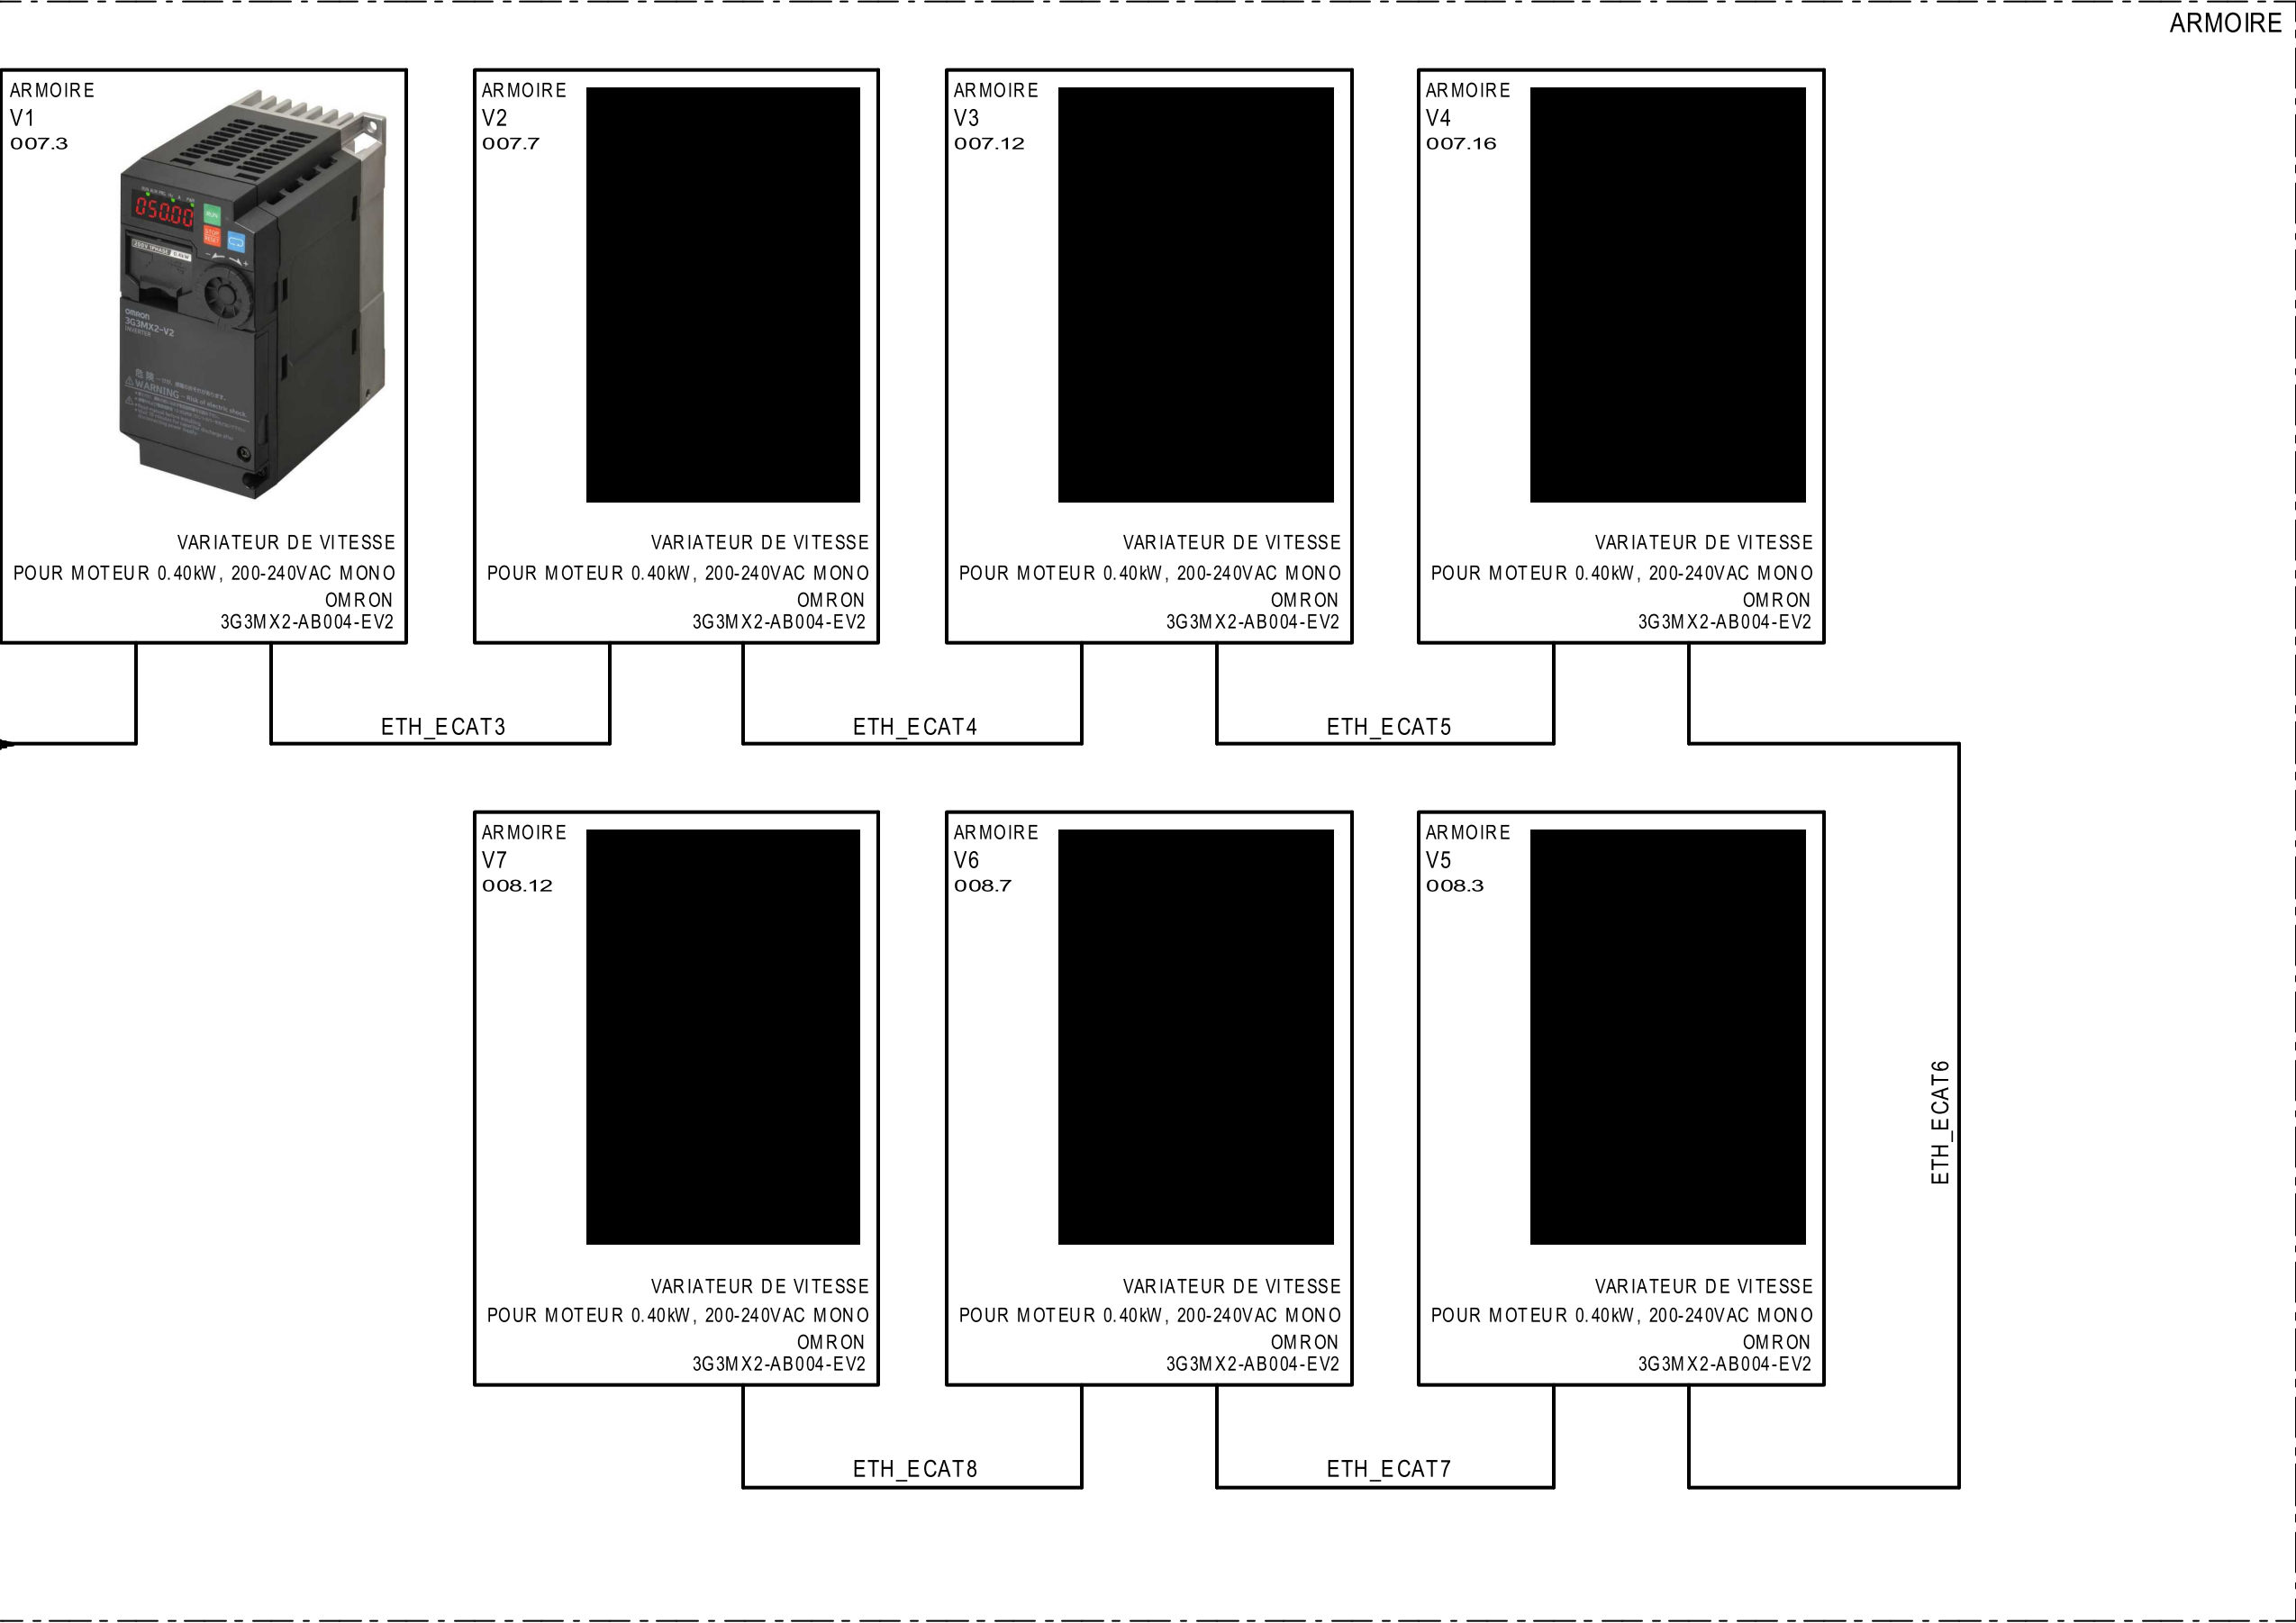

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID ZI de KERIEL 29800 PLOUEDERN – FRANCE –			Tél : (33).2.98.85.31.36		Date of creation : 23/09/2024		Synoptique câblage réseau ETHERCAT 2/2				 Ecat-iD Campus				CONTRACT : C01422		CUSTOMER : COOP LAR		COUNTRY : BRESIL	
			Fax : (33).2.98.85.31.38		Designed by : DB										ARTICLE : SMXA-C014221		INDEX : V14			
			E-mail :ecatid.service@ceva.com		ENVIRONNEMENT:Version 4.49.F - 23/09/2020				FOLIO : 163/163											