

-ARMOIRE

Panel tag : X

Panel material : INOX

Panel size : 1000x750x300

Panel brand : MP GAMMA

Junction boxes material : INOX

Equipments used

Buttons brand : SCHNEIDER

Button language : ENGLISH

PLC brand : /

IHM brand : /

Wiring

Icc breaking capacity : 1.2kA

Shielded cables on Inverters

Wire colors :

+24Vdc = Blue

0Vdc = White/Blue

External command = Orange

110Vac = Brown

400Vac = Black

480-600Vac = Black

Neutral = White

Ground = Yellow/Green

Estimated electrical characteristics

Total nominal power (kW) : 1.48

Total nominal current (Amps) : 4.2

Main circuit breaker advisable (Customer)

Breaker grade (Amps) : 10

Breaker curve (type): D

Minimum section power supply cable requirement (Customer) :

400V 3P+N+T

Wire section (mm²): 14AWG

Cable type (Wires number): ÖFLEX TRAY II 5G14AWG H07 RNF / U1000 R2V

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID. IT IS PROVIDED ON A CONFIDENTIAL BASIS.
IT MUST NOT BE REPRODUCED OR COMMUNICATED TO THIRD PARTIES WITHOUT OUR WRITTEN AUTHORISATION.

V3	MAJ - Modifications avant certification UL	08/07/2025	MB		
V2	MAJ - Modifications suivant pré-certification UL	11/06/2025	MB	AV	AV
V1	CREATION	29/10/2024	AV	JT	JT
INDEX	MODIFICATION	DATE	DESIGNED BY	VERIFIED BY	APPROVED BY

COFFRET CONVOYEUR DE SORTIE GENESYS

GENESYS OUTFEED CONVEYOR CABINET

DESIGNED BY : AV

VERIFIED BY : JT

DATE CREATED : 09/10/2024

CUSTOMER :

CONTRACT NO. : C0

PROCESS N° : PMXA_C0

ECAT-ID

Z.I DE KERIEL

29800 PLOUEDERN

FRANCE

Tel : (33).2.98.85.31.36

Fax : (33).2.98.85.31.38

E-mail : ecatid.service@ceva.com

ENVIRONNEMENT IGE-XAO : Elec_IEC V5R2_ECATID Environment for electrical controls and automation systems (according to IEC standard)

FOLIO : 01/23

Ecat-iD Campus

COUNTRY :
USA

DRAWING NUMBER :
SMXA0005-OPT2

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE			Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		LISTE DE FOLIOS FRANCAIS				 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :			COUNTRY : USA	
			Fax : (33).2.98.85.31.38		Designed by : AV		FRENCH FOLIOS LIST								ARTICLE :			INDEX : V3			
			E-mail : ecatic.service@ceva.com		ENVIRONNEMENT : Elec_IEC V5R2_ECATID				SMXA0005-OPT2						FOLIO : 02/23						

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

																				A
																				B
																				C
																				D
																				E
																				F
																				G
																				H
																				I
																				J
																				K
																				L
																				M

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE			Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		LISTE DE FOLIOS FRANCAIS				 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :		COUNTRY : USA	
			Fax : (33).2.98.85.31.38		Designed by : AV		FRENCH FOLIOS LIST								ARTICLE :		INDEX : V3			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT : Elec_IEC V5R2_ECATICID								SMXA0005-OPT2				FOLIO : 03/23	


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE			Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		LISTE DE FOLIOS ANGLAIS				 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :			COUNTRY : USA	
			Fax : (33).2.98.85.31.38		Designed by : AV		ENGLISH FOLIOS LIST								ARTICLE : SMXA0005-OPT2			INDEX : V3			
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT : Elec_IEC V5R2_ECATID								FOLIO : 04/23						

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

																				A
																				B
																				C
																				D
																				E
																				F
																				G
																				H
																				I
																				J
																				K
																				L
																				M

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE			Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		LISTE DE FOLIOS ANGLAIS				 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :		COUNTRY : USA	
			Fax : (33).2.98.85.31.38		Designed by : AV		ENGLISH FOLIOS LIST								ARTICLE : SMXA0005-OPT2		INDEX : V3			
			E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT : Elec_IEC V5R2_ECATICID								05/23					


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

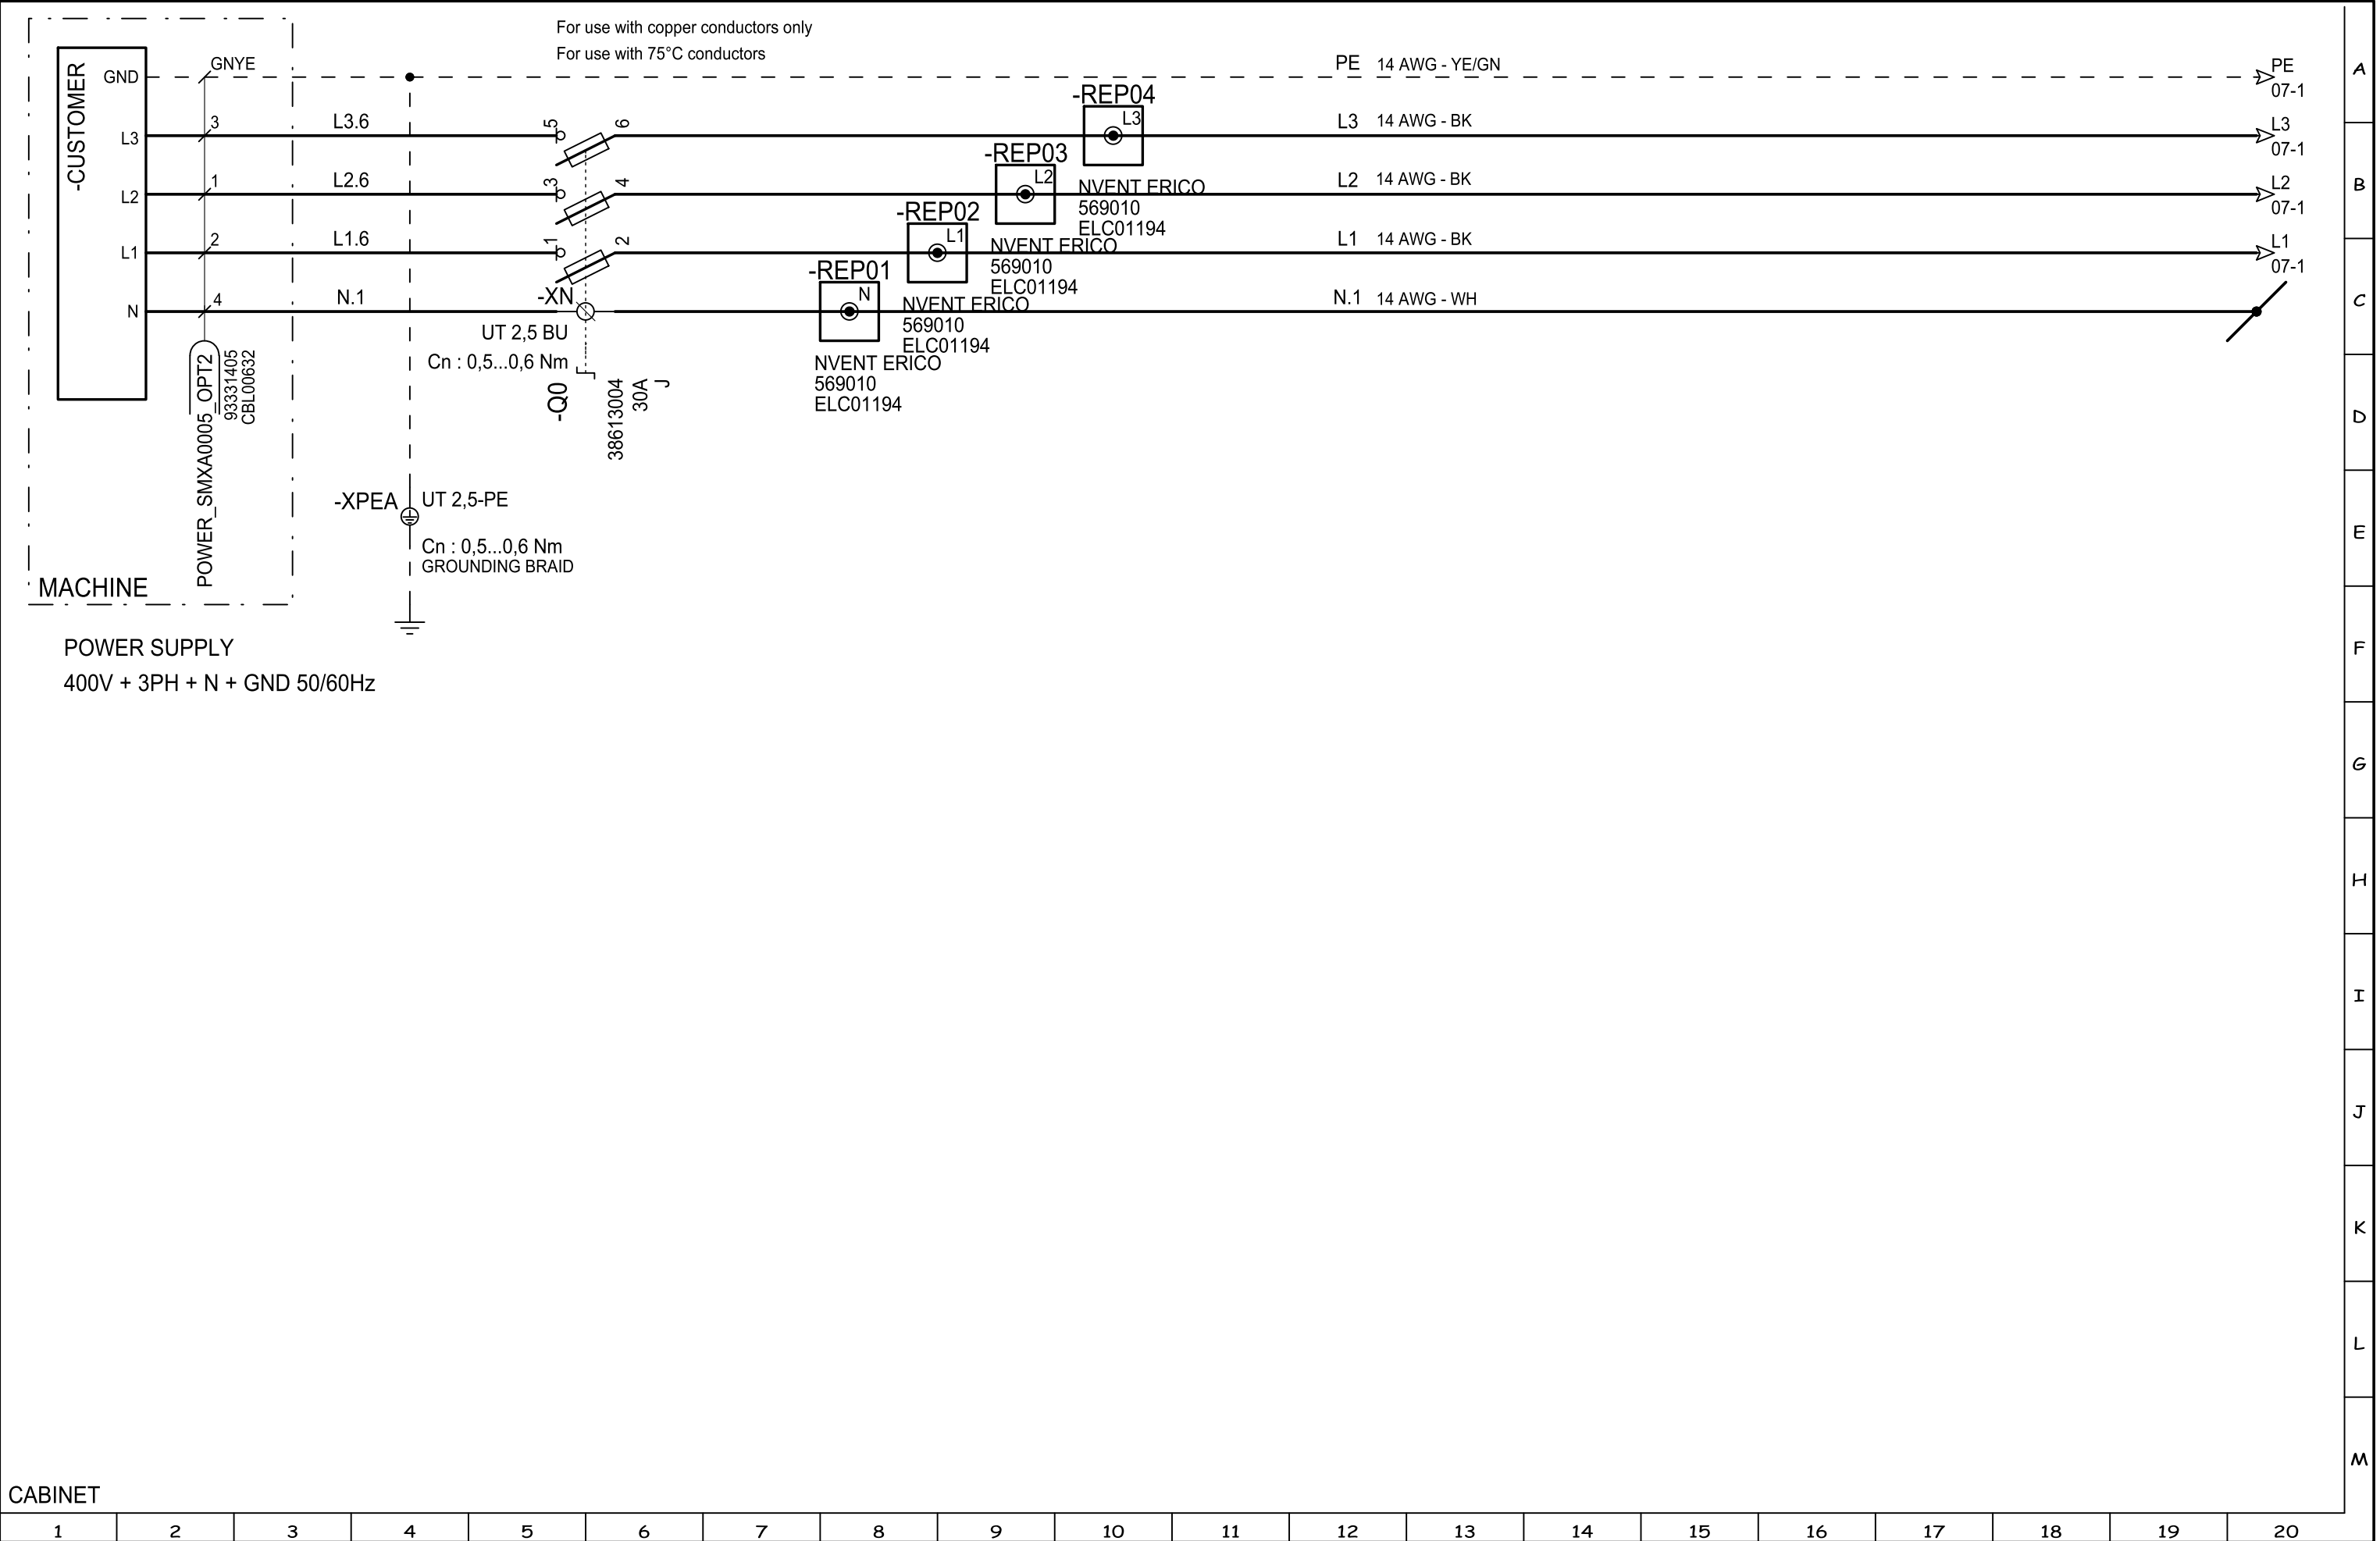

CABINET

ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE	Tél : (33).2.98.85.31.36	Date of creation : 09/10/2024	SCHEMA DE PUISSANCE	 Ecat-iD Campus	CONTRACT : C0	CUSTOMER :	COUNTRY : USA
	Fax : (33).2.98.85.31.38	Designed by : AV	POWER DIAGRAM		ARTICLE :		INDEX : V3
	E-mail : ecatid.service@ceva.com	ENVIRONNEMENT : Elec_IEC V5R2_ECATICID			SMXA0005-OPT2		FOLIO : 06/23

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

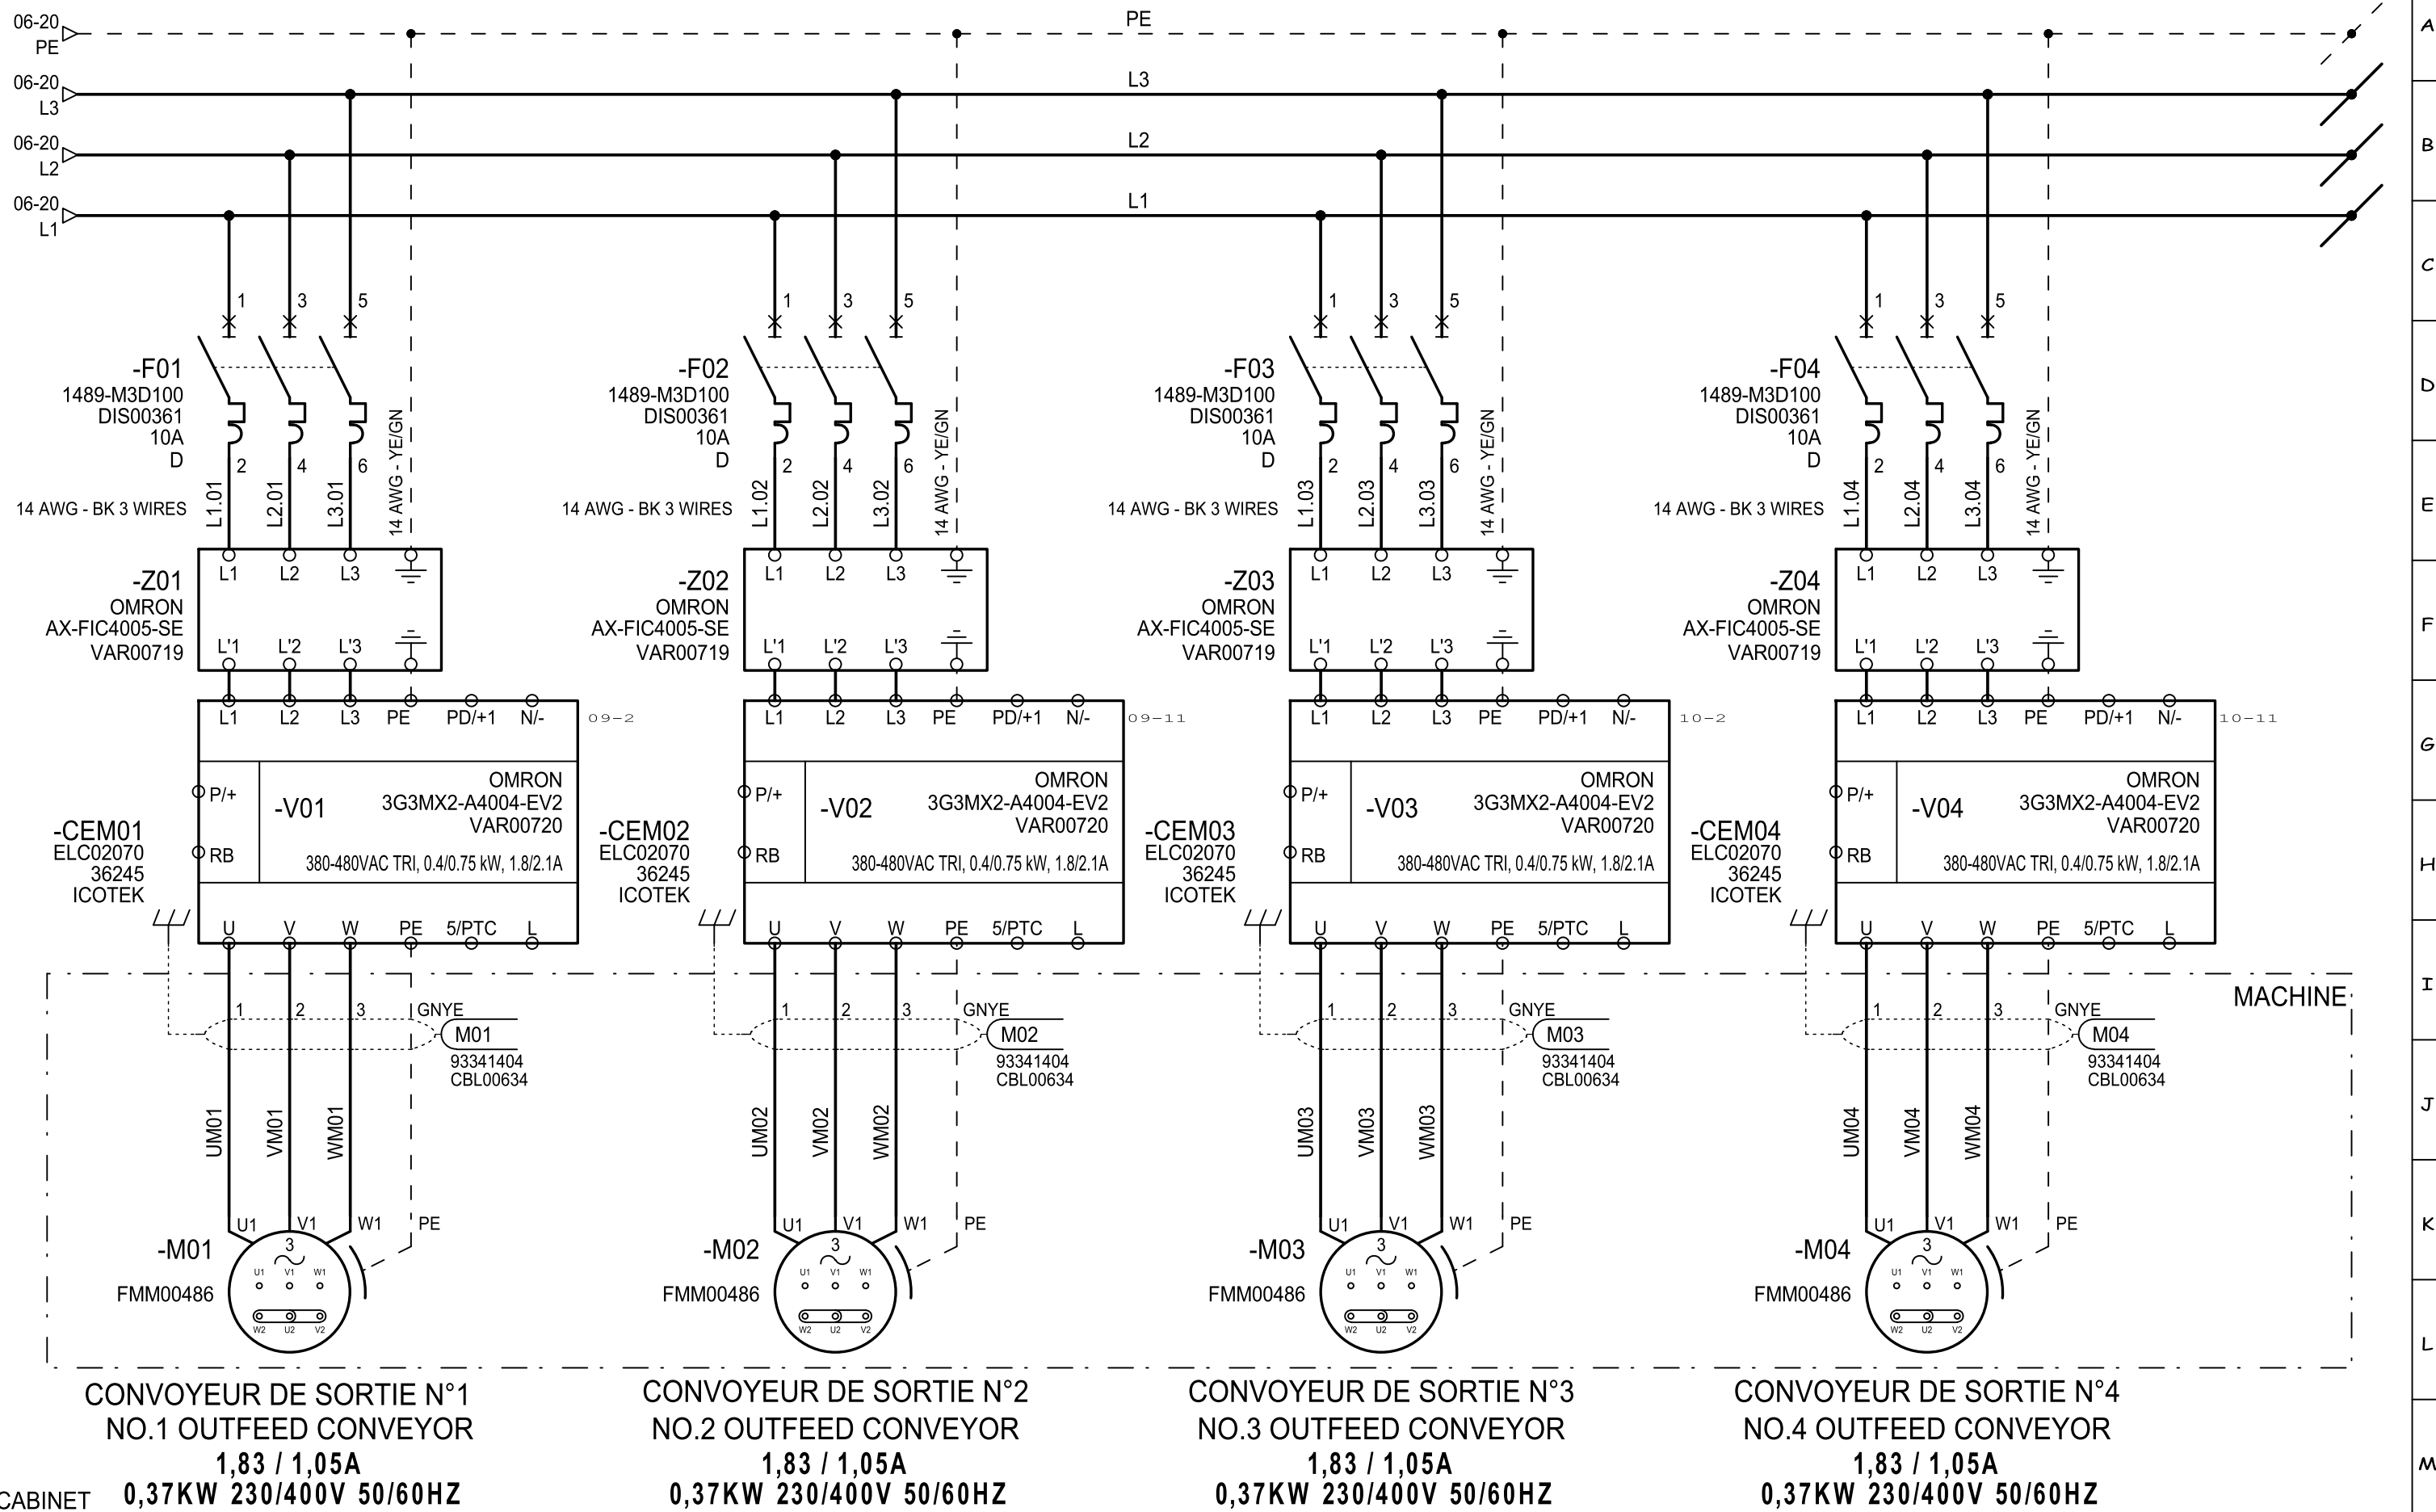

ECAT-ID
Z.I DE KERIEL
29800 PLOUEDERN
FRANCE

Tél : (33).2.98.85.31.36
Fax : (33).2.98.85.31.38
E-mail : ecatid.service@ceva.com

Date of creation :
09/10/2024
Designed by :
AV

SCHEMA DE PUISSANCE
POWER DIAGRAM
ENVIRONNEMENT : Elec_IEC V5R2_ECATID



Ecat-iD Campus

CONTRACT :
C0

CUSTOMER :


ARTICLE :

SMXA0005-OPT2

COUNTRY :
USA

INDEX :
V3

FOLIO :
07/23

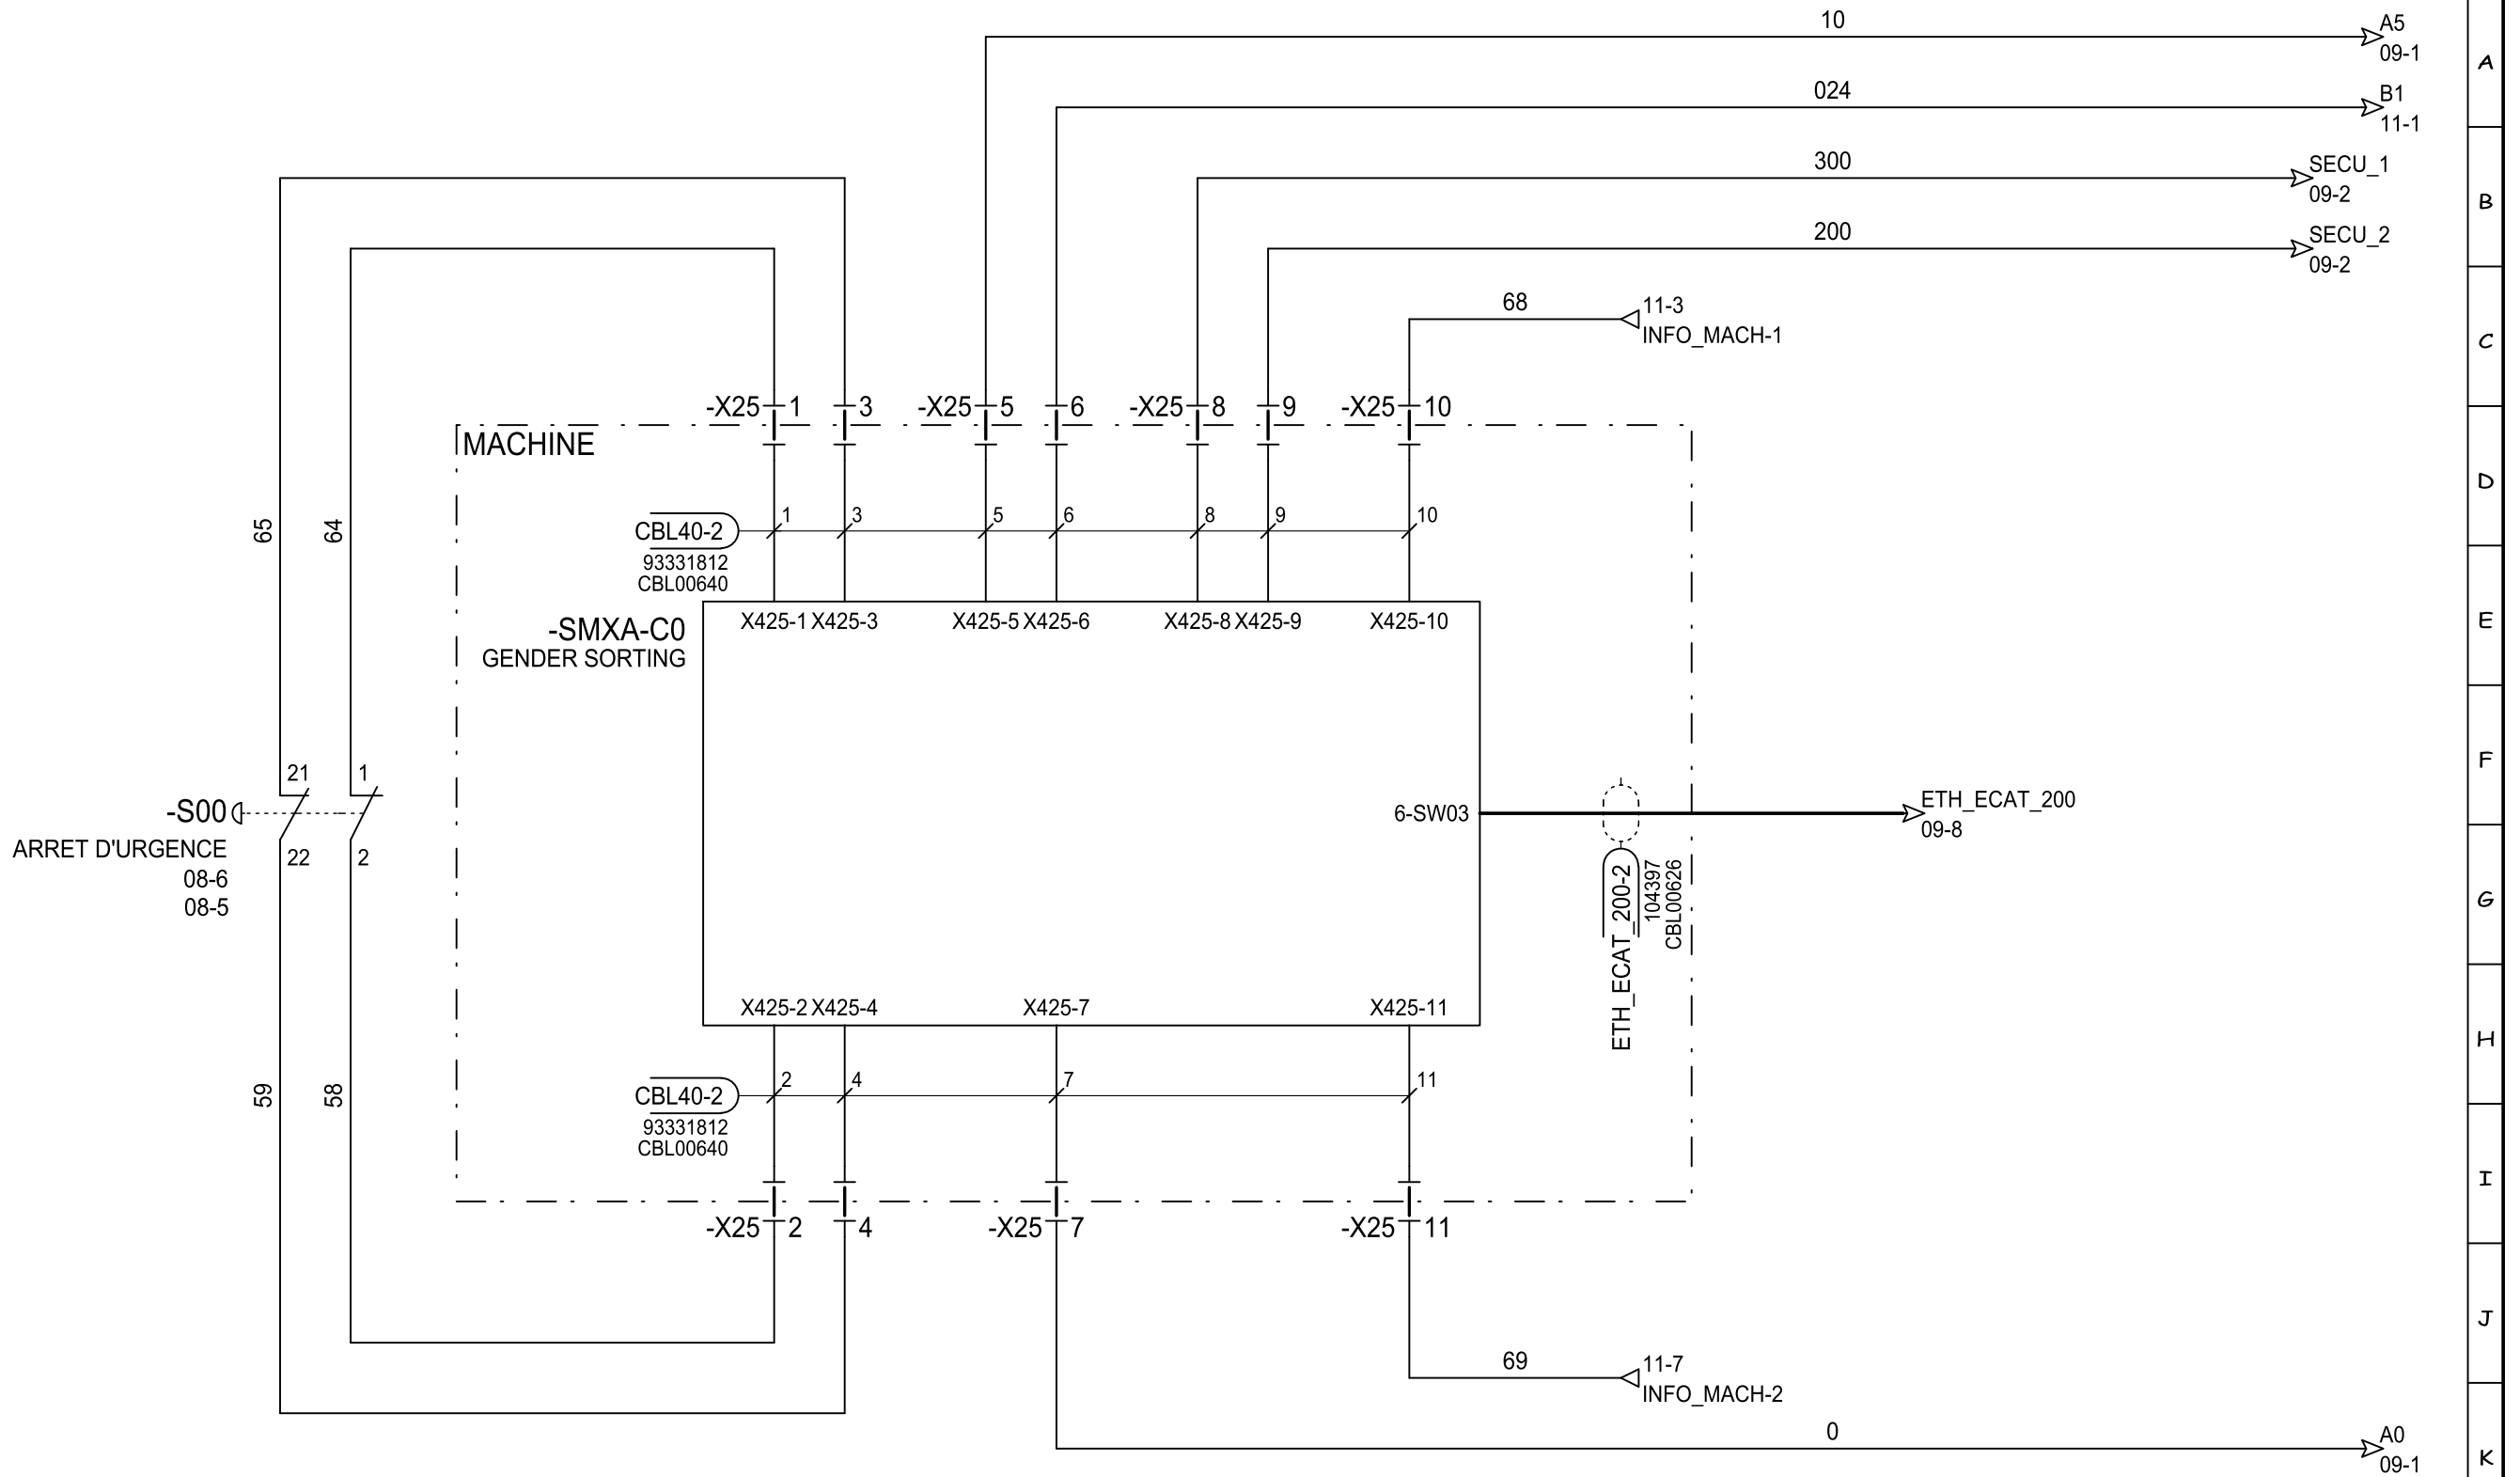


ECHANGE : SMXA => SMXA-OPT2
EXCHANGE : SMXA => SMXA-OPT2

CABINET

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE			Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		SCHEMA DE COMMANDE				 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :		COUNTRY : USA	
			Fax : (33).2.98.85.31.38		Designed by : AV		CONTROL DIAGRAM								ARTICLE :		INDEX : V2			
			E-mail : ecatid.service@ceva.com		ENVIRONNEMENT : Elec_IEC V5R2_ECATID				SMXA0005-OPT2						FOLIO : 08/23					


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

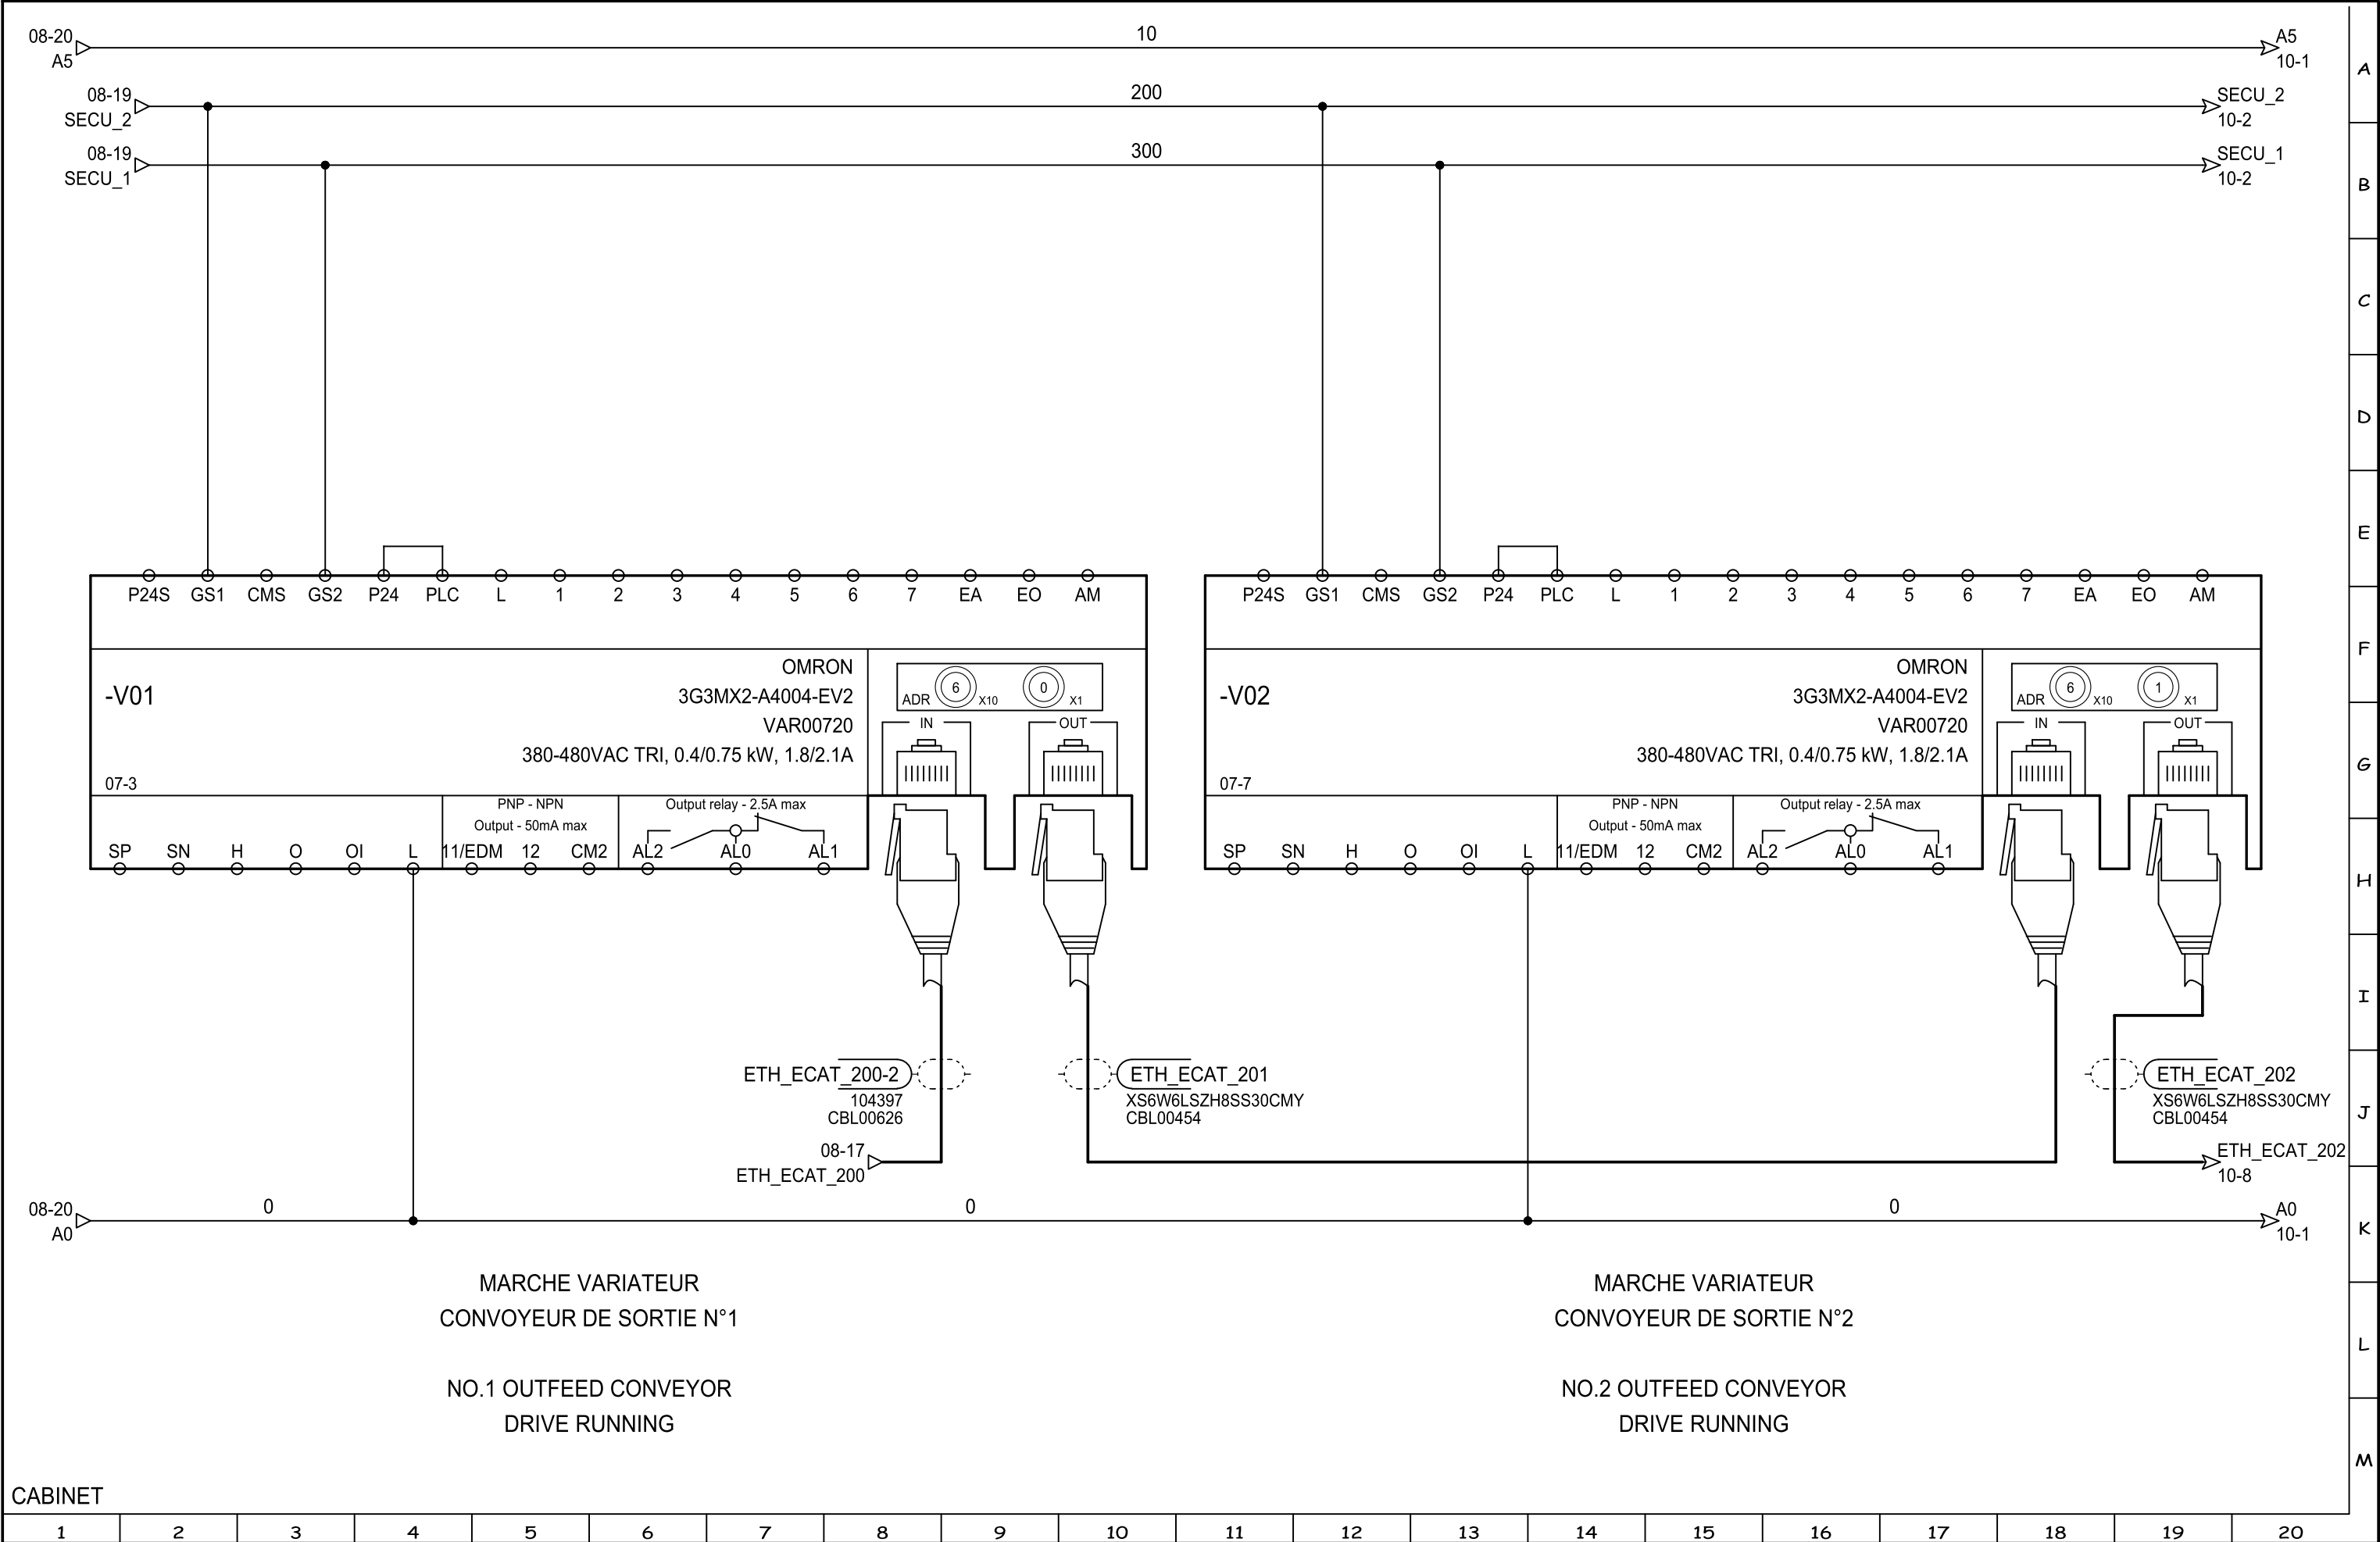

CABINET

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE		Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecatic.service@ceva.com		Date of creation : 09/10/2024 Designed by : AV		SCHEMA DE COMMANDE CONTROL DIAGRAM ENVIRONNEMENT : Elec_IEC V5R2_ECATICID		 Ecat-iD Campus		CONTRACT : C0		CUSTOMER :		COUNTRY : USA		ARTICLE : SMXA0005-OPT2		INDEX : V2 FOLIO : 09/23	


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

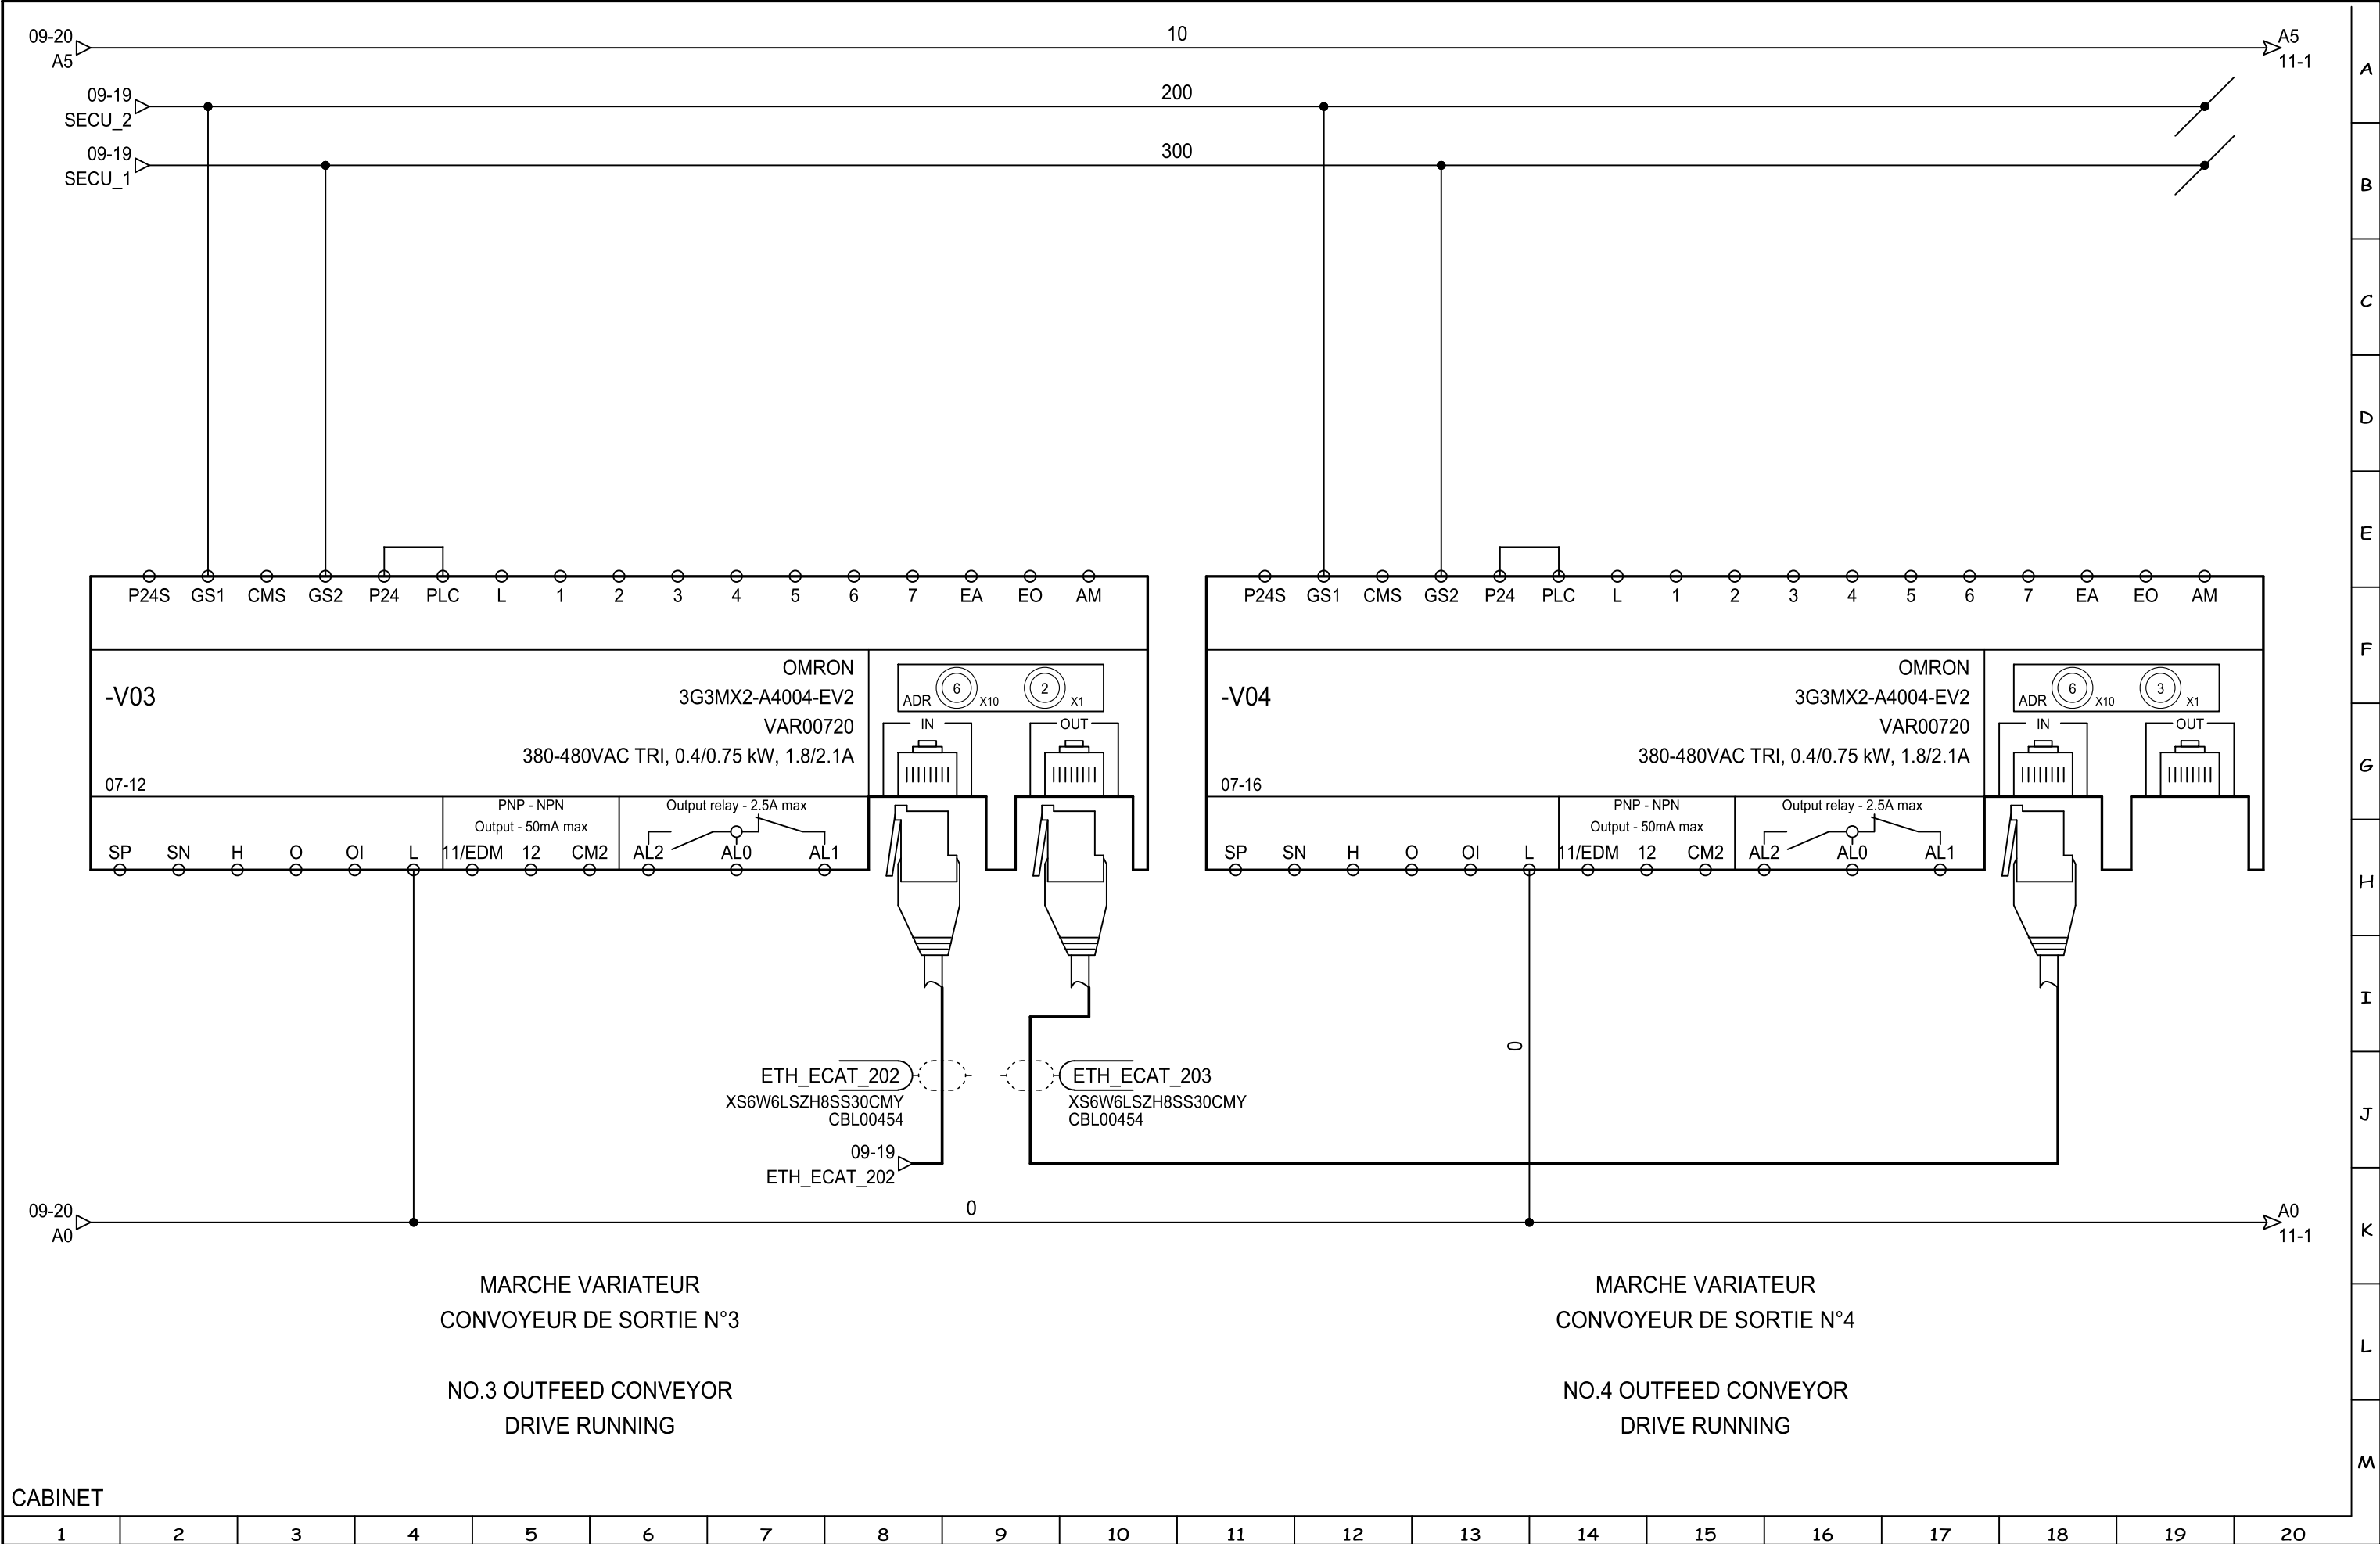

CABINET

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE			Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		SCHEMA DE COMMANDE				 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :		COUNTRY : USA	
			Fax : (33).2.98.85.31.38		Designed by : AV		CONTROL DIAGRAM								ARTICLE :				INDEX : V2	
			E-mail : ecatid.service@ceva.com				ENVIRONNEMENT : Elec_IEC V5R2_ECATID								SMXA0005-OPT2				FOLIO : 10/23	


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

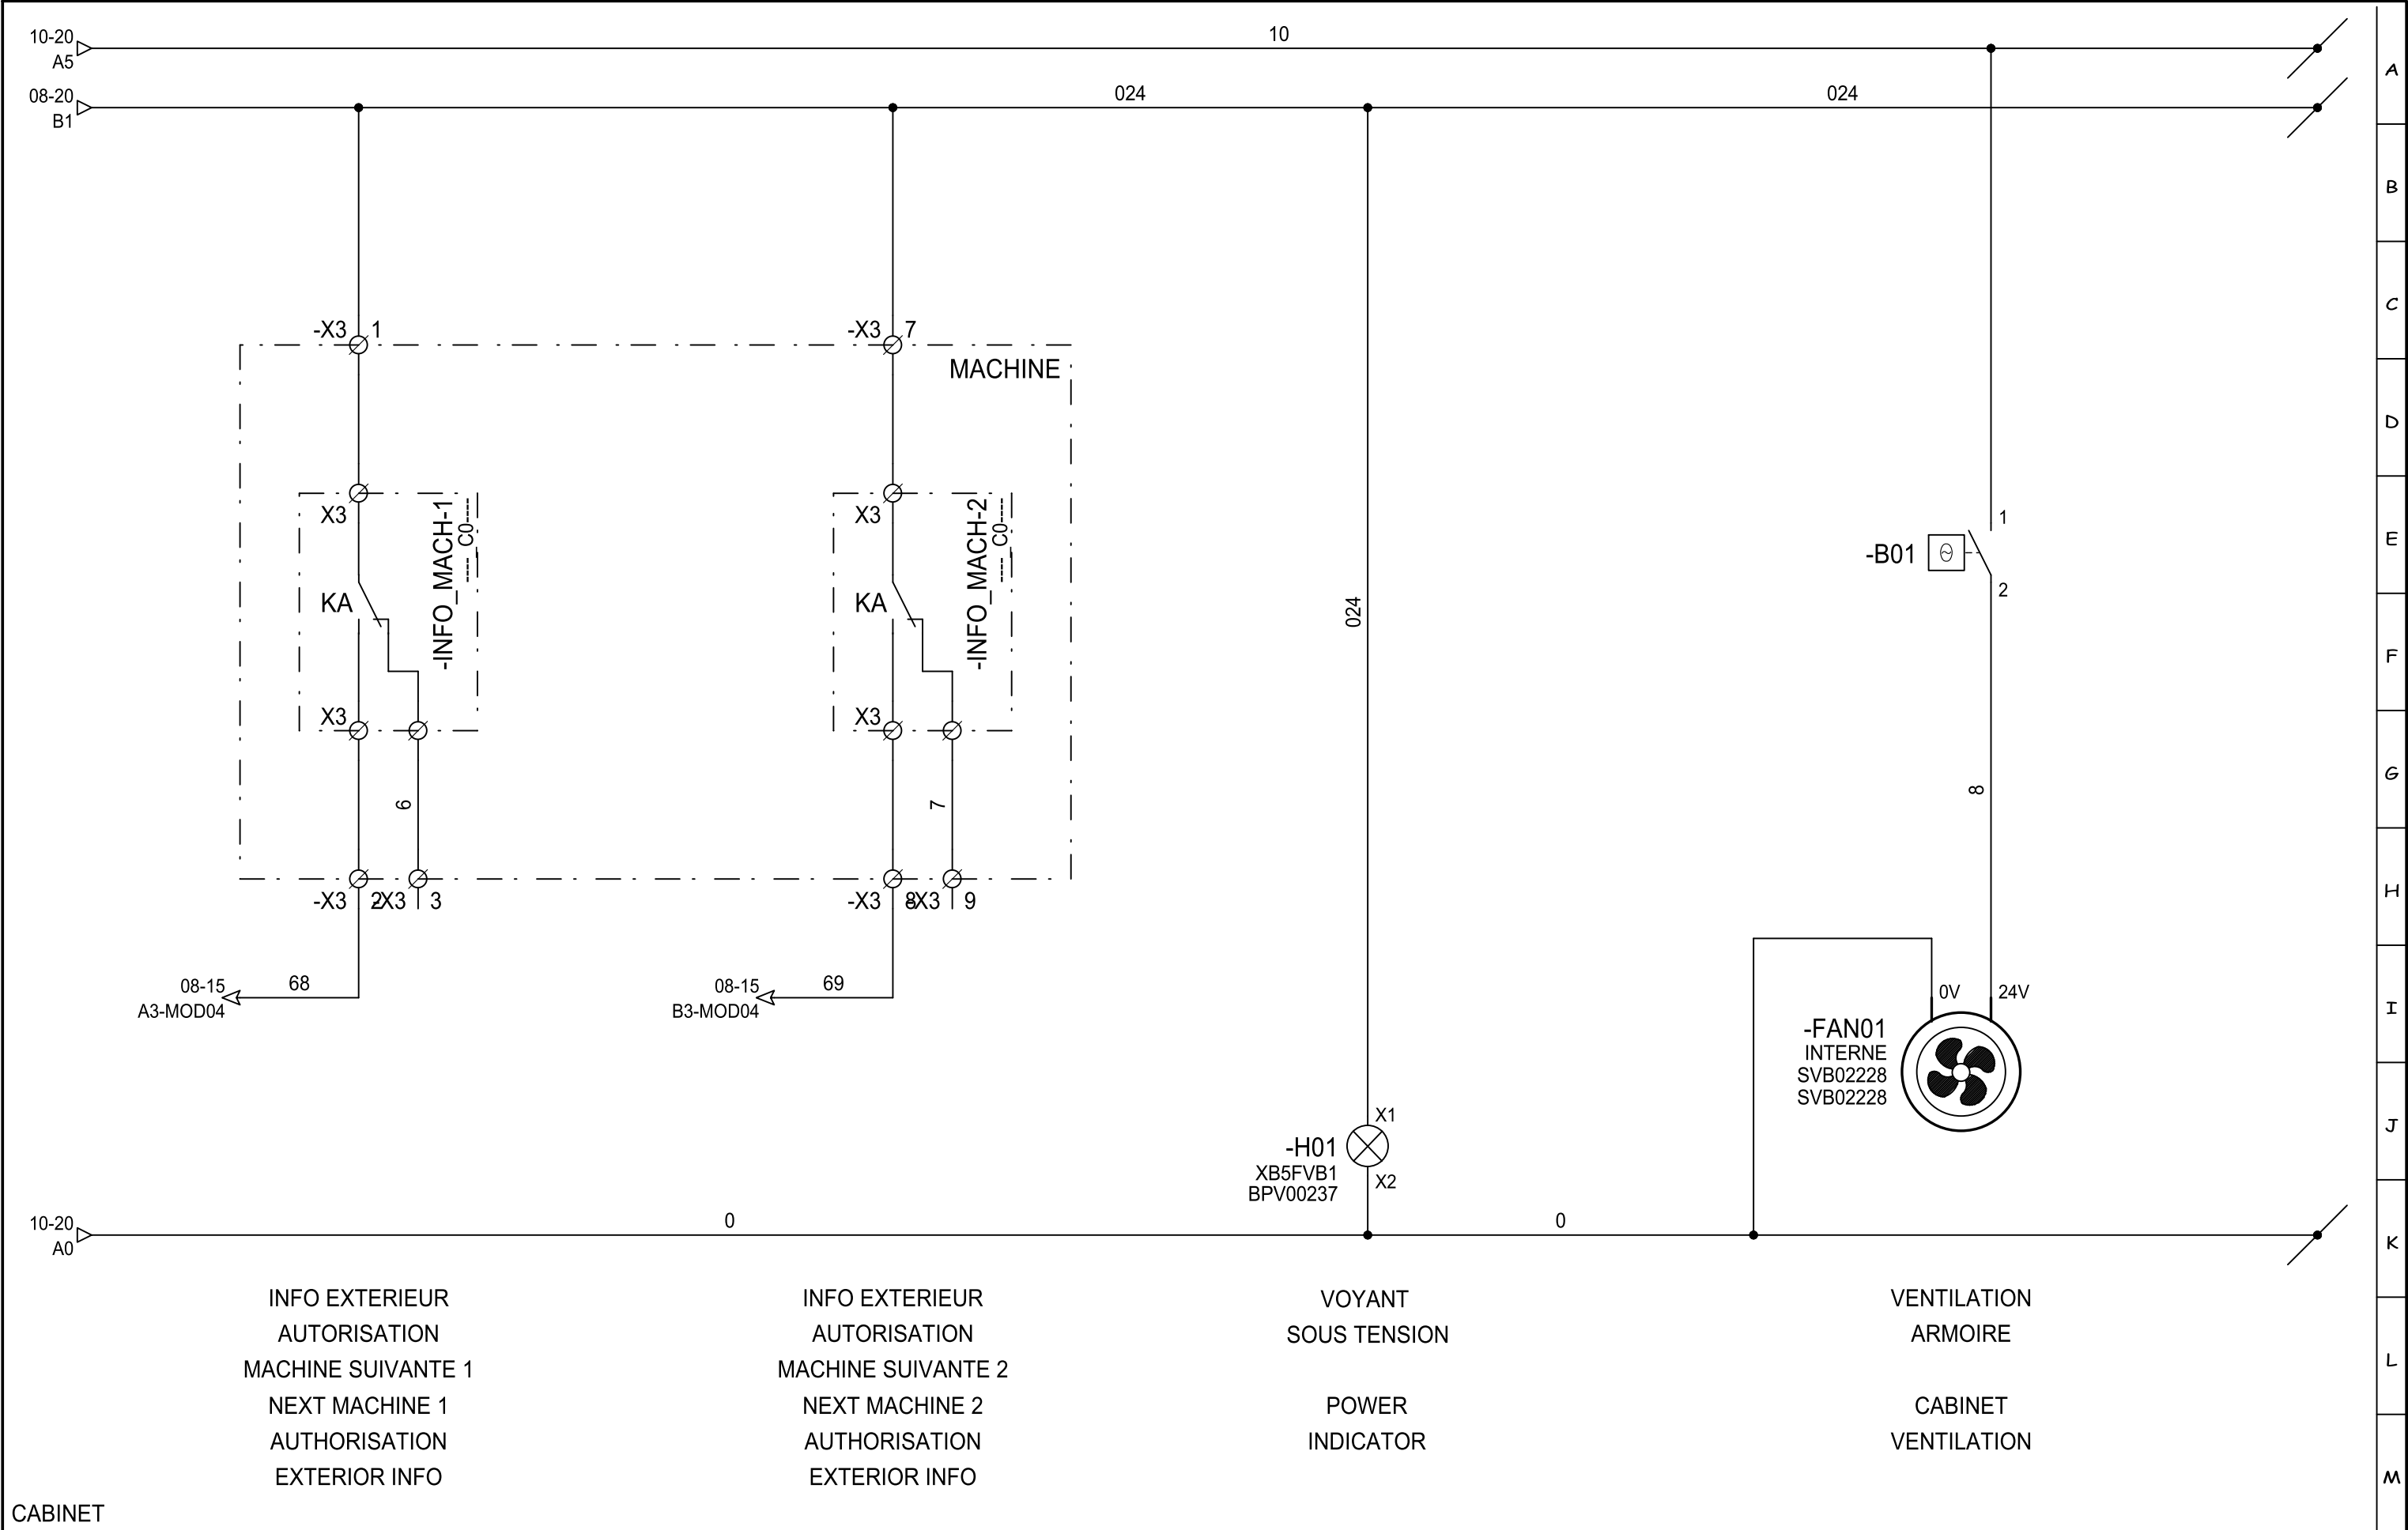

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE			Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		SCHEMA DE COMMANDE			 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :		COUNTRY : USA	
			Fax : (33).2.98.85.31.38		Designed by : AV		CONTROL DIAGRAM							ARTICLE :		INDEX : V2			
			E-mail : ecaticid.service@ceva.com		ENVIRONNEMENT : Elec_IEC V5R2_ECATICID			SMXA0005-OPT2						FOLIO : 11/23					

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

BORNIER DE COMMANDE : X3
CONTROL TERMINAL BLOCK : X3

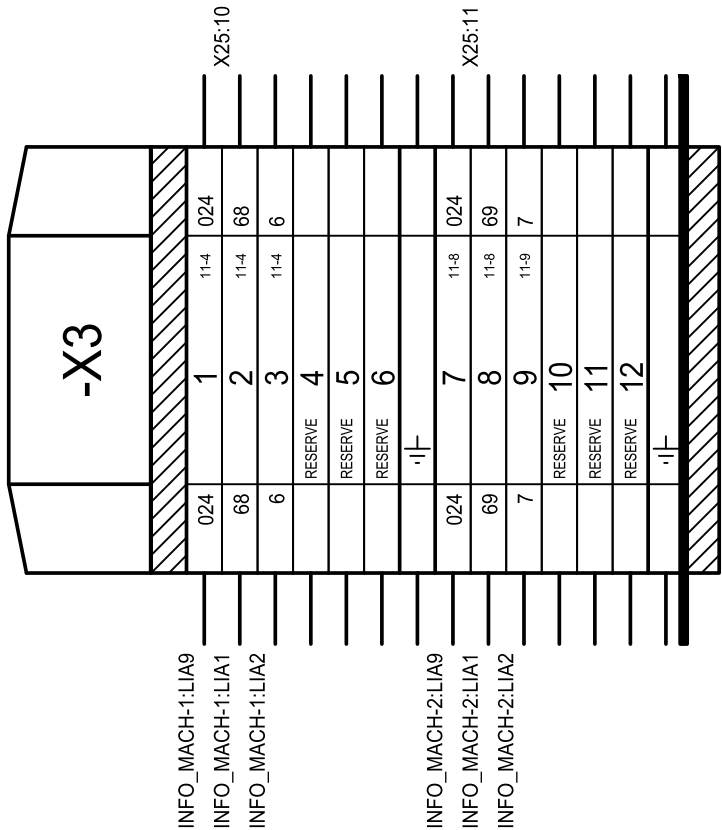


CABINET

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE				Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		BORNIER : X3				 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :		COUNTRY : USA	
				Fax : (33).2.98.85.31.38		Designed by : AV		TERMINAL BLOCK : X3								ARTICLE : SMXA0005-OPT2				INDEX : V2	
				E-mail : ecaticid.service@ceva.com				ENVIRONNEMENT : Elec_IEC V5R2_ECATICID								FOLIO : 12/23					

CABINET

1		2		3		4		5		6		7		8		9		10		11		12		13		14		15		16		17		18		19		20	
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE				Tél : (33).2.98.85.31.36 Fax : (33).2.98.85.31.38 E-mail : ecatid.service@ceva.com				Date of creation : 09/10/2024 Designed by : AV				BORNIER : X25 TERMINAL BLOCK : X25 ENVIRONNEMENT : Elec_IEC V5R2_ECATID				 Ecat-iD Campus				CONTRACT : C0 ARTICLE : SMXA0005-OPT2				CUSTOMER : FOLIO : 13/23				COUNTRY : USA INDEX :											

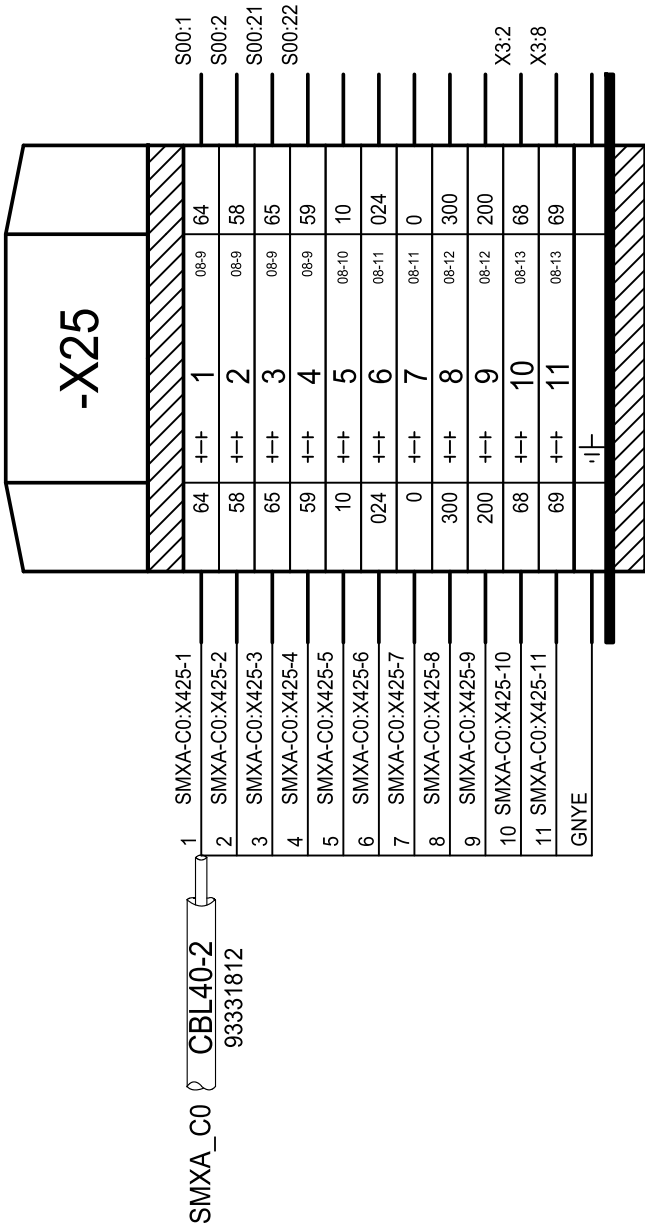

A
B
C
D
E
F
G
H
I
J
K
L
M

ECAT-ID

Z.I DE KERIEL
29800 PLOUEDERN
FRANCE

Tél : (33) 2.98.85.31.36

Fax : (33) 2.98.85.31.38

E-mail : ecatid.service@ceva.com

Date of creation :
09/10/2024

Designed by :
AV

IMPLANTATION FACADE ARMOIRE

CABINET FRONT LAYOUT



Ecat-ID Campus

CONTRACT :
C0

CUSTOMER :

ARTICLE :
SMXA0005-OPT2

INDEX :
V3

COUNTRY :
USA

FOLIO :
14/23

CABINET

IMPLANTATION FACADE ARMOIRE


CABINET FRONT LAYOUT

The diagram illustrates the front layout of a cabinet with a width of 750 mm and a height of 1000 mm. The layout is centered around a vertical dashed line. Key components and their dimensions are as follows:

- Top Section:** A horizontal dimension of 750 mm spans the width of the cabinet.
- Left Side:** A vertical dimension of 1000 mm indicates the total height of the cabinet.
- Central Components (from top to bottom):**
 - A circular component labeled **Q0** with a diameter of 160 mm.
 - A rectangular component labeled **GENERAL POWER SUPPLY** with a width of 70 mm.
 - A circular component with a diameter of 60 mm.
 - A triangular warning symbol with a lightning bolt, with a width of 115 mm.
 - A rectangular component labeled **POWER ON** with a width of 81 mm.
- Right Side:** A vertical dimension of 1000 mm indicates the total height of the cabinet.

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

IMPLANTATION COTE ARMOIRE
CABINET SIDE LAYOUT

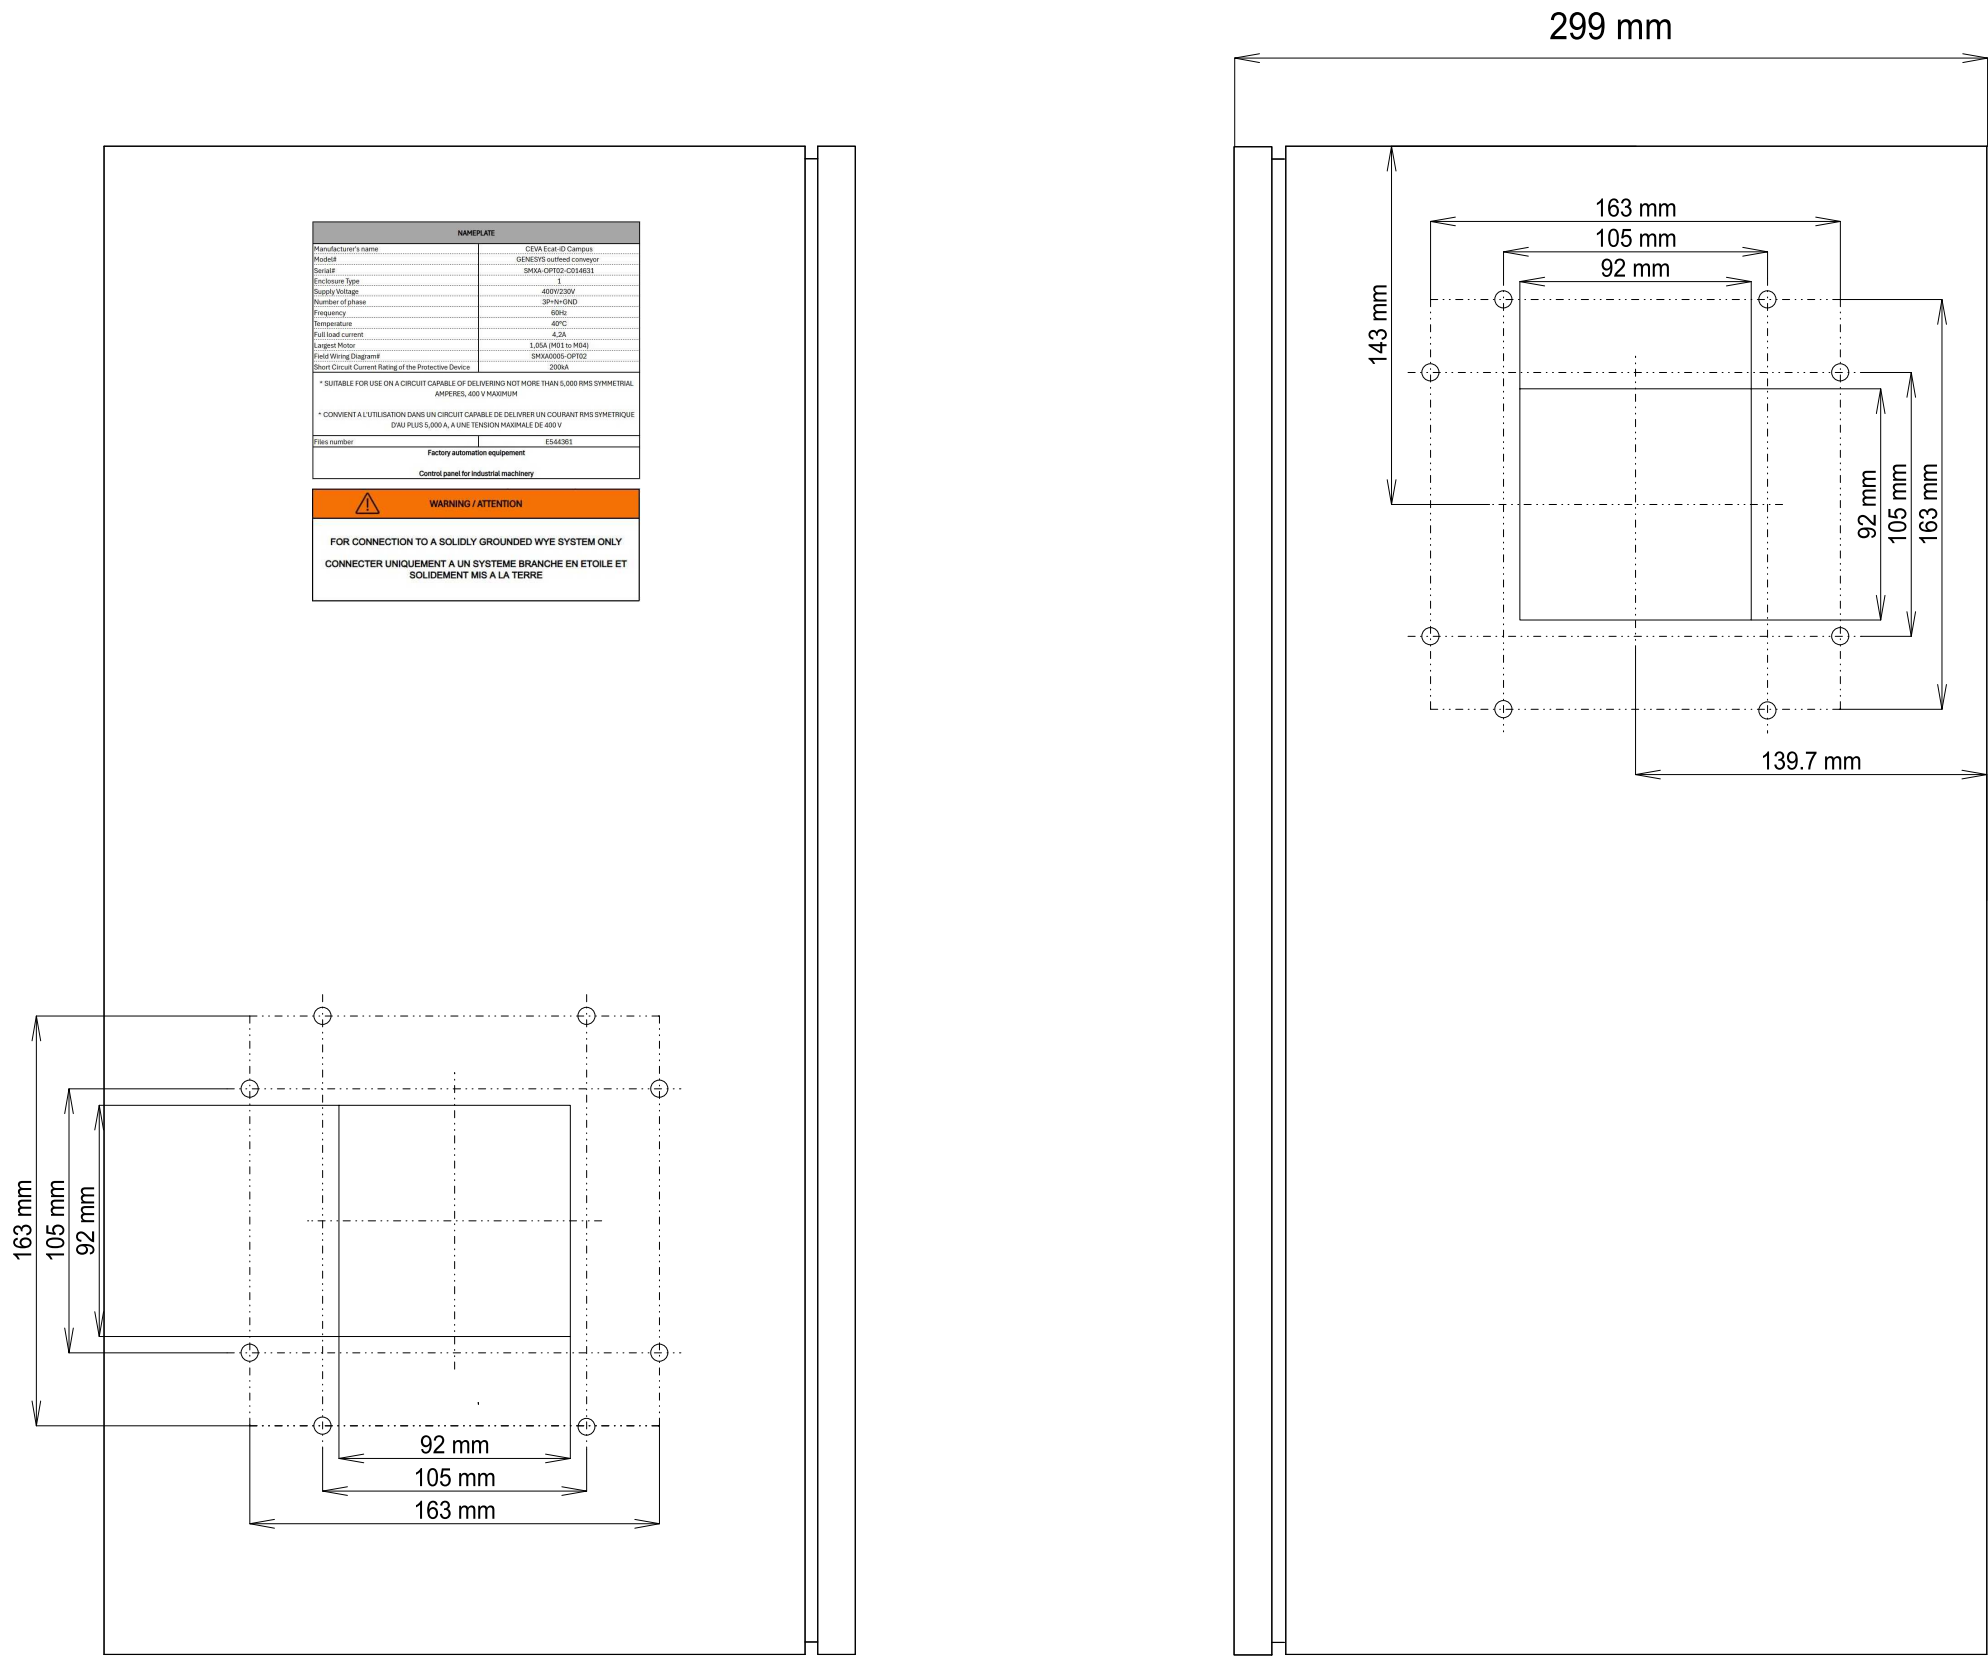

CABINET

ECAT-ID
Z.I DE KERIEL
29800 PLOUEDERN
FRANCE

Tél : (33).2.98.85.31.36

Fax : (33).2.98.85.31.38

E-mail : ecatid.service@ceva.com

Date of creation :
09/10/2024

Designed by :
AV

IMPLANTATION COTE ARMOIRE

CABINET SIDE LAYOUT

ENVIRONNEMENT : Elec_IEC V5R2_ECATID



Ecot-ID Campus

CONTRACT :
C0

CUSTOMER :

ARTICLE :

SMXA0005-OPT2

COUNTRY :
USA

INDEX :
V3

FOLIO :
15/23

ECAT-ID

Z.I DE KERIEL
29800 PLOUEDERN
FRANCE

Tél : (33) 2.98.85.31.36

Fax : (33) 2.98.85.31.38

E-mail : ecatid.service@ceva.com

Date of creation :
09/10/2024

Designed by :
AV

IMPLANTATION PLATINE ARMOIRE

CABINET BOARD LAYOUT



Ecatt-ID Campus

ARTICLE :
SMXA0005-OP T2

CONTRACT :
C0

CUSTOMER :

COUNTRY :
USA

INDEX :
V3

16/23

CABINET

IMPLANTATION PLATINE ARMOIRE CABINET BOARD LAYOUT

The diagram illustrates the layout of a cabinet board with a total width of 705 mm and a total height of 945 mm. The layout is divided into several horizontal sections:

- Top Section (130 mm high):** Contains a label "Etiquette à coller à hauteur de Q0 sur le côté gauche intérieur de l'armoire" with a 60 mm wide arrow pointing left. To the right are four terminal blocks labeled -REP01, -REP02, -REP03, and -REP04.
- Second Section (120 mm high):** Contains a central component with a 40 mm wide label on the right.
- Third Section (80 mm high):** Contains four terminal blocks labeled -F01, -F02, -F03, and -F04.
- Fourth Section (80 mm high):** Contains a 40 mm wide label on the right.
- Fifth Section (80 mm high):** Contains three terminal blocks labeled X3, X3, and X35.
- Sixth Section (80 mm high):** Contains a 161 mm wide label on the right.
- Bottom Section (345 mm high):** Contains four variable frequency drives labeled -V01, -V02, -V03, and -V04, with a note "ESPACEMENT DE 30mm ENTRE CHAQUE VARIATEUR".

Dimensions are indicated by arrows and labels: 705 mm (total width), 945 mm (total height), 60 mm, 130 mm, 120 mm, 80 mm, 40 mm, 161 mm, and 345 mm.


THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.


LOCALISATION	FOLIO	REPERE	DESIGNATION	QTE	REFERENCE	CODE ECAT-ID	FABRICANT	FILTRE
		ETH_ECAT_200-2	CONNECTEUR RJ45 A MONTER IP20	2	100023085	CON00035	TELEGARTNER	ARMOIRE
	01	ARMOIRE	CELLULE INOX 1000X750X300	1	CPN7510030	BOX02058	MP GAMMA	ARMOIRE
CABINET	06	Q0	KIT INTERVERROUILLAGE NFPA79	1	37297540	SEC00061	SOCOMEK	ARMOIRE
CABINET	06	Q0	INTERRUPTEUR-SECTIONNEUR-FUSIBLE TS J 3x30A F/L 200kA	1	38613004	SEC00096	SOCOMEK	ARMOIRE
CABINET	06	REP01	REPARTIREUR UNIPOLAIRE MODULAIRE UD 80 A, 1 x 6-16mm2, 4 x 2	1	569010	ELC01194	NVENT ERICO	ARMOIRE
CABINET	06	REP02	REPARTIREUR UNIPOLAIRE MODULAIRE UD 80 A, 1 x 6-16mm2, 4 x 2	1	569010	ELC01194	NVENT ERICO	ARMOIRE
CABINET	06	REP03	REPARTIREUR UNIPOLAIRE MODULAIRE UD 80 A, 1 x 6-16mm2, 4 x 2	1	569010	ELC01194	NVENT ERICO	ARMOIRE
CABINET	06	REP04	REPARTIREUR UNIPOLAIRE MODULAIRE UD 80 A, 1 x 6-16mm2, 4 x 2	1	569010	ELC01194	NVENT ERICO	ARMOIRE
CABINET	07	CEM01	BRIDE CEM SF/SKL 6-8	1	36245	ELC02070	ICOTEK	ARMOIRE
CABINET	07	CEM02	BRIDE CEM SF/SKL 6-8	1	36245	ELC02070	ICOTEK	ARMOIRE
CABINET	07	CEM03	BRIDE CEM SF/SKL 6-8	1	36245	ELC02070	ICOTEK	ARMOIRE
CABINET	07	CEM04	BRIDE CEM SF/SKL 6-8	1	36245	ELC02070	ICOTEK	ARMOIRE
CABINET	07	F01	DISJONCTEUR MINIATURE, 3P, 10A, COURBE D	1	1489-M3D100	DIS00361	ALLEN-BRADLEY	ARMOIRE
CABINET	07	F02	DISJONCTEUR MINIATURE, 3P, 10A, COURBE D	1	1489-M3D100	DIS00361	ALLEN-BRADLEY	ARMOIRE
CABINET	07	F03	DISJONCTEUR MINIATURE, 3P, 10A, COURBE D	1	1489-M3D100	DIS00361	ALLEN-BRADLEY	ARMOIRE
CABINET	07	F04	DISJONCTEUR MINIATURE, 3P, 10A, COURBE D	1	1489-M3D100	DIS00361	ALLEN-BRADLEY	ARMOIRE
CABINET	07	V01	CARTE DE COMMUNICATION ETHERCAT POUR ONDULEUR MX2	1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE
CABINET	07	V01	VECTOR VARIATEUR DE FREQUENCE, 380-480VAC TRI, 0.4/0.75 kW,	1	3G3MX2-A4004-EV2	VAR00720	OMRON	ARMOIRE
CABINET	07	V02	CARTE DE COMMUNICATION ETHERCAT POUR ONDULEUR MX2	1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE
CABINET	07	V02	VECTOR VARIATEUR DE FREQUENCE, 380-480VAC TRI, 0.4/0.75 kW,	1	3G3MX2-A4004-EV2	VAR00720	OMRON	ARMOIRE
CABINET	07	V03	CARTE DE COMMUNICATION ETHERCAT POUR ONDULEUR MX2	1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE
CABINET	07	V03	VECTOR VARIATEUR DE FREQUENCE, 380-480VAC TRI, 0.4/0.75 kW,	1	3G3MX2-A4004-EV2	VAR00720	OMRON	ARMOIRE
CABINET	07	V04	CARTE DE COMMUNICATION ETHERCAT POUR ONDULEUR MX2	1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE
CABINET	07	V04	VECTOR VARIATEUR DE FREQUENCE, 380-480VAC TRI, 0.4/0.75 kW,	1	3G3MX2-A4004-EV2	VAR00720	OMRON	ARMOIRE
CABINET	07	Z01	FILTRE RFI 5A 400VAC, TRI POUR VARIATEUR 0,37 A 0,55KW	1	AX-FIC4005-SE	VAR00719	OMRON	ARMOIRE
CABINET	07	Z02	FILTRE RFI 5A 400VAC, TRI POUR VARIATEUR 0,37 A 0,55KW	1	AX-FIC4005-SE	VAR00719	OMRON	ARMOIRE
CABINET	07	Z03	FILTRE RFI 5A 400VAC, TRI POUR VARIATEUR 0,37 A 0,55KW	1	AX-FIC4005-SE	VAR00719	OMRON	ARMOIRE
CABINET	07	Z04	FILTRE RFI 5A 400VAC, TRI POUR VARIATEUR 0,37 A 0,55KW	1	AX-FIC4005-SE	VAR00719	OMRON	ARMOIRE
CABINET	11	B01	THERMOSTAT MECANIQUE 0 60°C "F"	1	NSYCCOTH0	SEN00671	SCHNEIDER ELECTRIC	ARMOIRE
CABINET	11	FAN01	KIT ENS CAPOT VENTILATEUR ELC00708 SANS VENTILATEUR PETIT MO	1	SVB02227	SVB02227	INTERNE	ARMOIRE
CABINET	11	FAN01	KIT ENS CAPOT VENTILATEUR ELC00708 AVEC VENTILATEUR PETIT MO	1	SVB02228	SVB02228	INTERNE	ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE			Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		NOMENCLATURE ARMOIRE				 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :			COUNTRY : USA	
			Fax : (33).2.98.85.31.38		Designed by : AV		FRENCH ENCLOSURE PART LIST								ARTICLE : SMXA0005-OPT2					INDEX : V2	
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT : Elec_IEC V5R2_ECATID								FOLIO : 17/23						

THIS DOCUMENT IS THE PROPERTY OF ECAT-ID & REMAIN CONFIDENTIAL IT CANNOT BE COPIED OR COMMUNICATED TO A THIRD PARTY WITHOUT OUR APPROVAL IN WRITING.

TAG	SHEET	DESCRIPTION	QTY	CATALOG No	CODE ECAT-ID	MANUFACTURER	FILTER
ARMOIRE	01	STAINLESS STEEL BOX 600X600X300	1	CPN606030	BOX00367	MP GAMMA	ARMOIRE
CEM01	07	EMC EARTH CLAMPS SF/SKL 6-8	1	36245	ELC02070	ICOTEK	ARMOIRE
CEM02	07	EMC EARTH CLAMPS SF/SKL 6-8	1	36245	ELC02070	ICOTEK	ARMOIRE
CEM03	07	EMC EARTH CLAMPS SF/SKL 6-8	1	36245	ELC02070	ICOTEK	ARMOIRE
CEM04	07	EMC EARTH CLAMPS SF/SKL 6-8	1	36245	ELC02070	ICOTEK	ARMOIRE
ETH_ECAT_200		RJ45 CONNECTOR TO MOUNT IP20	2	100023085	CON00035	TELEGARTNER	ARMOIRE
FAN01	11	KIT SET FAN COVER WITHOUT FAN ELC00708 SMALL MODEL	1	SVB02227	SVB02227	INTERNE	ARMOIRE
FAN01	11	KIT SET FAN COVER WITH FAN ELC00708 SMALL MODEL	1	SVB02228	SVB02228	INTERNE	ARMOIRE
Q01	07	CIRCUIT BREAKER IC60N 2P 6A, 440VAC/6KA 133VDC/6KA, CURVE D	1	A9F75206	DIS00163	SCHNEIDER ELECTRIC	ARMOIRE
Q02	07	CIRCUIT BREAKER IC60N 2P 6A, 440VAC/6KA 133VDC/6KA, CURVE D	1	A9F75206	DIS00163	SCHNEIDER ELECTRIC	ARMOIRE
Q03	07	CIRCUIT BREAKER IC60N 2P 6A, 440VAC/6KA 133VDC/6KA, CURVE D	1	A9F75206	DIS00163	SCHNEIDER ELECTRIC	ARMOIRE
Q04	07	CIRCUIT BREAKER IC60N 2P 6A, 440VAC/6KA 133VDC/6KA, CURVE D	1	A9F75206	DIS00163	SCHNEIDER ELECTRIC	ARMOIRE
REP01	06	TD 80/100 A TETRAPOLAR SPLITTER, 6 CONNECTIONS	1	563920	ELC01083	NVENT ERICO	ARMOIRE
TH01	11	MECHANICAL THERMAL SENSOR 0 60°C "NC"	1	NSYCCOTH0	SEN00671	SCHNEIDER ELECTRIC	ARMOIRE
V01	07	ETHERCAT COMMUNICATION CARD FOR MX2 INVERTER	1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE
V01	07	COMPACT VECTOR INVERTER, 200-240VAC SINGLE-PHASE, 0.4/0.55 KW, 3.0/3.5A	1	3G3MX2-AB004-EV2	VAR00701	OMRON	ARMOIRE
V02	07	ETHERCAT COMMUNICATION CARD FOR MX2 INVERTER	1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE
V02	07	COMPACT VECTOR INVERTER, 200-240VAC SINGLE-PHASE, 0.4/0.55 KW, 3.0/3.5A	1	3G3MX2-AB004-EV2	VAR00701	OMRON	ARMOIRE
V03	07	ETHERCAT COMMUNICATION CARD FOR MX2 INVERTER	1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE
V03	07	COMPACT VECTOR INVERTER, 200-240VAC SINGLE-PHASE, 0.4/0.55 KW, 3.0/3.5A	1	3G3MX2-AB004-EV2	VAR00701	OMRON	ARMOIRE
V04	07	ETHERCAT COMMUNICATION CARD FOR MX2 INVERTER	1	3G3AX-MX2-ECT	VAR00351	OMRON	ARMOIRE
V04	07	COMPACT VECTOR INVERTER, 200-240VAC SINGLE-PHASE, 0.4/0.55 KW, 3.0/3.5A	1	3G3MX2-AB004-EV2	VAR00701	OMRON	ARMOIRE
Z01	07	EMC LINE FILTER FOR MX2 DRIVE, 200-240VAC MONO, 10A	1	AX-FIM1010-RE	VAR00277	OMRON	ARMOIRE
Z02	07	EMC LINE FILTER FOR MX2 DRIVE, 200-240VAC MONO, 10A	1	AX-FIM1010-RE	VAR00277	OMRON	ARMOIRE
Z03	07	EMC LINE FILTER FOR MX2 DRIVE, 200-240VAC MONO, 10A	1	AX-FIM1010-RE	VAR00277	OMRON	ARMOIRE
Z04	07	EMC LINE FILTER FOR MX2 DRIVE, 200-240VAC MONO, 10A	1	AX-FIM1010-RE	VAR00277	OMRON	ARMOIRE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE			Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		NOMENCLATURE BOUTONNERIE				 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :			COUNTRY : USA	
			Fax : (33).2.98.85.31.38		Designed by : AV		FRENCH BUTTON PARTS LIST								ARTICLE :			INDEX : V2			
			E-mail : ecatid.service@ceva.com				ENVIRONNEMENT : Elec_IEC V5R2_ECATID								SMXA0005-OPT2			FOLIO : 19/23			

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE			Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		CARNET DE CABLE				 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :			COUNTRY : USA	
			Fax : (33).2.98.85.31.38		Designed by : AV		FRENCH CABLE BOOKLET								ARTICLE : SMXA0005-OPT2			INDEX : V2			
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT : Elec_IEC V5R2_ECATID								FOLIO : 21/23						

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
ECAT-ID Z.I DE KERIEL 29800 PLOUEDERN FRANCE			Tél : (33).2.98.85.31.36		Date of creation : 09/10/2024		CARNET DE CABLE ANGLAIS				 Ecat-iD Campus				CONTRACT : C0		CUSTOMER :			COUNTRY : USA	
			Fax : (33).2.98.85.31.38		Designed by : AV		CABLE BOOKLET								ARTICLE : SMXA0005-OPT2					INDEX : V2	
			E-mail : ecatic.service@ceva.com				ENVIRONNEMENT : Elec_IEC V5R2_ECATID								FOLIO : 22/23						
